

GRATINA

Setting Guide

Thank you for buying the "GRATINA" (simply called the "product" from here on). This manual describes the settings and precautions for using the product. For explanations of basic functions, refer to "Basic Manual".

Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM, ® marks may be omitted in this manual. Illustrations and screens shown in this manual may look different from the actual product and screens. In some cases, minor details or a part of a screen may be omitted. In this manual, "au Nano IC Card 04 LE" is abbreviated as "au IC card". In this manual, "microSD™ memory card (commercially available)" and "microSDHC™ memory card (commercially available)" are abbreviated as "microSD memory card" or "microSD".

Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY
 Manufactured by: KYOCERA Corporation

- **When Using the Product**
Describes things to note when using the product.
- **Basic Operation**
Describes basic key operations.
- **Using the Pointer**
Describes pointer operations.
- **Preparing the Product for Use**
Describes initial preparations.
- **Initial Settings**
Set an au ID, etc. to use various services provided by au.
- **Switching to English Display**
You can switch the display from Japanese to English.
- **Setting Wi-Fi®**
Describes how to connect to a Wi-Fi® network.
- **Checking On-Screen Status**
Check the signal reception strength, battery level, etc. on-screen.
- **E-mail**
Make initial settings for E-mail (@ezweb.ne.jp), etc.
- **How to Transfer Data**
You can return/save data from your old au phone to the product using a microSD memory card or au server.
- **Increasing the Lighting Time of the Screen**
You can set the time before the screen automatically turns off.
- **Adjusting the Brightness of the Screen**
You can adjust the brightness level of the screen.
- **Changing Font Size (Character Size)**
Change the font size.
- **Changing Volume**
Set the volume of ringtones, alarms, etc.
- **Attaching a Strap**
Describes how to attach a strap.

When Using the Product

- Note the following when using the product.
- When you purchase the product, the battery is not fully charged. Be sure to charge the battery before use.
 - To maintain water and dust resistance, attach the back cover firmly.
 - If a confirmation screen of conditions, etc. is displayed during the procedure for applications or functions of the product, follow the on-screen instructions.
 - If a confirmation screen of communication charges is displayed when the application or function is activated, follow the on-screen instructions.

Basic Operation

Basic key operations are described here. For detailed operation, refer to "Basic Manual".

Key Names and Functions

Names of keys on the product and their functions are described.

① Center key	⑨ Camera key
② Phone book key	⑩ Browser key
③ Mail key	Displays browser menu.
④ Clear/Memo key	⑪ Power/End call key
While using the product, return to the previous screen.	While using the product, end call or exit functions. Hold down to turn the power on or off.
⑤ Call/Pair key	⑫ マナー/シャッター Manner/Shutter key
⑥ [0] - [9], [*], [#]	
Number keys	
⑦ [F1] - [F3] Custom keys 1 - 3	
⑧ Cursor key	
○ Left key/Incoming history	
○ Right key/outgoing history	
○ Up key	
○ Down key	

Using the Pointer

Move the pointer on the screen up/down/left/right to operate the browser, etc.

1. **Activate a pointer-capable function/application**
"OFF" (OFF) / "ON" (ON) is displayed in the status bar, and "pointer" is displayed when the pointer is on.
- Hold down [Power] for at least 1 second to toggle the pointer ON/OFF while activating the pointer-capable function/application.
- Key operation is still possible when the pointer is ON (except some applications).

Pointer Operation

Move
By pressing $\uparrow/\downarrow/\leftarrow/\rightarrow$, and you can move the pointer up/down/left/right. Also, by pressing \swarrow/\searrow , you can move the pointer diagonally.

Select
With the pointer at buttons or items to select, the buttons or items are confirmed (okayed) by pressing \odot .

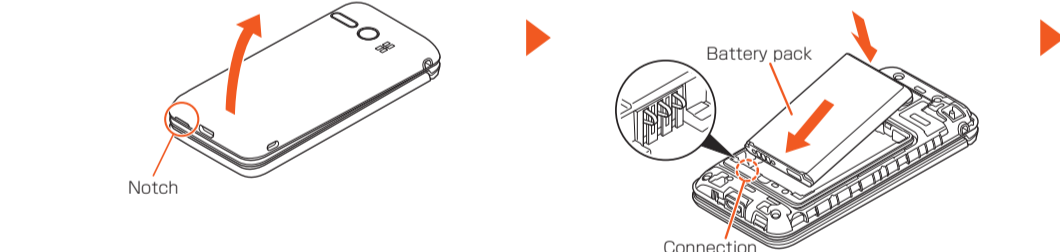 
Scroll
With the pointer at the up/down/left/right edge of the screen, move toward off the screen using $\uparrow/\downarrow/\leftarrow/\rightarrow$.
 • By long-pressing \odot for more 2 seconds, the pointer changes to "scroll", and you can scroll the screen using $\uparrow/\downarrow/\leftarrow/\rightarrow$.

Preparing the Product for Use

- Always turn the power off before installing or removing the battery pack, au IC card, or a microSD memory card.
- Attach the battery pack after checking that the au IC card and microSD memory card are firmly in place.
- To maintain water resistance, firmly close the back cover without leaving any gaps.
- Attaching items improperly may result in damage to the battery pack or back cover.

Installing/Removing the Battery Pack

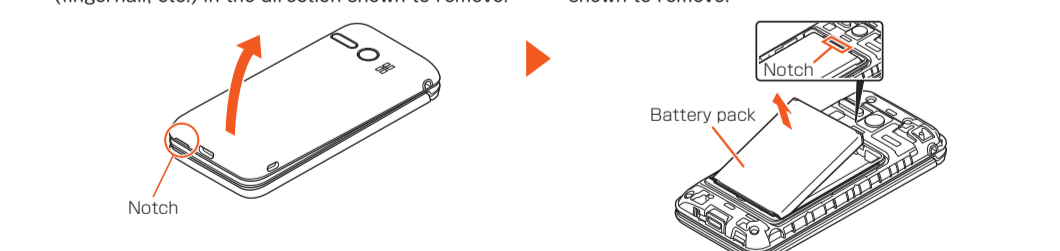 
- Installing**
1. **Remove the back cover of the back of the product**
Lift the back cover by the notch using fingertips (fingernail, etc.) in the direction shown to remove.
 2. **Install the battery pack**
Confirm the position of connection, and then slide battery pack in and press firmly into place.



3. **Attach the back cover**
Note the orientation of the back cover and place it on the product with the product closed, and attach the back cover.
4. **Press firmly to make sure there are no gaps around the back cover**
Trace the circumference of the back cover in direction ① with finger and press in direction ② to install the back cover completely.



- Removing**
1. **Remove the back cover of the back of the product**
Lift the back cover by the notch using fingertips (fingernail, etc.) in the direction shown to remove.
 2. **Remove the battery pack**
Lift the battery pack by the notch of the product using fingertips (fingernail, etc.) in the direction shown to remove.



Installing/Removing the au IC Card

The au IC card contains your personal information such as your phone number. The product is compatible with au Nano IC Card 04.

- When handling the au IC card, observe the following to avoid malfunction and damage.
 - Do not touch the IC (metal) part on the au IC card or the IC card terminals on the product.
 - Confirm the correct orientation for installing.
 - Do not forcefully install or remove.
- An error message is displayed if the au IC card is not installed correctly or if it has an abnormality.
- Be careful not to lose the removed au IC card.
- Do not insert the au IC card if in a card adapter. May cause malfunction.

- Turn the power off beforehand and remove the battery pack.
 - If the au IC card is not inserted, the following operations are unavailable. "IC" is also displayed.
 - Making/Receiving a call
 - Sending/Receiving SMS
 - Making initial e-mail settings and sending/receiving e-mail (@ezweb.ne.jp)
 - Making PIN code settings
 - Checking product phone number and e-mail address
- Besides the above, functions which require your phone number, etc. may not be available.
 * Emergency calls also cannot be made to 110 (police), 119 (fire department), or 118 (coast guard). However, calls can be made if signal strength during GSM/UMTS overseas network is any level other than "Out of service area" (emergency numbers depend on the country; calls may not connect).
- Restricting product use with a PIN code
Your au IC card contains valuable personal information. To protect this information, you can change the PIN code and lock the SIM card to restrict use by other persons.

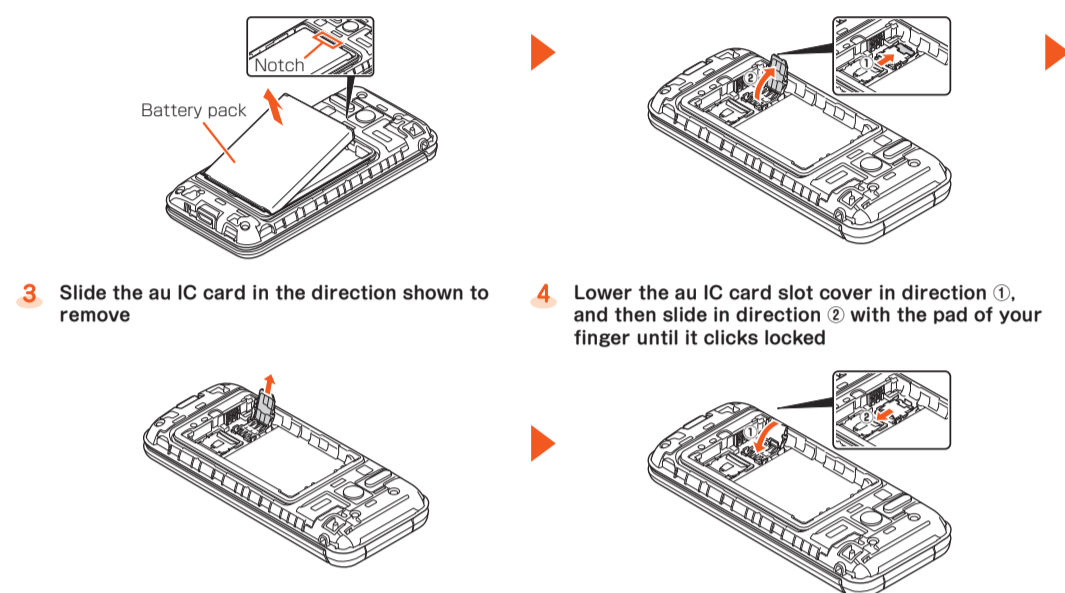 
Installing

1. **Turn the power off and remove the battery pack**
 - See "Installing/Removing the Battery Pack" for how to remove the back cover and battery pack.
 - Reverse the direction of the product after step 2.
 2. **Slide the au IC card slot cover with the pad of your finger in direction ① and then raise in direction ②**
Be careful not to touch the metal terminals on the product when raising the cover. Do not slide the cover forcefully (may damage the cover or injure hand/finger).
-

3. **Slide the au IC card in the direction shown in the slot cover**
Note the position of the card's notch and orientation of IC (metal) surface.
 4. **Lower the au IC card slot cover in direction ①, and then slide in direction ② with the pad of your finger until it clicks locked**
If the cover is difficult to close, raise the cover again and make sure the au IC card is installed all the way.
-

Removing

1. **Turn the power off and remove the battery pack**
 - See "Installing/Removing the Battery Pack" for how to remove the back cover and battery pack.
 - Reverse the direction of the product after step 2.
2. **Slide the au IC card slot cover with the pad of your finger in direction ① and then raise in direction ②**
Be careful not to touch the metal terminals on the product when raising the cover. Do not slide the cover forcefully (may damage the cover or injure hand/finger).

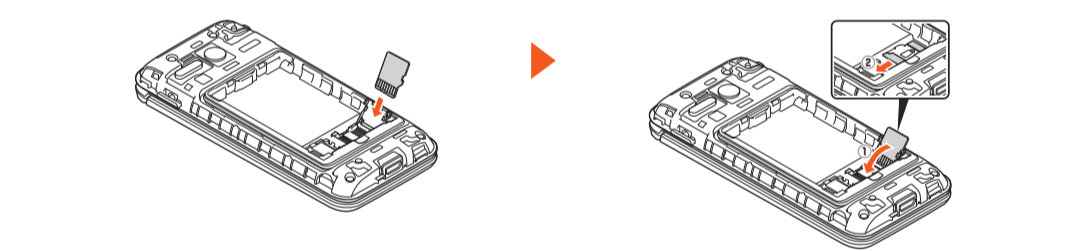 


Installing/Removing the microSD Memory Card

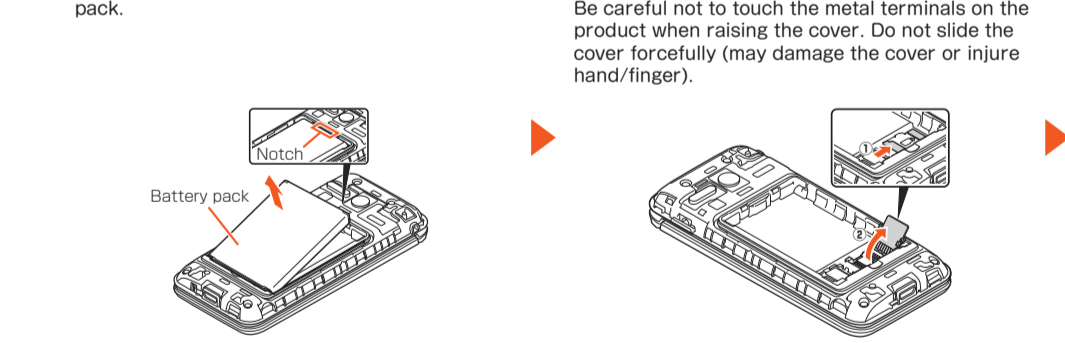 
- You can save/move/copy data by installing a microSD memory card (including microSDHC memory card) in the product.
- A protective card is preinstalled. If not using a microSD memory card, leave the protective card installed in the product to prevent parts from rattling. Be careful not to lose the removed protective card.
 - * The protective card can be used when a microSD memory card is uninstalled. Not installing the protective card does not adversely affect the product.
 - Turn the power off beforehand and remove the battery pack.
 - A microSD memory card initialized on another device may not work on the product properly. Format the microSD memory card on this product. Use the following steps. From the standby screen, press \odot → [Settings] → [More settings] → [Storage] → [Erase SD card] → [Erase SD card] → [Erase everything]
 - Make sure that the top/bottom and front/rear of the microSD memory card are facing correctly. Trying to force a wrongly oriented card into the slot could make it impossible to remove the card or result in damage.
 - Do not touch the terminal part of a microSD memory card.

Installing

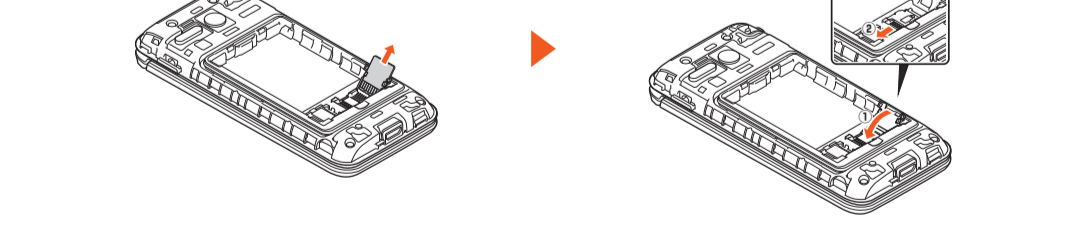 
1. **Turn the power off and remove the battery pack**
 - See "Installing/Removing the Battery Pack" for how to remove the back cover and the battery pack.
 2. **Slide the microSD memory card slot cover with the pad of your finger in direction ① and then raise in direction ②**
Be careful not to touch the metal terminals on the product when raising the cover. Do not slide the cover forcefully (may damage the cover or injure hand/finger).
-
3. **Slide the microSD memory card in the direction shown in the slot cover**
Note the orientation of the microSD memory card. Remove the protective card if it is installed.
 4. **Lower the microSD memory card slot cover in direction ①, and then slide in direction ② with the pad of your finger until it clicks locked**
If cover is difficult to close, raise cover again and make sure the microSD memory card is installed all the way.
-



- Removing**
1. **Turn the power off and remove the battery pack**
 - See "Installing/Removing the Battery Pack" for how to remove the back cover and the battery pack.
 2. **Slide the microSD memory card slot cover with the pad of your finger in direction ① and then raise in direction ②**
Be careful not to touch the metal terminals on the product when raising the cover. Do not slide the cover forcefully (may damage the cover or injure hand/finger).



3. **Slide the microSD memory card in the direction shown to remove**
If not using a microSD memory card, attach the protective card.
 4. **Lower the microSD memory card slot cover in direction ①, and then slide in direction ② with the pad of your finger until it clicks locked**
-

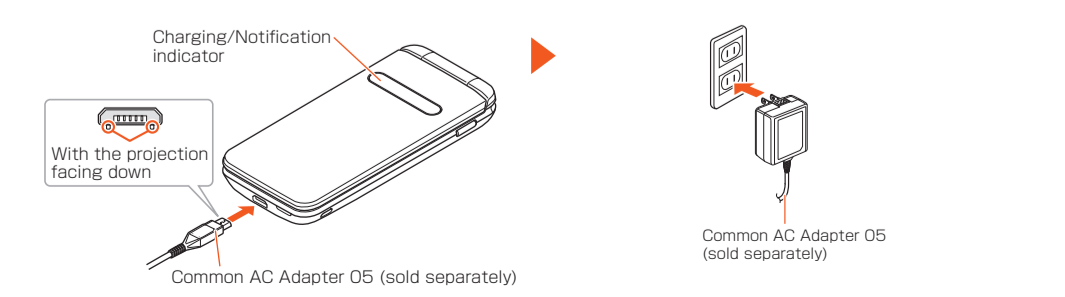 


Charging

- While charging, the charging/notification indicator illuminates in red. When charging is finished, the charging/notification indicator goes out.
- The product may become warm while charging, depending on the situation, but this is not abnormal.
- When you operate the product with the specified charger (sold separately) connected, the product may repeat short-time charging/discharging resulting in short battery life.
- When the temperature of the environment or the product becomes extremely high or low, charging may be stopped. Try to charge the battery at room temperature as much as possible.
- If the charging/notification indicator blinks in red, check if the phone is connected correctly, etc. Even if the indicator keeps blinking, stop charging and then contact an au shop or Repair and Delivery Support Center.

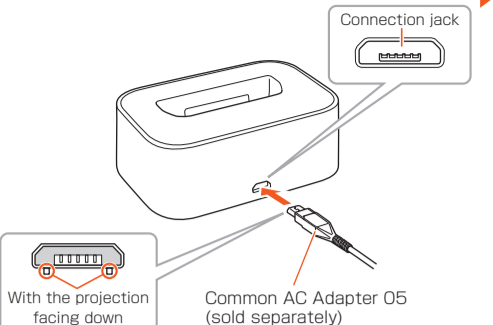 
Charging with a Specified AC Adapter (Sold Separately)

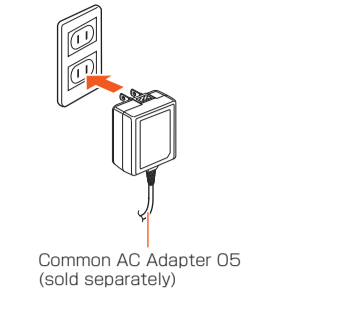 
1. **Check the orientation of the microUSB plug of Common AC Adapter 05 (sold separately) and insert it straight into the external connection terminal**
2. **Insert the power plug of Common AC Adapter 05 (sold separately) into an outlet (100 VAC to 240 VAC)**

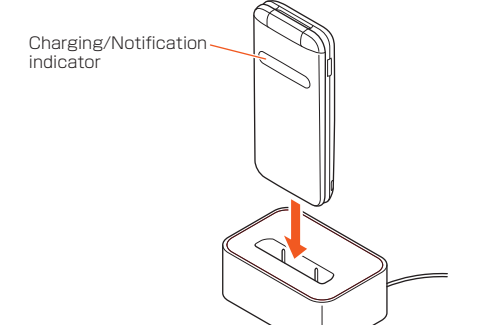 


Charging with a Desktop Holder (KYF37PUA) (Sold Separately) and a Specified AC Adapter (Sold Separately)

- Insert the microUSB plug of Common AC Adapter 05 (sold separately) to the connection jack of the desktop holder (KYF37PUA) (sold separately)**
Check the orientation of the microUSB plug and insert in the direction shown.

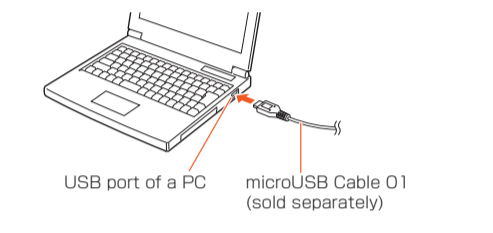 

- Insert the power plug of Common AC Adapter 05 (sold separately) into an outlet (100 VAC to 240 VAC)**

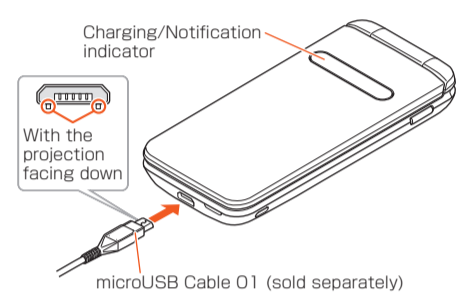 

- Mount the product in the desktop holder (KYF37PUA) (sold separately) with the product closed**
Mount the product in the direction shown. Note orientation of the product and desktop holder (KYF37PUA) (sold separately).



Charging with a PC


- Connect microUSB Cable 01 (sold separately) to a chargeable USB port of a PC after the PC is activated completely**



- Check the orientation of the microUSB plug of microUSB Cable 01 (sold separately) and insert it straight into the external connection terminal**
When charging is finished, the charging/notification indicator goes out.
• It may take longer for the battery to be fully charged than if you use the specified AC adapter (sold separately).
• If a screen for detecting new hardware, etc. is displayed on the PC, select "Cancel".



Turning the Power On/Off

- ### Turning the Power On
- Hold down **[Power]** for at least 2 seconds



- ### Turning the Power Off
- Hold down **[Power]** for at least 1 seconds

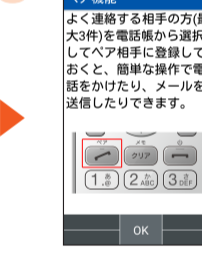 



Initial Settings


The first time the power is turned on, a screen for making initial settings is displayed, and you can set an au ID. An au ID is an identifier for customers to use au services. Register your au phone number as an au ID. By setting an au ID, you can use various services provided by au such as au スマートパス (au Smart Pass) and au WALLET.
● From the standby screen, press **[Settings]** → [au ID Setting] to set. The initial settings screen is displayed only in Japanese.

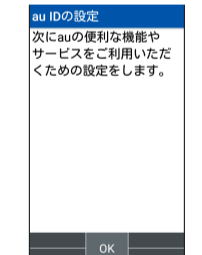 
- The initial settings screen is displayed → **[OK]**

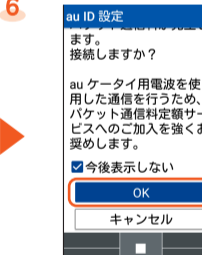 

- The explanation screen of the pair function is displayed → **[OK]**

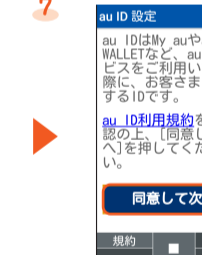 

- The request about sending data for quality improvement is displayed → **[設定 (Setting)]**



- [使用情報を送信 (Send Information for Use)]** → **[確認する (Agree)]** → **[次へ (Next)]**


- The au ID settings screen is displayed → **[OK]**


- The confirmation screen for incurring communication charges appears → **[OK]**


- The confirmation screen for au ID利用規約 (au ID Terms of Use) appears → **[同意して次へ (Agree and Next)]**


- au ID setting is complete
* Continue by following the on-screen instructions. To exit the setting, **[戻る (Back)]** → **[はい (Yes)]**



To Enter Numbers (Switching Character Type)

When a security code input screen such as ID confirmation, etc. appears, select the security code entry field and press **[Char.]** to change the character type to numbers.
* The security code is a 4-digit number set at subscription.

Switching to English Display

- You can switch the display from Japanese to English.
- From the standby screen, press **[設定 (Settings)]**


 - [その他の設定 (More settings)]**


 - [言語と入力 (Language & input)]**

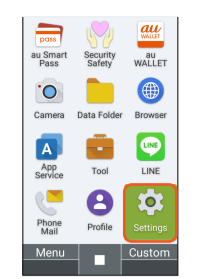 

 - [言語 (Language)]**

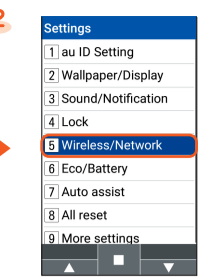 

 - [英語 (English)]** → **[OK]**

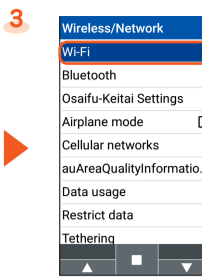 

- * The message "起動中のアプリ、メール送受信、ダウンロードなどが終了される場合があります。変更しますか?" (Applications, mail transmission/reception, and downloads may be terminated. Change the language?) appears, confirm the content and then **[はい (Yes)]**.

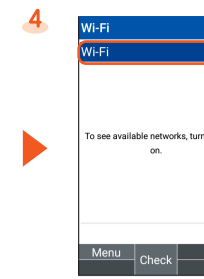 
Setting Wi-Fi®

- Use your home Wireless LAN (Wi-Fi®) or public wireless LAN to connect to the Internet.
* The battery is consumed faster when the wireless LAN (Wi-Fi®) function is ON. You are recommended to turn wireless LAN (Wi-Fi®) function OFF when not using wireless LAN (Wi-Fi®) function.
- From the standby screen, press **[設定 (Settings)]**


 - [Wireless/Network]**

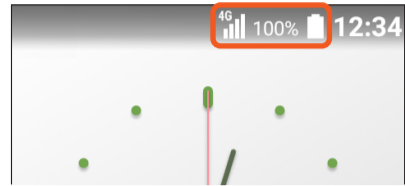 

 - [Wi-Fi]**


 - [Wi-Fi]**
* To turn wireless LAN (Wi-Fi®) function ON, mark the check box.



Available Wi-Fi® networks are listed.
• Select a Wi-Fi® network to connect → Enter a password as required → **[接続 (Connect)]** to connect the Wi-Fi® network.
• If the Wi-Fi® network you want to connect to is not detected, press **[メニュー (Menu)]** → **[ネットワークを追加 (Add network)]** and connect to the Wi-Fi® network manually.

Checking On-Screen Status

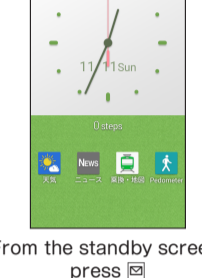 
- Check the signal strength and battery level on-screen.
- 
- Signal strength (received field strength)
[Signal strength icon]: Level display
[No signal icon]: Out of service area
 • The icon that indicates network is displayed at the upper left.
[4G icon]: 4G (LTE) available
[GSM icon]: During GSM/UMTS overseas network
 - Battery level
[100% icon]: 100% / **[Empty icon]**: Empty / **[Charging icon]**: Charging

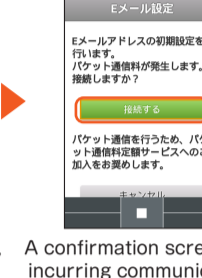 
E-mail

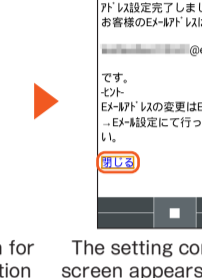 
To use e-mail (@ezweb.ne.jp), subscription to LTE NET is required. If you did not subscribe when you purchased the product, contact an au shop or Customer Service Center. Your e-mail address is determined automatically after initial setting. You can change the e-mail address later.

Initial Settings

- From the standby screen, press **[設定 (Settings)]**


- A confirmation screen for incurring communication charges appears → **[接続する (Connect)]**

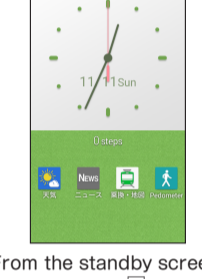 

- The setting completion screen appears → **[閉じる (Close)]**

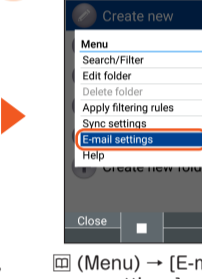 


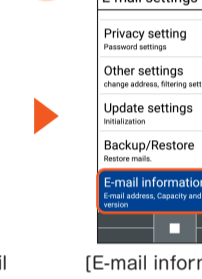 
You cannot make initial settings in Wi-Fi® communication only, and an error message is displayed. You can set Wi-Fi® settings to OFF in the following operations. When the standby screen is displayed, press **[設定 (Settings)]** → **[Wireless/Network]** → **[Wi-Fi]** → Unmark "Wi-Fi".

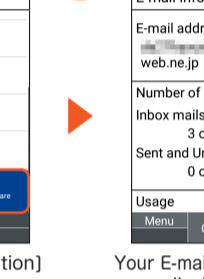 
Checking E-mail Address

- From the standby screen, press **[設定 (Settings)]**


- [メニュー (Menu)]** → **[E-mail settings]**


- [E-mail information]**


- Your E-mail address is displayed.



Changing E-mail Address

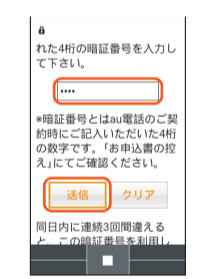 
- From the standby screen, press **[設定 (Settings)]**


- [メニュー (Menu)]** → **[E-mail settings]**


- [Other settings]**


- The confirmation screen for incurring communication charges appears → **[接続する (Connect)]** → **[Eメールアドレスの変更へ (To change e-mail address)]**


- Enter the security code* → **[送信 (Send)]**


- The precaution screen for changing e-mail address appears → **[承諾する (Accept)]**


- Enter an e-mail address → **[送信 (Send)]**


- [OK]** → The completion screen for changing e-mail address appears → **[閉じる (Close)]**



* The security code is a 4-digit number set at subscription.

How to Transfer Data

You can return/save data from your old au phone to the product using a microSD memory card or an au server.
● To return data using au server, store the data from the old au phone to au server beforehand. Setting au ID is required for using the au server.
● To return data using a microSD memory card, save the data from the old au phone to the microSD memory card beforehand.

- From the standby screen, press **[設定 (Settings)]** → **[セキュリティ (Security Safety)]**


- [Data Storage App]**

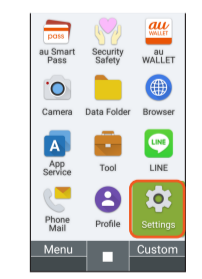 

- Select **「データ移行 (Data transfer)」** and transfer data according to the guidance on the screen.

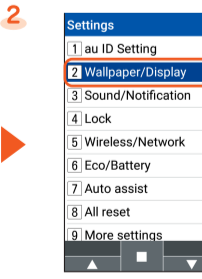 


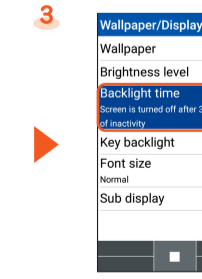 
To use "Data Storage" application to back up contacts to au server automatically, set as follows. From the standby screen, press **[設定 (Settings)]** → **[セキュリティ (Security Safety)]** → **[「データを保存/戻す (Save/Return data)]** → **[「auサーバーを使う (Use au server)】** → **[「アドレス帳の自動お預かり設定 (Contacts auto backup setting)】**

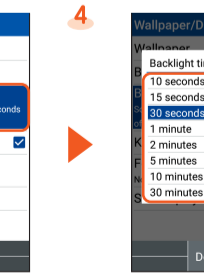 
Increasing the Lighting Time of the Screen

- You can set the length of time until the screen automatically turns off when not operating the product.
- From the standby screen, press **[設定 (Settings)]**


 - [Wallpaper/Display]**

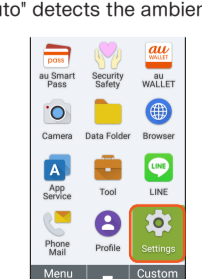 

 - [Backlight time]**

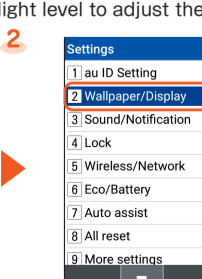 

 - Select a length of time → **[OK]**

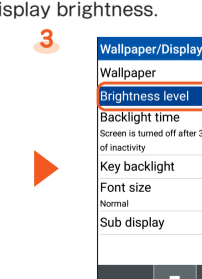 


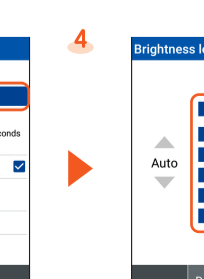 
Adjusting the Brightness of the Screen

- You can adjust the brightness level of the screen.
* "Auto" detects the ambient light level to adjust the display brightness.
- From the standby screen, press **[設定 (Settings)]**


 - [Wallpaper/Display]**

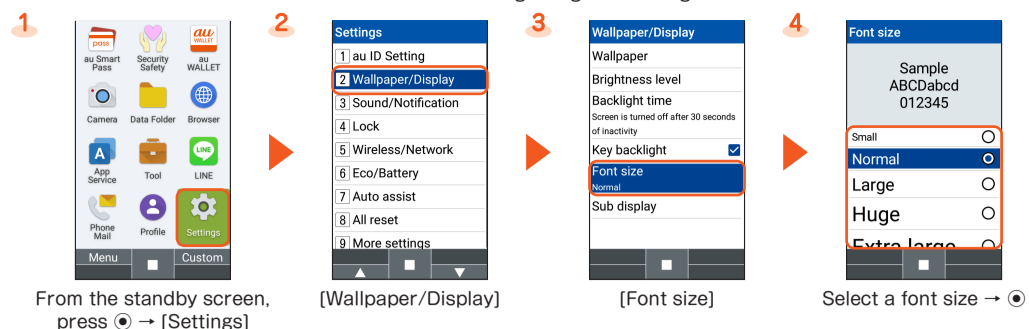 

 - [Brightness level]**


 - Select a level → **[OK]**



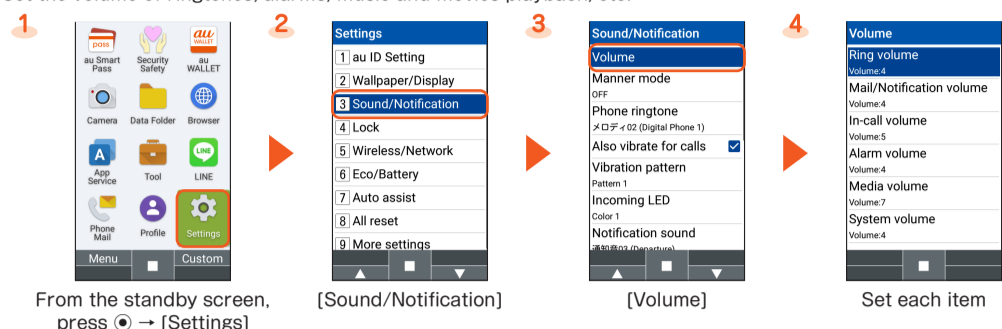 
Changing Font Size (Character Size)

Set the font size to five levels such as Small/Normal/Large/Huge/Extra large.



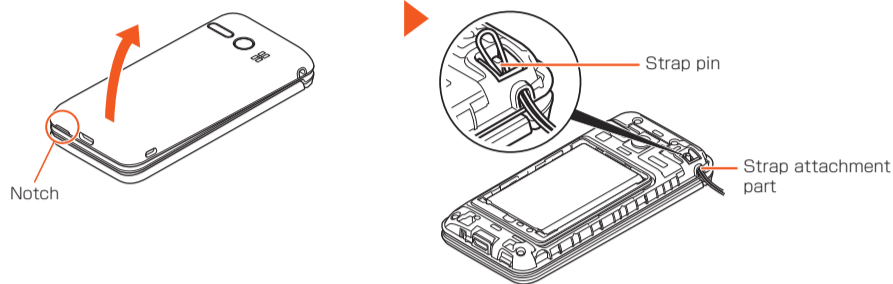 
Changing Volume

Set the volume of ringtones, alarms, music and movies playback, etc.



Attaching a Strap

- 1 Remove the back cover of the back of the product
 - Lift the back cover by the notch using fingertips (fingernail, etc.) in the direction shown to remove.
- 2 Let the strap attachment part through the hole, and hook it on the strap pin completely and pull it outwards



- 3 Attach the back cover
 - See "Installing/Removing the Battery Pack" for how to attach the back cover.