

# XPERIA XZs SOV35

## Basic Manual

### Preface

Thank you for buying "Xperia™ XZs" (simply called the "product" from here on). Before using the product, read "Basic Manual" (this manual) and "Setting Guide" for proper handling.

### Packaged items

Before your start using the product, make sure that you have all the following packaged with the product.

- Xperia™ XZs
- Sony Mobile TV antenna cable 02 (Q2SOHSA)
- 取扱説明書 (Basic Manual) (Japanese)
- ご利用にあたっての注意事項 (Cautions on using the product) (Japanese)
- 設定ガイド (Setting Guide) (Japanese)
- microSD memory card
- AC adapter
- Earphones
- Desktop holder
- USB Type-C™ cable

The following items are not included in the package.

### Information

- Purchase a specified charger (sold separately).
- The battery is built into the product.
- Illustrations used in this manual are just images for explanations. They may be different from actual ones.

### About Operating Instructions

**"Setting Guide"/"Basic Manual" (this manual)**  
Handles only basic operations for main features.

**"Basic Manual" (Japanese) app**  
You can use the "Basic Manual" (Japanese) app on the product to check detailed operations. Some functions can be directly activated from the explanation screen.

**From the Home screen, [ ]▶[お客さまサポート (Customer support)]▶[Basic Manual] (Japanese)**  
• When you activate the app for the first time, follow the onscreen instructions to download and install the app. For details, refer to "Setting Guide".

**"取扱説明書 (Full Instruction Manual)" (Japanese)**  
For detailed descriptions on various functions, refer to the "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage.

**https://www.au.com/support/service/mobile/guide/manual/**  
**For Those Requiring an English Instruction Manual**  
You can download the English version of the instruction manual from the au homepage.

**Download URL: https://www.au.com/english/support/manual/**

 
### Regarding notations used in this document

- In this manual, keys (key icons) are represented by simplified illustrations such as [ ], [ ], [ ], [ ]. Please be forewarned.
- Operations of tapping menu items/icons/buttons on the screen etc. are indicated as [(name of the item etc.)].
- In this manual, screens and operations for the product with au Nano IC Card 04 attached are described.
- Screen illustrations shown in this manual may look different from the actual screens. In some cases, minor details or a part of screen may be omitted.
- In this manual, the screen displays of the body color "Ice Blue" are described as examples.
- In this manual, "au Nano IC Card 04" is abbreviated as "au IC card".
- In this manual, "microSD™" memory card (commercially available), "microSDHC™" memory card (commercially available) and "microSDXC™" memory card (commercially available) are abbreviated as "microSD memory card" or "microSD".
- All of the indicated amounts exclude tax unless otherwise specified.
- Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM and ® marks may be omitted in this manual.
- "The Company" as appears in the manual refers to the following companies:  
Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY  
Manufactured by: Sony Mobile Communications Inc.


## Getting Ready

### Names and functions of parts

- Headset connection terminal
- Second microphone<sup>1</sup>: Reduces noise so that an opposite party can easily hear your voice
- Notification LED
- NFC / Osafu-Keitai position for holding over<sup>2</sup>
- Front camera
- Earpiece/Speaker
- Proximity/Light sensor: Switches touch panel on and off to prevent from erroneous operation during a call/Auto-control for display brightness
- Display (Touch panel)
- Speaker
- Microphone
- USB Type-C connection terminal
- Power key/Screen lock key/Fingerprint sensor
- Volume key/Zoom key

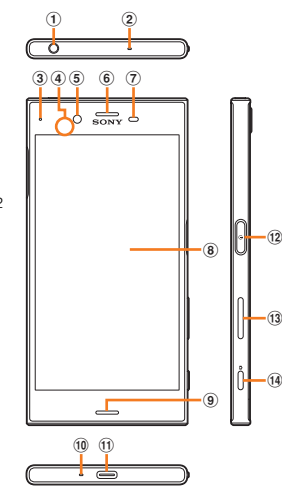

- Camera key
- Camera lens
- RGB-C-IR sensor: Detects element of lighting source of shooting environment to adjust white balance automatically when shooting.
- Flash/Photo light
- GPS/Built-in antenna<sup>3</sup>
- Laser AF sensor: Detects distance from an object when shooting to focus the camera on automatically.
- Wi-Fi®/Bluetooth® antenna<sup>3</sup>
- Back cover<sup>4</sup>
- Built-in antenna<sup>3</sup>
- au IC card
- Nameplate<sup>5</sup>
- Wi-Fi® antenna<sup>3</sup>
- microSD memory card/au IC card slot

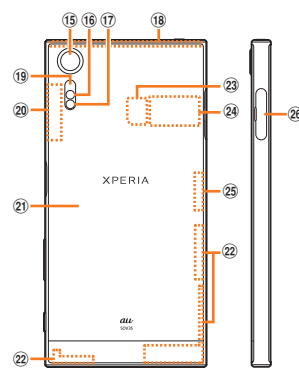 


- <sup>1</sup> Do not jab with a sharp object such as a needle. Doing so may cause a fault.
- <sup>2</sup> mark sticker is attached at the time of purchase. Remove the sticker before using a commercially available protective film.

- <sup>3</sup> The antenna is built in. Covering the antenna by the hand may affect the quality of call/communication.
- <sup>4</sup> Back cover is not removable. Removing forcibly might cause damage or a fault. Also, battery is built into the main unit and not removable by customers.
- <sup>5</sup> A sticker with CE mark, FCC ID, IMEI information, etc. printed is attached. Do not remove the sticker or nameplate.

### au IC card

 Your phone number etc. is recorded in au IC card. The product is compatible with au Nano IC Card 04.

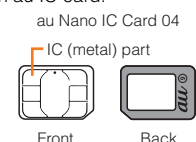


### Attaching/removing au IC card


Before attaching/removing au IC card, make sure to turn off the product.

#### Attaching au IC card

 
- Put your fingernail into the groove to pull out the cover of microSD memory card/au IC card slot
- Pull out the tray straight from the main unit to remove

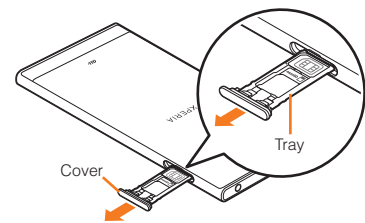

 - Set au IC card into the tray with IC (metal) part facing up. Pay attention to the orientation of notch. Surely set au IC card into the tray not to come off.

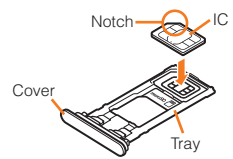

 - Hold the product horizontally, and insert and push the tray with the cards straight into the main unit. Pay attention to the direction of the tray.

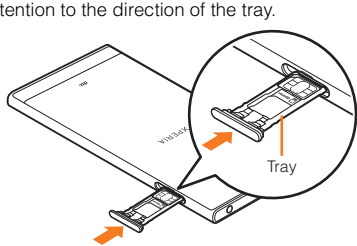

- Press the tray all the way and check that there is no gap between the main unit and the cover

#### Removing au IC card

- Put your fingernail into the groove to pull out the cover of microSD memory card/au IC card slot
- Pull out the tray straight from the main unit to remove
- Remove au IC card from the tray, insert and push the tray straight into the main unit. Pay attention to the direction of the tray.
- Press the tray all the way and check that there is no gap between the main unit and the cover

#### Information

- Note the following points, otherwise handling au IC card may cause malfunction or damage.
  - Do not touch the IC (metal) part of au IC card.
  - Insert in the correct direction.
  - Do not use force to attach or remove.

 
- The error message appears when au IC card is not set properly or there is a malfunction in au IC card.
- Do not lose the au IC card after removed.
- Do not insert au IC card with conversion adapter attached. Doing so may cause a malfunction.

### Attaching/Removing a microSD memory card


Before attaching/removing a microSD memory card, make sure to turn off the product.

#### Attaching a microSD memory card

- Put your fingernail into the groove to pull out the cover of microSD memory card/au IC card slot
- Pull out the tray straight from the main unit to remove
- Set a microSD memory card into the tray with the terminal facing up. Surely set a microSD memory card into the tray not to come off.

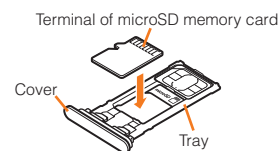

 - Hold the product horizontally, and insert and push the tray with the cards straight into the main unit. Pay attention to the direction of inserting tray.

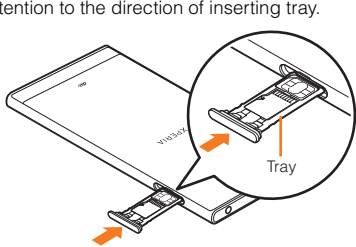

- Press the tray all the way and check that there is no gap between the main unit and the cover

#### Information

 
- Insert a microSD memory card in the appropriate direction. Inserting a microSD memory card forcefully into the slot could result in failure to remove the microSD memory card or damage.
- Do not touch the terminal of the microSD memory card.

#### Removing a microSD memory card

- Put your fingernail into the groove to pull out the cover of microSD memory card/au IC card slot
- Pull out the tray straight from the main unit to remove
- Remove the microSD memory card out of the tray, hold the product horizontally, and insert and push the tray straight into the main unit. Pay attention to the direction of inserting tray.

#### Drag

Keep touching an item or icon, trace it to the desired direction to move.

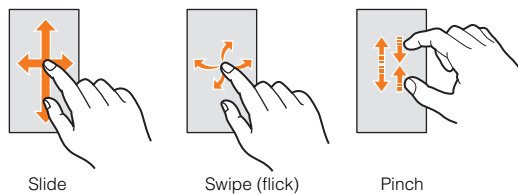

- For some apps/functions, an explanation screen for the permission may appear. Several request screens may appear or the screen content may differ. Confirm each content and follow the onscreen instructions.
- In this manual, description of the confirmation screen may be omitted.

### Home screen

Home screen consists of multiple pages. Tap [ ] to return to the Home screen any time.

- Google Search
- Widgets
- Shortcuts (Apps)
- Home screen position: Indicates the current position within the multiple pages. Slide or flick left or right to move to the adjacent screen.
- Wallpapers
- Folders (Google, 基本機能 (Basic functions))
- Apps key: If a confirmation screen related to data collection for the purpose of providing the app recommendations appears when it is tapped, operate following the onscreen instructions.



### Setting app permission

When an app/a function accessing the functions or information of the product is activated for the first time, the access permission request appears. If the request screen appears, confirm the content and tap "DENY"/"ALLOW". Example: When activating "Music" app for the first time

 
- From the Home screen, [ ]▶[Music] The request screen appears.
- [DENY]/[ALLOW]

#### Information

- Without permission, the app/function may not be activated or use of the function may be restricted.
- To change the permission setting, from the Home screen, [ ]▶[Settings]▶[Apps]▶Tap an app to change the setting ▶[Permissions]▶[ ]/[ ] of permission to be changed.

### Force-quitting

- Press and hold [ ] and the upper part of the volume key at the same time for approximately eight seconds, and release your fingers after the product vibrates three times consecutively

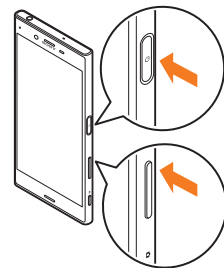

### Setting Screen lock

When the screen lock is set, the backlight turns off to avoid the keys and touch panel from false operations. When the specified time elapses, the product's screen backlight turns off automatically and screen lock is activated.

- While the screen is displayed, [ ]

#### Unlocking screen

The lock screen appears when turning the power on or the screen backlight on by pressing [ ].

- On the lock screen, swipe (flick) the screen up or left. Alternatively, touch [ ] to cancel the screen lock.

#### Information

- On the lock screen, swipe (flick) "U" or "L" to activate "Voice Search" app or "Camera" app, respectively.

## Basic Operation

### Key icons

The followings are the main functions of [ ], [ ], [ ] keys located at the bottom of the screen.



[ ] Back	Return to the previous screen. Close the dialog box, menu, or Notification panel.
[ ] Home	Display the Home screen. Long-touch to activate "Google" app.
[ ] Task	Display recently used apps on a list and activate or end them from the list. Also, the split screen is available.

### Using the touch panel

The display of the product is a touch panel operated by touching it with your finger.

#### Tap/Double-tap

Tap: Gently touch the screen and then immediately release your finger. Double tap: Touch the same position twice.

#### Long-touch

Keep touching an item with your finger.

#### Slide

While your finger is gently touching the screen, trace it to the desired direction to move over.

#### Swipe (flick)

Operate the screen by quickly moving (flicking) your finger up/down/left/right.

#### Pinch

Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.

## Turning on (Initial settings)

### Turning the power on

- [ ] (over 1 sec.)

The product vibrates and after a while the lock screen appears. When "ようこそ (Welcome)" appears after the product is powered on, follow the onscreen instructions to set the initial settings.

- Swipe (flick) the screen up or left

Alternatively, touch [ ] to cancel the screen lock.

#### Turning the power off

- [ ] (over 1 sec.)

 
- [Power off]

#### Information

- Press [ ] (over 1 sec.)▶Long-touch "Power off"▶[OK] to restart the product in safe mode (a function that enables to start the product in status at the time of purchase).

- Inset the Type-C plug of TypeC Common AC Adapter 01 (sold separately) into USB Type-C connection terminal of the product straight

The start sound for charging sounds and Notification LED of the product lights.

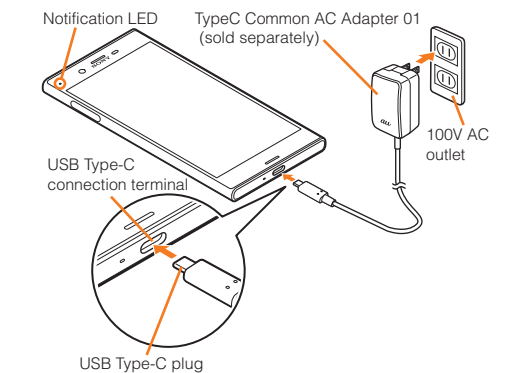

- When charging is complete, remove the USB Type-C plug of TypeC Common AC Adapter 01 (sold separately) from the product

- Remove the power plug of TypeC Common AC Adapter 01 (sold separately) from the outlet

### Adding to Home screen/Editing Home screen

You can change wallpaper or theme of the Home screen or add shortcuts of contacts etc., widgets on the Home screen.

- Long-touch an area of the Home screen where no icons are displayed

Widgets	Add widgets, shortcuts of contacts etc.
Wallpapers	Album: Select an image from the albums to set as a wallpaper. <ul style="list-style-type: none"> <li>To set the image range, adjust the cropping frame by dragging, etc.</li> </ul> Live Wallpapers: Select a content from albums to set as a wallpaper. <ul style="list-style-type: none"> <li>Photos: Select an image from photos to set as a wallpaper.</li> <li>(Images for wallpaper): Select an image to set as a wallpaper.                             <ul style="list-style-type: none"> <li>Images are displayed to the right of "Photos" and "Live Wallpapers".</li> </ul> </li> </ul>
Themes	Set the Home screen, wallpaper of the lock screen, etc. to the common image, or download themes.
Settings	Make the Home screen settings such as the auto rotation, icon size, pane transition, etc.

#### Adding a folder

- From the Home screen, long-touch an icon
- Drag the icon onto another icon



