

## XPERIA XZ1 SOV36

## Cautions on using the product

- When using the product**
- Before you start using the product, make sure to read the "Safety Precautions" to ensure correct use.
  - Before you assume that the product is malfunctioning, perform \*トラブル診断 (Diagnosis for trouble)\*.
  - To use \*トラブル診断 (Diagnosis for trouble)\*, from the Home screen, [] → [お客様サポート (Customer support)] → [故障粉末サポート (Repair and Delivery Support)] → [トラブル診断 (Diagnosis for trouble)]. Or, visit [au homepage](#) and check with \*トラブル診断 (Diagnosis for trouble)\*, [https://www.au.com/trouble-check/ \(Japanese\)](https://www.au.com/trouble-check/).
  - Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in poor signal reception areas. Communication is sometimes interrupted if you move into poor signal reception area during communication.
  - Since the product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated. (Though LTE/WiMAX 2+ / GSM/UMTS system has highly secure confidential communication features.)
  - For connecting to the emergency call acceptance organization, au VoLTE (LTE network) is used. 3G (Line exchange network) connection is not available.
  - The product is compatible with the au World Service. Each network service described in "Instruction Manual" varies depending on the area and service content.
  - Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.
  - The IMEI information of your mobile phone is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of your mobile phone.
  - Before you start using the product overseas, check the relevant laws and regulations of the country/region you visit.
  - The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional, mistaken, or incorrect use by the customer, or use under other unusual conditions outside the responsibility of the Company.
  - The Company is not liable for any incidental damages (change/ disappearance of described content, loss of business income, disruption of business, etc.) arising from use of the product or inability to use the product.

- In this manual, "Xperia™ XZ1" is usually referred to as "the product" or "main unit".
- In this manual, "Basic Manual", "Cautions on using the product" (this manual), "Safety Guide" and "取扱説明書 (詳細版) (Full instruction manual) (Japanese)" are collectively referred to as "Instruction Manual".
- In this manual, "au Nano IC Card 04" is abbreviated as "au IC card".
- In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card".
- Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. In context, TM and ® mark may be omitted.

- 1**
- Caution** Be sure to read the following cautions before use.
- Do not use damaged product or peripheral devices.**  
Failure to do so might cause fire, burns, injury, etc.
  - Do not place the product on an unstable or inclined platform. Be careful especially when vibrator is set.**  
The product might fall etc. and cause injury etc.
  - Do not use or keep in a place that is very humid, dusty, or subject to high temperature.**  
Doing so might cause fire, burns, electric shock, etc.  
For waterproofness/dustproofness, refer to "Notes on waterproof and dustproof properties" (▶P.25).
  - If children use the product, parents or guardians should give them proper instructions and do not allow them to use the product in the wrong way.**  
Use of the product in the wrong way might cause injury.
  - Keep the equipment out of the reach of babies and infants.**  
Failure to do so might cause accidental ingestion, injury, electric shock, etc.
  - Be careful when using the product continuously for a long time or charging because the temperature might become warm. Also, be careful not to touch it unintentionally for a long time when you fall asleep etc.**  
The product or the specified charging equipment (sold separately) might become warm when using an app, a call, data communication, watching TV or video, etc. for a long time or charging. If you are directly in contact with warmed part for a long time, it might cause a redness of skin, itch, rash, low-temperature burn etc. depending on your physical condition.
- 7**

- Use the adapter only on the specified power supply and voltage.**  
When charging the battery overseas, use AC adapter for global use. Using the incorrect power supply and voltage might cause fire, burns, electric shock, etc.  
AC adapter (sold separately): 100V AC (Connect to the AC outlet for internal household use)  
AC adapter (sold separately) that can be used overseas: 100V AC to 240V AC (Connect to the AC outlet for internal household use)  
DC adapter (sold separately): 12/24V DC (for negative ground vehicle only)
- When replacing a fuse in Common DC Adapter 03 (sold separately), make sure to use the specified fuse.**  
Using a fuse other than specified might cause fire, burns, electric shock, etc. For the specified fuse, see the user's manual supplied with the DC adapter.

- Clean dust from the power plug.**  
Using it with dust adhered might cause fire, burns or electric shock.
- Firmly insert the specified charging equipment (sold separately) into an outlet or accessory socket.**  
Insecure inserting might cause fire, burns, electric shock, etc.
- When you disconnect a power plug of the specified charging equipment (sold separately) from an outlet or accessory socket, do not apply excessive force it such as pulling the cable. Instead, hold the adapter main unit to disconnect.**  
Pulling the cable of the specified charging equipment (sold separately) might damage the cable causing fire, burns, electric shock, etc.

- When plugging/unplugging the specified charging equipment (sold separately) into/from the product, plug/unplug it straight toward the product without applying excessive force such as pulling the cable etc.**  
Incorrect plugging/unplugging might cause fire, burns, injury, electric shock, etc.

- 14**

- The Company is not liable for any damages arising from failure to observe the described content of the "Instruction Manual".
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.
- It is recommended you keep a copy of important data on your PC's hard disk, etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.
- Contents saved in the product, such as contacts and Album data might be altered or lost by an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that the Company assume no responsibility for any damages or lost profits resulting from altered or lost contents.
- Note that contents data (both charged or free content) saved to the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.
- The product uses liquid crystal for its display. The display response speed may become slow when the ambient temperature is low, which is due to the property of liquid crystal and not a malfunction. The display response speed will return to normal at room temperature.
- Although the display used for the product is made using high-precision technology, some pixels (dots) might be lit or out at all times. This is not a malfunction.
- You are recommended to store copies of individual data such as photos or text, videos and music on your PC by sending each file as mail attachment, etc. Note, however, that you may not be able to make copies of any copyrighted data even by the above-mentioned means.
- Do not discard the product together with regular trash. Please cooperate in the collection of the product (including optional accessories) when it is no longer needed to protect the environment and effectively use resources. We collect the product at au shops and other places.
- \*The Company\* as appears in the manual refers to the following companies: Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY  
Manufactured by: Sony Mobile Communications Inc.

- Notice**
  - Reproduction of the content of "Instruction Manual" in part or in whole is prohibited.

- 2**
- Do not expose the camera lens to direct sunlight for a long time.**  
Doing so might cause fire, burns, injury, etc. due to light-collecting mechanism of lens.
- Power off the product or put it in Airplane mode before boarding an airplane.**  
Use of mobile phones on board is restricted. Follow the instructions of each airline.  
The radio waves from the product might adversely affect on-board electronic equipment.  
Prohibited acts related to mobile phone usage on an airplane might be punished by law.
- Follow the instructions of each medical facility for the use of mobile phones on their premises.**  
Power off the product in a place where the use is prohibited.  
The radio waves from the product might affect electronic equipment and electronic medical equipment.
- Always keep the product away from your ear when you talk setting the hands-free, while sounding the ringtone loudly, or during stand-by.**  
Also, when you play game, play back videos, music, etc. connecting the earphone/microphone, etc. to the product, adjust the volume adequately.  
Loud sound is emitted from the product when calling with hands-free set. Even in standby mode, a ringtone or an alarm sound may sound suddenly.
- Listen to loud sound for long hours continuously may cause a disability of ears such as deafness.**  
Moreover, too loud sound makes you to barely hear the surrounding sounds and may cause an accident.
- If you have a weak heart, set the vibrator or ringtone volume carefully.**  
Sudden vibration or ringtone sounding when for incoming call astonishes you and it may affect your heart.
- 3**
- Do not throw the product into fire or apply heat.**  
Doing so might cause fire, burns, injury, etc.
- Do not put excessive force such as sticking a nail (sharp object) into the product, hitting it with a hammer (hard object), or stepping on it.**  
Doing so might cause fire, burns, injury, etc.
- If the internal substance etc. of the product contacts your eyes, immediately rinse the eyes with clean water and see a doctor right away.**  
The effects of the product substance etc. might cause blindness, medical problem, etc.
- 4**
- Warning** Be sure to read the following warnings before use.
- Do not turn on the light with the lighting luminescence part close to the people's eyes. Keep enough distance away especially from babies.**  
Doing so might cause blurred vision etc. Also an accident such as injury might occur if he or she is dazzled or frightened.
  - Do not turn on or flash the light toward a driver of a car etc.**  
Doing so might disturb driving and cause an accident etc.
  - Do not look at a repeatedly-blinking screen for a long time.**  
Doing so might cause cramp, loss of consciousness, etc.
  - Do not allow liquids such as water (drinking water, sweat, seawater, urine of pet animals, etc.), metal parts, or flammable objects to enter to the microSD memory card/au IC card slot of the product.**  
Do not set a microSD memory card or au IC card in wrong insertion, or insert it in wrong orientation.  
Doing so might cause fire, burns, injury, electric shock, etc.
- 8**

- If the charging terminal is deformed such as being bent etc., stop using immediately. Do not use it with the deformation restored.**  
Doing so might cause fire, burns, injury, etc. due to short-circuit of the charging terminal.
- Always remove the power plug of the specified charging equipment (sold separately) from an outlet or accessory socket when not using it.**  
Keeping it connected to the power plug might cause fire, burns, electric shock, etc.
- Immediately remove the power plug from an outlet or accessory socket if liquid such as water (drinking water, sweat, seawater, urine of pet animals, etc.) is on it.**  
Failure to do so might cause fire, burns, electric shock, etc. due to short-circuit by adhered object etc.
- Before cleaning, remove the power plug from an outlet or accessory socket.**  
Failure to do so might cause fire, burns, electric shock, etc.

- 5**
- Caution** Be sure to read the following cautions before use.
- Do not touch the specified charging equipment (sold separately) for a long time when it is connected to an outlet or accessory socket.**  
Doing so might cause a burn etc.

- 6**
- au IC card**
- Caution** Be sure to read the following cautions before use.
- Be careful of the cut surface not to hurt your fingers etc. when handling au IC card.**  
The cut surface may be sharp, and it might cause injury.
- 15**

- The content of "Instruction Manual" is subject to change without notice.
  - Every effort has been made in the preparation of "Instruction Manual". Should you notice any unclear points, omissions, etc., feel free to contact us.
- Safety Precautions (Observe Strictly)**
- Before using this product, thoroughly read these safety precautions for proper use.**
- These "Safety Precautions" describe instructions that should be observed to prevent damage to property or injury to the customer or others using the product.**
- The following symbols indicate the different levels of injury or damage that may result if the guidelines are not observed and the product is used improperly.**
- |   |                |   |
|---|----------------|---|
|  | <b>Danger</b>  | This symbol indicates that "death or serious injury" <sup>1</sup> may directly and immediately result from improper use*. |
|  | <b>Warning</b> | This symbol indicates that "death or serious injury" <sup>1</sup> may result from improper use*.                          |
|  | <b>Caution</b> | This symbol indicates that "minor injury" <sup>2</sup> and/or property damage <sup>3</sup> may result from improper use*. |
- \*1 Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long-term hospital attendance as an outpatient.
- \*2 Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.
- \*3 Property damage: This refers to extended damage to buildings, furniture, livestock, pets, etc.

- 1**
- Do not expose the camera lens to direct sunlight for a long time.**  
Doing so might cause fire, burns, injury, etc. due to light-collecting mechanism of lens.
- Power off the product or put it in Airplane mode before boarding an airplane.**  
Use of mobile phones on board is restricted. Follow the instructions of each airline.  
The radio waves from the product might adversely affect on-board electronic equipment.  
Prohibited acts related to mobile phone usage on an airplane might be punished by law.
- Follow the instructions of each medical facility for the use of mobile phones on their premises.**  
Power off the product in a place where the use is prohibited.  
The radio waves from the product might affect electronic equipment and electronic medical equipment.
- Always keep the product away from your ear when you talk setting the hands-free, while sounding the ringtone loudly, or during stand-by.**  
Also, when you play game, play back videos, music, etc. connecting the earphone/microphone, etc. to the product, adjust the volume adequately.  
Loud sound is emitted from the product when calling with hands-free set. Even in standby mode, a ringtone or an alarm sound may sound suddenly.
- Listening to loud sound for long hours continuously may cause a disability of ears such as deafness.**  
Moreover, too loud sound makes you to barely hear the surrounding sounds and may cause an accident.
- If you have a weak heart, set the vibrator or ringtone volume carefully.**  
Sudden vibration or ringtone sounding when for incoming call astonishes you and it may affect your heart.
- 2**
- Do not expose the camera lens to direct sunlight for a long time.**  
Doing so might cause fire, burns, injury, etc. due to light-collecting mechanism of lens.
- Power off the product or put it in Airplane mode before boarding an airplane.**  
Use of mobile phones on board is restricted. Follow the instructions of each airline.  
The radio waves from the product might adversely affect on-board electronic equipment.  
Prohibited acts related to mobile phone usage on an airplane might be punished by law.
- Follow the instructions of each medical facility for the use of mobile phones on their premises.**  
Power off the product in a place where the use is prohibited.  
The radio waves from the product might affect electronic equipment and electronic medical equipment.
- Always keep the product away from your ear when you talk setting the hands-free, while sounding the ringtone loudly, or during stand-by.**  
Also, when you play game, play back videos, music, etc. connecting the earphone/microphone, etc. to the product, adjust the volume adequately.  
Loud sound is emitted from the product when calling with hands-free set. Even in standby mode, a ringtone or an alarm sound may sound suddenly.
- Listening to loud sound for long hours continuously may cause a disability of ears such as deafness.**  
Moreover, too loud sound makes you to barely hear the surrounding sounds and may cause an accident.
- If you have a weak heart, set the vibrator or ringtone volume carefully.**  
Sudden vibration or ringtone sounding when for incoming call astonishes you and it may affect your heart.
- 3**
- Do not throw the product into fire or apply heat.**  
Doing so might cause fire, burns, injury, etc.
- Do not put excessive force such as sticking a nail (sharp object) into the product, hitting it with a hammer (hard object), or stepping on it.**  
Doing so might cause fire, burns, injury, etc.
- If the internal substance etc. of the product contacts your eyes, immediately rinse the eyes with clean water and see a doctor right away.**  
The effects of the product substance etc. might cause blindness, medical problem, etc.
- 4**
- Warning** Be sure to read the following warnings before use.
- Do not turn on the light with the lighting luminescence part close to the people's eyes. Keep enough distance away especially from babies.**  
Doing so might cause blurred vision etc. Also an accident such as injury might occur if he or she is dazzled or frightened.
  - Do not turn on or flash the light toward a driver of a car etc.**  
Doing so might disturb driving and cause an accident etc.
  - Do not look at a repeatedly-blinking screen for a long time.**  
Doing so might cause cramp, loss of consciousness, etc.
  - Do not allow liquids such as water (drinking water, sweat, seawater, urine of pet animals, etc.), metal parts, or flammable objects to enter to the microSD memory card/au IC card slot of the product.**  
Do not set a microSD memory card or au IC card in wrong insertion, or insert it in wrong orientation.  
Doing so might cause fire, burns, injury, electric shock, etc.
- 8**

- Using near medical equipment or in healthcare facilities**
- Warning** Be sure to read the following warnings before use.
- If you wear electronic medical equipment such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator, carry or use the product 15 cm or more away from the implant at all times.**  
The radio waves from the product might have harmful effects on the operation of the electronic medical equipment.
  - If you need to use electronic medical equipment other than implantable cardiac pacemakers or implantable cardioverter-defibrillators outside medical facilities such as treating at home, consult the relevant medical electronic equipment manufacturer for effects on the equipment by radio waves.**  
The radio waves from the product might have harmful effects on the operation of the electronic medical equipment.
  - If there is any chance that the distance between the product and a person closest to you might get shorter than 15 cm such as when you cannot freely move around, set it not to emit radio wave in advance (Airplane mode, turning the power off, etc.).**  
A person in close proximity to you might wear electronic medical equipment such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator. The radio waves from the product might have harmful effects on the operation of the electronic medical equipment.
  - Follow the instructions given by the respective medical facility regarding use of the product on their premises.**  
The radio waves from the product might have harmful effects on the operation of the electronic medical equipment.
- 16**

- Explanation of graphic symbols**
- |   |   |   |  |
|---|---|---|--|
|    | Indicates an action that is not allowed.  |    | Indicates that handling with wet hands is not allowed.             |
|   | Indicates that disassembly is not allowed.  |   | Indicates compulsory actions in accordance with instructions.      |
|  | Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed. |  | Indicates that the power plug must be disconnected from an outlet. |
- Precautions common to the main unit, internal battery, charging equipment, au IC card, Sony Mobile TV antenna cable 02, peripheral devices**
- Warning** Be sure to read the following hazards before use.
- Do not use, store or leave the equipment in a location where it is subject to high temperature or accumulation of heat (e.g. by the fire, near a heater, under a kotatsu or bedding, in direct sunlight, in a car in the hot sun).**  
Doing so might cause fire, burns, injury, electric shock, etc.
  - Do not put the equipment in cooking appliances such as microwave ovens, IH cooking heaters, or high pressure containers such as pressure cookers. Do not place the equipment near such cooking appliances.**  
Doing so might cause fire, burns, injury, electric shock, etc.
  - Do not splash sand, soil or mud, or do not directly place the equipment on them. Also, do not touch the equipment with hands with sand etc. adhered.**  
Doing so might cause fire, burns, injury, electric shock, etc.  
For waterproofness/dustproofness, refer to "Notes on waterproof and dustproof properties" (▶P.25).
- 4**

- 5**
- Warning** Be sure to read the following hazards before use.
- If the display is damaged and when the internal substance runs out, do not get it on your skin such as face, hands, or clothes etc.**  
Doing so might cause injury etc. on your eyes or skin.  
If the internal substance etc. gets into your eyes or mouth, or contacts skin or clothes, immediately rinse the contacted area with clean water. In the case of getting into your eyes or mouth, immediately consult a doctor after rinsing.
  - Do not discard the product together with other garbage.**  
Doing so might cause fire, burns, injury, etc. Also, it might cause environmental destruction. When the product is no longer used, bring it to a sales outlet such as au shop. If your local municipality has a recycling program, dispose of them as provided for.
  - If the substance etc. leaks out from the internal battery, do not allow the fluid to contact with your skin of face or hands, clothes, etc.**  
Doing so might cause injury etc. on your eyes or skin.  
If the internal substance etc. gets into your eyes or mouth, or contacts skin or clothes, immediately rinse the contacted area with clean water. In the case of getting into your eyes or mouth, immediately consult a doctor after rinsing.
  - For using the product in a car, check with the automobile manufacturer or dealer for the effects by radio waves before using.**  
Depending on vehicle model, the radio waves from the product may affect the vehicle's electronic equipment to malfunction. In that case, stop using the product immediately.
  - If abnormalities on skin are developed by using the product, immediately stop using and take medical treatment. The use of the product might cause itching, rashes, eczema, or other symptoms depending on the user's physical condition.**  
For materials of each part, refer to "Material list" (▶P.17).
  - Make sure not to get metal objects (blade of cutter, staples, etc.) adhered because magnetic parts are used on the earphone/speaker and speaker of the product.**  
Such adhered objects might cause injury etc.
- 6**
- Caution** Be sure to read the following cautions before use.
- When using the motion sensor, check the safety around you, hold the product firmly, and do not shake it unnecessarily.**  
Failure to do so might cause an accident such as injury.
- 10**

- Material list**
- Main unit**
- | Part  | Material   | Surface treatment  |
|---|--|--------------------|
| Exterior case (Volume key, Camera key, cover of microSD memory card/ au IC card slot)   | Aluminum alloy   | Alumite treatment  |
| Exterior case (top part, bottom part)   | Polycarbonate resin                                    | Coating            |
| Exterior case (Antenna slit)  | PBT resin (with glass fiber)                           | —                  |
| Exterior case (headset connection terminal)   | Nylon resin (with glass fiber)                         | —                  |
| Transparent plate (Display, Camera lens)  | Hardened glass   | AFP treatment      |
| Transparent plate (Flash/Photo light, laser AF sensor, RGB-C-IR sensor,  mark) | Polycarbonate resin + Acrylic resin composite material | Hard coating       |
| Camera ring (back side)   | Stainless steel  | PVD treatment      |
| Power key   | IC + Epoxy resin                                       | Coating + printing |
| Earpiece/Speaker (upper part) panel, Speaker (lower part) panel   | Polyester resin  | Dyeing             |
| Waterproof rubber of the cover of microSD memory card/au IC card slot   | Silicon rubber   | —                  |
| Tray of microSD memory card, tray of au IC card   | Polyacetal resin                                       | —                  |
- Sony Mobile TV antenna cable 02**
- | Part  | Material            | Surface treatment |
|---|---------------------|-------------------|
| Headset connection terminal (top), connecting plug (top)          | Polypropylene resin | —                 |
| Headset connection terminal (body), connecting plug (body), cable | Elastomer resin     | —                 |
| Connecting plug (metal part)                                      | Brass               | Gold plating      |
- 17**

- Handling precautions**
- These precautions are provided to prevent the product from damage and ensure that performance can be fully demonstrated. Thoroughly read these precautions to ensure correct use.
- Precautions common to the main unit, internal battery, charging equipment, au IC card, Sony Mobile TV antenna cable 02, peripheral devices**
- Warning** Be sure to read the following warnings before use.
- Do not use the product in extremely hot, cold or humid places.**  
(Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%. However, temporary use at an ambient temperature range of 36°C to 40°C and humidity range of 86% to 90 % is allowed.)  
\*Xperia™ XZ1 (main unit)  
\* au IC card (attached to Xperia™ XZ1 main unit)
  - Do not use in places subject to lots of dust or vibration.**  
Doing so might cause a malfunction.
  - Clean the external connection terminal with dry cotton swabs, etc. every now and then. Soldered terminals might cause poor connection. Do not exert strong force to clean the external connection terminal to prevent deformation.**
  - Clean the product with a soft dry cloth (e.g. wiping cloth for eyeglasses). Forceful rubbing with a dry cloth might scratch the display. The display might be stained if splash or smear is left attached to the surface. Wiping the product using alcohol, thinner, benzene, detergent, glass cleaner, etc. might erase the printing on the exterior case or cause a malfunction.**
  - Use as far away as possible from land-line phones, TVs and radios. Use of the product nearby might affect them.**
  - The product might become warm while talking, watching TV, charging or during other operations, depending on the situation, but this is not abnormal.**
  - Do not place near corrosive chemicals or in places where corrosive gas is generated. Doing so might cause a malfunction.**
  - Do not use outside when you can hear thunder. Doing so might risk lightning strikes and electric shock.**
  - Be sure to use only the specified peripheral devices. Use of other peripheral devices might cause a malfunction.**
  - Do not put the product in a cooking apparatus such as microwave oven or a pressure vessel. Doing so might cause a malfunction.**
  - The customer is not allowed to disassemble, modify or repair the product. Doing so might cause a malfunction. Modification of the product is in violation of the Radio Law and Telecommunications Business Act.**
  - Do not allow a part of your body such as finger or conductive foreign objects (metal fragments, pencil leads, etc.) to come into contact with or enter to the external connection terminal. Doing so might cause a malfunction.**
- 18**

- Do not charge the battery when the product is wet with liquids such as water (drinking water, sweat, seawater, urine of pet animals, etc.).**  
Doing so might cause fire, burns, injury, electric shock, etc.  
For waterproofness, refer to "Notes on waterproof and dustproof properties" (▶P.25)
- Do not subject the product to strong pressure or break the product. Especially when bringing the product putting in a pocket of clothes, do not let the product hit against surroundings or being put between the objects.**  
Doing so may cause fire, burns, injury, etc. due to damage of the internal battery.  
\*The following are examples that you should be careful of:  
• Sitting or squatting with the product put in a pocket of trousers or skirt  
• Putting the product in a pocket of outer wear and catching them in a door or a door of car  
• Stepping on the product on a soft object such as a sofa, bed, or bedding, or on a floor
- Do not disassemble or modify the equipment.**  
Doing so might cause fire, burns, injury, electric shock, etc.
- Do not let the equipment get wet with liquids such as water (drinking water, sweat, seawater, urine of pet animals, etc.).**  
Doing so might cause fire, burns, injury, electric shock, etc.  
For waterproofness, refer to "Notes on waterproof and dustproof properties" (▶P.25)
- Do not allow liquids such as water (drinking water, sweat, seawater, urine of pet animals, etc.) to get inside the charging terminal or the external connection terminal.**  
Doing so might cause fire, burns, injury, electric shock, etc.  
For waterproofness, refer to "Notes on waterproof and dustproof properties" (▶P.25)
- Use only optional parts specified by au for the product.**  
Using devices other than specified might cause fire, burns, injury, electric shock, etc.
- 5**

- 6**
- Warning** Be sure to read the following warnings before use.
- Watch the display in an adequately bright place taking a certain distance from it.**  
Watching in a dark place or closely might reduce visual acuity etc.
- Sony Mobile TV antenna cable 02**
- Caution** Be sure to read the following cautions before use.
- Do not wield the product holding the antenna etc. when Sony Mobile TV antenna cable 02 is connected.**  
Failure to do so might cause an accident such as injury.
  - If any abnormality on skin is developed from using Sony Mobile TV antenna cable 02, immediately stop using and take medical treatment. The use of the product might cause itching, rashes, eczema, or other symptoms depending on the user's physical condition.**  
For materials of each part, refer to "Material list" (▶P.17).
- Charging equipment**
- Warning** Be sure to read the following warnings before use.
- Do not use the specified charging equipment (sold separately) if the cable is damaged.**  
Doing so might cause fire, burns, electric shock, etc.
  - Do not use the specified charging equipment (sold separately) in a humid place such as bathroom.**  
Doing so might cause fire, burns, electric shock, etc.
  - Common DC Adapter 03 (sold separately) is only for a negative ground vehicle. Do not use DC adapter for a positive ground vehicle.**  
Doing so might cause fire, burns, electric shock, etc.
  - If you hear thunder, do not touch the specified charging equipment (sold separately).**  
Doing so might cause electric shock etc.
- 12**

- Do not use the product in extremely hot, cold or humid places.**  
(Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%. However, temporary use at an ambient temperature range of 36°C to 40°C and humidity range of 86% to 90 % is allowed.)  
\*Xperia™ XZ1 (main unit)  
\* au IC card (attached to Xperia™ XZ1 main unit)
  - Do not use in places subject to lots of dust or vibration.**  
Doing so might cause a malfunction.
  - Clean the external connection terminal with dry cotton swabs, etc. every now and then. Soldered terminals might cause poor connection. Do not exert strong force to clean the external connection terminal to prevent deformation.**
  - Clean the product with a soft dry cloth (e.g. wiping cloth for eyeglasses). Forceful rubbing with a dry cloth might scratch the display. The display might be stained if splash or smear is left attached to the surface. Wiping the product using alcohol, thinner, benzene, detergent, glass cleaner, etc. might erase the printing on the exterior case or cause a malfunction.**
  - Use as far away as possible from land-line phones, TVs and radios. Use of the product nearby might affect them.**
  - The product might become warm while talking, watching TV, charging or during other operations, depending on the situation, but this is not abnormal.**
  - Do not place near corrosive chemicals or in places where corrosive gas is generated. Doing so might cause a malfunction.**
  - Do not use outside when you can hear thunder. Doing so might risk lightning strikes and electric shock.**
  - Be sure to use only the specified peripheral devices. Use of other peripheral devices might cause a malfunction.**
  - Do not put the product in a cooking apparatus such as microwave oven or a pressure vessel. Doing so might cause a malfunction.**
  - The customer is not allowed to disassemble, modify or repair the product. Doing so might cause a malfunction. Modification of the product is in violation of the Radio Law and Telecommunications Business Act.**
  - Do not allow a part of your body such as finger or conductive foreign objects (metal fragments, pencil leads, etc.) to come into contact with or enter to the external connection terminal. Doing so might cause a malfunction.**
- 18**

- Warning** Be sure to read the following warnings before use.
- Do not subject the equipment to strong force, impacts, or vibration such as letting it fall, stepping on it or throwing it.**  
Doing so might cause fire, burns, injury, electric shock, etc.
  - Do not allow conductive materials (such as metal objects and pencil lead) to come into contact with the charging terminal or external connection terminal, or allow dust to get inside of it.**  
Doing so might cause fire, burns, injury, electric shock, etc.
  - Do not cover or wrap the equipment with a cloth or bedding in use or while charging.**  
Doing so might cause fire, burns, etc.
  - If charging does not finish after specified time, stop charging.**  
Failure to do so might cause fire, burns, injury, etc. due to overcharge etc.
  - Power off the product before you step into a place where flammable gas can leak, such as gas stations, or a place where dusts are generated. Stop charging if you charge the product.**  
Using the product in a place where flammable gas leaks might cause explosion, fire, etc.  
When using Osafu-Keitai at a gas station etc., be sure to turn the power off in advance.  
(If you set "NFC / Osafu-Keitai lock", cancel the lock and then turn the power off.)
  - If you notice anything unusual about the equipment such as an unusual odor, abnormal noise, smoke generation, overheating, discoloration or deformation during operation, charging or storage, perform the following measures.**
    - Remove the power plug from an outlet or accessory socket
    - Turn off the power of the product
Failure to do so might cause fire, burns, injury, electric shock, etc.
- 9**

- 10**
- Do not short-circuit the charging terminal while it is connected to an outlet or accessory socket. Do not touch the charging terminal with your hands, fingers, or any part of your body.**  
Doing so might cause fire, burns, electric shock, etc.
- Do not place heavy objects on a cable of the specified charging equipment (sold separately), or do not apply unreasonable force to the cable such as pulling.**  
Doing so might cause fire, burns, electric shock, etc.
- Do not contact metal objects to the specified charging equipment (sold separately) when connecting to or disconnecting from an outlet.**  
Doing so might cause fire, burns, electric shock, etc.
- Do not connect the voltage converter for overseas travel (travel converter) to the specified charging equipment (sold separately).**  
Doing so might cause ignition, overheating, electric shock etc.
- Do not put an excessive force to the connection part with the specified charging equipment (sold separately) connected to the product.**  
Doing so might cause fire, burns, injury, electric shock, etc.
- Never connect the USB Type-C™ plug to the product or the specified charging equipment (sold separately) when it is wet.**  
Although the product has the waterproof property, inserting USB Type-C plug to the product when it is wet might cause electric shock or short-circuit due to the moisture or foreign substance on the product or USB Type-C plug, or might cause abnormal overheating, fire damage, fire, burns, or a fault if corrosion occurs.
- Do not touch the cable, charging terminals or power plug of the specified charging equipment (sold separately) with wet hands.**  
Doing so might cause fire, burns, electric shock, etc.
- 16**

- In the event that the product gets wet while charging, immediately disconnect the plug of the specified charging equipment (sold separately).**
  - Do not use the product while driving an automobile or motorized bicycle, riding a bicycle or walking. Use of a mobile phone while driving a car or motorbike is prohibited by law. Use of a mobile phone while riding a bicycle might be punishable by some regulations.**
  - Using or charging the product in a bag or when it is covered with bedding might cause a malfunction.**
  - When using the specified charging equipment (sold separately) or an external device, insert/remove the connector straight to/from the terminal. Make sure the orientation of the connector is correct. Unless it's correct, it might cause a malfunction.**
  - Do not expose the camera lens to direct sunlight for an extended period.**  
Doing so might cause a malfunction.
  - Do not store the product in places subject to direct sunlight (e.g. in automobiles), places that get hot, places that get extremely cold, and in humid or dusty places. Doing so might cause a malfunction.**
  - Do not place the product on an unstable or inclined platform. Be careful especially while charging or when vibrator is set. The product might fall and cause a malfunction etc.**
  - Do not exceed the rating of outlet or wiring device when charging the product, for example, by starburst connection etc.**
  - Do not swing the product around by holding Sony Mobile TV antenna cable 02, etc. Doing so might cause damage.**
- Main unit**
- Since the battery is built into the product, you cannot replace it yourself. For replacing the battery, contact an au shop or Customer Service Center.
  - Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so might cause scratching or damage.
  - Do not forcefully press the keys or display surface with your fingernails or hard objects. Doing so might cause scratching or damage of the keys or display.
- 19**</

