# XPERIA 1 SOV40

## Cautions on using the product

- · In this manual, "Xperia 1" is usually referred to as "the product" or "main unit" ını ınıs manuaı, "Basıc Manual", "Cautions on using the product" (this manual), "Setting Guide" and "取扱説明書(詳細版) (Full instruction manual)" (Japanese) are collectively referred to as "Instruction Manual
- In this manual, "au Nano IC Card 04" is abbreviated as "au IC card" In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)",
   "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card".
- Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM and ® marks may be omitted in this manual.
- Always turn off the product before you enter a place where flammable gas may be present, or a place where dusts are generated. Stop charging the product if you are charging it.
- Follow the instructions of a gas station or other such location before using the product there. not charge the product at a gas station, etc
  - Take care not to drop the product at a gas station, etc.; in particular, do not use the product while filling. Ignition of flammable gas might cause explosion, fire, etc
- If you notice anything unusual about the equipment such as an unusual odor, abnormal noise, smoke generation, overheating, discoloration or deformation during operation, charging or
- storage, perform the following measures.

  Remove the power plug from an outlet or accessory socket
- Turn off the power of the product
   Failure to do so might cause fire, burns, injury, electric shock, etc.

Caution Be sure to read the following cautions before use.

Do not wield the product holding the antenna etc. when USB Do not wield the product holding the antenna etc. when USB Type-C<sup>TM</sup>-3.5 \$\phi\$ conversion/TV Antenna cable 01 is connected. Doing so might cause an accident such as injury.

Do not use damaged product or peripheral devices.

Doing so might cause fire, burns, injury, etc.

Do not place the product on an unstable or inclined platform. Be careful especially when vibrator is set.
The product might fall and cause injury etc.

Do not use or keep in a place that is very humid, dusty, or subject to high temperature.

Doing so might cause fire, burns, electric shock, etc. For waterproofness/dustproofness, refer to "Notes on waterproof and dustproof properties" (▶P.26).

Do not place heavy objects on a cable of the specified charging equipment (sold separately), or do not apply unreasonable force to the cable such as pulling.

Do not connect the voltage converter for overseas travel (travel converter) to the specified charging equipment (sold separately).

Doing so might cause ignition, overheating, electric shock, etc.

Do not put an excessive force to the connection part with the specified charging equipment (sold separately) connected to the product product

or short-circuit due to the moisture or foreign substance on the product or USB Type-C plug, or might cause abnormal overheating,

Do not touch the cable, charging terminals or power plug of the Do not touch the cable, charging terminals of policy page 50 policy page 50 policy policy policy policy page 50 p

Use the adapter only on the specified power supply and voltage When charging the battery overseas, use AC adapter for global

Jsing the incorrect power supply and voltage might cause fire, burn

AC adapter (sold separately): 100V AC (Connect to the AC outlet for

AC adapter (sold separately) that can be used overseas: 100V AC to 240V AC (Connect to the AC outlet for internal household use) DC adapter (sold separately): 12/24V DC (for negative ground vehicle

## When using the product

■ トラブル診断 (Diagnosis for trouble)

Or you can visit the following au homepage. https://www.au.com/trouble-check/ (Japanese)

product in the wrong way.

Precautions" to ensure correct use. Before you assume that the product is malfunctioning, perform "クイック診断 (Quick diagnosis)" or "トラブル診断 (Diagnosis for trouble)" in

Before you start using the product, make sure to read the "Safety

故障紛失サポート (Repair and Delivery Support)" app. ■ クイック診断 (Quick diagnosis)

In the Home screen, slide the screen up→[お客さまサポート (Customer support)]→[故障紛失サポート (Repair and Delivery Support)]→[クイック診断してみる (Go to Quick diagnosis)]

■ トフノル⊯≥断 (Diagnosis for Goulie)
In the Home screen, slide the screen up→(お客さまサポート (Customer support)]→[政障紛失サポート (Repair and Delivery Support)]→[便利な機能

where the signal does not reach (e.g. tunnels and basements). Also,

Communication is sometimes interrupted if you move into poor signal reception area during communication.

Since the product uses radio waves, the possibility of communication.

ommunication is sometimes not possible in poor signal reception areas

ntercepts by third parties cannot be eliminated. (Though LTE/WiMAX 2+/

The product is compatible with the au World Service. Each network service

Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.

Keep the equipment out of the reach of babies and infants. In particular, be careful where small parts are stored, such as the

Failure to do so might cause accidental ingestion, injury, electric

See "Material list" ( P.17) for materials used in each part of the

Be careful about the temperature when using the product

es, when you fall asleep, etc

Danger Be sure to read the following hazards before use.

When replacing a fuse of Common DC Adapter 03 (sold

ing a fuse other than specified might cause fire, burns, electric

Clean dust from the power plug.
Using it with dust adhered might cause fire, burns, electric shock, etc.

Firmly insert the specified charging equipment (sold separately) into an outlet or accessory socket.

When you disconnect a power plug of the specified charging

quipment (sold separately) from an outlet or accessory socket, o not apply excessive force it such as pulling the cable. Instead,

rately) might damage the cable causing fire, burns, electric

rect plugging/unplugging might cause fire, burns, injury, electric

When plugging/unplugging the specified charging equipment (sold separately) into/from the product, plug/unplug it straight toward the product without applying excessive force such as

secure inserting might cause fire, burns, electric shock, etc

Pulling the cable of the specified charging equipment (sold

shock, etc. For the specified fuse, see the user's manual supplied

separately), make sure to use the specified fuse.

Do not throw the product into fire or apply heat.

Doing so might cause fire, burns injury ato

your physical condition.

roduct, and consult a doctor.
epending on your physical constitution or health, itchiness, a rash,

ontinuously or while charging because it might become warm.

might become warm when using an app, a call, data communication

watching TV or video etc. continuously or while charging. If you are

directly in contact with warmed part continuously, it might cause a redness of skin, itch, rash, low-temperature burn, etc. depending on

Also, be careful not to keep touching it unintentionally in a pocket

If any skin abnormality develops, immediately stop using the product, and consult a doctor

Use of the product in the wrong way might cause

microSD memory card/au IC card tray.

described in "Instruction Manual" varies depending on the area and service

GSM/UMTS system has highly secure confidential communication features

ons)]→[トラブル診断を試す (Go to Diagnosis for trou

Before you start using the product overseas, check the relevant laws and

The IMEI information of your mobile phone is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of your

regulations of the country/region you visit.

The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions

the customer, or use under other unusual conditions outside the

disappearance of described content, loss of business income, disruption of usiness, etc.) arising from use of the product or inability to use the product.

The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software no

Captured image data or downloaded data may sometimes be altered or los due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.

· It is recommended you keep a copy of important data on your PC's hard disk etc. Whatever the cause of the defect or malfunction may be, the

altered or lost by an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that the Company assume no responsibility

for any damages or lost profits resulting from altered or lost contents.

Note that contents data (both charged or free content) saved to the product cannot be returned to the customer when the product is replaced for repair of a fault, for example, Although an afterimage may occur when a same screen has been displayed for a

Although the display used for the product is made using high-pretechnology, some pixels (dots) might be lit or out at all times. This is not a

copyrighted data even by the above-mentioned means.

If children use the product, parents or guardians should give them proper instructions and do not allow them to use the product in the warrance.

then see a doctor right away.

The effects of the internal substance of the product might cause blindness, medical problem, etc.

Warning Be sure to read the following warnings before use.

injury might occur if he or she is dazzled or frightened. Do not turn on of flash the light toward a driver of a car etc. Doing so might disturb driving and cause an accident etc.

Do not allow liquids such as water (utilities states), seawater, urine of pet animals, etc.), metal parts, or flammable objects to enter to the microSD memory card/au IC card slot of Do not allow liquids such as water (drinking water, sweat,

Do not expose the camera lens to direct sunlight for a long time.

Doing so might cause fire, burns, injury etc. due to light a light and lens to light a light and lens to light a light and light chanism of lens.

Power off the product or put it in Airplane mode before boarding Power off the an airplane.

**N** Warning

! Caution

Jse of mobile phones on board is restricted. Follow the instructions o he radio waves from the product might adversely affect on-bo Prohibited acts related to mobile phone usage on an airplane might

Do not discard the product together with regular trash. Please cooperate the collection of the product (including optional accessories) when it is no

"The Company" as appears in the manual refers to the following cor Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE

ollects the product at au shops and other places

Manufactured by: Sony Mobile Communications Inc

Safety Precautions (Observe Strictly)

■ Before using this product, thoroughly read these safety precautions

observed to prevent damage to property or injury to the customer or

■ The following symbols indicate the different levels of injury or damage

that may result if the guidelines are not observed and the product is

directly and immediately result from improper use".

This symbol indicates that "minor injury\*2 and/or

property damage\*3 may result from improper use".

s symbol indicates that "death or serious injury\*1 m

■ These "Safety Precautions" describe instructions that should be

OS or change/termination of services

longer needed to protect the environment and effectively use resources. We

production of the content of "Instruction Manual" in part or in whole is

The content of "Instruction Manual" is subject to change without notice

Some functions may be unavailable due to change of specification of the

OS of change, reminiation of services.

Every effort has been made in the preparation of "Instruction Manual".

Should you notice any unclear points, omissions, etc., feel free to contact

be punished by law. Follow the instructions of each medical facility for the use of

nobile phones on their premises. ower off the product in a place where the use is prohibited The radio waves from the product might affect electronic equipment

Always keep the product away from your ear when you call handsfree, while sounding the ringtons facility Also, when you play game, play back videos, music,

connecting the earphone/microphone, etc. to the product, adjust the volume adequately. Loud sound is emitted from the product when calling with hands-free even in standby mode, a ringtone or an alarm sound may sound

Listening to loud sound for long hours continuously may cause a isability of ears such as deafness preover, too loud sound makes you to barely hear the surrounding

If you have a weak heart, set the vibrator or ringtone volume carefully.

vendor whether the operation might be affected by radio waves. The radio waves from the product might affect elec

■ Explanation of graphic symbols No wet hands Indicates an action that is ndicates that handling wit not allowed wet hands is not allowed ndicates compulsory (1) ndinates that disass ions in accordance wit not allowed. ace where the product i kely to get wet or allowing plug must be disconnected ne product to get wet is

\*1 Serious injury: This refers to loss of sight, injury, burns (high- and low temperature), electric shock, broken bones, injuries with

hospital attendance as an outpatient.

\*2 Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for

\*3 Property damage: This refers to extended damage to buildings, furniture

residual aftereffects from poisoning etc., and injuries

requiring hospital admission for treatment or long-term

treatment or long-term hospital attendance as an outpatient

Precautions common to the main unit, internal battery charging equipment, au IC card, USB Type-CTM-3.5  $\phi$ conversion /TV Antenna cable 01, peripheral devices

Danger Be sure to read the following hazards before use.

Do not use, store or leave the equipment in a location where it is Do not use, store or reave the equipment in a subject to high temperature or accumulation of heat (e.g. by the fire, near a heater, under a kotatsu or bedding, in direct sunlight, in a car in the hot sun). Doing so might cause fire, burns, injury, electric shock, etc.

Turn the product off near electronic devices that use precision control or faint signals. ne radio waves from the product might interfere with the operation of

electronic devices or equipment. \* The following are some electronic devices or equipment that yo should be careful of:

Hearing aids, implantable cardiac pacemaker, implantable cardioverter defibrillator, other electronic medical equipment, and other automatically controlled devices or equipment. If you use a implantable cardiac pacemaker, implantable cardioverter defib or other electronic medical equipment, check with the medical electronic equipment manufacturer or vendor whether the operation can be affected by radio waves.

Be careful about broken glasses or exposed internal part of the Be careful about broken glasses or exposed internal part of to product when the display, back cover, or the camera lens is Touching damaged or exposed part might cause burns, injury electric shock, etc.

If the internal battery leaks or gives off a strange smell, immediately stop using and remove it from the vicinity of open

The leaking liquid might ignite fire, catch fire, explode, etc Be careful not to allow a pet etc. to bite the product.
Doing so might cause fire, burns, injury, etc. because of ignition, burst, heat or leaking of the internal battery.

Part

Caution

Be sure to read the following cautions before use.

Material

When using the motion sensor, check the safety around you, hold the product firmly, and do not shake it unnecessarily.

near such cooking appliances.
Doing so might cause fire, burns, injury, electric shock, etc.

Do not splash sand, soil or mud, or do not directly place the equipment on it. Also, do not touch the equipment with hands with sand etc. adhered.

Doing so might cause fire, burns, injury, electric shock, etc.

Do not put the equipment in cooking appliances such as microwave ovens, IH cooking heaters, or high pressure

roofness, refer to "Notes on waterproof and dustproof properties" (▶P.26). Do not charge the equipment when it is wet with liquids such as water (driving water, sweat, seawater, urine of pet animals, etc.).

containers such as pressure cookers. Do not place the equipmen

Also, do not charge the equipment in a place where water comes in contact such as bathroom.

Doing so might cause fire, burns, injury, electric shock, etc.

For waterproofness, refer to "Notes on waterproof and dustproof

properties" (▶P.26). Do not subject the product to strong pressure or break the product. Especially when bringing the product putting in a pocket of clothes, do not let the product hit against surroundings or

being put between the objects. g so may cause fire, burns, injury, etc. due to damage of the

The following are examples that you should be careful or · Sitting or squatting with the product put in a pocket of trousers or

· Putting the product in a pocket of outer wear and catching them in a · Stepping on the product on a soft object such as a sofa, bed or bedding, or on a floor

Do not disassemble or modify the equipment.
Doing so might cause fire, burns, injury, electric shock, etc

hands, clothes, etc.

Do not try to remove the internal battery from the product. Doing so might cause fire, burns, injury, etc.

If the display is damaged and when the internal substance etc.

leaks out, do not allow it to contact your skin such as face and hands clother at a

Doing so might cause injury etc. on your eyes or skir If the internal substance gets into your eyes, mouth, etc. or contacts your skin or clothes, immediately rinse with clean water. In the case of getting into your eyes, mouth, etc., immediately consult a doctor after rinsing. Do not discard the product together with other garbage.

Doing so might cause fire, burns, injury, etc. Also, it might cause environmental destruction. When the product is no longer used, bring

it to a sales outlet such as au shop. If your local municipality has a ecycling program, dispose of them as provided for. If the substance leaks out from the internal battery, do not allow the fluid to contact with your skin of face, hands, clothes, etc. Doing so might cause injury etc. on your eyes or skin. If the internal substance gets into your eyes, mouth, etc. or contacts

your skin or clothes, immediately rinse with clean water. In the case of getting into your eyes, mouth, etc., immediately consult

For using the product in a car, check with the automobile For using the product in a car, check with the automobile manufacturer or dealer for the effects by radio waves before

Depending on vehicle model, the radio waves from the product may affect the vehicle's electronic equipment to malfunction. In that case, stop using the product immediately.

Magnetic components are used in the product's earpiece/speake (top), speaker (bottom left on back), and vibrator (bottom right or back); make sure no metal objects (cutter blade, staple, etc.) are attached to the product.

Do not try to remove the back cover from the product. Doing so might cause fire, burns, injury, etc.

Do not let the equipment get wet with liquids such as water (drinking water, sweat, seawater, urine of pet animals, etc.). Doing so might cause fire, burns, injury, electric shock, etc. For waterproofness, refer to "Notes on waterproof and dustproof

For waterproofness, refer to "Notes on waterproof and dustproof

properties" (▶P.26). Use only optional parts specified by au for the product

lectric shock etc.

Do not allow conductive materials (such as metal objects and pencil lead) to come into contact with the charging terminal or external connection terminal or external connection terminal, or allow dust to get inside of it. Doing so might cause fire, burns, injury, electric shock, et

Do not cover or wrap the equipment with a cloth or bedding in use or while charging.

Doing so might cause fire, burns, etc.

If charging does not finish after specified time, stop charging.
Failure to do so might cause fire, burns, injury, etc. due to overcharge

Do not leave the main unit in the reach of children or persons

If you think the magnet has been swallowed, immediately consult a

medical devices. Do not bring the product near these devices or persons using these devices. If you use such a device, consult your

Watching in a dark place or closely might reduce visual acuity etc

Warning Be sure to read the following warnings before use.

Do not use the specified charging equipment (sold separately) if the cable is damaged.

Doing so might cause fire, burns, electric shock, etc.

Doing so might cause fire, burns, electric shock, etc

Doing so might cause fire, burns, electric shock, etc

Do not use the product in extremely hot, cold or humid places

Do not contact metal objects such as metal strap to the specified charging equipment (sold separately) when connecting the plug to or disconnecting it from an outlet.

Doing so might cause fire, burns, injury, electric shock, etc

Never connect the USB Type-C plug to the product or the specified charging equipment (sold separately) when it is wet. Although the product has the waterproof property, inserting USB Type-C plug to the product when it is wet might cause electric shock fire damage, fire, burns, or a fault if corrosion occurs

> shock, etc. If the charging terminal is deformed such as being bent, stop using immediately. Do not use it with the deformation restored oing so might cause fire, burns, injury, etc. due to short-circuit of the

pulling the cable.

hold the adapter main unit to disconnect.

Always remove the power plug from an outlet or accessory socket when not using it. Keeping it plugged in might cause fire, burns, electric shock, etc

Immediately remove the power plug from an outlet or accessory socket if liquids such as water (drinking water sweet) urine of pet animals, etc.) get adhered.
Failure to do so might cause fire, burns, el short-circuit by adhered object etc.

Before cleaning, remove the power plug from an outlet or accessory socket. ilure to do so might cause fire, burns, electric shock. etc

Caution Be sure to read the following cautions before use. Do not touch the specified charging equipment (sold separately) continuously when it is connected to an outlet or accessory socket.

Doing so might cause a burn etc.

/ Warning

Caution Be sure to read the following cautions before use.

Be careful of the cut surface not to hurt your fingers etc. when handling au IC card. he cut surface may be sharp, and it might cause injury

■ Using near medical equipment or in healthcare facilities

If you wear electronic medical equipment such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator. ry or use the product 15 cm or more away from the implant at The radio waves from the product might have harmful effects on the

operation of the electronic medical equipment.

Be sure to read the following warnings before use.

Main unit Material Aluminum allov

xterior case (top part, bottom art side part Power key Volum eatment mory card/au IC card slot, Camera ring (back side)) r case (Antenna slit, USB Type-C connection terminal) glass fiber) ransparent plate (Display, Back Hardened glass

ansparent plate (Camera lens) ardened glass AFP treatment - AR treatment mpound) arpiece/Speaker (upper part) lyester resir aker (bottom) pane polyester resin Rubber packing on the cover of on rubber croSD memory card/au IC card Polycarbonate resi Tray of microSD memory card/au Polyacetal resin

■ USB Type-C<sup>TM</sup>-3.5 ¢ conversion/TV Antenna cable 01

Part	Material	Surface treatment
USB Type-C plug (top surface)	Polypropylene resin (black)	_
Headset connection terminal (top surface)	Polyamide resin (black)	_
Headset connection terminal (body), USB Type-C plug (body), cable	Elastomer resin (black)	_
USB Type-C plug (metal terminal part), Headset connection terminal (metal terminal part)	Copper alloy	Gold plating
USB Type-C plug (outer metal casing)	Stainless steel	Nickel plating

Handling precautions Thoroughly read these precautions to ensure correct use.

Precautions common to the main unit, internal battery charging equipment, au IC card, USB Type-C™-3.5 φ conversion/TV Antenna cable 01, peripheral devices

 Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heavy object on the product in a bag. Sitting on the product in your pocket might damage the display or internal circuit board or cause a malfunction. Keeping an external device connected to the external connection terminal might cause damage of the connector or a malfunction. Such damage and damage.

● To ensure waterproof property (equivalent to IPX5 and IPX8) of the product use with the cover of microSD memory card/au IC card slot tightly closed. Note that the waterproof property is not guaranteed in every usage condition. Do not allow water to get inside of the product or splash water or the specified charging equipment (sold separately) or optional accessories. Do not open or close the cover of microSD memory card/au IC card slot in the rain or with water droplets on the surface of the product. Doing so might cause water intrusion resulting in internal corrosion.

Malfunctions determined to be caused by water intrusion are not covered by the warranty.

 Waterproof/dustproof performance might not be maintained if the product has an outward abnormality such as damage or deformation. In that case act Repair and Delivery Support Cente

 Do not use the product in extremely hot, cold or humid places.
 (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%. However, temporary use at an ambient temperature range of 36°C to 40°C and humidity range of 86% to 90 % is allowed.)

Xperia 1 main unit
 au IC card (attached to Xperia 1 main unit)

Do not allow liquids such as water (drinking water, sweat, seawater, urine of pet animals, etc.) to get inside the charging terminal or the external connection terminal.

Doing so might cause fire, burns, injury, electric shock, etc.

Use only optional parts specified by au for the product.
Using devices other than specified might cause fire, burns, injury,



Do not leave the summarrequiring supervision.

The product uses a small magnet. Accidental swallowing might cause there is a risk of choking or serious harm to

Do not bring the main unit near medical devices.
The product uses a magnet, it may affect cardiac pacemakers, defibrillators, variable-pressure hydrocephalus shunts, and other

Watch the display Watch the display in an adequately bright place taking a certain

■ Charging equipment

Common DC Adapter 03 (sold separately) is only for a negative ground vehicle. Do not use DC adapter for a positive ground

If you hear thunder, do not touch the specified charging equipment (sold separately).

Doing so might cause electric shock etc.

Do not short-circuit the charging terminal while it is connected to an outlet or accessory socket. Do not touch the charging terminal with your hands, fingers, or any part of your body.

 Charging equipment • Do not use in places subject to lots of dust or vibration. Doing so might

Clean the external connection terminal with dry cotton swabs etc. every now and then. Soiled terminals might cause poor connection. Do not exert strong force to clean the external connection terminal to prevent

 Clean the product with a soft dry cloth (e.g. wiping cloth for eyeglasses Forceful rubbing with a dry cloth might scratch the display. The display might be stained if splash or smear is left attached to the surface. Wiping the product using alcohol, thinner, benzene, detergent, glass cleaner, etc. night erase the printing on the exterior case or cause a malfunction.

 $\ensuremath{\bullet}$  Use as far away as possible from land-line phones, TVs and radios. Use of the product nearby might affect them. The product might become warm while talking, watching TV, charging or

during other operations, depending on the situation, but this is not Do not place near corrosive chemicals or in places where corrosive gas is generated. Doing so might cause a malfunction.

 Do not use outside when you can hear thunder. Doing so might risk ightning strikes and electric shock.

Be sure to use only the specified peripheral devices. Use of other

a pressure vessel. Doing so might cause a malfunction The customer is not allowed to disassemble, modify or repair the product. Doing so might cause a malfunction. Modification of the product is in wighting of the Region Law and Talescommunication. tion of the Radio Law and Telecommunications Business Act.

 Do not allow a part of your body such as finger or conductive foreign objects (metal fragments, pencil leads, etc.) to come into contact with or enter to the external connection terminal. Doing so might cause a



bile phone.

by third parties, other accidents, intentional, mistaken, or incorrect use by

responsibility of the Company.

The Company is not liable for any incidental damages (change/

The Company is not liable for any damages arising from failure to observe the described content of the "Instruction Manual".

related to the Company

Company assumes no responsibility for alteration or loss of saved data. Contents saved in the product, such as contacts and Album data might be

unifolding an alteriminage may occur when a same screen has been displayed in ong time, it is not a malfunction. You are recommended to set the sleep time to a hort one to avoid occurrence of afterimage and save the battery consumption.

You are recommended to store copies of individual data such as photos you took, videos and music on your PC by sending each file as mail attachment etc. Note, however, that you may not be able to make copies of any

Do not put excessive force such as sticking with a sharp object (nail etc.), hitting with a hard object (hammer etc.), or stepping on

If the internal substance of the product contacts your eyes or mouth, immediately rinse the eyes or mount with clean water and

Do not turn on the light with the lighting luminescence part close to the other's eyes. Keep enough distance away especially from

Do not look at a repeatedly-blinking screen for a long time. Doing so might cause cramp, loss of consciousness, etc.

the product.

Do not set a microSD memory card or au IC card in wrong insertion, or insert it in wrong orientation.

astonishes you and it may affect your heart. If you are wearing any electronic medical equipment, check with the relevant medical electronic equipment manufacturer or youngs with the relevant medical electronic equipment manufacturer or

If you need to use electronic medical equipment other than implantable cardiac pacemakers or implantable cardioverter-defibrillators outside medical facilities such as treating at home, consult the relevant medical electronic equipment manufacturer or effects on the equipment by radio waves.

The radio waves from the product might have harmful effects on the

operation of the electronic medical equipment.

If there is any chance that the distance between the product and a person closest to you might get shorter than 15 cm such as when you cannot freely move around, set the product not to emit radio wave in advance (Airplane mode, power off, etc.). A person in close proximity to you might wear electronic medic equipment such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator. The radio waves from the

medical equipment. Follow the instructions given by the respective medical facility regarding use of the product on their premises. radio waves from the product might have harmful effects on the

product might have harmful effects on the operation of the electronic

FP treatment

operation of the electronic medical equipment. Material list

motorbike is prohibited by law. Use of a mobile phone while riding a bicycle Using or charging the product in a bag or when it is covered with bedding

 When using the specified charging equipment (sold separately) or an external device, insert/remove the connector straight to/from the terminal Make sure the orientation of the connector is correct. Unless it's correct, it

 Do not expose the camera lens to direct sunlight for an extended period. Doing so might cause a malfunction

 Do not store the product in places subject to direct sunlight (e.g. in automobiles), places that get hot, places that get extremely cold, and in numid or dusty places. Doing so might cause a malfunction.

 Do not place the product on an unstable or inclined platform. Be careful especially while charging or when vibrator is set. The product might fall and cause a malfunction etc Do not exceed the rating of outlet or wiring device when charging the

roduct, for example, by starburst conn

lacktriangle Do not wield the product holding USB Type-C<sup>TM</sup>-3.5  $\phi$  conversion/TV Antenna cable 01 etc. Doing so might cause damage.

### Main unit

product

from the faucet or shower head

After the product gets wet

use water intrusion or dust penetration

seals, it might cause deterioration in durability

For general information (toll free

157 without area code

113 without area code

♪ やめましょう、
歩きスマホ。

SONY

Sold by: KDDI CORPORATION,
OKINAWA CELLULAR TELEPHONE COMPANY

For loss or theft (toll free)

Business hours: 24 hours live support

ise above numbers are not available (to

Repair and Delivery Support Center

Business hours 9:00-20:00 (7 days a week)

For theft, loss, or malfunction (toll free) au mobile

**£** 0120-977-033 (except Okinawa) **£** 0120-977-699 (Okinawa)

Business hours 9:00-20:00 (7 days a week

For inquiries, call: Customer Service Center

 Since the battery is built into the product, you cannot replace it yourself. For replacing the battery, contact an au shop or Customer Service Center. Do not forcefully press, tap or intentionally subject the display to strong

impact. Doing so might cause scratching or damage. Do not forcefully press the keys or display surface with your fingernails or

nard objects. Doing so might cause scratching or damage of the keys o display.

gloved hands. Just a small particle (a hair etc.) between the contact

surfaces can cause water intrusion or dust penetration. Wipe off any

If the cover of microSD memory card/au IC card slot is deteriorated or

damaged, the waterproof/dustproof property becomes ineffective.

If any liquid other than plain water is adhered to the

You can wash the product under a mild flow (less than 6 liters per m

nuscule droplets of water or dirt with a clean dry cloth before closing the

If any liquid other than plain water (e.g. seawater, detergent, alcohol, juices) is adhered to the product, immediately rinse it with plain water

tap water at room temperature (5°C to 35°C) at a distance of about 10 cm

If the product gets dirty, wash it with your hands holding the microSD memory card/au IC card slot cover so that they do not open. Do not use a

After the product gets wet, drain water, and wipe with a clean dry cloth.
 In cold climates, water on the product might turn to frost. Using with frosted

The rubber seal on the inner edges of the cover of microSD memory card/au

IC card slot is important to maintain waterproof/dustproof property. Do not damage or remove the rubber seals.

not to get the rubber seal caught. Forcibly closing the cover with the rubber

seals caught might damage them resulting in loss of waterproof/dustproof

property. Just a small particle (a hair etc.) between contact surfaces car

If any liquid other than plain water (e.g. alcohol) is adhered to the rubber

0077-7-111

0077-7-113

Mobile phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing ( @) logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

キケン! 水ぬれ充電

0120-925-919

might cause a malfunction. Do not leave the product without wiping off

 Do not insert sharp objects into grooves around the cover of microSD memory card/au IC card slot. Doing so might damage or deform the ■ Cover of microSD memory card/au IC card slot Make sure that the cover of microSD memory card/au IC card slot is firmly closed. Just a small particle (a hair etc.) between contact surfaces can product, damage the rubber seals, etc. causing water intrusion or dust

and may cause scratch or damage.

mended to replace the parts for maintaining waterproof/dustproof property once every two years regardless of whether any abnormality is sent. For information on part replacement, contact an au shop near you

### Do not sink the product into boiling hot water or do not splash with boiling

hot water to the product. Also, do not use the product in saunas or do not expose the product to fiery winds from hair dryer etc. the product is not sistant to high temperatures.

21

28

speaker, second microphone, USB Type-C connection terminal, etc. with a sharp object. Doing so might damage or deform the main unit causing water

## Precautions on charging

Setting app permission

2 [DENY]/[ALLOW]

example: When activating "Music" app for the first time

1 In the Home screen, slide the screen up→[Music]

The supplied and optional accessories are not waterproof/dustproof. Check The supplied and optional accessories are not waterproor/dustproof. Chec' the following before and after charging.

Never charge the battery if the product is wet. Doing so might cause fire,

burns, injury, electric shock, etc.

Do not spisasi water over interspecified charging equipment (sold sepa-when using them. Do not use them near water such as in a bathroom, shower room, kitchen or washroom. Doing so might cause fire, burns, you do not charge the product with them. Doing so might cause fire, burns

29

Insertion of a microSD memory card is necessary to use some apps.

Some apps prohibit the product from entering sleep mode while they are

Operational procedures and screen appearances of the apps preinstalled in

Operational procedures and scleen appearances or the apps plentanical in the product and those installed by you are subject to change without notice as a result of version upgrade. In addition, operating procedures described in "Instruction Manual" might differ from the actual procedures.

When you activate an app/function that access the functions or information of

If the request screen appears, confirm the content and tap "DENY"/"ALLOW",

If you do not permit, app/function may not be activated or use of function

up→[Settings]→[Apps & notifications]→[See all XX apps]→Tap an app to

hange the setting→[Permissions]→[○]/[□] of permission setting to

appear. Several request screens may appear or the screen content may

In "Instruction Manual", description of the confirmation screen may be

differ. Confirm each content and follow the onscreen instructions

To change the permission setting, in the Home screen, slide the scre

active, or rapidly drain the battery while running in the background.

 While writing or reading data to or from a microSD memory card, do not subject the product to vibration or impact, or turn off the power. Doing so might cause loss of data or a malfunction. Operation with foreign object on the touch panel Do not cover the proximity/light sensor with your finger or put a sticker on it. Operation with protective sheet or seal on the touch pane

Doing so might hinder the proximity/light sensor from detecting the ambient brightness and functioning correctly.

Do not use a remodeled the product. Use of a modified device violates the

of specified wireless equipment based on the Radio Law/

Compliance Mark 🕿" can be checked with the product

[Settings] →[System]→[About phone]→[Certificates]

Radio Law and Telecommunications Business Act.
The product is compliant with rules on the technical standard conformance

communications Business Act, and as a proof of it, the "Technical

king procedure: In the Home screen, slide the screen up→

certification of conformity with the technical standard conformance et

is a violation of the Radio Law and Telecommunications Business Act.

speakers and TV sets near the product, as it might cause a malfunction.

Putting a strong magnetism close to the product might cause a false

Do not bring magnetized cards such as cash cards, credit cards and

prepaid cards closer to the product. It might cause loss of the recorded

When you put the product in your pocket or bag, take care that the display

does not come in contact with metal objects or other hard objects, as might cause a scratch or damage. Take care with using a strap whose

member is a hard material such as metal because it can touch the display

When suddenly brought into a warm place from a cold place, or when used in a humid location or in a place where temperature suddenly changes (e.g. near the air discharge port of an air conditioner), water droplets (i.e.

under such conditions, the humidity might cause corrosion or a

densation) may be formed inside of the product. Note that when used

Take care not to place magnetized items such as magnetic cards.

ns of the internal components of the product are made. the

omes invalid. Do not use the product with the certification invalid, as it

### Replacing parts

## ■ Heat resistance

Shock

The product is not resistant to shock. Do not drop the product or subject it to shock. Also, do not poke the earpiece/speaker, mouthpiece/microphone,

Check that the product is not wet. If you are charging the battery just after

ne product gets wet, drain water well and wipe the remaining water off with

Do not touch the specified charging equipment (sold separately) with wet hands. Doing so might cause electric shock.

Do not splash water over the specified charging equipment (sold separately)

electric shock, or malfunction. Do not bring them into a bathroom etc. even if

Mobile Phone Etiquette

Consider people around you

shinkansen, a hotel lobby etc.

Be careful not to be loud while talking.

instructions of that medical institution.

oppina suddenly.

due to interference from other devices.

(Wi-Fi®) functions

### ■ Organic EL display ■ Do not put a sticker etc. on the proximity/light sensor Doing so might

 Organic FL display may have partially dark part or the colors may be. organic EL display may have partially dairy part of the colors may be changed if a same image has been displayed for a long time, or the brightness of backlight is set to too bright, or it has been used for a extremely long time. That is due to property of organic EL display and not a

 Organic FL display is made with extremely advanced technology and it. organic LC display is finded with exteriory advanced technology and it may have slightly missing pixels or pixels which are always lit. Also, it may have unevenness of color streak or brightness, or color change depending on direction you're looking. That is due to structure of organic EL display and not a malfunction. Please be forewarned.

Subjecting an organic EL display to direct sun may cause a malfunction.

### (The internal battery of the product is a lithium-ion battery)

The internal battery is not fully charged at the time of purchase. Charge the internal battery before using the product. Charge the internal battery if you have not used the product for a long time.



 The internal battery gradually discharges after charging even if the product ised. The internal battery might discharge completely after long time no use. Charge before using. • The internal battery is a consumable part. If the performance of a battery

does not recover (e.g. the usable time after each charge has become extremely short), the battery is at the end of service life, so stop use externely shortly, the battery is at time end of service life, so stop use.

Battery is built into the product. For repair, the product must be collect au shop etc. and charges will be incurred. And you might not use the product during certain period of time. Please be forewarned. Note that the length of service life varies depending on the usage condition etc.

and prevent it from performing communications. (The product is particularly

Using the product near a TV, radio or similar appliance may cause reception

osing the product had a 1 v ladd of similar appliance may cause reception interference and disrupt TV images.

The searching might not be successful if there are multiple wireless LAN (Wi-Fi®) access points near to the product or the same channel is being

Use of mobile phones on board is restricted. Follow the instructions of each

The communication speed and connectable range vary depending on the

distance between communication devices, obstacles and the devices used

The frequencies used by the Bluetooth® and/or wireless LAN (Wi-Fi®) function

ess stations, in-plant wireless stations for mobile unit identification that

. Before using the product, make sure that "other wireless stations" are not in

of the product are in the 2.4 GHz band. In this frequency band, other similar

usceptible to noise when it used near a microwave oven.)

2.4 GHz frequency band precautions

industrial, scientific and medical devices

shop or Customer Service Center

### Charging equipment

 Do not wrap the cable of the specified charging equipment (sold separately) around the adapter itself. Do not bend the joint of the plug or connector and the cable of the specified charging equipment (sold separately) forcibly. Do not place heavy objects on an adapter or cable, or do not apply unreasonable force such as pulling. Doing so might cause a

The internal battery sometimes swell up as they approach the end of their service life. This is due to the properties of lithium-ion batteries, and is not a

 When unplugging the plug of the specified charging equipment (sold separately) from the outlet or accessory socket, hold and pull the power plug. If you pull the cable, the cable might be damaged

### au IC card Do not forcibly remove or insert au IC card. Be careful not to exert

excessive force when inserting the card into your au phone. You are responsible for any damage caused by inserting your au IC card

Do not put stickers etc. on the au IC card.

• Do not insert au IC card with conversion adapter attached. Doing so might

cause a malfunction. Do not damage the card by using the product in a hot place, dropping into

fire, contacting to the metal parts with foreign object, giving an impact, bending, applying load, wetting, etc. Doing so might cause loss of data or

## Camera

 When photographing important occasions etc., take a trial shot and check the shot image to make sure it is correctly shot. Do not shoot in a place where shooting is prohibited

• Wireless LAN (Wi-Fi®) has the advantage that it can be freely connected The channels used on the product are as follows:
• W52 (5.2 GHz band/36, 40, 44, 48 ch) anywhere within the radio wave range, as it uses radio waves for exchanging information. At the same time, there is a risk that a malicious third party may

25

obtain unauthorized access if security settings have not been configured. You are recommended to configure security settings before using wireless LAN (Wi-Fi®) at your decision and responsibility. The Company assumes no responsibility for leakage of data or information

that may occur during Bluetooth®/wireless LAN (Wi-Fi®) communication. Since Bluetooth® and wireless LAN (Wi-Fi®) functions use the same equency band, using the both functions at the same may cause radio wave

interference resulting in decreased communication speed or disconnection from the network. If connection fails, stop using either of the Bluetooth® and wireless LAN (Wi-Fi®) functions. Bluetooth® and wireless LAN (Wi-Fi®) functions of the product use frequencies



### ■ Bluetooth® function: 2.4FH4/XX8 The product uses the 2.4 GHz band. FH4 uses FH-SS as the modulation

scheme. The interference distance is about 40 m or less. XX8 uses another modulation scheme. The interference distance is about 80 m or less. ■ Wireless LAN (Wi-Fi®) function: 2.4DS/OF4

The product uses the 2.4 GHz band. DS-SS and OFDM are used as the  $\,$ odulation schemes. The interference distance is about 40 m or less. 

as that all handwidths of 2.4 GHz hand can be used, and that

band of mobile unit identification devices can be avoided. Available channels differ depending on the country.

For use in an airplane, check with the airline company in advance.

## 5GHz frequency band precautions

Wireless LAN (Wi-Fi®) function of the product uses 5 GHz band. Using a

5.2/5.3-GHz-band wireless LAN outdoors is prohibited by law (except when communicating with the an access point of a 5.2-GHz high-power data communication system or relay station).

### Please refer to the websites listed below if you would like to know more Intellectual property rights

32

detailed information regarding SAR.

Ministry of Internal Affairs and Communications website: https://www.tele.soumu.go.ip/e/sys/ele/index.htm

https://www.sonymobile.co.jp/support/ (Japanese)

Available radio frequencies

## GSM/GPRS/EDGE: 850, 900, 1800, 1900MHz

UMTS: 2100 (Band I), 1900 (Band II), 1700 (Band IV), 850 (Band V)MHz LTE : Bands 1, 3, 4, 5, 7, 11, 13, 17, 18, 20, 26, 28, 38, 41, 42 VLAN 2.4G/5G

LTE: 23dBm(Bands 1, 3, 4, 5, 7, 11, 13, 17, 18, 20, 26, 28, 38, 42),

NFC 13.56MHz

37

26dBm(Band 41) WLAN: 2.4GHz<100mW, 5.15-5.35GHz<200mW GHz<200mW, 5.735-5.835GHz<25mW

eign Exchange and Foreign Trade Act and other related laws and

may be applicable.

In cases of exporting or reexporting the products and accessories, customers

Please contact the Ministry of Economy, Trade and Industry of Japan or the

## ■ Copyrights and rights of portrait

 You are not allowed to copy, distribute, publish, modify or edit the data you shot, recorded or downloaded using the product without consent copyright holder, except for personal use, under the copyright law n addition, do not use or modify portraits or names of other individuals without the consent, as it might infringe on rights of portrait Note that shooting and recording might be restricted at some live erformances, shows and exhibitions even for personal use.

 Be careful about the copyright and portrait right when posting photos you shot etc. on Internet homepages

## ■ Backup content on the product

 Please back up important content recorded to the product or downloaded to the product from an outside source. Content recorded to memory on the product sometimes disappears or is altered by unexpected factors, such s static electricity or a fault, repair, mishandling, etc

## Notes on waterproof and dustproof properties

the product has a waterproof property equivalent to JIS waterproof grade (JIS C 0920) IPX5\*1 and IPX8\*2, as well as a dustproof property equivalent to JIS dustproof grade IP6X\*3 on the condition that the cover of microSD memory card/au IC card slot is securely attached (based on in-house testing) fore using the product, thoroughly read "Important items to reme fore use" to ensure correct use. Failure to follow the contents des the sections might cause intrusion of water, sand or other foreign material, resulting in overheating, ignition, electric shock, injury or a malfunction IPX5 equivalent means that the product will maintain its operability as a

phone even if it is sprayed with water from a 6.3 mm diameter nozzle at a distance of about 3 meters for more than 3 minutes at a rate of about 12.5 ters per minute from any direction. \*2 IPX8 equivalent means that the product will maintain its operability as a

phone with no water getting inside the main unit even if it is gently submerged in a tank of still tap water at room temperature to a depth of 1.5 \*3 IP6X equivalent means that the product will securely maintain its function

of no grit and dust getting inside the main unit even after it has been placed in an apparatus with grit and dust of diameters of 75  $\,\mu m$  or less 26

IEEE802.11a/n/a W53 (5.3 GHz band/52, 56, 60, 64 ch)

 W56 (5.6 GHz band/100, 104, 108, 112, 116, 120, 124 128 132 136 140 ch)

Security codes/PIN code



## Security codes

### The product has various security codes that you can use.

The available security codes are as follows. Do not forget the various security codes that are set as they are necessary for various operations and contracts Make sure to change the security codes from the initial values to your own ■ Security code

 To do remote operation of voice mail and call forwarding services from a landline phone To use Customer Service Center and to do variou inquiries, applications, and modifications on the au omepage nitial value A four digit number chosen by the customer and noted on the application form

### Setting screen lock

Example of usage To set and release the screen lock

## ■ PIN code

## ■ PIN code

nt unauthorized use of the au IC card by a third party, you can set the product to require PIN code entry every time the power is turned on. You also need to enter PIN code when setting whether the PIN code entry is required. If the PIN code is incorrectly entered three times consecutively, the PIN code will be locked. You can unlock the PIN code using PUK code.

initial value of the security code to your own number and then use it.

PIN code is set to "1234" by default state. In "Change SIM PIN", however, you can change the PIN code to any four- to eight-digit number as necessary.

r entering the PUK code, you need to set a new PIN code.

## Notes on data communication charge

communication may be performed automatically by some apps, resulting in high data communication charges. Therefore, subscription to a data nunication charge discount service or flat late plan is recommended.

the Internet is required and data communication charge applies.

\* Data communication charge does not apply to wireless LAN (Wi-Fi®)

### Notes on apps

Facebook, Inc. . The Instagram name and logo are trademarks of Instagram, LLC.

'Amazon", "Amazon.co.jp" and their logos are trademarks of Amazon.com,

AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained MPEG LA, LLC. (See https://www.mpegla.com). MPEG Layer-3

and any such actions are prohibited.

are property of their respective owners.

Inc. and its affiliates. mora, the name of mora and the logo are registered trademarks of Label

Important items to remember before use

Make sure that the cover of microSD memory card/au IC card slot is firmly.

· Do not open or close the cover of microSD memory card/au IC card slot if the product or your hands are wet.

 Do not sink the product in liquids other than tap water (seawater, pool water) water of hot spring, water with soap, detergent or bath salt contained, alcohol, juice, seasonings, etc.) or do not splash such liquid to the product.

inside of the main unit, it might cause overheating or a malfunction Do not use the product underwate

an extended period of time.

care not to wet your clothes, bag, etc.
Drain water if it becomes temporarily hard to hear the sound due to water

 Do not spray the product with high-pressure water or submerge it in water ed periods of time, as the product is not designed to withstand

. The product does not float on water.

When an entry of security code is required for making settings, change the

PUK code is an eight-digit number given at the time of purchase, and is printed on the back side of the plastic card on which your au IC card is

· If the PUK code is incorrectly entered ten times consecutively, contact an au shop. Toyota store or Customer Service Center

· Be sure to check the security of the app, then install it at your own risk.

caused by apps you have installed. Repair costs in this case may be charged even during the warranty period.

you or any third party by the apps you have installed

icrosoft Exchange ActiveSync" are trademarks or registered trademarks o

The product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of the product is prohibited without the appropriate license(s) from Microsoft

AccuWeather is a trademark or registered trademark of AccuWeather, Inc.
 Facebook and Facebook logo are trademarks or registered trademarks of

subsidiaries in Japan.

translated/adapted, reverse-engineered, decompiled or reverse-assembled All other company names and product names are trademarks or registered

splashed on the product, immediately wash the product with tap water spiralized of the product, infinite lately was in the product with tap water. Do not put the product directly on sand at a beach etc. Sand or other small particles might get inside the earpiece/speaker, mouthpiece/microphone, speaker, or second microphone causing the volume to drop. If sand gets

Do not leave the product in a humid place such as a bathroom or kitchen for

remaining in the earpiece/speaker, mouthpiece/microphone, speaker, or

malfunction. Wait until the main unit reaches room temperature before you bring the product from a cold place into a warm bathroom.

Entering PIN code is not required by default state. In "SIM card lock", however, you can change the setting requiring to enter PIN code.

Note that setting up SIM card lock requires entry of PIN code.

PIN code is not reset even if you execute "Erase all data (factory reset)"

To browse homepages, download apps, communicate using apps, send/ receive e-mails and configure various settings on the product, connection to

Some apps might cause virus infection, damage various data, and send out

"Microsoft" "Windows" "Microsoft Excel" "Microsoft PowerPoint" and

Microsoft Corporation in the United States and/or other countries. "Microsoft Word" is a trade name of Microsoft Corporation

QR code is a registered trademark of Denso Wave Inc.
 "おサイフケータイ®" is a registered trademark of NTT DOCOMO, INC.

Twitter and Twitter logo are trademarks of Twitter. Inc., and are used under

and shaken for 8 hours. lince operation of the product on each usage scene was confirmed based on

### the above assumption, proper operation of the product in every possible condition during actual use is not guaranteed. Malfunctions determined to be caused by mishandling by the customer are not covered by the warranty

Also, do not use in a place where urine of pet animal is splashed. If it is

22

· Operation under water

ause malfunction

while receiving a call or during a call.

Doing so might cause a malfunction.

■ Display (Touch Panel)

e operation of the touch panel.

stomping. Doing so might cause a malfunction.

Usually use the product with the cover of microSD memory card/au IC card

slot firmly closed. If the cover is open, dirt or water might get inside and

Do not allow liquids, metal and other foreign objects to get inside the USB

pe-C connection terminal, or microSD memory card/au IC card slot.

Do not give strong impact on the product such as dropping, throwing,

To prevent possible hearing damage, do not listen at high volume

Putting stickers or sheets (e.g. commercially available protective films, peep

When carrying the product in your pocket or bag, take care not to put the

The touch panel is designed to be lightly touched by fingers. Do not apply

In the following cases, the touch panel might not respond. Also, it may

strong pressure with your fingers or sharp-pointed objects (such as

Operates when the display is wet with water droplet or fogged
Operation with wet or sweaty fingers

fingernails, ballpoint pens and pins) on the touch panel.

■ Draining water when the product gets wet

Turn the unside down and wine off the water

touch panel close to metals or other conductive materials, as it might cause

Do not put the product directly on sand at a beach etc. Sand or other small particles might get inside the earpiece/speaker, mouthpiece/microphone,

speaker, or second microphone causing the volume to drop. If sand gets nside the product main unit, it might cause a malfunction

ion sheets) on the display might hinder correct operation of the touch panel.

ne following parts: re/speaker, Mouthpiece/microphone, Speaker, Second microphone. JSB Type-C connection terminal, Power key/Screen lock key, Volume key Zoom key, Camera key, Fingerprint sensor, the cover of microSD memory card/au IC card slot, Camera ring (back side)

heard. Drain in the following steps.

Wipe off water remained on the product with a dry cloth, etc.

Hold the product firmly and shake it approximately 20 times, then turn upside down and shake it 20 times again. When shaking the product, check the safety around you and hold it firmly

Face the product downward and push it on a cloth to wipe off the water.

3 If water flows out from the inside of the product, wipe it off with a dry cloth

Notes on using Bluetooth®/wireless LAN

• The Bluetooth® and wireless LAN (Wi-Fi®) functions of the product conform

Use of Bluetooth® function and Wireless LAN (Wi-Fi®) function may be

restricted in some countries/regions. Before using the product overseas,

sheck the relevant laws and regulations of the country/region you visit

Do not use the product in places where electromagnetic waves are

generated or near electric products, AV and OA equipment, or other

■ Use of the product is not allowed in the following places:

Do not risten or infalls of water videos, ry, etc. while driving a car or motorbike, or riding a bicycle. Use of mobile phones while driving a car or motorbike is prohibited by law. (Use of mobile phones while riding a bicycle may also be punishable by law.) In addition, stay alert to the traffic around

you even when walking. Surrounding sounds may not be heard clearly, and

pazing at the screen might distract your attention causing a traffic accident Be especially careful at railroad crossings, station platform and pedestrian

Use of mobile phones on board is restricted. Follow the instructions of each

To prevent ringtone from bothering other people, not only refrain from

making a call but also power off or use Silent mode at a movie theater,

In a city area, use in a place where you do not bother people walking.

It is extremely dangerous to walk while looking at the screen of the mobile

phone. Do not make calls or operate a mobile phone while walking or by

· Be careful of sound leakage from earphones in trains or other places with

There may be a person with a cardiac pacemaker nearby at a place filled.

with people such as in a crowded train. Set "Airplane mode" or turn the

product is prohibited or is not allowed to be brought in, abide by the

many people around you.

Ask permission if you take photos with your mobile phone camera.

When using the camera, follow common rules of etiquette regarding camera

product off beforehand.

When a medical institution has laid down designated areas where use of the

Move to a place where you do not disturb others while you are in

The 2.4 GHz band used by wireless LAN (Wi-Fi®) and Bluetooth® devices is

shared by various other devices. For this reason, the communication speed and connectable range may be decreased, or disconnection may occur,

to Japanese domestic standards, FCC standards and EC Directive, and has

· If water remains, clothes or bag might get wet or sound might be barely

 All Place a dry towel or cloth under the product and leave it for a couple of hours at room-temperature to dry.
 If the product is not dried enough, you can barely hear the sound. Leave wireless stations, in-plant wireless stations for mobile unit treatmication trial require a license to use, such as factory production lines, specific small power wireless stations that do not require licenses, amateur wireless stations ollectively called "other wireless stations" from here on) are operated in the product enough time to dry before use. addition to home electrical appliances such as microwave ovens, devices for

> In the event that instances of radio wave interference have occurred between the product and "other wireless stations", immediately eithe relocate the product or stop operation of the device (stop the emission of 3. If you are unclear on any points or are troubled by anything, contact an au

LAN (Wi-Fi®) devices have not been confirmed. Therefore, connecticall Bluetooth® and wireless LAN (Wi-Fi®) devices are not guaranteed. This product supports security features for wireless communications that are compliant with the Bluetooth® and wireless LAN (Wi-Fi®) standard

. The connections between the product and all other Bluetooth® and wireless

specifications, but the security may not be sufficient depending on the usage environment and configuration. Be careful when making data communication using Bluetooth® or wireless LAN (Wi-Fi®) function.

Specific Absorption Rate (SAR) of mobile phones This model SOV40 mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio was This mobile phone was designed in observance of Japanese technical regulations regarding exposure to radio waves 1 and limits to exposure to radio waves recommended by a set of equivalent international guidelines. This set of international guidelines was set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in

collaboration with the World Health Organization (WHO), and the permissible

limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition.

The technical regulations and international guidelines set out limits for radio waves as the Specific Absorption Rate, or SAR, which is the value of

absorbed energy in any 10 grams of tissue over a 6-minute period. The SAR absoluted eliety in any 10 grains of issue over a orbinitie period. The SAF limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use near the head is 1.722 W/kg<sup>-2</sup> and when worn or the body is 0.75 W/kg<sup>-2</sup>. There may be slight differences between the SAR evels for each product, but they all satisfy the limit. This is due to automatic changes to the power level of the device to ensure it only uses the minimum required to reach the network. Therefore in general, the closer you are to a base station, the lower the power output of the device. This mobile phone can be used in positions other than against your head. Please keep the mobile phone farther than 1.5 cm away from your body by ising such as a carrying case or a wearable accessory without including any ising such as a carrying case of a wearable accessory without including netals. By doing this, this mobile phone complies with Japanese technical egulations and international guidelines regarding exposure to radio waves The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use." Please refer to the WHO vebsite if you would like more detailed information https://www.who.int/emf

Technical regulations are defined by the Ministerial Ordinance Related to Radio Law (Article 14-2 of Radio Equipment Regulations).
 Including other radio systems that can be simultaneously used.

31

Association of Radio Industries and Businesses website https://www.arib-emf.org/01denpa/denpa02-02.html (Japanese) au homepage: https://www.au.com/english/ Sonv Mobile Communications Inc. website

> GSM 850/900 : 33dBm DCS (1800)/PCS (1900) : 30dBm

Foreign Exchange and Foreign Trade Act The products and accessories may be subject to the application of the

In addition, the Export Administration Regulations (EAR) of the United States

Department of Commerce of the United States for details about procedures 38

### ■ Trademarks Bluetooth Wifi POBox.

Sony Mobile Co unications is licensed to use this trademark • Wi-Fi® and Wi-Fi Direct® are trademarks or registered trademarks of Wi-Fi Xperia is a trademark or registered trademark of Sony Mobile

• "Bluetooth®" is a registered trademark owned by the Bluetooth SIG, Inc., and

Communications Inc. • Sony, FeliCa, スマイルシャッター, STAMINA, the Video & TV SideView logo,

SmartAR® is an augmented reality technology developed by Sony Corporation and it is a registered trademark or trademark in Japan and other POBox and POBox logo are registered trademarks of Sony Computer

Science Laboratories, Inc.
POBox is a co-developed technology of Sony Computer Science

Laboratories, Inc. and Sony Mobile Communications Inc

顔検出, and Reader are trademarks or registered trademarks of Sony

 PlayStation and DUALSHOCK are trademarks or registered trademarks of Sony Interactive Entertainment Inc roSD logo, microSDHC logo and microSDXC logo are trademarks of USB Type-C<sup>™</sup> is a trademark of USB Implementers Forum. DisplayPort is a trademark, or in the United States and/or other countries a.

registered trademark, of Video Electronics Standards Association.

FeliCa is a contactless IC card technology developed by Sony Corporation

is a registered trademark of FeliCa Networks, Inc. Manufactured based on a license from Dolby Laboratories

Dolby, ドルビー, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories.
Google, the Google logo, Android, Google Play, the Google Play logo,

Gmail, the Gmail logo, Google Maps, the Google Maps logo, Google Calendar, the Google Calendar logo, YouTube, the YouTube logo, Google Docs, Google Chrome, the Google Chrome logo, Google Lens, and the Google Lens logo are trademarks or registered trademarks of Google LLC.

Since a constant Internet connection is possible with the product, data

The Company assumes no responsibility for any disadvantage brought to

TiVo, G-GUIDE, G-GUIDE MOBILE and G-Guide related logos are

An other company frames and product rannes are trademarks of registered trademarks of respective companies referred to in this manual. In context, TM and ® mark may be omitted.

Any rights not expressly granted herein are reserved. All other trademarks

39

Do not wash the product in a washing machine or ultrasound bath Do not immerse the product into a bathtub. The product is not resistant to

In case the PIN code is locked, you can unlock it by entering the PUK code.

your location information, usage history or personal information stored in your mobile phone via the Internet.

The Company assumes no responsibility for any malfunctions that might be

33

trademarks or registered trademarks of TiVo Corporation and/or its

udio decoding technology licensed from Fraunhofer IIS and Thomso he software installed on the product or part of it may not be altered,

■ PUK code

 The product is licensed under the MPEG-4 visual and AVC patent portfolio license for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or

Even after draining, water might remain on the product. Although you can use the product, do not place it near things that must not get wet. Also, take

40