Notes on usage

INFOB Α

Be sure to read this manual before use

January 2015, 1st Edition

 
When adjusting the volume with an earphone, etc. inserted into the product, raise the volume a little at a time. If you raise the volume so much from the outset, sudden loud noise from the earphone, etc. might adversely affect your ears.

When using a charging equipment or external device, insert/remove the connector straight to/from the terminal. Make sure the orientation of the connector. Unless it's correct, it may cause damage or a fault.

Main unit




Do not puncture the product with a nail, hit it with a hammer or step on it. Doing so might cause fire or damage.





WARNING

 Be sure to read the following warnings before use.



For using the product in hospitals or medical institutions, abide by the instructions of that hospitals or medical institutions. Turn off the product where use of the product is prohibited. Failure to do so may affect electronic equipment and electronic

- 7 -

Before cleaning the charging equipment, unplug its power plug of the specified charging equipment (sold separately) from the outlet or cigarette lighter socket. If the plug remains plugged in when you clean the equipment, it might cause a short circuit.

Wipe off dust on the power plug. Failure to do so might cause fire,

 
Install and position in-car devices where they do not hinder driving or safety equipment such as airbags. It might cause a traffic accident. Install in-car devices following the instructions of their

When the specified charging equipment (sold separately) is not to be used for a long time, disconnect the power plug from the power outlet. Doing so might cause fire or a fault.

Do not use in places subject to direct splashing with water, pet urine or other liquids. Doing so might result in faults resulting from overheating, fire, electric shock, short-circuiting of electronic circuits, or injury. In the event that the product is splashed with liquid, immediately disconnect power plug of the specified charging equipment (sold separately)



CAUTION Be sure to read the following cautions before use.



- 14 -

Exemptions

The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties other accidents, intentional or mistaken misoperation by the customer, or use under other unusual conditions outside the responsibility of the Company. The Company is not liable for any incidental damages (change)

disappearance of described content, loss of business income, disruption of business, etc.) arising from use or inability to use the product.

© The Company is not liable for any damages arising from failure to observe the described content of this manual.

The Company is not liable for any damages arising, for example, from caused by combination with connected devices or software not related to the Company.

© Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data. It is recommended you keep a copy of important data on your PC's hard disk, etc. Whatever the cause of the defect or malfunction may be, the

Company assumes no responsibility for alteration or loss of saved data.

The Company" as appears in this manual refers to the following companies:

Sold by: KDDI CORPORATION • OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by: KYOCERA Corporation

The content of this manual is subject to change without notice.

Every effort has been made in the preparation of this manual. Should you notice any unclear points, omissions, etc., feel free to contact us.

Safety Precautions (Observe Strictly)

■ Before using this product, thoroughly read these safety precautions for proper use. After reading, store the precautions in a safe place. These "Safety Precautions" describe instructions that should be observed to prevent

damage to property or injury to the customer or others using the product.

These instructions are divided into the following categories.

- 1 -

Turn off the product or put it in Airplane mode before boarding an airplane. Use of cell phones on board is restricted. Follow the structions of each airline Failure to do so may adversely affect on-board electronic equipment

Prohibited acts related to cell phone usage on an airplane may be

When using the product near an implanted pacemaker, implanted dioverter-defibrillator or other electronic medical device, radio waves might affect these units and devices. So, please observe the Those with an implanted pacemaker or implanted cardioverter-

defibrillator should carry or use the product at least 15cm away from the pacemaker or cardioverter-defibrillator. 2. Turn the product off or set "Airplane mode" when it may be difficult to keep at least 15cm away such as in a situation you cannot move freely, since there may be people with a cardiac


pacemaker or implanted cardioverter-defibrillator nearby. When a medical institution has laid down designated areas where use of the product is prohibited or is not allowed to be brought in, abide by the instructions of that medical institution 4. When using electronic medical devices other than an implanted pacemaker and implanted cardioverter-defibrillator outside a medical institution (e.g. home medical treatment), check individually with the manufacturer of the electronic medical

device regarding the influence of radio waves. Stay alert to your surroundings when calling, messaging, browsing the Internet, shooting photos, playing games, watching TV or listening to music. Failure to do so might cause a fall or traffic

Do not send data by infrared communication with the infrared por pointing toward eyes. Doing so might affect eyes. Also, sending data with the infrared port pointing toward some other infrared

device might cause false operation, etc

■ Explanation of indications used in this manual

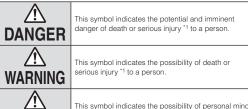

CAUTION

njury *2 to a person or physical damage *

electric shock, broken bones, injuries with residual aftereffects

reatment or long term hospital attendance as an outpatient.

Do not light the photo light/simple light in front of a person's eyes.

Do not gaze at the photo light/simple light emitting part when the

Do not light the photo light/simple light toward a driver of a car,

Sometimes, very rarely some people demonstrate symptoms such

vatching repeatedly flickering screens. Those with a past history of

motorbike or bicycle. If dazzled by the light, the driver might become unable to drive and cause an accident.

as temporary muscle spasms, loss of consciousness, etc. by

Chemically strengthened glass is used for the display of the product. In case it is broken, do not touch the broken part. Doing

so might cause injury by the broken part. Contact an au shop or

Use of the main unit in an automobile sometimes affects on-vehicle

electronic devices, though this rarely happens. If this happens,

If you feel any abnormality with your skin, immediately consult a

dermatologist. Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition.

The materials of parts used on the product are as follows.

Be sure to read the following cautions before

his should consult with a physician beforehand.

stop use since this may impair safe travel.

photo light is lighted. Doing so might cause impairment of eyesight, etc. Be especially careful not to shoot small children from a very

*2 Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.

3 Physical damage: This refers to extended damage to buildings, furniture, livestock, or pets.

■ Explanation of graphic symbols used in this manual

dicates an action that is

dicates that handling

ith wet hands is not

assembly is not

ot allowed.

ndicates that

close distance.

! CAUTION

llowed.

from poisoning, etc., and injuries requiring hospital admission for

Indicates that use in a place

dicates an action that

dicates that the power

lug must be disconnecte

om the power outlet.

where the product is likely to get wet or allowing the produc

devices

! DANGER

Be sure to read the following hazards before

Be sure to use only the specified peripheral devices. Use of other devices might cause overheating, ignition, rupture, fault, or leakage of liquid.

■ Precautions common to the main unit, internal battery.

charging equipment, au Nano IC Card 04, peripheral

Do not use, store or leave the product in hot places (e.g. by the fire, near a heater, under a kotatsu, in direct sunlight, in a car in the hot sun). Doing so might cause ignition, rupture, fault, fire or injury.

Before entering an area where flammable gas is generated such as a gas station, be sure to turn off the product. Do not charge the battery. Failure to observe these precautions might cause the gas to catch fire. In addition, when using Osaifu-Keitai® at a gas station be sure to turn off the power in advance. (If Osaifu-Keitai® lock has been set, cancel the lock before turning off the power.)

Do not put the product in a cooking apparatus such as microwave oven or a pressure vessel. Doing so might cause ignition, rupture, fault, fire or injury.

Do not throw the product into a fire or heat it. Doing so might cause fire, rupture or fire.

Do not short-circuit the external connection terminal, earphone microphone terminal, etc. Do not allow conductive foreign objects (metal fragments, pencil leads, etc.) to come into contact with or terminal, etc. Doing so might cause a fire, burns, a fault due to heat

- 3 -

Material Surface treatment

oating

Alumite treatment

Antifouling

Hard coating

nickel plating)

Material Surface treatment

Material Surface treatment

PC + ABS resin In-mold foil

Aluminum

Chemical

PMMA resin

Do not bring the product close to magnetized objects such as cash

cards, floppy disks, credit cards, and prepaid cards. Doing so

Part

Exterior case (Display side)

eriphery), BACK / HOME

DENTS) Card slot cover

xterior case (Back side)

hoto light/simple light lens

coming (Charging) light

External connection terminal

Camera lens, Proximity/light senso

■ Kyocera TV antenna cable 02 (02KYHSA)

■ IC Card Tray Ejecting Tool for INFOBAR A03 (sample)

p/down kev)

isplay

Power key), COUME

When using a metal accessory etc., make sure not to allow the metal part come in contact with the external connection terminal earphone microphone terminal or power outlet. Doing so might cause electric shock, ignition, injury or a fault.

Do not expose the camera lens to direct sunlight for an extended period. Doing so might cause ignition, rupture or fire by the lightcollecting mechanism of the lens.

The customer is not allowed to disassemble, modify or repair the product. Doing so might cause a fault, ignition, electric shock, or injury. The Company is not liable even in the event of any nonconformities arising on the product or peripheral devices as a sult of modification, etc. Modification of the product is in violation of the Wireless Telegraphy Act.

WARNING Be sure to read the following warnings before use.

Do not drop or subject to strong impact, such as throwing. Doing so might cause runture overheating insister.

Do not use outside when you can hear thunder. Doing so might risk

Do not let your hands, fingers and other parts of the body touch the external connection terminals. Doing so might cause electric shock, injury or a fault.

If the product is damaged because it is dropped or something, and its display is cracked or internal parts are exposed, do not touch the cracked display or exposed parts with your hands. Doing so might cause electric shock or injury from damaged parts. Contact an au shop or Keitai Guarantee Service Center.

- 4 -

Do not allow liquids, metal objects, burnable items, and other

injury or a fault.

cause an accident or damage.

on the receiver or speaker.

foreign matter to get inside the earphone microphone terminal, the

external connection terminal, the microSD memory card slot or the

au Nano IC Card 04 slot. Doing so might cause fire, electric shock,

Do not swing the product around by holding the earphone or the Do not swing the product around by holding the earphone or the Kyocera TV Antenna cable 02 (02KYHSA) etc. Doing so might

Use the product with the card slot cover etc. closed. If the covers

If you have a weak heart, he careful when setting the incoming

vibration and ringtone volume to prevent adverse effects on your

Be careful with objects absorbed to the product. Magnet is used for

the receiver, speaker, etc. Metal objects such as a thumbtack, pin.

utter blade, staple may be attached and it may cause an injury.

When using the product, make sure foreign object is not attached

Do not place the product directly on sand at a beach, etc. Sand

or speaker, causing the volume to drop. If sand gets inside the

When using the product for calling or data communication, be

careful not to keep the product in direct contact with your skin for

a prolonged period, or not to cover the product with paper, cloth,

bedding, etc. The main unit might get hot, causing fire, injury, burns

or other small particles might get inside the microphone, re

are open, dirt or water may get inside causing a fault.

heart to prevent adverse effects on your heart.

product, it might cause overheating or a fault.

■ Internal battery



(The internal battery of the product is a lithium-ion battery.) The internal battery is not fully charged at the time

of purchase. Charge the battery before using the



Be sure to read the following hazards before

If the leaked liquid gets on your skin or clothes, immediately rinse it off with water to avoid injury. If the liquid gets into your eyes, do not rub but wash your eyes with water, and immediately consult a doctor to avoid the risk of losing your eyesight. If the liquid gets on a device, wipe it off without touching it.

The internal battery is a consumable item. If the performance of the internal battery does not recover (e.g. the usable time after each charge has become extremely short), the battery is at the end of service life, so stop use. Failure to do so might cause overheating ignition, rupture or leakage. Since the battery is built into the product, we keep your product and replace the battery for a fee. You may not use the product for a certain period. The life time of the internal battery depends on the usage etc.

■ Charging equipment



WARNING Be sure to read the following warnings before use.

Do not cover or wrap the product with bedding, etc. while using o Do not cover or wrap the product with bedding, etc. while using charging the product. Doing so might cause fire, fault or injury.

Do not touch the product or specified charging equipment (sold

external source. Doing so might cause low-temperature burns.

The product may become hot by prolonged use especially

temperature burns.

Guarantee Service Center.

in high-temperature environment. Be careful when using the

separately) for a long time while power is being supplied from an

roduct touching your skin for a long time, as it might cause low-

Do not use power outlets or wiring apparatus beyond its rating.

devices to a single power strip might cause overheating and fire.

Do not place near corrosive chemicals or in places where corrosive

gas is generated. Doing so might cause a fault or loss of internal

Do not use if there is smoke, abnormal odor or noise, excessive

sconnect the specified charging equipment (soled separately)

overheating, or other abnormalities. If an abnormality occurs,

from the power outlet or socket if you are charging the battery,

make sure that the product is not overheating before turning the

power off, and contact an au shop or Keitai Guarantee Service

ontinue to use it in that state, and contact an au shop or Keitai

volume to the proper level. Setting too loud a volume or using the earphone continuously for a long period of time might adversely

affect your ears. Also, raising the volume too high might prevent

you from hearing sounds around you, which might in turn lead to a traffic accident at a railroad crossing or pedestrian crossing.

Center. If you have dropped or damaged the product, do not

When inserting an earphone, etc. into the product, adjust the

Also, exceeding rating, for example, by connecting multiple

Do not use at other voltages than the specified power supply voltage. Doing so might cause ignition, fire, overheating, electric shock or injury.

- 6 -

• DC adapter (sold separately): 12/24 V DC (for negative grounded

vehicles only) Firmly insert a power plug of specified charging equipment (sold separately) into the power outlet or cigarette lighter socket down

to the base of its pins. Incomplete insertion of the power plug might result in electric shock, overheat, ignition, injury or fire. Do not use when a specified charging equipment (sold separately) is damaged, or a power outlet or a cigarette lighter socket is loose.

If the fuse in the common DC Adapter 03 (sold separately) blows replace it with a fuse of the specified type (250 V, 1 A). Replacing with a different type of fuse might cause overheating or fire. (For information about fuse replacement, carefully read the manual for

Do not damage, modify, twist, pull or place a heavy object on the cable of the specified charging equipment (sold separately). Do not use a damaged cable. Doing so might cause an electric shock

short circuit, fire or injury. Do not let your hands, fingers and other parts of the body touch the

Doing so might cause electric shock, injury or a fault If you hear thunder, do not touch the power plug. Doing so might

cause an electric shock as a result of a lightning strike

- 8 -

Charge the battery in a stable place. If placed on an inclined surface or wobbly stand, the product might fall causing injury or damage. Pay careful attention while vibrator is set. In addition, do not cover or wrap the product with a cloth or bedding. Doing so might cause fire, fault or injury.

When unplugging the power plug of the specified charging equipment (sold separately) from the power outlet or cigarette lighter socket, hold and pull the power plug. If you pull the cable, the cable might be damaged.


Do not use the common DC Adapter 03 (sold separately) with the Do not use the common DC Adapter 03 (sold separately) with the car engine stopped. Doing so might result in draining of the car

If you feel any abnormality with your skin, immediately consult a dermatologist. Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition. The materials of parts used on the Desktop Holder (KYV33PUA) are as follows. ■ Desktop Holder (KYV33PUA)

Material Curt----

rait	ivialeriai	Surface treatment
Exterior case, cover adapter	ABS resin	-
External connection terminal	Stainless steel	-
Rubber foot	Urethane foam,	-
	styrene rubber	

 au Nano IC Card 04



Do not put the au Nano IC Card 04 in a cooking apparatus such as a microwave oven or a pressure vector. melting, overheating, fuming, loss of data or a fault.

- 15 -

Be sure to read the following cautions before !\ CAUTION Be careful when attaching/removing the au Nano IC Card 04. Doing

- 9 -

Use only the devices specified by the Company to insert the au Nano IC Card 04 in. Using a device not specified by the Company might cause loss of data or a fault. For the specified devices, contact an au shop or Customer Service

Do not disassemble or modify the au Nano IC Card 04. Doing so

Do not use or leave the au Nano IC Card 04 in hot places such as by the fire or a heater. Doing so might cause melting, overheating, fuming, loss of data or a fault.

Do not throw the au Nano IC Card 04 into a fire or heat it. Doing so might cause melting, overheating, furning, loss of data or a fault. Do not touch the IC (metal) part of the au Nano IC Card 04 or short

circuit it. Doing so might cause loss of data or a fault.

Do not drop the au Nano IC Ca Doing so might cause a fault. Do not drop the au Nano IC Card 04 or subject it to strong impact. Do not fold, bend or place a heavy object on the au Nano IC Card

04. Doing so might cause a fault. Do not wet the au Nano IC Card 04. Doing so might cause a fault.

- 16 -

Do not scratch the IC (metal) part of the au Nano IC Card 04. Doing so might cause a fault.

- 10 -

Do not store the au Nano IC Card 04 in dusty places. Doing so might cause a fault.

Do not store the au Nano IC Card 04 in places exposed to direct sunlight or hot and humid places. Doing so might cause a fault.

Store the au Nano IC Card 04 out of reach of small children. Failure to do so might cause injury, etc. if they accidentally swallow and choka on if choke on it.

■ Kvocera TV antenna cable 02

earphone terminal straight.



Kyocera TV antenna cable 02 is not waterproof. Do not splash with water or other liquids. Also, never use in places subject to direct splashing with water or pet urine, etc. or in humid places such as bath areas, or use with wet hands. Doing so might cause electric shock or fault from short-circuiting or corrosion of electronic

Be sure to read the following cautions before ? CAUTION

Do not allow dirt to be attached on the plug of Kyocera TV antenna cable 02. Doing so might cause a fault.

Insert/remove the plug of Kyocera TV antenna cable 02 to/from the

Handling precautions

warranty even if there is no external damage

These precautions are provided to ensure that performance can be full demonstrated. Thoroughly read these precautions to ensure correct use ■ Precautions common to the main unit, internal battery, charging

equipment, au Nano IC Card 04, peripheral devices

- 11 -

• Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heavy object on the product in a bag. Sitting on the product in your pocket might damage the display or internal circuit board resulting in a malfunction. Keeping an external device connected to the external connection terminal or earphone microphone terminal might damage the connector resulting in a malfunction. Such damage and malfunction are not covered by the

● To ensure waterproof property (equivalent to IPX5 and IPX8) of this product, use the card slot cover securely for use. Note that the waterproof property is not guaranteed in every usage condition. Do not allow water to get inside the product or splash water on the charging equipment or optional accessories. Do not open/close the card slot cover in the rain or with waterdrops on the surface of the product. Doing so might cause water intrusion resulting in internal corrosion

by the warranty. Do not use the product in extremely hot, cold or humid places.
 (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%.)

Peripheral devices Do not use the product in extremely hot, cold or humid places

Do not use in places subject to lots of dust or vibration

(Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 90%. It can be used temporarily within 36°C to 40°C.) - au Nano IC Card 04 (attached to the main unit)

with dry cotton swabs, etc. every now and then. Soiled terminals might cause poor connection. Do not exert a strong force to clean the external connection terminals or earphone microphone terminal to prevent deformation.

- 12 -

damaged. Drops of water or dirt left on the display may cause stains Wiping the product using alcohol, thinner, benzine, detergent, etc. might erase the printing on the outer casing or cause discoloration. Use as far away as possible from land-line phones, TVs and radios. Use

Wipe the card with a dry, soft cloth (such as for cleaning eveglasses)

or cleaning. Do not rub it roughly with a dry cloth. The display may be

nearby might affect them.

The product may become warm while charging or during other operations, depending on the situation, but this is not abnormal. When the product is used by a child, parents or guardians should

thoroughly read the "Basic Manual" (this manual) and teach the child how to Do not put stickers on the product. Sound may not be emitted or voice

sound may not be delivered to the party

 Do not forcefully press, tap or intentionally subject the display to strong mpact. Doing so might cause scratching or damage. Do not forcefully press your fingernails, sharp objects or hard objects

against keys or display surface. Doing so might cause scratching or damage.

The touch panel/touch sensor key is designed to be lightly touched by fingers. Do not apply strong pressure with your fingers or sharp-pointed bjects (such as fingernails, ballpoint pens and pins) on the touch panel uching the panel/touch sensor key may not work in the following cases Note that it may cause malfunction.

Operation with gloved hands Operation with fingernails

Operation with foreign object on the touch panel/touch sensor key

Operation with protective sheet or seal on the screen

Operation with a water drops or dew condensation attached on the touch panel/touch sensor key

Operation with wet or sweaty fingers Operation under water

- 19 -

• Never use modified au cell phones. Use of a modified device violates the

the "Technical Conformity Mark @" can be confirmed in product with the following operations.
From iida Home, [Settings]→[About phone]→[Compliance information] If the screws of the product are removed and modifications are made to the internal components, the certification of conformity with technica

regulations will become invalid. Do not use the product with the certification

invalid, as it is a violation of the Radio Law.

To prevent unlawful modification, the product has been designed so that it cannot be easily disassembled. Modifying the product is prohibited by the

 Contents saved in the product, such as contacts, mails and favorites might be altered or lost by an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that Company assumes no responsibility for any damages or lost profits resulting from altered or lost

 Note that content data (both charged or free content) saved on the product not be returned to the customer when the product is replaced for repair of a fault, for example.

may become slow when the ambient temperature is low, which is due to eed will return to normal at room temperature.

technology, some pixels (dots) might be lit or out at all times. This is not a

some copyrighted data even by the above-mentioned means.

and TV sets near the product as it might cause malfunction. Strong magnetic objects may cause misoperation.

verheating, fire or a fault.

or hurns

compromise traffic safety and cause an accident. If charging is not completed after the specified charging time stop charging. Failure to do so might cause leakage of liquid, overheating, rupture or ignition

corrosion may occur and overheating may cause fire or malfunction

Although this product model has waterproof property, stop use

Do not operate the product while driving an automobile or

if liquid such as water gets inside the product from the card slot

cover etc. Continued use of the product in this state might cause

Do not leave in places within the reach of small children. Small children might swallow small parts, etc. by mistake and choke on them, or might drop them by mistake and cause accidents or injury.

 
CAUTION Be sure to read the following cautions before use.

Do not store the product in places subject to direct sunlight (e.g. in Do not store the product in places subject to direct standing automobiles), places that get hot, places that get extremely cold, and in humid or dusty places. Doing so might cause overheating, fire, deformation or a fault. Do not leave on unstable places such as rocky stands or tilting

surfaces. Dropping the product may cause injury or damage. Pa careful attention while vibrator is set. Also, pay sufficient attention to impact, etc.

- 5 -

AC adapter (sold separately): 100V - 240V AC



the Common DC Adapter 03 (sold separately).)

external connection terminals or the earphone microphone terminal

- 13 -

Radio Law. This product has acquired the certification of conformity with technical regulations for the specified radio station based on the Radio Law, and

• The product uses liquid crystal for its display. The display response speed

the property of liquid crystal and not a malfunction. The display response Although the display used on the product is made using high-precision

● Take care not to inconvenience people around you when you use the You are recommended to store copies of individual data such as still

images you took, videos and music in your PC by sending each file as mail attachment, etc. Note, however, that you may not be able to make copies of

Take care not to place magnetized items such as magnetic cards, speakers

- 17 -- 18 -

- remove water so that water does not remain in the earnhone microphone. rminal, then dry it before using. When you put the product in your pocket or bag, take care so that the play does not come in contact with metal objects or other hard objects.
- When suddenly brought into a warm place from a cold place, or when in a humid location, or when used where temperature suddenly changes (e.g. near the air discharge port of an air conditioner), water droplets (i.e. condensation) sometimes are formed inside the product. Note that when used under conditions such as this, humidity might cause corrosion or a

Doing so might cause scratching or damage.

- When wiping the display, wipe with a soft, dry cloth. Use of a moistened cloth, glass cleaner or other similar liquid might cause a fault.

 When connecting/disconnecting the external device to/from the external
- connection terminal or the earphone microphone terminal, make sure that the connector or plug of external device is straight with the terminal.

 Note that applying unnecessary force with the external connection terminal
- or the earphone microphone terminal connected to the external device might cause damage.

 • Do not discard the product together with regular trash. Please cooperate
- in the collection of the product when it is no longer needed to protect the environment and effectively use resources. Old product is collected at au shops and other places.
- Insert only a microSD memory card into the memory card slot on the product.
- Do not exert excessive force when attaching/removing a microSD memory card. Doing so might injure your hands or fingers. While writing/reading data to/from a microSD memory card, do not subject.
- the product to vibration or impact, or turn off the power. Doing so might cause loss of data or a fault. When hearing call voice, use the product with the receiver touched to
- the center of your ear. Failure to do so may make call voice to be heard obscurely because the receiver (voice vent) is covered by the perimeter of

-21-

Important items to remember before use

- Make sure that the card slot cover is · Waterproofness/dustproofness is
- only effective when the covers are securely closed.
- Just a small particle (a hair, a grain of sand, etc.) on the seals can cause water or dust leak.
- Do not open/close the card slot cover if the main unit or your hands are wet. Do not insert an earphone when water remains in the earphone microphone terminal.

How to close the card slot cover

After stowing the cover hinge, press on the cover ① in the direction of arrow venly with the flat part of your finger. Rub your finger over the cover in the irection of arrow (2) to ensure that the cover is not partially open





• Take care not to cover the microphone with your fingers during a call. The other party may not be able to hear your voice clearly. When using handsfree call, note that the speaker may emit loud sound.

- ake care to keep the speaker at a safe distance from your ears. Do not cover the sensor with your finger or put a sticker on it. Doing so may
- hinder the sensor from detecting the ambient light level and functioning Do not put a sticker, etc. on the proximity sensor. Doing so may cause
- the sensor to malfunction and make the display always turned off while receiving a call or during a call.
- Touch Panel/Touch sensor key
- Use your finger to operate the touch panel/touch sensor key. Do not use ballpoint pens, pencils or other sharp-pointed objects. Using such objects does not only hinder correct operation of the touch panel, but also might cause scratching or damage to the display/touch sensor key.
- Do not put stickers or sheets (e.g. commercially available protective films peep prevention sheets) on the display/touch sensor key. Doing so might hinder correct operation of the touch panel/touch sensor key.

 Do not operate the touch panel with fingernails. Doing so might result in
- split nails or jammed fingers.

 If the display surface/touch sensor key is dirty or wet with sweat or water
- it may not function correctly. In such case, wipe the display surface/touch sor key with a dry, soft cloth. When carrying the product in your pocket or bag, take care not to put the
- touch panel close to metals or other conductive materials, as it might cause false operation of the touch panel/touch sensor key.

■ Internal hattery

- se in very hot or cold environments, for example, when left in an automobile with the windows closed in summer, will cause the battery capacity to drop and shorten the available battery usage time. This will also shorten the internal battery's service life. Try to use the product as far as possible at room temperature.
- fter the internal battery is charged, battery power decreases bit by bit even if the product is not used. The internal battery may be discharged if the product is not used for a long time. We recommend to charge the product before use.

- 22 -

Do not immerse the product in soap water, detergent water, or water with Do not immerse the product in seawater, a swimming pool or hot spring.

- o not immerse the product in any liquid (alcohol, etc.) other than water Do not place the product directly on sand at a beach, etc. Sand or other
- small particles might get inside the microphone, receiver or speaker, causing the volume to drop. If sand gets inside the product, it might cause erheating or a fault.
- Do not leave the product in a humid place such as a bathroom or kitchen for an extended period of time.















Tips for comfortable use

- Once the product gets wet, water may remain in gaps of the product.
 Shake the product well to drain water. Especially make sure to drain water. remaining in the key parts, external connection terminal and earphone
- Even after water is drained, the inner parts might be still wet. Although you can use the product, do not place it near things that must not get wet. Take care not to wet your clothes, bag or contents of the bag. Drain water if it becomes temporarily hard to hear the sound due to water

■ Notes on various usage scenes

You can make calls holding the product with wet hands in the rain without

- The rain in this case means a moderately-heavy rain (less than 20 mm per
- Water drops on the display might cause errors in the touch panel operation.

- 29 -

■ Precautions on charging

The supplied and optional accessories are not waterproof/dustproof. Be sure to check the following points before and after charging. Never charge the battery if the product is wet. Doing so might cause electric

- 28 -

- shock or short circuit resulting in fire, a fault or burns.

 Check that the main unit is not wet. If you are charging the battery just
- after the product gets wet, drain water well and wipe remaining water off with a clean dry cloth before placing it in Desktop Holder (KYV33PUA) and connecting the microUSB plug into the external connection terminal.
- Do not touch the specified charging equipment (sold separately) or Desktop Holder (KYV33PUA) with wet hands. Doing so might cause electric shock. Do not splash water over the specified charging equipment (sold separately) or Desktop Holder (KYV33PUA). Do not use it near water such as in a bathroom, shower room, kitchen or washroom. Doing so might cause fire, electric shock, injury or a fault. Do not bring it into a bathroom, etc. even when you are not charging with them. Doing so might cause fire, electric shock, injury or a fault.

Notes on using Bluetooth®/Wireless LAN (Wi-Fi®) function

- The Bluetooth® function of the product conforms to domestic standards of Japan, FCC standards and EC directive, and has been certified.

 The wireless LAN (Wi-Fi®) function of the product conforms to domestic standards of Japan, FCC standards and EC directive, and has been
- The 2.4 GHz band used by wireless LAN (Wi-Fi®) and Bluetooth® devices is operated by various other devices. For this reason, the communication speed and connectable range may be decreased, or disconnection may
- occur, due to interference by other devices. Do not use this product in places where electromagnetic waves are generated or near electric products, AV and OA equipment, or other
- nagnetized devices.
- Subjecting this product to magnetic or electrical noise might increase noise and prevent it from performing communications. (This product is particularly susceptible to noise when it used near a microwave oven.) - 35 -

- Using this product near a TV, radio or similar appliance might cause
- reception interference and disrupt TV images. Searching might not be successful if there are multiple wireless LAN (Wi-Fi®)
- access points near to the product or the same channel is being used. • Use of cell phones on board is restricted. Follow the instructions of each
- The communication speed and connectable range vary depending on the distance between communication devices, obstacles and the devices used.

Cautions on using 2.4GHz band The frequencies used by the Bluetooth® and/or Wireless LAN (Wi-Fi®) function

of this product are in the 2.4 GHz band. In this frequency band, other similar wireless stations, in-plant wireless stations for mobile unit identification that require a license for use, such as factory production lines, specific smallpowe vireless stations that do not require licenses, amateur wireless stations (collectively called "other wireless stations" from here on) are operated in addition to home electrical appliances such as microwave ovens, devices for industrial, scientific and medical devices.

- 1. Before using the product, make sure that "other wireless stations" are not in
- 2. In the event that instances of radio wave interference have occurred between the product and "other wireless stations", immediately either relocate the product or stop operation of the device (stop emission of radio
- 3. If you are unclear on any points or are troubled by anything, contact an au shop or Customer Service Center.
- Connections between this product and all other Bluetooth® and wireless LAN (Wi-Fi®) devices have not been confirmed. Therefore, connections with all Bluetooth® and wireless LAN (Wi-Fi®) devices are not guaranteed.
- This product supports security features for wireless communications that are compliant with the Bluetooth® and wireless LAN (Wi-Fi®) standard specifications, but the security may not be sufficient depending on the usage environment and configuration. Be careful when making data communication using Bluetooth® or wireless LAN function (Wi-Fi®).

- Wireless LAN (Wi-Fi®) has the advantage that it can be freely connected
- obtain unauthorized access if security settings have not been configured. You are recommended to configure security settings before use at your decision and responsibility.

 The Company assumes no responsibility for leakage of data or information
- that may occur during Bluetooth®/wireless LAN (Wi-Fi®) communication • Since Bluetooth® and wireless LAN (Wi-Fi®) functions use the same
- frequency band, using the both functions at the same may cause radio wave interference resulting in decreased communication speed or disconnection from the network. If connection fails, stop using either of the Bluetooth® and wireless LAN (Wi-Fi®) functions. luetooth® and wireless LAN (Wi-Fi®) functions of this product use frequencies

in the 2.4 GHz band. 2.4FH1/XX1

Bluetooth® function: 2.4FH1/XX1

This product uses the 2.4 GHz band. FH-SS is used as the modulation scheme. The interference distance is about 10 m or less. Bands of mobile unit identification devices cannot be avoided

• Wireless LAN (Wi-Fi®) function: 2.4DS4/0F4

This product uses the 2.4 GHz band. DS-SS and OFDM are used as the nodulation schemes. The interference distance is about 40 m or less. This means that all bandwidths are used, and that bands of mobile unit identification devices can be avoided.

Available channels vary depending on countries For use in airplane, check with the airline company in advance.

- 23 -

To avoid lowering the battery performance or decreasing battery life, do not

Charge the battery before using the product for the first time after purchase, or if you have not used the product for a long time.

The internal battery is a consumable item. If the performance of the internal

battery does not recover, the battery is at the end of service life, so stop

use. Since the battery is built into the product, we keep your product and

replace the battery for a fee. You may not use the product for a certain period. The life time of the internal battery depends on the usage etc.

When the specified charging equipment (sold separately) is not to be used.

Do not loop the power code of specified charging equipment (sold

cause electric shock, overheating, fire, fault or injury.

in case of theft or loss, contact an au shop or PiPit.

Card 04 into some other IC card reader, etc.

unplug the power plug of the specified charging equipment from the outlet

separately) around the adapter unit. Doing so might cause electric shock, overheating, fire, fault or injury.

Do not forcibly bend a plug of the charging equipment (sold separately) or the connection between the connector and power cord. Doing so might

When installing the product to Desktop Holder (KYV33PUA), do not press

or apply excessive force Doing so might cause damage of the product or

■ The au Nano IC Card 04 is lent to you by au. In case of loss or damage, the

Do not forcibly remove or insert the au Nano IC Card 04. Be careful not to exert excessive force when inserting the card into your au cell phone.

You are responsible for any damage caused by inserting your au Nano IC

Keep the IC (metal) part of your au Nano IC Card04 clean. Wipe the card

with a dry, soft cloth (such as for cleaning eyeglasses) for cleaning.

• Do not put stickers, etc. on the au Nano IC Card 04.

card will be replaced at your expense. When malfunction is suspected, or

store the product in the following conditions: With fully charged (right after charging)
With the empty battery (too low to turn the product on)

In a hot and humid place

Charging equipment

contact failure

au Nano IC Card 04

your hands are wet.

r cigarette lighter socket.

- Water drops on the touch sensor key might cause errors in the operation. <In the shower>
- can make calls holding the product with wet hands after a shower. Avoid spraying the product with high-pressure water, as the product is not

• Never open/close the card slot cover if the product is exposed to rain, or

- designed to withstand high water pressure. You can wash the product under a mild flow (up to 6 liters per minute) of tap
- water at room temperature (5°C to 35°C) at a distance of about 10 cm from the • Do not spray the product with high-pressure water or submerge it in water
- for extended periods of time, as the product is not designed to withstand igh water pressure. Make sure that holding the card slot cover so that it does not open, wash the
- Make safe that including the card street of the control of the product with your hands. Do not use a brush or sponge.
 Do not wash the product in a washing machine or ultrasound bath
- Do not splash the product with or immerse it in soap water, detergent water,

<In the bath>

You can use the product in a bathroom.

- Although you can make calls with wet hands, do not immerse the product into a bathtub. The product is not resistant to hot temperatures. • Do not use the product in a bathroom for an extended period of time. The
- product is not moistureproof.

 Do not immerse the product in hot spring water, soap water, detergent water, or water with bath salts in it. Also, do not use the product underwater. Doing so might cause a fault.
- Extreme changes in temperature cause condensation. Wait until the product. eaches room temperature before you bring the product from a cold place into a warm bathroom.
- If condensation occurs inside the display leave the product at room temperature for a while until condensation is cleared.
- Do not splash the product with hot water. The product is not resistant to hot
- Do not bring Desktop Holder (KYV33PUA) or Kyocera TV antenna cable 02 (02KYHSA) into a bathroom.

- 30 -

anywhere within the radio wave range, as it uses radio waves for exchanging

information. At the same time, there is a risk that a malicious third party ma

Cautions on using 5 GHz band

Wireless LAN (Wi-Fi®) function of this product uses 5 GHz band. Using 5.2 GHz band and 5.3 GHz band outdoors is prohibited by the Radio Law.

When using the camera, follow common rules of etiquette regarding camera

mishandling of this product. The Company takes no responsibility for recovery of altered or lost data, damages resulting from altered or lost data,

When photographing important occasions (such as a wedding), take a trial

Do not leave the camera lens exposed to direct sunlight. Imaging elements

motorbike, or riding a bicycle. Use of cell phones while driving a car or

motorbike is prohibited by law. (Use of cell phones while riding a bicycle

may also be punishable by law.) In addition, stay alert to the traffic around

you even when walking. Surrounding sounds may not be heard clearly, and

gazing at the screen might distract your attention causing a traffic acciden

Be especially careful at railroad crossings, on a platform, and at pedestrial

● Take care not to listen at ear-splitting volume for a long time, as it might

Be careful of sound leakage from earphones in trains or other places with

 You are not allowed to copy, distribute, publish, modify or edit the data you shot, recorded or downloaded using this product without consent of the copyright holder, except for personal use, under the copyright law.

In addition, do not use or modify portraits or names of other individuals

Be careful about the copyright and portrait right when posting photos you

- 24 -

Do not immerse or drop the product in pool water. Also, do not use the

• If the product gets splashed with pool water, immediately rinse it off with

disinfection. To wash the product, do not use a brush, etc. *Weaker water flow (less than 6 L/min.)

easonings, juices, etc. other than tap water.

not resistant to hot temperatures.

stove or in a refrigerator

Card slot cover

■ Common precautions

tap water* in room temperature, because pool water contains chlorine for

You can use the product in the kitchen and other places where water is used.

• Do not splash the product with or immerse it in soap water, detergent water,

Do not immerse the product in or splash it with boiling water. The product is

Do not place the product where it gets extremely hot or cold such as near a

Make sure that the card slot cover is firmly closed. Just a small particle (a hair.

a grain of sand, etc.) on the seals can cause water or dust leak.

Do not open/close the card slot cover with gloved hands. Just a small particle

(a hair, a grain of sand, etc.) on the seals can cause water or dust leak. Wipe

If the card slot cover is deteriorated or damaged, the waterproof/dustproof

property becomes ineffective. In such case, contact an au shop near you.

If any liquid other than plain water (e.g. seawater, detergent, alcohol) gets on the product, immediately rinse it with plain water.

You can wash the product under a mild flow (up to 6 liters per minute) of tap

water at room temperature (5°C to 35°C) at a distance of about 10 cm from the

If the product gets dirty, wash it with your hands holding the card slot cover so

- 31 -

If any liquid other than plain water gets on the product

off any minuscule droplets of water or dirt with a clean dry cloth before closing

without their consent, as it might infringe on rights of portrait.

performances, shows and exhibitions even for personal use.

Note that shooting and recording may be restricted at some live

Image data might be altered or lost due to malfunction, repair or

shot and check the shot image to make sure it is correctly shot. Do not use the camera for recording commercially available books or information of which photographing is not allowed.

Do not listen to music or watch videos or TV while driving a car or

and lost profits.

■ Music, videos and TV

many people around you.

Copyrights and rights of portrait

shot, etc. on Internet homepages.

product underwater

The channels used on the product are as follows. W52 (5.2 GHz band/36, 38, 40, 44, 46, 48 ch)

W53 (5.3 GHz band/52, 54, 56, 60, 62, 64 ch)

W56 (5.6 GHz band/100, 102, 104, 108, 110, 112, 116, 118, 120, 124, 126, 128, 132, 134, 136, 140 ch)

IEEE802.11b/g/n IEEE802,11a/n/ac J52 W52 W53 W56

Notes on packet communication charge

- Since constant Internet connection is possible with the product, packet communication may be performed automatically by some applications. sulting in high packet communication charges. Therefore, subscription to a packet flat-rate service/packet communication charge discount service is To browse homepages, download applications, communicate using
- applications, send/receive e-mails and configure various settings with the product, connection to the Internet is required, to which packet communication charge applies. Packet communication charge does not apply to wireless LAN (Wi-Fi®)

■ Backup content on the product Please back up important content registered to the product or downloaded

- to the product from an outside source. Content recorded to memory on the product sometimes disappears or is altered by unexpected factors, such as static electricity or a fault, repair, mishandling, etc 'How to make backups: Store important data such as contacts data, music,
- shot photos and videos on microSD memory cards. You can also send files as mail attachment or transfer to your PC. Note, however, that there are some data that cannot be copied by using these means.

Available Security Codes

The product has various security codes that you can use. The available security codes are as follows. Do not forget the various security

odes that are set as they are necessary for various operations and contracts Security code

Example	U to do remote operation of voice mail and call forwarding
of usage	services from a landline phone
	② To use Customer Service Center and to do various inquiries,
	applications, and modifications on the au homepage
Initial	Four-digit number chosen by the customer and noted on the
value	application form

of usage	To disable security
Initial value	Slide

- 25 -

After the product gets wet, drain water, and wipe the main unit with a clean

dry cloth. In cold climates, water on the product may turn to frost. Using the product with frost may cause a fault. Do not leave the product without

wiping off the water. (No special measures against condensation have been

The rubber seal around the card slot cover is important to maintain waterproof/

dustproof property. Do not damage or remove the rubber seals.

When closing the card slot cover, take care not to get the rubber seals caught.

esulting in loss of waterproof/dustproof property. Just a small particle (a hair,

Forcibly closing the cover with the rubber seals caught may damage them

If any liquid other than plain water (e.g. alcohol) gets on the rubber seals, it

may cause deterioration in durability.

Do not insert sharp objects into gaps around the card slot cover. Doing so

might damage or deform the product or damage the rubber seals, causing

It is recommended to replace the parts for maintaining waterproof/dustproof

present. For information on part replacement, contact an au shop near you or

Do not use the product in places where it may be sprayed with high-pressure

periods of time, as the product is not designed to withstand high water.

specified flow rate (i.e. 6 liters per minute from a faucet or shower head, at

water (e.g. near a faucet or shower head) or submerge it in water for extended

sure. Also, do not expose the product to a water flow stronger than the

hich you might even feel pain in the skin). Doing so might cause a fault, ever

though the product has a waterproof property equivalent to IPX5. Do not wash

- 32 -

• Be sure to check the security of the application, then install it at your own

The Company assumes no responsibility for any failures that might be

risk. Some applications might cause virus infection, damage various data,

and send out your location information, usage history or personal information

caused by applications you have installed. Repair costs in this case may be

The Company assumes no responsibility for any disadvantage brought to you or any third party by applications you have installed.

Insertion of a microSD memory card is necessary to use some applications.

Some applications prohibit the product from entering sleep mode while they are active, or rapidly drain the battery while running in the background.

change without notice as a result of version upgrade. In addition, operation

Operation procedures and screen appearances of the applications preinstalled in this product and those installed by you are subject to

property once every two years regardless of whether any abnormality is

The supplied and optional accessories are not waterproof/dustproof.

Keitai Guarantee Service Center

Waterproof property

Never charge the battery if the product is wet.

the product in a washing machine or ultrasound bath.

Notes on applications

stored in your cell phone via the Internet.

charged even during the warranty period.

Charging

a grain of sand, etc.) on the seals can cause water or dust leak.

Example	To prevent unauthorized use of the au Nano IC Card 04 by third
of usage	parties
Initial	1234
value	

LOCK NO (NI C/OSaliu-Nellal lock Settling)					
ample	To use the "NFC/Osaifu-Keitai lock setting"				
usage					
tial	1234				
lue					

I PIN code

■ PIN code

ent unauthorized use of the au Nano IC Card 04 by a third party, you can set the product to require PIN code entry every time the power is turned on. You also need to enter PIN code when setting whether PIN code entry is If PIN code is incorrectly entered three times consecutively, the PIN code will

PIN code is "1234" and PIN code entry is set to not be required at the time of

purchase. You can change PIN code to any four- to eight-digit number, and set PIN code entry to be required as necessary.

■ PUK code In case PIN code is locked, you can unlock it by entering PUK code.

- PUK code is an eight-digit number given at the time of purchase, which is printed on the back side of the plastic card on which your au Nano IC Card 04 is attached After entering PUK code, you need to set a new PIN code.
- . If PUK code is incorrectly entered ten times consecutively, contact an au
- shop, PiPit or Customer Service Center.

 PIN code is not reset by initializing the product.

Do not use the product in places where boiling water may splash on it, in saunas or near hot air (e.g. hairdryer), product The product is not resistant to hot temperatures.

This product is not resistant to shock. Do not drop the product or subject it to shock. Also, do not jab the receiver, microphone, speaker, etc. with a cotton swab or any sharp object. Doing so might damage or deform the main unit

ound might become hard to hear

Follow the steps below to drain water.

causing water or dust leak. ■ Draining water after wetting the product As some parts of this product are not watertight, if you use the product after it gets wet, water remaining in those parts might wet your clothes or bag, or the

Wipe water thoroughly on the surface of the product with a clean dry lint-free cloth



2 Shake the product

ld the product firmly and shake it in the direction of arrows until water does not come out. When shaking the product, stay alert to your surrounding

- 27 -

Notes on waterproof and dustproof

This product has a waterproof property equivalent to IPX5*1 and IPX8*2, as well

as a dustproof property equivalent to IP5X*3 on the condition that the card slot

cover is securely attached (based on in-house testing).

Specifically, you can make calls holding the product with wet hands in the rain

(less than 20 mm per hour) without umbrella, as well as use the product in a

before use" and "Tips for comfortable use" to ensure correct use. Failure to follow the contents described in these sections may cause intrusion of water

sand or other foreign material, resulting in overheating, ignition, electric shock

IPX5 equivalent means that the product will maintain its operability as a phone

even if it is sprayed with water from a 6.3 mm diameter nozzle at a distance of

about 3 meters for more than 3 minutes at a rate of about 12.5 liters per minute

Iron any direction.

IPX8 equivalent means that the product will maintain its operability as a phone with no water getting inside the product even if it is gently submerged in a tank of still tap water at room temperature to a depth of 1.5 meter for about 30 minutes.

as a phone even after it has been placed in an apparatus with grit and dust of diameters of 75 μ m or less and shaken for 8 hours.

*3 IP5X equivalent means that the product will securely maintain its operability

Since operation of the product on each usage scene was confirmed based

caused by mishandling by the customer are not covered by the warranty.

on the above assumption, proper operation of the product in every possible

condition during actual use is not guaranteed. Malfunctions determined to be

place with water such as a bathroom or kitchen.

Before using the product, thoroughly read "Important items to remember

Be careful not to have the pro

Earphone microphone External connection terminal side

② Wipe drained water.

icrophone terminal are particularly hard to drain water. Face those parts own and press against the cloth to wipe off.

3 Place the product on a dry towel or cloth and leave it at room

3 Press the product gently against a clean dry lint-free cloth, and wipe off water remained in the gaps such as in the microphone, receiver, speaker, external connection terminal, earphone microphone terminal,



4 Leave the product for 1 hour or more at room temperature to dry after removing drained water thoroughly Even after you take these procedures, water may remain on the product

Do not place the product near things that you do not want to wet.

Also, take care not to wet your clothes, bag, etc.

- 34 -

O Ministry of Internal Affairs and Communications website http://www.tele.soumu.go.jp/e/sys/ele/index.htm

Technical regulations are defined by the Ministerial Ordinance Related to Radio Law

Manual)* (Japanese) available on the au homepage or "Instruction Manual" app installed on the product.

http://www.au.kddi.com/support/mobile/quide/manual/

Specific Absorption Rate of Cell Phone This model INFOBAR A03 cell phone complies with Japanese technical

regulations and international guidelines regarding exposure to radio waves This cell phone has been designed in observance of the Japanese technical egulations regarding exposure to radio waves * and limits to exposure to radio waves recommended by equivalent international guidelines. These international guidelines were set out by the International Commission on Nonlonizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age

exposure to radio waves. does not indicate the use of mobile devices has any harmful effects on the human body. They recommend that if you are still worried about your exposure

detailed information regarding SAR.

products, but they all satisfy the limit.

http://www.who.int/docstore/peh-emf/publications/facts_press/fact

Please refer to the websites listed below if you would like to know more

- 33 -

The Japanese technical regulations and international guidelines define the

limits using a unit of measurement known as the Specific Absorption Rate

SAR value for this cell phone when tested for use at the ear is 0.253W/kg.

(SAR), which represents the average amount of radio frequency energy absorbed by the human. The SAR limit for cell phones is 2.0 W/kg. The highest

The highest SAR value for this cell phone when tested for use on the body is

0.794W/kg. There may be slight differences in SAR levels among individual

ne actual SAR of this cell phone while talking on the phone can be well

below that indicated above. This is due to automatic changes in the power

base station, the lower the power output of the cell phone.

level of the cell phone to ensure it only outputs the minimum power required to communicate with a base station. Therefore in general, the closer you are to a

This cell phone can be used in positions other than against your ear. Use ar

accessory such as a carrying case, etc. so that you can hold the product

at least 1.5 cm away from your body and also do not contain metal parts

with Japanese technical regulations and international guidelines regarding

between the product and your body. By doing this, this cell phone complies

.
The World Health Organization has stated that present scientific information

then you can limit your talk time or use a handsfree kit to keep the cell phone

If you would like to know more detailed information, please refer to the WHO

http://www.arib-emf.org/index02.html (in Japanese only)

http://www.au.kddi.com/english

For the following content, refer to the "取扱説明書詳細版 (Full Instruction

OpenSSL License

 FCC Notice
 European RF Exposure Information Declaration of Conformity

- 41 -

- 36 -- 37 -- 38 -- 39 - 40 -

Intellectual property rights

■ Trademarks

Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies.















Google and Google logo, Android and Android logo, Google Play and Google Play logo, Play Music, Play Music logo, Play Movies & TV logo, Gardin and Gardin Gardi Drive and Google Drive logo, Hangouts and Hangouts logo, Google+ and Google+ logo, Google Search and Google Search logo, Google Voice Search and Google Voice Search logo, Chrome and Chrome logo, and YouTube and YouTube logo are trademarks or registered trademarks of Google, Inc.

Microsoft®, Windows® and Windows Vista®/Windows® 7/Windows® 8 are registered trademarks of Microsoft Corporation in the LLS A, and other countries The official name for Microsoft® Windows® is Microsoft® Windows® Operating

Microsoft®, Microsoft® Excel®, Windows Media®, and Exchange® are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries. Microsoft® Word is a product name of Microsoft Corporation in the United

QR code is a trademark of DENSO WAVE INCORPORATED.

- 42 -

Rovi, G-GUIDE, G-GUIDE MOBILE and G-Guide related logos are trademarks or registered trademarks of Rovi Corporation and/or its subsidiaries in Japan. microSD, microSDHC and microSDXC logos are trademarks of SD-3C, LLC.

Wi-Fi®, WPA®, Wi-Fi CERTIFIED logo and Wi-Fi Protected Setup logo are

Wi-Fi CERTIFIED™ and Wi-Fi Protected Setup are trademarks of Wi-Fi Alliance.

FeliCa is a contactless IC card technology developed by Sony Corporation.

"GREE" is a registered trademark of GREE, Inc. in Japan. All other trademarks

This product is equipped with "FSDTV® Mobile Full-Seg Edition for Android

iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods for

iWnn IME© OMRON SOFTWARE Co., Ltd. 2009-2012 All Rights Reserved.

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO

LICENSE FOR THE PERSONAL AND NON-COMMERCIAL LISE OF A CONSUMER

STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS

ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY

- 43 -

MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL

Japanese language, and for phrase prediction methods for English.

FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL

©2014 Comic Communication Co., Ltd. All rights reserved.

Facebook and Facebook logo are trademarks or registered trademarks of

LINE is a trademark or registered trademark of LINE Corporation.

registered trademarks of Wi-Fi Alliance.

are the property of their respective owners

developed by FUJI SOFT INCORPORATED.

FeliCa is a registered trademark of Sony Corporation

a is a registered trademark of FeliCa Networks, Inc.

Bluetooth® and logo are registered trademarks owned by the Bluetooth SIG, (1) ACCESS, the ACCESS logo, and NetFront are registered trademarks Inc., and KYOCERA Corporation is licensed to use those trademarks. WiMAX is a trademark of WiMAX Forum

(2) This software is based in part on the work of the Independent JPEG

"インテリジェントWi-Fi" is a registered trademark of KYOCERA Corporation.

or trademarks of ACCESS CO., LTD. in the United States, Japan and/or

"もじチェン" by LIM Corporation LTD. is used for switching font. "もじチェン" is a registered trademark of LIM Corporation LTD.

The product contains fonts provided by LIM Corporation LTD. The product contains fonts provided by Morisawa Inc.

Copyright© 2012 DigiOn, Inc. All rights reserved. Twitter and Twitter logo are trademarks of Twitter, Inc., and are used under DigiOn and DiXiM are registered trademarks of DigiOn, Inc.

DLNA®, the DLNA Logo and DLNA CERTIFIED® are trademarks, service marks, or certification marks of the Digital Living Network Alliance. DLNA Certifications of the this product are obtained by KYOCERA Corporation.

The product includes pictograms licensed by NTT DOCOMO, INC.

The product is equipped with DeepCore® 3.0 Plus for Android by E-Globaledge Corporation as infrared communication function. Copyright@ 2012 E-Globaledge Corp. All Rights Reserved.

"PhotoSolid", the function to avoid blurring still images, is a product of Morpho, Inc. "PhotoSolid" is a registered trade mark of Morpho, Inc.

MovieSolid", the function to avoid blurring videos, is a product of Morpho, Inc. "MovieSolid" is a registered trade mark of Morpho, Inc. "Morpho Effect Library", the image effect technology, is a product of Morpho, Inc. "PhotoScouter" is a registered trade mark of Morpho, Inc.

"Morpho Super Resolution" is adopted for super resolution technology, "Morpho Super Resolution" is a trade mark of Morpho, Inc. "Morpho Night Portrait", an image processing technology for night portrait, is a product of Morpho, Inc. "Morpho Night Portrait" is a trademark of Morpho, Inc. - 44 -

BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND "Morpho Smart Select" the image analysis technology for selecting the best photo among multiple candidates, is a product of Morpho, Inc. "Morpho Smart Select** is a trademark of Morpho, Inc.

"Morpho Rapid Effect* and "Morpho Rapid Effect* the image effect technology, LICENSING MAY BE OBTAINED FROM MPEG LA LLC. SEE HTTP://www.MPEGLA

are products of Morpho, Inc. "Morpho Rapid Effect" and "Morpho Effect Library' are trademarks of Morpho, Inc.

Morpho HDR is adopted for HDR (High Dynamic Range) technology. "Morpho HDR" is a trade mark of Morpho, Inc.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

"SUKAPA/", "SUKAPA/ Premium Service Link Logo" and "Torudabi" in Japanese are registered trademarks of SKY Perfect JSAT Corporation in Japan.

All other company names and product names are trademarks or registered trademarks of respective companies referred to in this manual.

Users of the product are authorized to use software installed into the product described in this instruction manual. Pay attention to the following points when

- (a) The software installed on this product or part of it may not be altered. delivered, modified, analyzed, reverse-engineered, derived, and any such
- actions are prohibited.
- (b) Illegally importing the software or a part of it is prohibited.
 (c) This Software is provided without implied warranties of merchantability,

fitness for a particular purpose and noninfringement of third party rights. Note that the existing license agreement takes priority for usage of GNU General Public License (GPL), GNU Library/Lesser General Public License (LGPL) included in software, software based on other open source software license and software that KYOCERA Corporation is licensed.

For information on the Open source software, refer to "Open source software"

Open Source Software

Note that the existing license agreement takes priority for usage of GNU General Public License (GPL), GNU Library/Lesser General Public License (LGPL) included in software, software based on other open source software license and software that KYOCERA Corporation is licensed. The exact terms of GPL, LGPL and some other licenses are reproduced in "About phone" in this product. For

- 45 -

details, refer to Kyocera homepage.

This product includes software copyrighted by KYOCERA Corporation and licensed software

source software standard belongs to KYOCERA Corporation or the third parties, distribution, reproduction, transformation and transmission over public lines without consent of KYOCERA Corporation are prohibited, unless you are authorized or permitted by Copyright Law.

■ Export Administration Regulations
This product and its accessories may be subject to the Japan Export
Administration Regulations ("Foreign Exchange and Foreign Trade Law" and

In addition, U.S. Re-export Regulations (Export Administration Regulations and the related laws and regulations), regulations in other countries may apply to this product and its accessories. To export and re-export this product and its accessories, directly or indirectly, take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry, the U.S. Department of Commerce, or authority

■ Regarding Windows notations

The names of operating systems (Japanese versions) used in this manual are

- Windows 8 is the abbreviation for Microsoft® Windows® 8. Microsoft® Windows® 8 Pro, Microsoft® Windows® 8 Enterprise
- Windows 7 is the abbreviation for Microsoft® Windows® 7 (Starter, Home
- Basic, Home Premium, Professional, Enterprise, Ultimate). Windows Vista is the abbreviation for Microsoft® Windows Vista® (Home

Basic, Home Premium, Business, Enterprise, Ultimate).

- 46

For inquiries, call: Customer Service Center

For general, charge, operations (toll free)

From fixed-line phones: From au cell phones: 157 area code not required

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR AFTER CALLING 157 ON YOUR au CELL PHONE

For service canceling procedure in case of loss or theft

Business hours 24-hour (7 days a week) From fixed-line phones: From au cell phones: 113 area code not required

In case above numbers are not available.

0120-977-033 (except Okinar 0120-977-699 (Okinawa)

Keitai Guarantee Service Center

For loss, theft or damage (toll free)

0120-925-919

Business hours 9:00 - 21:00 (7 days a week)



Sales: KDDI CORPORATION・OKINAWA CELLULAR TELEPHONE COMPANY 歩きスマホ。