



Turning Power On and Off

● Turning Power On

Hold down  for at least a few seconds.

● Turning Power Off

Hold down  for at least a few seconds.

Checking Your Own Phone Number and E-mail Address


From the stand-by screen: Press  . ▶ Press  .

Making and Answering a Call

● Making a Call

From the stand-by screen: Enter the phone number you want to call.

▶ Press  .

To end a call: Press  .


● Answering a Call

When the phone starts ringing, press .

To adjust the earpiece volume during a call: Use .

Storing and Recalling Address Book Entries

● Storing an Entry

From the stand-by screen: Hold down  for at least one second.

▶ Use  to select the item you want to edit. ▶ Press  [編集] (Edit).


▶ Enter the data. ▶ Press  [完了] (Comp).

● Recalling an Entry

From the stand-by screen: Press  to display the Address Book screen.

▶ Use  to select the tab for the record you want to recall.

▶ Use  to select the name of the record.

▶ Press  [詳細] (Detail) to view the record in detail.


Using the Camera (Movie and Snapshot)

● Recording a Movie Clip

From the stand-by screen: Press . ▶ Use  to select "カメラ" (Camera).


▶ Press  [選択] (Select). ▶ Select "ムービー" (Movie). ▶ Press  [選択] (Select).

▶ Press  [録画] (Record) to start recording.



▶ Press  [終了] (Stop) to stop recording.

▶ Press  [保存] (Save) to store the movie.

Press  [II] (Pause) during recording to pause recording.

Press  [フォト] (Photo) in the Movie mode to change to the Photo mode.


● Taking a Snapshot


From the stand-by screen: Press . ▶ Use  to select "カメラ" (Camera).

▶ Press  [選択] (Select). ▶ Select "フォト (壁紙モード)" (Photo (Wallpaper)) or "フォト (デジカメモード)" (Photo (Digital camera)).

▶ Press  [選択] (Select).


▶ Press  [撮影] (Shoot) to take a snapshot.

▶ Press  [保存] (Save) to store the photo.

Press  [ムービー] (Movie) in the Photo mode to change to the Movie mode.


Making an International Call

Ex: To call 212-123-△△△△ in the USA

 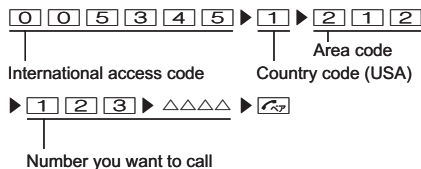


Other Handy Features

● Setting the Manner Mode

From the stand-by screen: Hold down  for at least one second. Repeat the above operation to disable the Manner Mode.

● Setting the Easy Voice Memo (Voice Recording)

From the stand-by screen: Hold down  for at least one second. Repeat the above operation to disable the Easy Voice Memo.

For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone:  0077-7-1111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)