 


Preface
Thank you for buying the Speed Wi-Fi HOME L01s (simply called "the product" from here on). Before using the product, be sure to read the "Quick Start Guide" (this manual) and "Notes on usage" to ensure correct use.

Packaged items
Before start using the product, make sure that you have all the following packaged with the product.

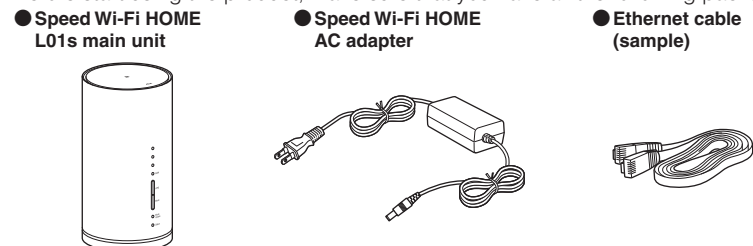

- 保証書 (Warranty) (for main unit)
- Wi-Fi 初期設定 (Wi-Fi Initialization) sticker (Japanese)
- ソフトウェアアップデート説明 (Software update explanation) sticker (Japanese)
- はじめてガイド (Quick Start Guide) (Japanese)
- ご利用にあたっての注意事項 (Notes on usage) (Japanese)
- ACアダプタ取扱説明書 / 保証書 (Manual/Warranty for AC Adapter) (Japanese)

* Keep the included accessories including warranty at hand.
* Illustrations in this manual are shown as examples. They may differ from the actual product.

About Instruction Manual

■ **Quick Start Guide (This Manual)**
Main operations for the main features are explained.

■ **取扱説明書 詳細版 (Full instruction manual) (Japanese)**
"取扱説明書 詳細版 (Full instruction manual)" (Japanese) which describes the detail explanations for various functions is available on the au homepage.
<https://www.au.com/support/service/mobile/guide/manual/>



- PDF file of "取扱説明書 詳細版 (Full instruction manual)" (Japanese) is also stored in the product. To view, connect the product and a PC, etc. via wireless LAN (Wi-Fi®) or Ethernet cable (sample) → Activate a web browser → Enter "http://speedwifi.home" in the address field → In "言語 (Language)" list, select "English" → Login → "Help" → "Please refer to the manual".
- * For instructions on how to log in, refer to "Activating Speed Wi-Fi HOME setting tool" in this manual.
- In this manual, descriptions are written on the assumption that you are skilled in basic operations of Windows PC/Mac or each game console. For operations of PC or each game console, refer to the manual of the PC or the game console.
- Illustrations and screen shown in this manual may look different from the actual ones. In some cases minor details or a part of a screen may be omitted.
- In "Instruction Manual", "au Nano IC Card 04 LE" is referred to as "au IC card".
- * "The Company" as appears in "Instruction Manual" refers to the following companies:
Sold by: KDDI CORPORATION-OKINAWA CELLULAR TELEPHONE COMPANY
Imported by: HUAWEI Technologies Japan K.K.
Manufactured by: HUAWEI TECHNOLOGIES CO., LTD

* Reproduction of the content of "Instruction Manual" in part or in whole is prohibited.
* The content of "Instruction Manual" is subject to change without notice.
* Every effort has been made in the preparation of "Instruction Manual". Should you notice any unclear points, omissions, etc., feel free to contact us.

 
What you can do with Speed Wi-Fi HOME L01s

You can connect wireless LAN (Wi-Fi®) devices such as PCs or game consoles up to 40 devices at the same time (up to 20 for 2.4 GHz/5 GHz respectively) via wireless LAN (Wi-Fi®) function or connect a PC using included Ethernet cable (sample). Also the data communication via Internet connection using WiMAX 2+ or LTE system is available (best effort*1) from connected devices through the product.

*1: Communication speed may not reach the maximum value depending on connection environment. Also, with some devices or game consoles etc., communication or online match-up games may not be operated correctly.
* The product automatically determines the most suitable network at that time to connect.


■ **Connecting via wireless LAN (Wi-Fi®)**

How to connect PCs or game consoles, etc. via wireless LAN (Wi-Fi®) is described in this manual.

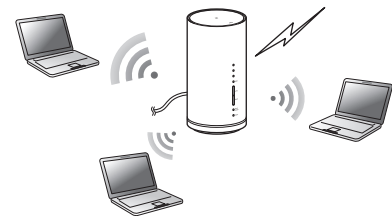


■ **Connecting via Ethernet cable (sample)**

 * You can use the wireless LAN (Wi-Fi®) connection and LAN connection at the same time. Up to 42 devices in total can be connected.

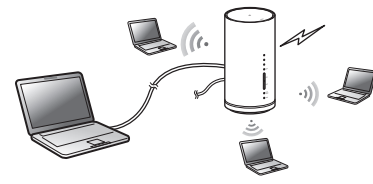

Names and functions of parts

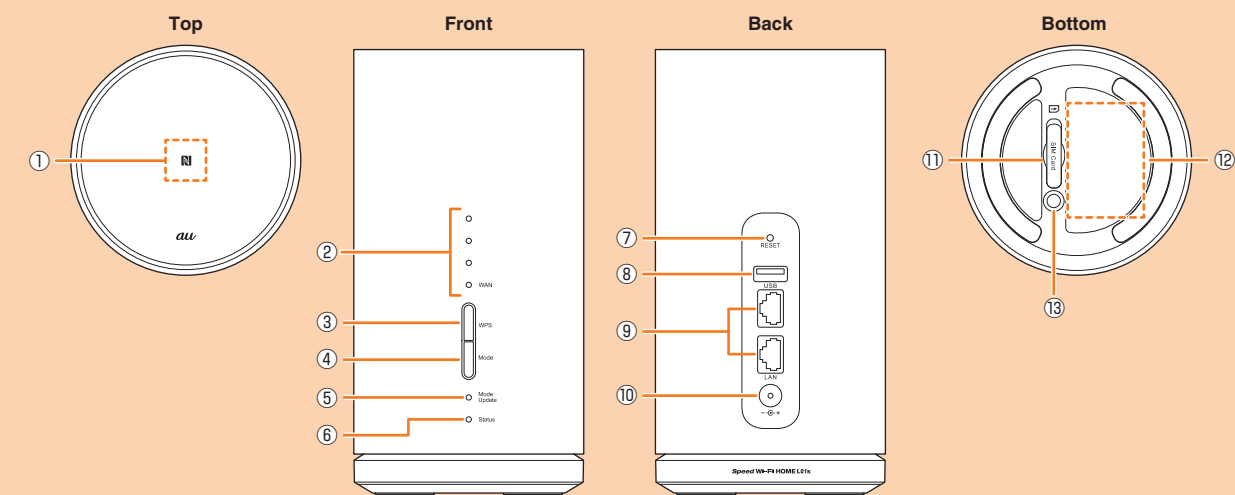 

- ① **NFC scanning area**
Use NFC function to establish a wireless LAN (Wi-Fi®) connection.
- ① **WAN indicator (Signal reception level)**
Indicate reception strength of WiMAX 2+ or LTE signal.
- ③ **WPS button**
Use this button to connect WPS compatible devices via wireless LAN (Wi-Fi®).
- ④ **Mode button**
Switch communication modes.
- ⑤ **Mode/Update indicator**
Indicate the communication mode or update notification.
- ⑥ **Status indicator**
Indicate the status of the product.
- ⑦ **RESET button**
Reset settings to the factory default.
- ⑧ **USB connection terminal (for extension)**
Not usable
- ⑨ **LAN connection terminal**
Used for connecting a PC etc. via Ethernet cable (sample).
- ⑩ **Power terminal**
Connect Speed Wi-Fi HOME AC adapter.
- ⑪ **Nano IC Card slot**
Attach au IC card.
- ⑫ **Label**
Check SSID, security key (password), IMEI, etc. Do not remove it.
- ⑬ **WARRANTY SEAL**
Do not remove this sticker. If it is removed, free-of-charge repair warranty is invalid.

Main LED indicators

The status of the product can be notified with the LED color and the lighting pattern. Main LED indicators are as follows.

① WAN indicator (Signal level)	
● (Turn off)	Out of service area, au IC Card is not inserted
● (Turn on)	LTE/WiMAX 2+ connected (Signal level: 1 - 4)

② Mode/Update indicator	
● (Turn on)	High Speed Mode
● (Turn on)	High Speed Plus Area Mode*1
● (Blink)	Update detected
● (Blink)	Update detected → Press WPS button + Mode button at the same time * See "Button operations" and "② WPS button + Mode button" in this manual.

③ Status indicator	
● (Turn on)	Power is ON/Connection is normal
● (Blink)	Exceeded the specified data usage limit*2
● (Turn on)	Connection error due to out of service

*1 Note that additional given charge may be incurred for use in High Speed Plus Area Mode.
*2 You can set the data usage counter with "Speed Wi-Fi HOME setting tool" or "Speed Wi-Fi HOME setting tool for smartphone".

Button operations

Switch the communication mode or update the software etc. by button operation.

■ **Switching the communication mode**

- High Speed Mode: Connects to WiMAX 2+ network
- High Speed Plus Area Mode: Connects to WiMAX 2+ network or LTE network

① **Mode button**

Switch communication modes.

Mode button	Mode/Update indicator	Operation
Press and hold for over approximately two seconds	● (Turn on)	Switch to High Speed Mode
	● (Turn on)	Switch to High Speed Plus Area Mode*

* Note that additional given charge may be incurred for use in High Speed Plus Area Mode.

■ **Updating the software**

② **WPS button + Mode button**

When there is software update, start updating.

WPS button + Mode button	Mode/Update indicator	Operation
—	● (Blink)	Update detected
Press and hold for over approximately two seconds	● (Blink)	Updating
—	● (Turn on) or ● (Turn on)	Update is complete

* For notes for updating software, see "Updating the software" in this manual.

■ **Connecting wireless LAN (Wi-Fi®) device compatible with WPS**

③ **WPS button**

Connecting WPS compatible wireless LAN (Wi-Fi) devices

WPS button	Status indicator	Operation
Press and hold for approximately one to five seconds	● (Blink)	Connects to 2.4 GHz compatible device by WPS.
Press and hold for over approximately five seconds	● (Blink)	Connects to 5GHz compatible device by WPS.

■ **Resetting the product to the factory default state**

④ **RESET button**

Reset settings to the factory default.
* With the power of the product turned on, press this button with a fine-tipped object.


RESET button	Operation
Press and hold for over approximately two seconds	Reset the device setting to the default.

* This erases all of the settings done after you purchase the product. Please be careful to use this function.

Attaching/Removing au IC card

Your phone number etc. is recorded in the au IC card. The product is compatible with au Nano IC Card 04 LE.

 - * Do not insert IC card with a conversion adapter.
- * Although the phone number is stored to the au IC card as customer information, phone call etc. is not available with the product.
- * Note the following points, otherwise handling the au IC card may cause malfunction or damage.
 - Do not touch the IC (metal) part of the au IC card
 - Insert in the correct direction.
 - Do not force to attach or remove.

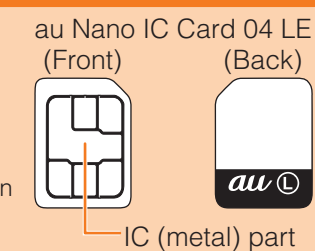


Before attaching/removing the au IC card, make sure to power off the product. au IC card is not recognized on the product if it is attached without powering off.

■ **Attaching an IC card**


① **Open the Nano IC Card slot cover**

 Put your finger (nail) on the concave part on the side of the cover and pull in the direction of the arrow.

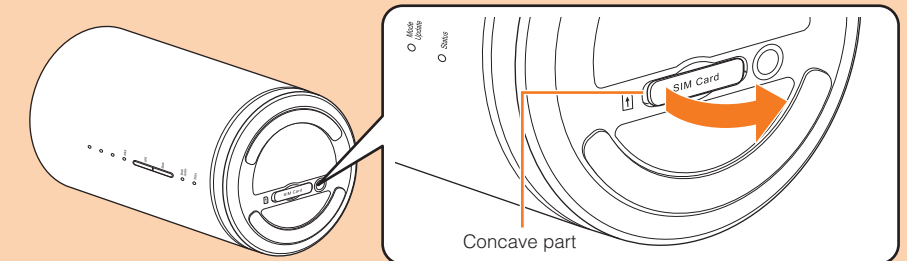


② **Insert au IC card into the Nano IC Card slot**

 With the IC (metal) part facing up, confirm the orientation with the notch shown, then insert until it clicks.

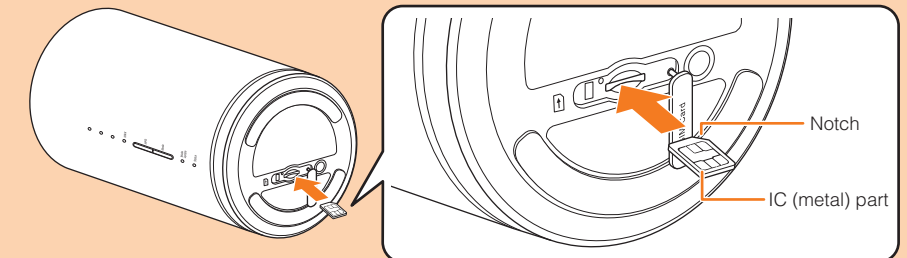

③ **Align the Nano IC Card slot cover with the Nano IC card slot**

 
④ **Gently press the Nano IC Card slot cover**

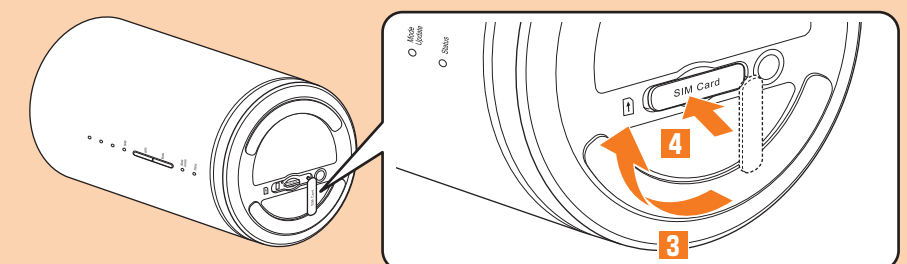

■ **Removing au IC card**

① **Open the Nano IC Card slot cover**

 Put your finger (nail) on the concave part on the side of the cover and pull in the direction of the arrow.

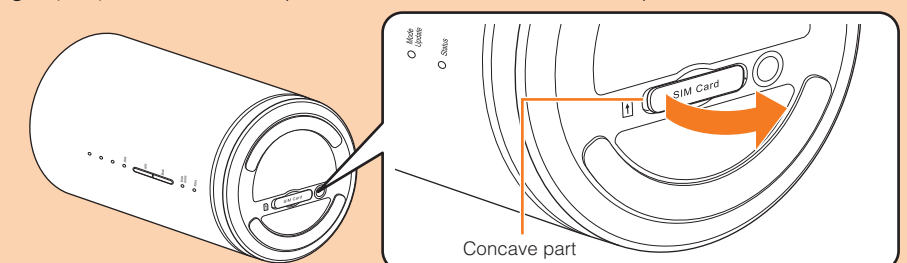


② **Slowly push au IC card all the way until it clicks**

When it clicks, keep touching au IC card with your finger and draw it back.


③ **Gently pull out au IC card straight**

 - Be careful not to pull out forcibly while the card is in locked state.

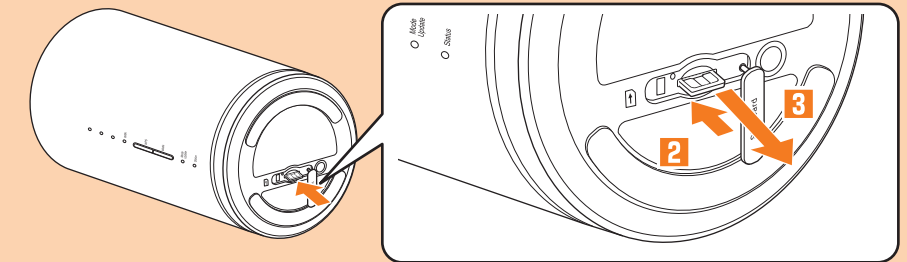

④ **Align the Nano IC Card slot cover with the Nano IC card slot**

 ⑤ **Gently press the Nano IC Card slot cover**

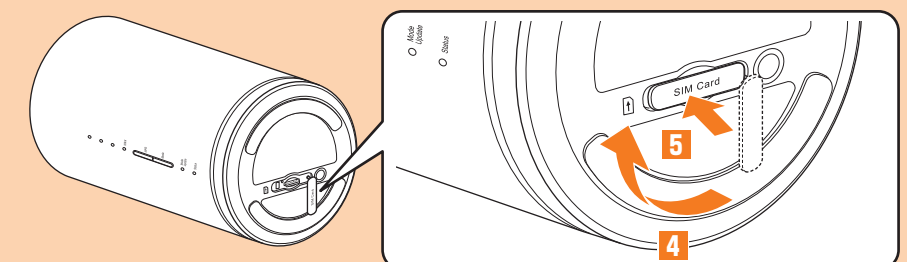

Turning the power on/off

 
The product has no power button. To power on, connect the Speed Wi-Fi HOME AC adapter to the product and then connect the power plug to an outlet.

■ **Turning the power on**

① **Connect the DC plug of Speed Wi-Fi HOME AC adapter to the power terminal of the product**

Insert it straight all the way.

② **Insert the power plug of Speed Wi-Fi HOME AC adapter into an AC 100V outlet**

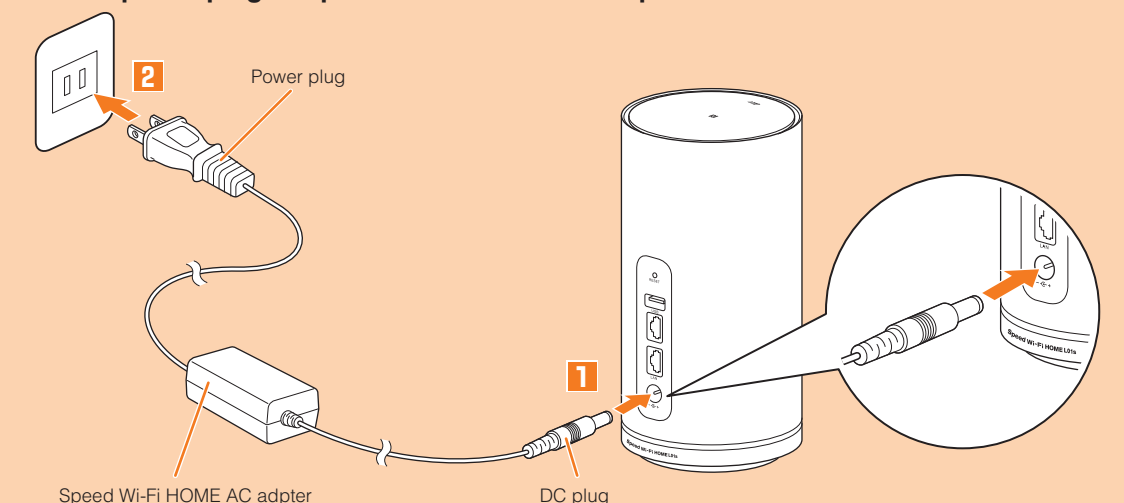

■ **Turning the power off**

① **Remove the power plug of Speed Wi-Fi HOME AC adapter from the outlet**

② **Pull out the DC plug of Speed Wi-Fi HOME AC adapter straight from the product**

