

Qua tab 01

Preface

Thank you for buying the "Qua tab 01" (simply called the "product" or "main unit" from here on).
Before use, please read the "Setting Guide", "Notes on Usage", or "Basic Manual" (This Manual) for proper usage.

List of Packaged Items

Before your start using the product, make sure that you have all the following packaged with the product.



memo

- Purchase a specified charger (sold separately).
- The illustrations in the manual are used only for explaining. They may differ from the actual product.
- The battery is built into the product.

About Operating Instructions

"Basic Manual" (This manual)/"Setting Guide"

Handles only basic operations for main features.
For detailed descriptions on various functions, refer to the "Instruction Manual application" (Japanese) installed on the product or "取扱説明書 詳細版 (Full Instruction Manual)" (Japanese) available on the au homepage: <http://www.au.kddi.com/english/support>
<http://www.au.kddi.com/support/mobile/guide/manual/>

"Instruction Manual Application" (Japanese/English)

You can use the "Instruction Manual application" (Japanese) on the product to confirm detailed operational procedures.
Certain functions can be directly activated from the application screens on which their operations are described.
Home screen → [Apps] → [取扱説明書 (Instruction Manual)]
Also, you can use the "Instruction Manual application" (English version) on the product to check operational procedures.
Home screen → [Apps] → [Basic Manual]

Downloading Manuals

You can download the English version of the Basic Manual from the au website.
Download URL:
<http://www.au.kddi.com/english/support/manual/>

When Using the Product

- Before using the product, be sure to read the "Notes on Usage" for proper usage.
- Before you assume that the product is malfunctioning, check for possible remedies in the following au/Customer Support site of au homepage: <http://www.au.kddi.com/english/support>
- During communication, maintain a 1.5-cm separation from yourself with no metal (parts) located in between.
- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in poor reception areas. Communication is sometimes interrupted if you move into a poor reception areas during communications.
- Since this product uses radio waves, the possibility of communication interception by third parties cannot be eliminated. (Although, the 4G (LTE/WiMAX 2+) system has highly secure confidential communication features.)
- This Product is designed for use in Japan only and cannot be used in any other country.
- Since this product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.
- IMEI information of the product is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of the product.
- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional or mistaken misoperation by the customer, or use under other unusual conditions outside the responsibility of the Company.
- The Company is not liable for any incidental damages (change/disappearance of described content, loss of business income, disruption of business, etc.) arising from use or inability to use the product.
- The Company is not liable for any damages arising from failure to observe the described content of this manual.
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.

- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or loss income resulting from recovery of these data.
- It is recommended you keep a copy of important data in your PC's hard disk, etc. Whatever the cause of fault or malfunction may be, the Company assumes no responsibility for alteration or loss of saved information.
- Contents saved in the product, such as contacts, mails and favorites, might be altered or lost in an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that Company assumes no responsibility for any damages or lost profits resulting from altered or lost contents.
- Note that content data (both charged or free content) saved with the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.
- The product uses liquid crystal for its display. The display response speed may become slow when the ambient temperature is low, which is due to the property of liquid crystal and not a malfunction. Display response speed will return to normal at room temperature.
- Although the display used on the product is made using high-precision technology, some pixels (dots) might be lit or out at all times. This is not a malfunction.
- You are recommended to store copies of individual data such as photos you took, videos and music on your PC by sending each file as mail attachment, etc. Note, however, that you may not be able to make copies of any copyrighted data even by the above-mentioned means.
- Do not discard the product together with regular trash. Please cooperate in the collection of the product when it is no longer needed to protect the environment and effectively use resources. Old product is collected at au shops and other places.
- "The Company" as appears in this manual refers to the following companies: Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY Manufactured by: KYOCERA Corporation

- **Note**
- Reproduction of the content of this manual in part or in whole is prohibited.
- The content of this manual is subject to change without notice.
- Every effort has been made in the preparation of this manual. Should you notice any unclear points, omissions, etc., feel free to contact us.


Tablet Etiquette

Use of the product is not allowed in the following places!

- Do not listen to music or watch videos while driving a car or motorbike, or riding a bicycle. Use while driving a car or motorbike is prohibited by law. (Use while riding a bicycle may also be punishable by law.) In addition, stay alert to the traffic around you even when walking. Surrounding sounds may not be heard clearly, and gazing at the screen might distract your attention causing a traffic accident. Be especially careful at railroad crossings, on a platform, and at pedestrian crossings.
- Use of tablets on board aircraft is restricted. Follow the instructions of each airline.
- **Consider people around you!**
- To prevent the notification tone, etc. from bothering other people, power off or set the notification tone not to sound at a movie theater, theater, museum, library, etc.
- In a city area, use in a place where you do not bother people walking.
- It is extremely dangerous to walk while looking at the screen. Do not operate a tablet while walking or by stopping suddenly.
- Move to a place where you do not disturb others while you are in shinkansen, a hotel lobby, etc.
- Be careful of sound leakage from earphones in trains or other places with many people around you.
- Ask permission if you take photos with your camera.
- There may be a person with a cardiac pacemaker nearby at a place filled with people such as in a crowded train. Set "Airplane mode" or turn off beforehand.
- When a medical institution has laid down designated areas where use of the product is prohibited or is not allowed to be brought in, abide by the instructions of that medical institution.

Notations Used in This Document

Note on Button Illustrations

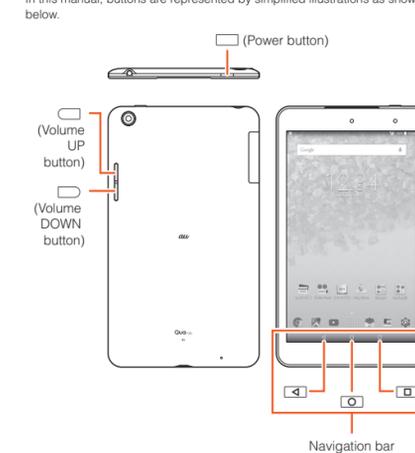

Description of Operations for Selecting Item/Icon/Button etc.


The notations used for operation procedures in this manual are as follows. Tapping is to select a key or icon displayed on the screen by lightly tapping it with your finger.

Description	Explanation
Home screen → [Settings] → [Wi-Fi]	Tap (Settings) at the bottom of the Home screen. Continue by tapping "Wi-Fi".
In sleep mode,	In sleep mode, press (Power button).

* Unless specified otherwise, steps describe operations using onscreen keys.

Notes on Illustrations/Screenshots


This manual gives screens and operations for the product with an au Nano IC Card 04 LE installed.
Screen illustrations shown in this manual may look different from the actual screens.
In some cases, minor details or a part of a screen may be omitted.

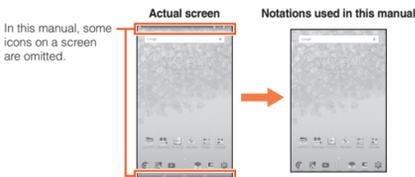


memo

- Operations from the vertical display are mainly described. Menu items/icons/buttons on a screen may be different from the ones in the horizontal display.
- Menu items/layers/icons may be different depending on functions, conditions, etc.
- In this manual, screenshots for body color "White" are provided as examples.
- In this manual, "microSD™ memory card", "microSDHC™ memory card" and "microSDXC™ memory card" are abbreviated as "microSD memory card" or "microSD".
- All of the indicated amounts exclude tax unless otherwise specified.

Names and Functions of Parts

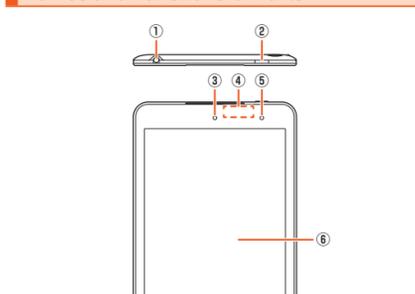

- 1 Earphone microphone terminal
- 2 Power button
Power ON/OFF, activate/deactivate sleep mode, etc.
- 3 In camera (lens)
- 4 Speaker
Notification tone or alarm sound can be heard from here.
- 5 Light sensor
Detects the ambient light level to adjust the display brightness.
- 6 Display (touch panel)
- 7 External connection terminal
Used for connecting Common AC Adapter 05 (sold separately), microUSB Cable 01 (sold separately), etc.
- 8 Out camera (lens)
- 9 Built-in Wi-Fi® antenna

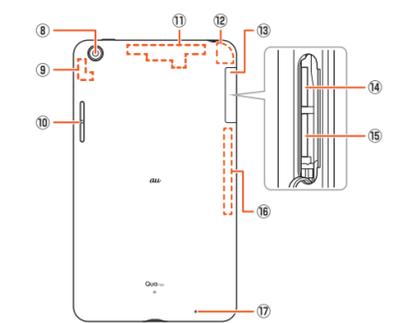


- 10 Volume UP/DOWN button
Adjusts sound volume.
- 11 Built-in main antenna
- 12 Built-in GPS antenna
- 13 Card slot cover
- 14 au Nano IC Card 04 LE slot
- 15 microSD memory card slot
- 16 Built-in sub antenna
- 17 Microphone
Used when recording voice, etc.

memo

- Do not place stickers, etc. over light sensor.
- The back cover of the product is not removal. Removing the back cover with force may cause damage or malfunction.
- The battery is built into the product and it is not user replaceable. For force shutdown and restarting, see "Force Shutdown and Restarting" (▶P.20).

au Nano IC Card 04 LE

 The au Nano IC Card 04 LE contains customer phone number and other information.
The product is compatible with au Nano IC Card 04 LE only. You cannot use the product with an IC card other than au Nano IC Card 04 LE.




memo

- Before attaching/removing au Nano IC Card 04 LE, be sure to remove a power plug of specified AC adapter etc. from the product.


Attaching the au Nano IC Card 04 LE

- 1 Turn the power off and open the card slot cover


2 Pull tray straight out by groove

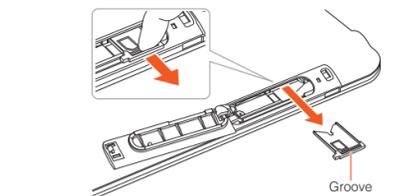

 3 Place the au Nano IC Card 04 LE on the tray, IC (metal) part up, then insert the tray with the au Nano IC Card 04 LE all the way in without bending, aligned with the rib on the right of the slot




4 Close the card slot cover

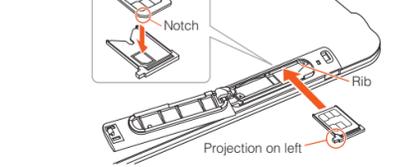


Removing the au Nano IC Card 04 LE

- 1 Turn the power off and open the card slot cover
- 2 Pull tray straight out by groove

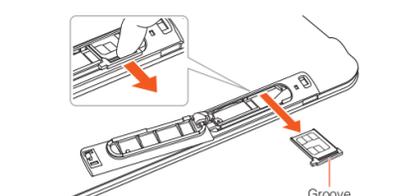

3 Remove the au Nano IC Card 04 LE, then insert the tray in the slot without bending, aligned with the rib on the right of the slot

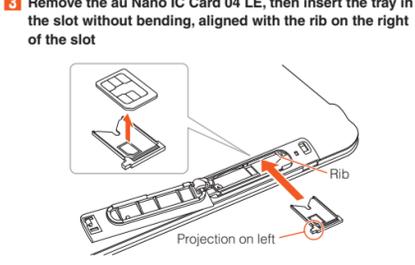


4 Close the card slot cover

Attaching/Removing a microSD Memory Card

Attaching a microSD Memory Card

- 1 Open the card slot cover
- 2 Confirm the direction of the microSD memory card and slowly insert it into the slot until it clicks
Insert a microSD memory card until you hear a click and confirm it is locked. Releasing the microSD memory card before it is locked may cause it to pop out.

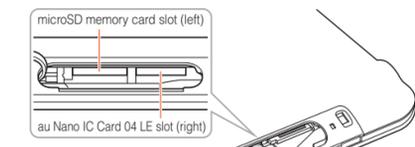


3 Close the card slot cover

- Insert a microSD memory card with the right side up in the appropriate direction. Inserting a microSD memory card forcefully into the slot could result in failure to remove the microSD memory card or damage to the microSD memory card.

Removing a microSD Memory Card

- 1 Home screen → [Settings] → [Storage] → [Unmount SD card] → [OK]
- 2 Open the card slot cover
- 3 Slowly push the microSD memory card toward the slot until it clicks
When a click sound is heard, pull your finger with the microSD memory card touched. Keep putting your finger on the microSD memory card until it comes out a little. Releasing the microSD memory card when pushed hard may cause it to pop out.

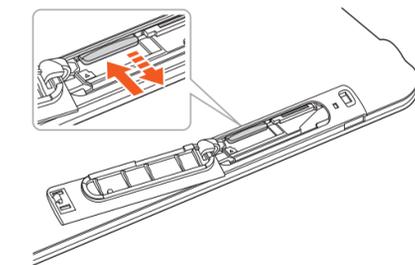

4 Slowly remove the microSD memory card

Slowly pull the microSD memory card straight out. Some microSD memory cards cannot be unlocked and do not come out smoothly. In such case, pull it out with your finger.

5 Close the card slot cover

memo

- Do not touch the terminal part of microSD memory card.
- Do not remove the microSD memory card forcefully. It may result in damage to the microSD memory card or the data loss.
- The microSD memory card may be warm after a long time use. It is normal.

Charging

When you purchase your product, the internal battery is not fully charged. Make sure to charge the product before use.


memo

- The product may become warm while charging, depending on the situation, but this is not abnormal.
- Charging while using camera etc. may take longer.
- When you operate the product with the specified charger (sold separately) connected, the product may repeat short-time charging/discharging resulting in short battery life.
- When temperature of environment or the product becomes extremely high or low, charging may be stopped. Try to charge the battery as far as possible at room temperature.
- Do not allow conductive foreign objects (metal fragments, pencil leads, etc.) to come into contact with or get inside the connection terminals.
- The magnetic field produced during charging may prevent the magnetic sensor from working properly.

Charging with a Specified AC Adapter (Sold Separately)

Charging with Common AC Adapter 05 (sold separately) is explained. For information on specified AC adapters (sold separately), see "Related Accessories" (▶P.32).

- 1 Check the orientation of the microUSB plug of Common AC Adapter 05 (sold separately) and insert it straight into the external connection terminal

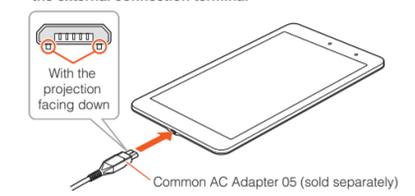

- 2 Insert the power plug of Common AC Adapter 05 (sold separately) into an outlet (100 VAC to 240 VAC)
When the battery power turns on, appears on the status bar.

2 Insert the power plug of Common AC Adapter 05 (sold separately) into an outlet (100 VAC to 240 VAC)

When the battery power turns on, appears on the status bar.



3 When charging ends, pull out the microUSB plug of Common AC Adapter 05 (sold separately) straight from the external connection terminal

When the battery power turns on, appears on the status bar.

4 Pull out the power plug of Common AC Adapter 05 (sold separately) from the outlet

memo

- Note that applying unnecessary force with the external connection terminal connected to the external device might cause damage.

Turning the Power On/Off

Turning the Power On

- 1 (Power button) (press and hold for at least 2 seconds)
The Start screen is displayed (▶P.21 "The Start Screen").
• For the first time the product turns ON, the initial settings such as "au Easy Setting" activate. Make the settings as required.

memo

- While logos are displayed after the power is on, initial settings for touch panel are in process. Do not touch the screen. The touch panel may not work properly.
- "au Easy Setting" can be set up later even though it is skipped the first time starting up the product.

Turning the Power Off

- 1 (Power button) (press and hold for at least 1 second)
- 2 [Power off]

Force Shutdown and Restarting

Force shutdown and restart the product when the screen freezes or the power cannot be turned off.

- 1 (Power button) (press and hold for at least 11 seconds)

memo

- If the product is forced shutdown and restarted, unsaved data will be erased. Do not force shutdown except when the product becomes inoperative.

Switching to English Display

You can switch the display from Japanese to English.

1 **Home screen** → **[設定 (Settings)]** → **[言語と入力 (Language & input)]** → **[言語 (Language)]** → **"English"**

The Start Screen

The Start screen is displayed when you turn the power on or cancel sleep mode.

Displaying the Home screen from the Start screen

After the Start screen is displayed, you can display the Home screen as follows.

1 **Swipe (flick)** ☞ ☞

- The Home screen is displayed (▶P.23). Or, the screen just before entering sleep mode is displayed.
- Swiping (flicking) ☞ ☞ activates camera.
- If ☞ ☞ is displayed at screen top, the Start screen "Security type" is set to "Pattern", "PIN", or "Password". Unlock the security feature to display the Home screen.
- If Smart Lock is set, tapping ☞ ☞ at screen top temporarily cancels Smart Lock, and the security feature you have set is enabled.
- If a description for the Home screen appears, read the information and tap "OK".

memo
☞ If "Security type" is "None", the Start screen is not displayed.
memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

Using Emergency Rapid Mail

Emergency Rapid Mail is a service that distributes Earthquake Early Warning or Tsunami Warning delivered from the meteorological bureau or Disaster and Evacuation Information delivered from the government or local public organization to all au terminals in specified areas simultaneously. When you purchase the product, "受信設定 (Receive options)" of the Emergency Rapid Mail is set to "受信する (Receive)". Reception setting of Tsunami Warning is available in the settings of Disaster and Evacuation Information.

When you receive Earthquake Early Warning, ensure your safety and take proper action according to the situation around you. When you receive a Tsunami Warning, draw away from sea coast immediately and evacuate to safe place such as upland or well-built high building.

1 **au災害対策 (au Disaster Countermeasure) menu** → **[緊急連絡メール (Emergency Rapid Mail)]**
Inbox appears.
Select a mail you want to view to check the detail.

memo
☞ The service is available only in Japan (it cannot be used overseas).
☞ No information fee or communication charge is required for receiving Emergency Rapid Mail.
☞ You cannot receive Emergency Rapid Mail when your tablet is turned off.
☞ Emergency Rapid Mail may not be received if you are in a place where signal does not reach even in the service area (e.g. in a tunnel, basement) or in a place with a poor reception.
☞ You cannot receive Emergency Rapid Mail that the reception is failed.
☞ A special warning tone sounds for reception of Emergency Rapid Mail. It is not possible to change the warning tone. * Reception of Earthquake Early Warning is notified by a special warning tone and voice ("地震です (Jishin-desu)" (An earthquake)).
memo
☞ Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
☞ Recycled parts that meet the Company's quality standards are sometimes used for repair.
☞ Collected au terminals by Replacement cell phone delivery service which you used before are recycled to terminals for replacement after repairs. Also replaced parts by au after-sales service are collected and recycled by KDDI. They are not returned to customers.
☞ Instances where the product has been changed, modified, or analyzed (including software modification or analysis (including rooting, etc.) reverse-engineered, reverse-compiled, or reverse-assembled) or has been repaired at a location other than an authorized repair location designated by the company may not be covered by warranty or may prevent the product from being accepted for repairs.

Downloading and Updating Software or the OS

Update files can be downloaded from the Internet web site into the product directly.

1 **Home screen** → **[Settings]** → **[About tablet]** → **[Software update]**

2 **[CHECK FOR UPDATE]**

From here on, follow the onscreen instructions.

memo

- Note that depending on your subscription contract, communication fees may be incurred when your tablet automatically searches for an available network.
- After a software or OS update, the product cannot be returned to the original version.

memo
☞ If "Security type" is "None", the Start screen is not displayed.
memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ If "Security type" is "None", the Start screen is not displayed.
memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ The service is available only in Japan (it cannot be used overseas).
☞ No information fee or communication charge is required for receiving Emergency Rapid Mail.
☞ You cannot receive Emergency Rapid Mail when your tablet is turned off.
☞ Emergency Rapid Mail may not be received if you are in a place where signal does not reach even in the service area (e.g. in a tunnel, basement) or in a place with a poor reception.
☞ You cannot receive Emergency Rapid Mail that the reception is failed.
☞ A special warning tone sounds for reception of Emergency Rapid Mail. It is not possible to change the warning tone. * Reception of Earthquake Early Warning is notified by a special warning tone and voice ("地震です (Jishin-desu)" (An earthquake)).
memo
☞ Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
☞ Recycled parts that meet the Company's quality standards are sometimes used for repair.
☞ Collected au terminals by Replacement cell phone delivery service which you used before are recycled to terminals for replacement after repairs. Also replaced parts by au after-sales service are collected and recycled by KDDI. They are not returned to customers.
☞ Instances where the product has been changed, modified, or analyzed (including software modification or analysis (including rooting, etc.) reverse-engineered, reverse-compiled, or reverse-assembled) or has been repaired at a location other than an authorized repair location designated by the company may not be covered by warranty or may prevent the product from being accepted for repairs.

memo
☞ The service is available only in Japan (it cannot be used overseas).
☞ No information fee or communication charge is required for receiving Emergency Rapid Mail.
☞ You cannot receive Emergency Rapid Mail when your tablet is turned off.
☞ Emergency Rapid Mail may not be received if you are in a place where signal does not reach even in the service area (e.g. in a tunnel, basement) or in a place with a poor reception.
☞ You cannot receive Emergency Rapid Mail that the reception is failed.
☞ A special warning tone sounds for reception of Emergency Rapid Mail. It is not possible to change the warning tone. * Reception of Earthquake Early Warning is notified by a special warning tone and voice ("地震です (Jishin-desu)" (An earthquake)).
memo
☞ Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
☞ Recycled parts that meet the Company's quality standards are sometimes used for repair.
☞ Collected au terminals by Replacement cell phone delivery service which you used before are recycled to terminals for replacement after repairs. Also replaced parts by au after-sales service are collected and recycled by KDDI. They are not returned to customers.
☞ Instances where the product has been changed, modified, or analyzed (including software modification or analysis (including rooting, etc.) reverse-engineered, reverse-compiled, or reverse-assembled) or has been repaired at a location other than an authorized repair location designated by the company may not be covered by warranty or may prevent the product from being accepted for repairs.

1 **Home screen** → **[Settings]** → **[About tablet]** → **[Software update]**

2 **[CHECK FOR UPDATE]**
From here on, follow the onscreen instructions.

memo
☞ Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
☞ Recycled parts that meet the Company's quality standards are sometimes used for repair.
☞ Collected au terminals by Replacement cell phone delivery service which you used before are recycled to terminals for replacement after repairs. Also replaced parts by au after-sales service are collected and recycled by KDDI. They are not returned to customers.
☞ Instances where the product has been changed, modified, or analyzed (including software modification or analysis (including rooting, etc.) reverse-engineered, reverse-compiled, or reverse-assembled) or has been repaired at a location other than an authorized repair location designated by the company may not be covered by warranty or may prevent the product from being accepted for repairs.

1 **Home screen** → **[Settings]** → **[About tablet]** → **[Software update]**

Using the Home Screen

The Home screen consists of multiple screens. Slide/flick right or left to switch them.

Also, tap ☐ to go to the Home screen any time.

memo
☞ If "Security type" is "None", the Start screen is not displayed.
memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

While screen backlight is turned on, press ☐ (Power button) or leave the product for a certain period of time without any operations to turn off the screen temporarily and the product goes into sleep mode. To cancel sleep mode, operate the following steps.

1 **In sleep mode**, ☐ (**Power button**)
The Start screen is displayed (▶P.21 "The Start Screen").

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

☞ Information from someplace other than your current location may be received.

☞ KDDI is not liable for damages suffered by customers resulting from the service's information, lack or delay in the information caused by transmission or system breakdowns, or other events that are outside the responsibility of KDDI.

☞ Refer to the Japan Meteorological Agency web page for details about distribution of Earthquake Early Warning.
<http://www.jma.go.jp/>

Earthquake Early Warning

☞ Earthquake Early Warning is sent to areas where strong quakes (over 4 degrees) are expected when the earthquake whose the maximum seismic intensity 5 lower is anticipated occurs.

☞ Immediately after an earthquake occurs, quakes (P waves and initial tremors) near the epicenter are detected and position, scale, and expected strength are automatically calculated and notification is sent as soon as possible within a few seconds to tens of seconds before the strong quakes (S waves and major tremors) caused by the earthquake start.

☞ Earthquake Early Warning may not arrive before strong tremors in arrears near the epicenter.

☞ This delivery system is different from Earthquake Early Warning provided through TV, radio, or other communication procedures, which means that the time the Earthquake Early Warning arrives may vary.

Tsunami Warning

☞ Tsunami Warning is a notification delivered from the meteorological bureau (major tidal wave, seismic sea wave) to the area including target coast.

Disaster and Evacuation Information

☞ Disaster and Evacuation Information is a service that distributes bulletins concerning residents' safety including evacuation advisories, evacuation orders and other warnings issued by the national and local governments.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

1 **Home screen** → **[Settings]** → **[About tablet]** → **[Software update]**

2 **[CHECK FOR UPDATE]**
From here on, follow the onscreen instructions.

memo
☞ Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
☞ Recycled parts that meet the Company's quality standards are sometimes used for repair.
☞ Collected au terminals by Replacement cell phone delivery service which you used before are recycled to terminals for replacement after repairs. Also replaced parts by au after-sales service are collected and recycled by KDDI. They are not returned to customers.
☞ Instances where the product has been changed, modified, or analyzed (including software modification or analysis (including rooting, etc.) reverse-engineered, reverse-compiled, or reverse-assembled) or has been repaired at a location other than an authorized repair location designated by the company may not be covered by warranty or may prevent the product from being accepted for repairs.

Using the Apps List

A list of installed apps is displayed.

1 **Home screen** → **[Apps]**
The Apps list appears.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

1 **Home screen** → **[Apps]**
The Apps list appears.

2 **[CHECK FOR UPDATE]**
From here on, follow the onscreen instructions.

Icon	Description
☐	New mail message (SMS)
☐	New mail message (E-mail)
☐	New mail message (Gmail)
☐	New Emergency Rapid Mail

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

1 **Home screen** → **[Settings]** → **[About tablet]** → **[Software update]**

2 **[CHECK FOR UPDATE]**
From here on, follow the onscreen instructions.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

1 **Home screen** → **[Settings]** → **[About tablet]** → **[Software update]**

2 **[CHECK FOR UPDATE]**
From here on, follow the onscreen instructions.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

Icon	Description
☐	Snoozed alarm/stopped alarm (still set)
☐	New calendar event notification
☐	Music playing
☐	Available tablet memory low
☐	Installation completed
☐	Update available
☐	New OS update or software update

Icon	Description
☐	Time
☐ ☐ ☐	Battery level Enable/Disable frequently-used functions.
☐ ☐ ☐	Signal strength/Signal condition (LTE/WiMAX 2+) level 4/level 4/out of range/In communication LTE/WiMAX 2+ available
☐	Airplane mode is set
☐	au Nano IC Card 04 LE uninserted
☐ ☐	Wi-Fi® signal strength level 4/level 0
☐	Alarm set
☐	Notification tone does not sound
☐ ☐	Notification tone sounds only for important notifications
☐ ☐	Bluetooth® in use standby/connected

* "4G" is displayed for both networks. According to the signal congestion etc., the product is connected to the less congested network.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from intense access to this service or equipment failure or damages caused by registered well-being information.

memo
☞ Do not touch the screen when pressing ☐ (Power button) and displaying the screen. The touch panel may not work properly.
memo
☞ To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.
☞ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi®) connection.
☞

Bluetooth® function	Compatible version	Bluetooth® standard Ver.4.1 compatible ²
	Output	Bluetooth® standard Class 1
	Communication range ³	Within 10 m with no obstacles in the range
	Supported Bluetooth profile ⁴	Bluetooth LE GATT/SPP/A2DP/AVRCP/HSP/OPP/PBAP/HID/PAN/PAN NAP/PAN USER/HOGP/MAP
	Frequency bands	2,402 - 2,480MHz

- ¹ Since the storage is shared by data and applications, storage space may be reduced depending on the usage of applications.
- ² It is confirmed that the product and all Bluetooth® devices are compliant with Bluetooth® standards designated by Bluetooth SIG, and they are authenticated. However, procedures may differ or data transfer may not be possible depending on the device's characteristics or specifications.
- ³ Changes according to objects obstructing devices and signal reception.
- ⁴ Specifications provided in Bluetooth® standards for making communication between Bluetooth®-compatible devices in accordance with their intended use.

 **memo**

○ The continuous standby time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings.

For inquiries, call:

Customer Service Center

For general information, charges, and operation assistance (toll free)

Business hours: 9:00 to 20:00 (7 days a week)

From fixed-line phones:

 0077-7-111

From au cell phones:

157 area code not required

Pressing "zero" will connect you to an operator, after calling "157" on your au cellphone.

For service cancellation procedure in case of loss or theft (toll free)

Business hours: 24 hours (7 days a week)

From fixed-line phones:

 0077-7-113

From au cell phones:

113 area code not required

In case above numbers are not available, call toll-free:

 0120-977-033

(except Okinawa)

 0120-977-699

(Okinawa)

Keitai Guarantee Service Center

For loss, theft or damage (toll free)

Business hours: 9:00 to 21:00 (7 days a week)

From fixed-line phones/au cell phones:

 0120-925-919



やめましょう、歩きスマホ。



キケン！水ぬれ充電



モバイル・リサイクル・ネットワーク

Call phone and FHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♻️ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Sold by: KDDI CORPORATION,
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: KYOCERA Corporation