

Qua tab PX

Basic Manual

For detailed operation methods, refer to "Basic Manual" application installed on the product.

May 2016, 1st Edition MBM65345002(1.0)

For inquiries, call:

Customer Service Center
 For general, charge, operations (toll free)
 Business hours 9:00 - 20:00 (7 days a week)
 From fixed-line phones: 0077-7-111
 From au cell phones: 157
area code not required
 PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR AFTER CALLING 157 ON YOUR AU CELL PHONE

For service canceling procedure in case of loss or theft (toll free)
 Business hours 24-hour (7 days a week)
 From fixed-line phones: 0077-7-113
 From au cell phones: 113
area code not required

In case above numbers are not available,
 0120-977-033 (except Okinawa)
 0120-977-699 (Okinawa)

Keitai Guarantee Service Center
 For loss, theft or damage (toll free)
 Business hours 9:00 - 20:00 (7 days a week)
 From fixed-line phones/au cell phones, 0120-925-919

やめましょう、歩きスマホ。
 It is very dangerous to charge the product in a wet state, this could cause abnormal heat generation or a burnout.

Cell phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♻️ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY
 Imported by: LG Electronics Japan Inc.
 Manufactured by: LG Electronics Inc.

Preface

Thank you for purchasing the "Qua tab PX" (simply called the "product" from here on). Before using the product, be sure to read the supplied "Setting Guide", "Notes on Usage", "Basic Manual" (this manual) or "User Guide 取扱説明書 詳細版 (Full Instruction Manual)" (Japanese) available on the au homepage to ensure correct use. After you have finished reading this manual and the printed manuals supplied, be sure to store them in safe places so that you can retrieve them whenever needed. If you lose the printed manuals (supplied), contact an au shop or Customer Service Center.

List of Packaged Items

Before your start using the product, make sure that you have all the following packaged with the product.

- Main unit
- 設定ガイド (Setting Guide) (Japanese)
- ご利用にあつての注意事項 (Notes on Usage) (Japanese)
- 取扱説明書 (Basic Manual) (Japanese)
- 保証書 (Warranty) (Japanese)
- AC adapter

The following items are not included in the package.

- microUSB cable
- microSD memory card
- Earphone

memo

- Purchase a specified charger (sold separately).
- The battery is built into the product.
- The illustrations in the manual are used only for explaining. They may differ from the actual product.

About Operating Instructions

●取扱説明書 (Basic Manual) (Japanese)

Handles only basic operations for main features. For detailed descriptions on various functions, refer to the "Basic Manual application" installed on the product or "User Guide 取扱説明書 詳細版 (Full Instruction Manual)" (Japanese) available on the au homepage.
<http://www.au.kddi.com/support/mobile/guide/manual/>

- All company names and product names in this manual are either trademarks or registered trademarks. The ™, ® marks may be omitted in this manual.

Basic Manual application

You can use the "Basic Manual application" on the product to confirm detailed operational procedures. Certain functions can be directly activated from the application screens on which their operations are described.

- 1 On the Home screen ▶ [au Supports] ▶ [Basic Manual]
- When you activate for the first time, follow the onscreen instructions to download and install the application.

 
Downloading Manuals

You can download the English version of the Basic Manual from the au website (available from approximately one month after the product is released).

You can find "Basic Manual" (English excerpts from Instruction Manual) on au homepage. Download URL: <http://www.au.kddi.com/support/mobile/guide/manual/>
 * You can use the English version of the manual from the Basic Manual application.

Regarding Notations Used in This Manual

■ Key/button indications
 In this manual, keys/buttons are represented by simplified illustrations as shown below.

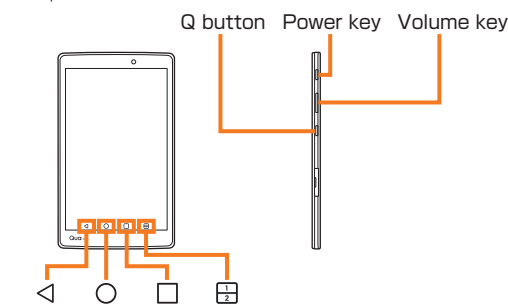

■ Description of operations for selecting item/icon/button etc.


The notations used for operation procedures in this manual are as follows. Tap means to lightly touch and release the button or icon shown on the display to select it.

Description	Explanation
On the Home screen ▶ [▶] ▶ [:]	Tap [▶] (Chrome) on the bottom of Home screen. And tap [:].

- 1 -

Description	Explanation
On the Home screen ▶ [▶] ▶ [:]	Tap [▶] on the bottom of Home screen.

 ■ Illustrations and screen displays
 Illustrations and screens shown in this manual may look different from the actual product or screen. In some cases, minor details or a part of a screen may be omitted.

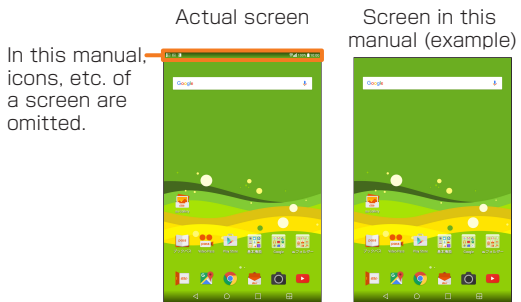

In this manual, icons, etc. of a screen are omitted.

 
- 6 -

memo

- In this manual, screenshots for body color "White" are provided as examples.
- In this manual, except as specified, the descriptions of operation procedures are those with keys/buttons.
- Descriptions in this manual are based on the operations of portrait screen. Menu items/icons/buttons on a screen may be different from the ones in the horizontal display.
- In this manual, operation procedures are described based on au Basic Home. When the home application is changed by "Select Home" etc., operation procedures may be different.
- Items, title levels, and icons in this manual may look different based on different functions you use or different conditions, etc.
- In this manual, "microSD™ memory card", "microSDHC™ memory card" or "microSDXC™ memory card" is called "microSD memory card" or "microSD" for short.
- All of the indicated amounts exclude tax unless otherwise specified.

- 7 -

Names and Functions of Parts

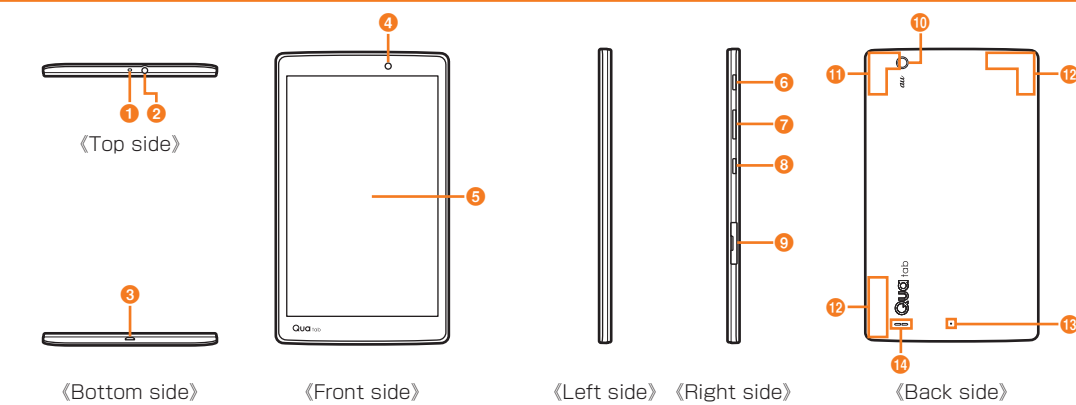

- 1 Microphone
- 2 Earphone jack
- 3 External connection terminal
- 4 Outward-facing camera (lens)
- 5 Display (Touch panel)
- 6 Power key
- 7 Volume key (UP/DOWN)
- 8 Q button
Activates a set application.
- 9 Tray
Stores the au Nano IC Card O4 LE/microSD memory card.
- 10 Outward-facing camera (lens)
- 11 Built-in antenna (Wi-Fi®, Bluetooth®, GPS)*
- 12 Built-in antenna (Internet)*
- 13 Vent hole
Combines inner and external pressures.
- 14 Speaker

* Do not cover the built-in antenna with your hand or put stickers etc. Data communication quality becomes worse.

 
- 8 -

- 9 -

au Nano IC Card O4 LE

The au Nano IC Card O4 LE contains a phone number and other information.

- The product is compatible with au Nano IC Card O4 LE.

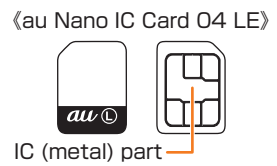

memo

- Note the following points, which may cause malfunction or damage, when handling the au Nano IC Card O4 LE.
 - Do not touch the IC (metal) part of the au Nano IC Card O4 LE.
 - Insert in the correct direction.
 - Do not use force to attach or remove the IC card.
- When the au Nano IC Card O4 LE is not attached properly or the au Nano IC Card O4 LE is abnormal, an error message appears.
- Do not lose the au Nano IC Card O4 LE after it has been removed.
- Do not insert the au Nano IC Card O4 LE with a conversion adapter. Doing so may cause a fault.

- 11 -

■ When au Nano IC Card O4 LE is not inserted
 When the au Nano IC Card O4 LE is not inserted, the following operations are not available.

- Receiving/sending and initial settings of e-mail (@ezweb.ne.jp)
 - Receiving/sending SMS
 - Checking the phone number and mail address of this product.
 - Setting up SIM card lock
- Besides the above, some functions requiring your phone number might not be available.

■ Restriction settings with PIN
 You can set the product to restrict the use of the product by others through changing the PIN code or locking the SIM card in order to protect your important private information while you are using your au Nano IC Card O4 LE.

 
Attaching/Removing au Nano IC Card O4 LE

Attaching au Nano IC Card O4 LE

Before attaching the au Nano IC Card O4 LE, make sure to turn the product off.

- 1 Hook the groove of the tray with your fingernail and pull it out straight to remove the tray from the main unit.

- 2 Put the au Nano IC Card O4 LE into the tray with the IC (metal) part downwards, insert the tray into the main unit, and then push it firmly all the way straight into the slot.

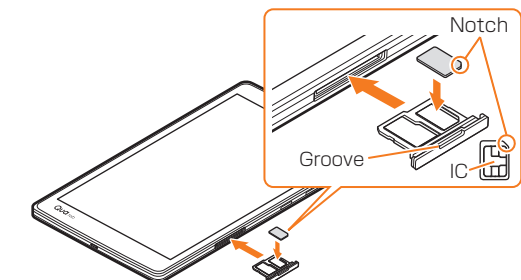


- 12 -

Removing au Nano IC Card O4 LE

Before removing the au Nano IC Card O4 LE, make sure to turn the product off.

 - 1 Hook the groove of the tray with your fingernail and pull it out straight to remove the tray from the main unit.
- 2 Remove the au Nano IC Card O4 LE, insert the tray into the main unit, and then push it firmly all the way straight into the slot.

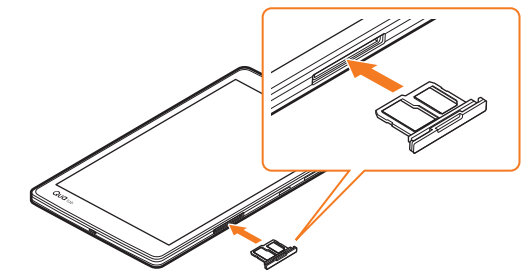

- 13 -

Charging

When you purchase your tablet, the internal battery is not fully charged. Charge the internal battery when you use it for the first time or when its battery is not enough.

memo

- While charging, the product and its internal battery might become hot (when activating camera or communicating data while charging, the internal battery becomes hot).
- It may take longer to charge the internal battery when you use camera function, etc. while charging the battery.
- Operating with the specified charging equipment (sold separately) being connected might cause short-time charge/discharge repeatedly. Life of the internal battery becomes shorter when you repeatedly charge it frequently.

 


- 14 -

Charging with the Specified AC Adapter (Sold Separately)

Describe how to charge by using the common AC adapter O5 (sold separately). For details on the specified AC adapter (sold separately), refer to "Introduction of Related Accessories".

- 1 Insert the microUSB connector of the common AC adapter O5 (sold separately) straight into the external connection terminal of the product

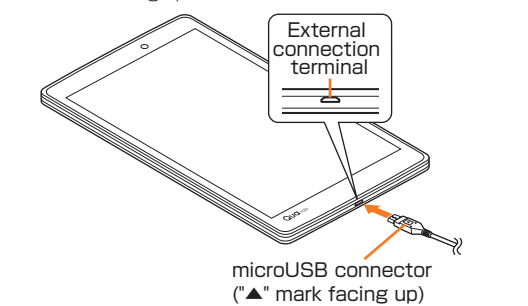

- 2 Insert the power plug of the common AC adapter O5 (sold separately) into a 100 V AC power outlet

- 15 -

On the status bar of the screen top, [▶] is displayed to show the charging is starting. When the charging is finished, [▶] is displayed.

- 3 When charging is completed, remove the microUSB connector of the common AC adapter O5 (sold separately) straight from the external connection terminal of the product

- 4 Remove the power plug of the common AC adapter O5 (sold separately) from power outlet

memo

When [▶] is not displayed

- Wait until [▶] is displayed on the status bar of the top screen. Bad connection is assumed if it does not appear after a while. Check if Common AC adapter O5 (sold separately) is securely connected. If it still does not appear, stop charging and contact an au shop or a Keitai Guarantee Service Center.

 


USB port of a PC microUSB cable (sold separately)

- 17 -

Charging with a PC

- 1 Insert the microUSB connector of the microUSB cable (sold separately) directly into the external connection terminal of the product
 - Insert the microUSB connector straight with the "B" mark facing up.
- 2 Insert the microUSB connector of the microUSB cable (sold separately) straight into the USB port of the PC

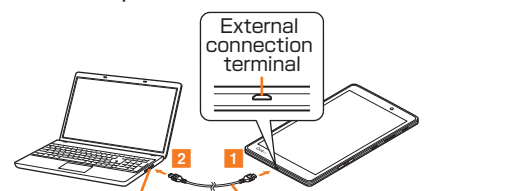

memo

- Although charging with the power of the product on is available, it takes longer.
- It may take longer to charge with USB than the specified AC adapter (sold separately).
- When the "Start new hardware search wizard" window appears, select "Cancel".

- 18 -

Turning the Power On/Off

Turning the Power On

- 1 Power key (Press and hold for more than 2 seconds)
 The lock screen appears.
 The lock screen appears. Swipe the screen to unlock.

Turning the Power Off

- 1 Power key (Press and hold for more than 2 seconds)
- 2 [Power off] ▶ [POWER OFF]

 


- 19 -

Lock Screen

This screen is displayed when turning the power on or sleep mode is canceled.

On the Lock screen, you can check the date and time, and notification information as well as use application shortcuts.

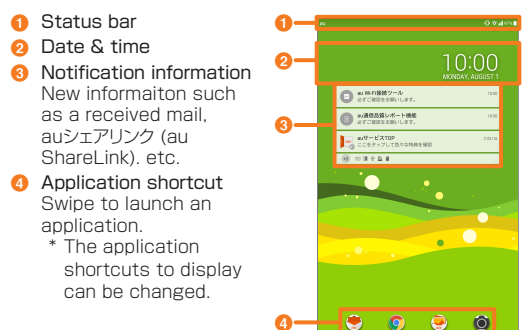

Unlocking the Lock screen

- 1 Swipe on the lock screen
 The Home screen appears.
 - The unlock method differs depending on the screen lock settings.

- 20 -

Setting Application Authority

When activating the applications/functions that access the functions or information of the product for the first time, the confirmation screen appears to request the permission for the access authority. When the confirmation screen appears, confirm the content and tap "DENY" or "ALLOW". Example: To activate Photo

- 1 On the Home screen ▶ [Google] ▶ [Photos] ▶ [ALLOW]
 The application launches.



- 21 -

memo

- If the application authority is not allowed, applications/functions may not be activated or using functions may be restricted.
- To change the authority setting, on the Home screen ▶ [基本機能 (Basic functions)] ▶ [Settings] ▶ [Apps] ▶ select the application to be changed ▶ [Permissions] ▶ [▶]/[▶].
- The explanation screen may be displayed depending on the application/function. Also, the confirmation screen may be displayed several times or the display may be different. Carefully check the displayed content and follow the onscreen instructions.
- In this manual, description of the confirmation screens may be omitted.

- 22 -

memo

Replacement mobile phone delivery service

• When you have trouble with your au mobile device, replacement mobile device (same model, same color*) is delivered by calling to. Return your damaged mobile device within 14 days after replacement mobile device is delivered.

* If the provision of same model and same color is difficult, specified model and colored replacement mobile device will be offered.

• Available up to twice in a year from the day you use this service as a start day. If you do not use this service in the past year for the subscription to this service, it will be 1st time and if you use, it will be the 2nd.

* For details, refer to au homepage.

Holding over and repair

• Damages and malfunctions intentionally caused by the customer as well as those due to modification (e.g. disassembly, change of parts, painting, etc.) by the customer are not covered by this service.

• You cannot receive a refund for replacement of the outer casing due to stains, scratches, paint removal, etc. on the outer casing.

• When the service is used and au IC Card is reissued due to theft, loss, etc., 1,900 yen is required for reissuing au IC Card.

- 47 -

SIM Unlock

The product supports SIM unlock. By unlocking SIM lock, you can use non-au-SIM cards.

• SIM unlock service is provided at the au homepage and au shops.

• When using non-au SIM card, some services, functions, etc. may be unavailable. The Company is not liable for any operations.

• To operate SIM unlock, on the Home screen ► [基本機能 (Basic functions)] ► [Settings] ► [About tablet] ► [SIM card]

• For details, refer to au homepage.
<https://cs.kddi.com/support/simcard/>

- 48 -

Main Specifications

Display	Approx. 8.0 inches, Approx. 16.77 million colors, IPS liquid crystal	
	1920 x 1200 (WUXGA)	
Weight	Approx. 310g (including internal battery)	
Size (W x H x D)	Approx. 124 x 211 x 7.8 mm	
CPU	MSM8952 (1.5GHz x 4, 1.2GHz x 4)	
Internal memory (Storage/RAM)	Storage: 16GB, RAM: 2GB	
Continuous stand-by time*	Approx. 800 hours	
Continuous tethering time	Approx. 730 minutes	
Number of concurrent connections with tethering	13 devices (Wi-Fi® tethering: 8, Bluetooth® tethering: 4 and USB tethering: 1)	
Charging time	AC adapter	Approx. 150 minutes (When using Common AC adapter 05 (sold separately))
	DC adapter	Approx. 650 minutes (When using Common DC adapter 03 (sold separately))

* Continuous standby times are measurements in a static state.

- 49 -

Compatible Networks	IEEE802.11 a/b/g/n/ac-compliant
Frequency bands	2.4 GHz/5 GHz

■ Wireless LAN (Wi-Fi®)

Compatible Networks	Bluetooth® standard Ver.4.2 BLE
Output	Bluetooth® standard Power Class 1

Communication range ¹	Within 10 m with no obstacles in the range
Supported Bluetooth profile ²	GATT, Android Bluetooth Low Energy Improvements, A2DP (Advanced Audio Distribution Profile), AVRCP (Audio/Video Remote Control Profile), HDP (Health Device Profile), HID (Human Interface Device Profile), HSP (Headset Profile), OPP (Object Push Profile), PAN (Personal Area Networking Profile), PAN NAP, PAN U, SPP (Serial Port Profile), apt-X, Bluetooth SSP, DI (Device ID), GAVDP (Generic Audio/Video Distribution), HOGP (HID over GATT Profile) ³ , ScPP (Scan Parameters Profile)

- 50 -

Frequency bands	2.4 GHz band
-----------------	--------------

*1 Changes according to objects obstructing devices and signal reception.

*2 Specifications provided in Bluetooth® standards for making communication between Bluetooth®-compatible devices in accordance with their intended use.

*3 A profile compatible with Bluetooth® standard Ver.4.0.

memo

• The continuous standby time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings.

■ Outward-facing camera

Image pickup device	CMOS
Number of effective pixels	Approx. 5 million pixels

■ Inward-facing camera

Image pickup device	CMOS
Number of effective pixels	Approx. 5 million pixels

- 51 -