

## When Using the Product

Before using the product, be sure to read the "Notes on Usage" (this manual) available on the au homepage to ensure correct use. Before you assume that the product is malfunctioning, perform "Malfunction reception".

On the Home screen ► [au Supports] ► [故障受付 (Malfunction reception)] ► [トラブル診断 (Troubleshooting diagnosis)] Alternatively, check for possible remedies in "Troubleshooting diagnosis" on the au Customer Support page of the au website. <http://cs.kddi.com/support/komatta/kosho/trouble/>

- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in poor reception areas. Communication is sometimes interrupted if you move into a poor reception areas during communications.
- Since this product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated (though LTE/WiMAX 2+ system has highly secure confidential communication features).
- This Product is designed for use in Japan only and cannot be used in any other country.
- Since this product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.
- IMEI information of the product is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of the product.
- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional or mistaken misoperation by the customer, or use under other unusual conditions outside the responsibility of the Company.

- The Company is not liable for any incidental damages (change/disappearance of described content, loss of business income, disruption of business, etc.) arising from loss or inability to use the product.
- The Company is not liable for any damages arising from failure to observe the described content of the "Basic Manual" or "Notes on Usage" (this manual).
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.
- It is recommended you keep a copy of important data on your PC's hard disk, etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.
- Contents saved in the product, such as contacts, mails and favorites, might be altered or lost in an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that Company assumes no responsibility for any damages or lost profits resulting from altered or lost contents.
- Note that contents (both charged or free content) saved with the product cannot be returned to the customer when it is replaced for repair of a fault, for example.
- The product uses liquid crystal for its display. The display response speed may become slow when the ambient temperature is low, which is due to the property of liquid crystal and not a malfunction. The display response speed will return to normal at room temperature.
- Although the display used on the product is made using high-precision technology, some pixels (dots) might be lit or out at all times. Note that this is not a malfunction.
- You are recommended to store copies of individual data such as

photos you took, videos and music on your PC by sending each file as mail attachment, etc. Note, however, that you may not be able to make copies of any copyrighted data even by the above mentioned means.

- Do not discard this product together with regular trash. Please cooperate in the collection of the product (including optional accessories) when it is no longer needed to protect the environment and effectively use resources. Old product are collected at au shops and other places.

- "The Company" as appears in this manual refers to the following companies:  
Sold by : KDDI CORPORATION  
OKINAWA CELLULAR TELEPHONE COMPANY  
Imported by : LG Electronics Japan, Inc.  
Manufactured by : LG Electronics Inc.

memo
<ul style="list-style-type: none"> <li>Reproduction of the content of this manual in part or in whole is prohibited.</li> <li>The content of this manual is subject to change without notice.</li> <li>Every effort has been made in the preparation of this manual. Should you notice any unclear points, omissions, etc., feel free to contact us.</li> </ul>

October 2016, 1st Edition MBM65756002(1.0)

- 1 -

## ⚠ WARNING

-  **Do not drop, trample, or throw the product or give a strong force or vibration to it.**  
Don't May cause fire, burns, injuries, or electric shock.

-  **Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the external connection terminal and prevent dust from getting inside.**  
Don't May cause fire, burns, injuries, or electric shock.

-  **Do not cover or wrap the product with a blanket, etc. while using or charging.**  
Don't May cause fire or burns.

-  **If charging is not complete after the specified charging time has passed, stop charging.**  
Do May cause fire, burns, or injuries due to overcharge.

-  **Make sure to turn off the product or stop charging before you get close to places such as a gas station where a flammable gas or dust can be generated.**  
Do May cause the gas to ignite or fire.

-  **If the product gives off a strange smell, noise, smoke, or overheats or becomes discolored or deformed during use, charge, or storage, perform the following operations.**  
Do
  - Remove the power plug from the outlet or cigarette lighter socket.
  - Turn the product OFF.
 Not doing so may cause fire, burns, injuries, or electric shock.

- 7 -

-  **To use the product in car, check with the automobile manufacturer or dealer to determine how vehicle devices are affected by radio waves before using.**  
Do  
In rare cases, using the product in some vehicle models can cause the vehicle's electronic equipment to malfunction. In that case, stop using the product immediately.

-  **The use of the product may cause itching, rashes, eczema, or other symptoms depending on the user's physical condition. If you develop skin problems, stop using the product immediately, and see a doctor.**  
Do For materials of parts →P. 21

-  **Make sure that there is no adhered metal pieces (cutter blade, staples, etc.) as the speaker part of the product generate magnetism.**  
Do May cause injuries, etc. due to adhered objects.

-  **When watching the display screen, keep a certain distance from the display in a fully bright place.**  
Do If watching the display in the dark or watching too close, may reduce visual acuity.

### ■ Internal battery

## ⚠ DANGER

-  **If materials inside the internal battery enters your eyes or mouth, immediately flush your eyes or mouth with clean water and see a doctor right away.**  
Do May cause loss of sight or poor physical condition due to the influence of the fluid, etc. inside the internal battery.

- 14 -

## ⚠ CAUTION

-  **Do not use the damaged product.**  
Don't May cause fire, burns, or injuries.

-  **Do not leave on unstable places, such as wobbly tables or objects that are on an angle. Be particularly careful when the device has the vibration function turned on.**  
Don't May cause the device to fall and lead to injury.

-  **Do not store the product in extremely humid, dusty or hot areas.**  
Don't May cause fire, burns, or electric shock.  
For the waterproof and dustproof functions, refer to the following.  
→P. 30 "Notes on waterproof and dustproof properties"

-  **When children use the product, do not let them use incorrectly without instruction by an adult for proper use.**  
Don't May cause injuries.

-  **Do not store the product within reach of small children.**  
Don't May cause small children to accidentally swallow the product or cause injuries and electric shock.

- 8 -

-  **If the internal battery leaks or gives off a strange smell, immediately stop using and remove it from the vicinity of open flames.**  
Do The leaked fluid may catch fire and may cause ignition or explosion.

## ⚠ CAUTION

-  **If the fluid etc. leaks out from the internal battery, do not let the fluid contact with the skin on your face or hands or clothes.**  
Don't May cause loss of sight or skin problems.

-  **If the fluid etc. enters your eyes or mouth, or contacts skin or clothes, immediately flush the contacted area with clean water.**  
Do If the fluid etc. enters your eyes or mouth, immediately see a doctor after flushing.

### ■ Charging equipment

## ⚠ WARNING

-  **Do not use the specified charger (sold separately) cable if it is damaged.**  
Don't May cause fire, burns, or electric shock.

-  **Do not use the specified charger (sold separately) in a bathroom or other highly humid area.**  
Don't May cause fire, burns, or electric shock.

-  **Always use the DC adapter with a negative-ground vehicle. Do not plug it into a positive-ground vehicle.**  
Don't May cause fire, burns, or electric shock.

- 15 -

-  **Be careful when using the product continuously for a long time or charging as it gets hot. Also, avoid touching the terminal for a long time by falling asleep unintentionally.**  
Do

While using the terminal for a long time such as using application, using data communication, watching videos, etc. or charging, the product, the internal battery, or the adapter may get hot. Directly touching a hot part for a long time, you may have redness, itching or rash on your skin, or it may result in low-temperature burns depending on your constitution and/or health condition.

### ■ Main unit

## ⚠ DANGER

-  **Do not throw the product into fire or apply heat.**  
Don't May cause fire, burns, or injury due to battery ignition, rupture, overheat, or leak.

-  **Do not apply excessive force such as sticking a nail into the product, hitting it with a hammer, or stepping on it.**  
Don't May cause fire, burns, or injury due to battery to ignite, rupture, overheat, or leak.

-  **If materials inside the internal battery enters your eyes, do not rub your eyes and immediately flush them with clean water and see a doctor right away.**  
Do May cause loss of sight due to the influence of the fluid, etc. inside the internal battery.

- 9 -

-  **If it starts to thunder, do not touch the specified charger (sold separately).**  
Don't May cause electric shock.

-  **Do not short the external connection terminal while it is connected to an outlet or the cigarette lighter socket. Do not touch the external connection terminal with a part of your body such as your hand or finger.**  
Don't May cause fire, burns, or electric shock.

-  **Do not place heavy objects on the specified charger (sold separately).**  
Don't May cause fire, burns, or electric shock.

-  **When connecting/disconnecting the specified charger (sold separately) to/from an outlet, do not contact a metal strap or other metal objects with it.**  
Don't May cause fire, burns, or electric shock.

-  **Do not apply force on the connected parts when the specified charger (sold separately) is connected to the product.**  
Don't May cause fire, burns, injuries, or electric shock.

-  **Do not touch the specified charger (sold separately) cord, USB cable, external connection terminal, or power plug with wet hands.**  
Do May cause fire, burns, or electric shock.

-  **Only use with the specified power source and voltage.**  
Do If incorrect voltage is used, it may cause fire, burns or electric shock.  
AC adapter : 100 V AC (Connect to an AC outlet for internal household use)  
DC adapter : 12 or 24 V DC (specific for negative-ground vehicle)

- 16 -

-  **If materials inside the display enters your eyes or mouth, immediately flush your eyes or mouth with clean water and see a doctor right away.**  
Do May cause loss of sight or poor physical condition due to the influence of the fluid, etc. inside the display.

## ⚠ CAUTION

-  **Do not watch the display that blinks repeatedly for a long time.**  
Don't May cause spasm, loss of consciousness, etc.

-  **Do not put foreign objects such as liquid like water (drinking water, perspiration, seawater, urine of pet animals, etc.), metal pieces or burnable things into au Nano IC Card O4 LE inside the product or microSD memory card slot. Insert the au Nano IC Card O4 LE or microSD memory card in the correct place and in correct direction.**  
Don't May cause fire, burns, injuries, or electric shock.

-  **Do not expose the camera lens to direct sunlight for an extended period.**  
Don't May cause fire, burns, injuries, etc. by the light-collecting mechanism of the lens.

-  **When on board an airplane, turn the power of the product off or put it in Airplane mode.**  
Do Follow the instructions of each airline, because there are different restrictions for using the product on an airplane. Not doing so may cause electronic equipment of airplanes to fail or malfunction.  
If you do a prohibited act such as using the product in an airplane, you will be punished according to law.

- 10 -

-  **When replacing the DC adapter's fuse, replace it only with a specified fuse.**  
Do Replacing with a different type of fuse might cause fire, burns, electric shock, etc. For specified fuses, see the instructions that come with the DC adapter.

-  **Wipe off any dust that attached to the power plug.**  
Do If the terminal is used with dust adhering to it, may cause fire, burns, or electric shock.

-  **When you connect the specified charger (sold separately) to an outlet or a cigarette lighter socket, firmly connect it to the outlet.**  
Do If not firmly inserted, may cause fire, burns, electric shock.

-  **When you disconnect the power plug from an outlet or a cigarette lighter socket, do not pull the specified charger (sold separately) cord with excessive force. Instead, hold the specified charger (sold separately) to disconnect.**  
Do If the charger (sold separately) cord is pulled on, this may result in scratches, may cause fire, burns, electric shock.

-  **When connecting/disconnecting the specified charger (sold separately) to/from the terminal, do not use force and connect/disconnect straight without bending.**  
Do If not properly unplugged or plugged in, may cause fire, burns, injuries, or electric shock.

-  **Immediately stop using the product if the external connection terminal is deformed. Do not use it by restoring the deformation.**  
Do May cause fire, burns, injuries, or electric shock due to short circuit of the charging terminal.

- 17 -

## Safety Precautions (Observe Strictly)

- Before using the product, thoroughly read these safety precautions for proper use. After reading, store the precautions in a safe place.**
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.**
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.**

	<b>DANGER</b>	This symbol indicates the potential and imminent danger of death or serious injury* <sup>1</sup> to a person if the product is handled incorrectly.
	<b>WARNING</b>	This symbol indicates the possibility of death or serious injury* <sup>1</sup> to a person if the product is handled incorrectly.
	<b>CAUTION</b>	This symbol indicates the possibility of minor injury* <sup>2</sup> to a person or physical damage* <sup>3</sup> if the product is handled incorrectly.

\*<sup>1</sup> Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long term hospital attendance as an outpatient.

\*<sup>2</sup> Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.

\*<sup>3</sup> Physical damage: This refers to extended damage to buildings, furniture, livestock, pets, etc.

- 8 -

-  **When using the product in a medical facility, be sure to observe the regulations of the facility.**  
Do Turn the product off where its use is prohibited. Not doing so may cause electronic equipment or electronic medical equipment to fail or malfunction.

-  **When notification sound is ringing or in the standby mode, be sure to keep the product off of the ears. Also, when playing games, video, or music with an earphone microphone connected to the product, adjust the volume to the proper level.**  
Do Setting too loud a volume or using the earphone continuously for a long period of time might adversely affect your ears. Surrounding sounds may not be heard clearly causing an accident.

-  **Be careful when setting vibrator (vibration) or notification sound if your heart is weak.**  
Do May cause harmful effect on heart.

-  **If you wear an electronic medical device, check with the equipment manufacturer or sales outlet to determine how the device is affected by radio waves before using the product.**  
Do The internal battery may ignite, burst, heat or leak, and may cause fire, burns, or injuries.

-  **Turn the product OFF near high-precision electronic control equipment or electronic equipment using low-power signals.**  
Do May cause the equipment to fail or malfunction.  
\* Examples of electronic equipment to avoid:  
Hearing aids, implanted pacemakers or defibrillators, other electronic medical equipment, and other automatic control equipment. Users wearing implanted pacemakers or defibrillators, or other electronic medical equipment should check with the manufacturer or sales outlet about the effect of radio frequencies on the equipment.

- 11 -

-  **Always remove the power plug of the specified charger (sold separately) from an outlet or a cigarette lighter socket when not using the adapter.**  
Do If the power plug is left plugged in, may cause fire, burns, injuries, or electric shock.

-  **Immediately remove the power plug from an outlet or a cigarette lighter socket if water (drinking water, perspiration, seawater, urine of pet animals, etc.) gets into the adapter.**  
Do May cause fire, burns, or electric shock.

-  **Always remove the power plug from an outlet or a cigarette lighter socket when cleaning the equipment.**  
Do Not doing so may cause fire, burns, electric shock.

-  **Do not touch the specified chargers (sold separately) for a long time while they are connected to an outlet or cigarette lighter socket.**  
Do May cause burns, etc.

### ■ au Nano IC Card O4 LE

## ⚠ CAUTION

-  **Be careful of the cut surface when handling au Nano IC Card O4 LE as it may damage a part of your body such as fingers, etc.**  
Do May cause injuries.

- 18 -

- Explanation of graphic symbols used in this manual to indicate actions that are not allowed and actions that must be done**

	Indicates an action that is not allowed.		Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.
	Indicates that disassembly is not allowed.		Indicates an action that must be done.
	Indicates that handling with wet hands is not allowed.		Indicates that the power plug must be disconnected from the power outlet.

- Precautions common to the main unit, internal battery, charging equipment, au Nano IC Card O4 LE, peripheral devices**

## ⚠ DANGER

-  **Do not use, store or leave the product in hot places (e.g. by a fire, near a heater, under a kotatsu or futon, in direct sunlight, in a car in the hot sun).**  
Don't May cause fire, burns, injuries, or electric shock.

-  **Do not put the product into or near a heating cooking device such as a microwave oven or IH cooker, or high-pressure container such as a pressure cooker.**  
Don't May cause fire, burns, injuries, or electric shock.

- 9 -

-  **When the display or camera lens is accidentally broken, be careful of broken glass or exposed internal parts of the product.**  
Do If you mistakenly touch broken or exposed parts, it may cause burns, injuries, or electric shock.

-  **If the internal battery leaks or gives off a strange smell, immediately stop using and remove it from the vicinity of open flames.**  
Do May cause leaking fluid to ignite or explode.

-  **Be careful not to let your pet bite the product.**  
Do The internal battery may ignite, burst, heat or leak, and may cause fire, burns, or injuries.

- 12 -

## ⚠ CAUTION

-  **Do not swing the product by the LG TV antenna cable O1, etc.**  
Don't May cause an accident such as injury to yourself or others, or damage to surrounding objects by hitting.

-  **If the display breaks and the fluid etc. leaks out from inside, do not let the fluid contact with the skin on your face or hands or clothes.**  
Don't May cause loss of sight or skin problems.

-  **If the fluid etc. enters your eyes or mouth, or contacts skin or clothes, immediately flush the contacted area with clean water.**  
Do If the fluid etc. enters your eyes or mouth, immediately see a doctor after flushing.

-  **Do not discard the product together with other garbage.**  
Don't May cause ignition resulting in fire, burns, or injuries. Also may cause environmental destruction. Bring them to a sales outlet such as an au shop. If your local municipality has a battery recycling program, dispose of them as provided for.

-  **If fluid etc. leaks out from the internal battery, do not let the fluid contact with the skin on your face or hands.**  
Don't May cause loss of sight or skin problems. If the fluid etc. enters your eyes or mouth, or contacts skin or clothes, immediately flush the contacted area with clean water. If the fluid etc. enters your eyes or mouth, immediately see a doctor after flushing.

- 13 -

### ■ LG TV antenna cable O1

## ⚠ DANGER

-  **Do not let the product get wet with water (drinking water, perspiration, seawater, urine of pet animals, etc.).**  
Do May cause fire, burns, injuries, or electric shock.

## ⚠ CAUTION

-  **Do not let the LG TV antenna cable O1 connecting plug get dirty. May cause a fault.**  
Do

- 



