Galaxy S8+

Setting Guide

Introduction

au

SCV35

Thank you for buying the Galaxy S8+ (simply called the "product"). In this guide, settings and precautions for using the product are described.

For basic operations, refer to the "Basic Manual" or the

"Basic Manual application" installed on the product. Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies.

Basic operation

- Describes the basic operations and names of parts.
- Initial settings
 Describes how to configure settings when turning on the power for the first time.
- Mail settings
 Make initial settings to use E-mail (@ezweb.ne.jp).
- Basic Manual application
 Downloads and uses the "Basic Manual application".

 Making a call
- Describes how to make a call.
- Receiving a call

 Describes how to receive a call.
- Importing/Exporting contacts
 Describes how to import and export contacts to this product using the au Nano IC Card 04
- or the microSD memory card.

 How to transfer data from the au Settings Menu Describes how to restore and store data into this product from the previously used au phone.
- Viewing/playing data
 Describes how to view/play images or video data.
 How to back up data to a PC
 Describes how to back up data to a PC.
 Setting screen brightness and screen timeout Describes how to set screen brightness and screen

Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY

ported by: SAMSUNG ELECTRONICS JAPAN Co., Ltd ng Electronics Co., Ltd.

April 2017, 1st Edition

Basic operation Opening notification panel When a notification icon is displayed, For details, refer to the "Basic Manual application" installed on the product or "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage slide down the status bar to open the notification panel and then check the notification overview. SIM card removal tool (sample) au Nano IC Card O4/microSD Tray eject hole memory card tray The bundled SIM card removal tool (sample) is necessary to insert/eject the au Nano IC Card O4 and the This is where the au Nano IC Card O4 and microSD memory card. For details, refer to the "Basic Manual" Edge screen Edge panels On the Edge panels, you can register contacts and apps, capture a screen as image or GIF animations, and display various information. Status bar Edge screen Display current status and notification icons. Refer to "Edge screen" Dower key Display (Touch panel) Operate directly touching with your Press and hold I Unlock screen Swipe the screen up/down/left/right. Dial icon Tap to activate the phone Back button You can check whether you have received a call Tap to return to the previous screen. History button when the product is face down by the lights on ☐ Home button Tap to display the recently-used Tap to display the home screen. **&**

Touch panel operations

Lightly touch the screen and then immediately release your finger.

Slide

If the displayed item does not fit within the screen lightly touch and trace to the desired direction.

Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.

Touch and hold Keep touching an item etc.

with your finger.

Flick (Swipe)

Quickly move (flick) your finger up, down, right, or left.



Keep touching an item or icon, trace it to the desired direction.

Selecting item

To select displayed item or icon, tap the screen directly with your finger.

Displaying menu There are a few methods to display a menu, by

tapping " i " or by touching and holding an entry field or item

Switch setting

When checkbox, radio button or ON/OFF switch appears at side of setting item, tap check box, radio button or ON/OFF switch to switch the ON/OFF of

| ICON | Description |
|-------------|-----------------|
| / () / () | Setting is On. |
| 0/0/0 | Setting is Off. |
| | |

Configuring the app's permissions

When you access a function or information on the terminal for the first time, a confirmation screen will appear requesting you to permit the access If a confirmation screen appears, read through the displayed information and tap either "DENY" or "ALLOW".

- A screen explaining the permission may be displayed for some apps/functions. Or, a confirmation screen may appear multiple times and or be displayed differently. Check the displayed information carefully and follow the on-screen instructions.

 If you do not select "ALLOW", you may be unable to
- activate the app/function or the function may be Descriptions on the contents displayed on the
- confirmation screen(s) may have been omitted in this manual.

STEP 2: Check

the terms and

conditions

Tap "Learn more" from

each agreement →

confirm the content →

 
[<] → after confirming

all the contents tap

[Agree to all] → [NEXT]


Character entry

To enter characters, tap character entry field to display keyboard and then tap each key. Software keyboard Use "3x4 Keyboard" or "QWERTY Keyboard".



Tap " ", and in the displayed menu, tap "3x4 Keyboard ⇔ QWERTY Keyboard" to toggle between "3x4 Keyboard" and "QWERTY Keyboard". If the " " is not displayed, press and hold the buttons that are located here in the screenshots and select " 🕸 '

 In "3x4", entering candidates for flick input appears as shown when you touch and hold a key. Flick to the direction of character to enter.



Initial settings

The first time the product turns ON, the initial setting screen appears automatically. Follow the guidance to make the settings.

Depending on the settings, setting contents and displays may differ.

STEP START



[日本語(Japanese)] → $[English] \rightarrow [OK]$

When message screen from Google is displayed,

[START]

which message screen from Google is displayed confirm the contents and tap "ACCEPT".

To change the language after it has been initially set, [基本フォルタ(Basic folder)] → [設定 (Settings)] → [一般管理 (General management)] → [言語とキーボード (Language and input)] → [言語(Language)] → [言語を追加 (Add language)] → [言語を追加 (Add language)] Select language you want to use → [標準に設定 (SET AS DEFAULT)].

STEP 1: Wireless LAN (Wi-Fi®) function setting

Use your home wireless LAN (Wi-Fi®) or public wireless LAN to connect to the Internet. Password (security key) is set on access point.

Tap Wi-Fi® network to Tap [NEXT] to set

Check in advance.

(security key) → [CONNECT] → [NEXT]

Enter a password

button system, in step 1, [ADVANCED] → [WPS push button], and press WPS button on the access point device within 2 minutes to connect Wi-Fi® network. ● If an access point device supports WPS PIN

If an access point device supports WPS Push

code system, in step 1, [ADVANCED] \rightarrow [WPS PIN entry], and enter PIN code on the access point device to connect Wi-Fi® network.

STEP 3: Google setting

If you tap [SKIP] in step 1, you can skip

Google account setup (in that case, follow the instructions displayed on the screen). Proceeding the settings will display the screen on step 10.

Set up Google account to use Google applications such as "Gmail", and "Google Play". Gmail address "(User name)@gmail.com" is automatically created by user name set in Google account.



accountl If you already have a Google account, tap the "Email or

phone" field.

If the precautions

Enter your "First name" and "Last name" [NEXT]

Confirm the

gender -[NEXT]

[NEXT]

Enter your user name → [NEXT] If an entered user name is unavailable an entry screen for prompting another

user name appears

Improve location scouracy by oliveing ages and sentines to some for PAT it and

Confirm the

For the services you don't use, tap

" to "

Enter a password [NEXT]

→ reenter the password -

Enter a phone number in case you forget your password → [NEXT]

password → [NEXT]
Append the country code to
the beginning of the phone
number. Japan is "+81".
After the country code, enter
your phone number omitting
the first digit. For example, if
your Japan phone number is
"080...", enter "+8180...".
Tap [Skip] if you do not
want to set.

•

 
Set whether to

protect your phone

password".

To set, select "Set up Face Recognition", "Set up Fingerprint Scanner", "Set up Iris Scanner" or "Set up PIN, pattern or

To not set, select "No, thank you" → [SKIP] → [SKIP ANYWAY]



STEP 5: au Easy Setting

When you have registered an au ID, you can use various au services including "au Simple Payment Service" which offers you a simple way to purchase applications from "au Smart Pass" and "Google Play". Create new au ID with this product or use your au ID.

The same "au ID" as another user's cannot be registered.

You can still setup au services after completing initial settings by the following steps. On the home screen, [基本フォルダ (Basic folder)] → [Settings] → [au Settings Menu] → [au Easy Setting].



(Set/save au ID)] password → [OK]

[終了 (Done)]

"Update" → [Next]

If you do not want to update this product, select "Skip update" and tap "Next" to proceed.

initial settings → select "Agree" → [Next] → [Agree]



Confirm the content. select "Turn Auto Backup on"/"Turn Auto Backup off" → [Next]

"Activate"/"Skip activation" → [Next] Backup OfT → [NeXt] Select [Turn Auto Backup on] if you want to use the "データお預かり(Data Storage)" application to automatically backup your pictures and address book to the au server. activation" → [Next]
If there are apps which
are to be restored,
the App restoration
screen will appear.
If the screen is
displayed, follow the
onscreen instructions
to operate.

content, select

Alert App, select "Activate" → [Next] To set later, select

then tap [Next].

While Walking

tap [Next]. Presetting is done by "Skip activation

for au App, select "Activate" → [Next] To set later, select "Skip activation" then

selecting "ALLOW" for

each permission.

(Restore data)" screen appears, select the check box of the type of data you want to restore → [次へ (Next)]

Check the apps to install → [次へ (Next)] When "おすすめアプリ (Recommended Apps)" screen is displayed,

Follow the onscreen instructions.



STEP 4: Set up is complete

If it is ready to use this product, set up completion

screen appears

Set Galaxy account as required Tap [SKIP] → [SKIP]

Set whether to display screen layout or weather forecast on home screen → [FINISH]

