

Setting Guide

Introduction

Thank you for purchasing the Galaxy Note8 (referred to as the "product" in this manual). In this guide, settings and precautions for using the product are described.

For basic operations, refer to the "Basic Manual" or the "Basic Manual application" installed on the product. Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies.

- **Basic operation**
Describes the basic operations and names of parts.
- **Initial settings**
Describes how to configure settings when turning on the power for the first time.
- **au-mail settings**
Make initial settings to use au-mail.
- **Basic Manual application**
Describes how to download and how to use the "Basic Manual application".
- **Making a call**
Describes how to make a call.
- **Receiving a call**
Describes how to receive a call.
- **Importing/Exporting contacts**
Describes how to import and export contacts to this product using the au Nano IC Card O4 or the microSD memory card.
- **How to transfer data from the au Settings Menu**
Describes how to restore and store data into this product from the previously used au phone.
- **Viewing/playing data**
Describes how to view/play images or video data.
- **How to back up data to a PC**
Describes how to back up data to a PC.
- **Setting screen brightness and screen timeout**
Describes how to set screen brightness and screen timeout.

Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY
Imported by: SAMSUNG ELECTRONICS JAPAN Co., Ltd.
Manufactured by: Samsung Electronics Co., Ltd.
November 2017, 1st Edition

Basic operation

For details, refer to the "Basic Manual application" installed on the product or "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage.

SIM card removal tool (sample)

Tray eject hole

The bundled SIM card removal tool (sample) is necessary to insert/ eject the au Nano IC Card O4 and the microSD memory card.

For details, refer to the "Basic Manual".

au Nano IC Card O4/microSD memory card tray

This is where the au Nano IC Card O4 and microSD memory card are inserted.

Status bar

Display current status and notification icons.

Bixby key

Press to activate the "Bixby".

Display (Touch panel)

Operate directly touching with your finger or S Pen.

Dial icon

Tap to activate the phone.

History button

Tap to display the recently-used applications.

Edge screen

Refer to "Edge screen".

Power key

Power on
Press and hold [].
Unlock screen
Swipe the screen up/down/left/right.

Back button

Tap to return to the previous screen.

Home button

Tap to display the home screen.

S Pen

Basic operations by fingers such as tapping, long touching, dragging, etc. can be also done by S Pen.

Opening notification panel




When a notification icon is displayed, slide down the status bar to open the notification panel and then check the notification overview.

Edge screen


Edge panels

On the Edge panels, you can register contacts and apps, and display various information.

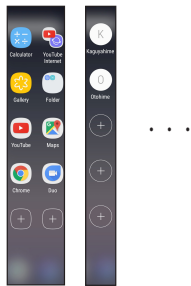

Edge lighting

You can check whether you have received a call when the product is face down and the display is off by the lights on the Edge screen.

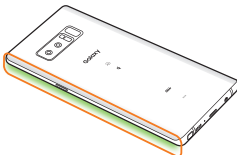

Touch panel operations

Tap

Lightly touch the screen and then immediately release your finger or S Pen.



Slide

If the displayed item does not fit within the screen, lightly touch and trace to the desired direction with your finger or S Pen.



Pinch

Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.



Touch and hold

Keep touching an item etc. with your finger or S Pen.



Flick (Swipe)

Quickly move (flick) with your finger or S Pen up, down, right, or left.



Drag

Keep touching an item or icon, trace it to the desired direction with your finger or S Pen.



S Pen operations


Draw / Write

You can draw diagrams and write letters by using the S Pen.

Press the button

You can perform various operations by pressing the S Pen button.

Selecting item

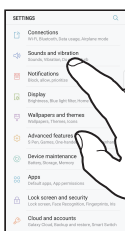

To select displayed item or icon, tap the screen directly with your finger or S Pen.

Displaying menu

There are a few methods to display a menu, by tapping "⋮" or by touching and holding an entry field or item.

Switch setting

When checkbox, radio button or ON/OFF switch appears at side of setting item, tap check box, radio button or ON/OFF switch to switch the ON/OFF of the setting.

Icon	Description
☒ / ☐ / ☐	Setting is On.
☐ / ☐ / ☐	Setting is Off.

Configuring the app's permissions

When you access a function or information on the terminal for the first time, a confirmation screen will appear requesting you to permit the access. If a confirmation screen appears, read through the displayed information and tap either "DENY" or "ALLOW".


- A screen explaining the permission may be displayed for some apps/functions. Or, a confirmation screen may appear multiple times and or be displayed differently. Check the displayed information carefully and follow the on-screen instructions.
- If you do not select "ALLOW", you may be unable to activate the app/function or the function may be restricted.
- Descriptions on the contents displayed on the confirmation screen(s) may have been omitted in this manual.

Character entry

To enter characters, tap character entry field to display keyboard and then tap each key.

Software keyboard

Use "3x4 Keyboard" or "QWERTY Keyboard".

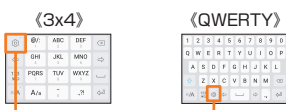


Tap "⌂", and in the displayed menu, tap "3x4 Keyboard ⇄ QWERTY Keyboard" to toggle between "3x4 Keyboard" and "QWERTY Keyboard".

If the "⌂" is not displayed, press and hold the buttons that are located here in the screenshots and select "⌂".

Flick input

In "3x4", entering candidates for flick input appears as shown when you touch and hold a key. Flick to the direction of character to enter.

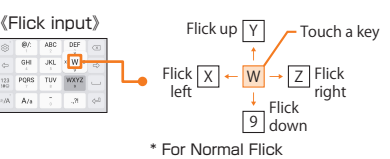

STEP 1: Wireless LAN (Wi-Fi®) function setting

Use your home wireless LAN (Wi-Fi®) or public wireless LAN to connect to the Internet.

• Password (security key) is set on access point. Check in advance.

1

Wi-Fi

Tap Wi-Fi® network to connect

2

Enter a password (security key) → [CONNECT] → [NEXT]

- If an access point device supports WPS Push button system, in step 1, [ADVANCED] → [WPS push button], and press WPS button on the access point device within 2 minutes to connect Wi-Fi® network.
- If an access point device supports WPS PIN code system, in step 1, [ADVANCED] → [WPS PIN entry], and enter PIN code on the access point device to connect Wi-Fi® network.

STEP 2: Check the terms and conditions

1

Terms and conditions

Tap "Learn more" from each agreement → confirm the content → [<] → after confirming all the contents tap [Agree to all] → [NEXT]

Tap "Learn more" from each agreement → confirm the content → [<] → after confirming all the contents tap [Agree to all] → [NEXT]

STEP 3: Google setting

Set up Google account to use Google applications such as "Gmail", and "Google Play". Gmail address "(User name)@gmail.com" is automatically created by user name set in Google account.

1

Google

[More options] → [Create account]

• If you already have a Google account, tap the "Email or phone" field.

• If you tap [SKIP] in step 1, you can skip Google account setup (in that case, follow the instructions displayed on the screen). Proceeding the settings will display the screen on step 10.

2

Google

Create a Google Account

Enter your "First name" and "Last name" → [NEXT]

3

Google

Basic information

Enter your birthday and select gender → [NEXT]

4

Google

How you'd like to sign in

Enter your user name → [NEXT]

• If an entered user name is unavailable, an entry screen for prompting another user name appears.

5

Google

Create a strong password

Enter your password → reenter the password → [NEXT]

6

Google

Add your phone number

Enter your phone number in case you forget your password → [NEXT]

• Append the country code to the beginning of the phone number. Japan is "+81". After the country code, enter your phone number omitting the first digit. For example, if your Japan phone number is "090...", enter "+8190...".

• Tap [Skip] if you do not want to set.

7

Google

Add your phone number

If the precautions screen related to confirming your phone number appears, confirm the content → [VERIFY]

8

Google

Confirm the contents

Confirm the contents → [I AGREE]

9

Google

[NEXT]

10

Google

Protect your phone

Set whether to protect your phone

• To set, select "Set up Face Recognition", "Set up Fingerprint Scanner", "Set up Iris Scanner" or "Set up PIN, pattern or password".

• To not set, select "No, thank you" → [SKIP] → [SKIP ANYWAY].

11

Confirm the contents → [NEXT]

• For the services you don't use, tap "•" to

12

Meet your Google Assistant

[CONTINUE]

13

Set whether to use the Assistant

• Tap [YES I'M IN] here.

STEP 4: Set up is complete

If it is ready to use this product, set up completion screen appears.

1

Galaxy account

Set Galaxy account as required

• Tap [SKIP] → [SKIP] here.

2

Get your content

Set whether to get the content

• Tap [SKIP] here.

3

More useful features

Set whether to set screen layout or display weather forecast on home screen → [FINISH]

STEP 5: au Initial Setting

When you have registered an au ID, you can use various au services including "au Simple Payment Service" which offers you a simple way to purchase applications from "au Smart Pass" and "Google Play". Create new au ID with this product or use your au ID.

● You can still setup au services after completing initial settings by the following steps. On the home screen, [基本フォルダ (Basic folder)] → [Settings] → [au Settings Menu] → [au Initial Setting].

1

au

[GET STARTED]

• Check "Update", if you want to update pre-installed applications.

2

au ID Setting

[Sign in]

3

Enter a security number → [次へ (Next)]

4

Enter a password → [同意して次へ (Agree and next)]

5

[次へ (Next)]

6

Check the apps to install → [Next]

7

Check "Backup Setting" if you want to use the "データお預かり (Data Storage)" application to automatically backup your pictures and address book to the au server → [Next]

8

[Finish]

au-mail settings

Initial Setup

To use au-mail, subscription to LTE NET is required. If you did not subscribe it when you purchased the product, contact an au shop or Customer Service Center.

- For model change from au phone, you can continue to use the E-mail address that is used on the former model by making initial settings.
- Before performing this procedure, turn off the Wi-Fi function.

1

On the home screen, [au-mail]

2

Initial settings are complete, E-mail address appears → [閉じる (Close)]

●

If "License agreement" screen appears, confirm the content and tap [AGREE].

Changing your E-mail address

Although E-mail address is automatically decided by performing Initial settings, the E-mail address can be changed.

1

On the home screen, [au-mail]

2

[⋮]

3

[Change Address/Setting Filter]

4

[Eメールアドレスの変更へ (To Change E-mail address)]

5

Enter the security code → [送信 (Send)]

6

Precautions screen of changing E-mail address appears → [承諾する (Accept)]

7

Enter E-mail address → [送信 (Send)]

8

[OK] → [閉じる (Close)]

Checking E-mail address

1

On the home screen, [au-mail]

2

[⋮]

3

[E-mail information]

4

E-mail address appears

Basic Manual application

Downloading "Basic Manual application"

1

On the home screen, [基本フォルダ (Basic folder)] → [Basic Manual]

2

[UPDATE] → [ACCEPT]

Using "Basic Manual application"

1

On the home screen, [基本フォルダ (Basic folder)] → [Basic Manual]

2

The Basic Manual cover is displayed.

Making a call

Calling by direct input

1

On the home screen, [Dial]

2

Enter a phone number

3

[📞]

●

To dial using call log, in step 2, tap the "RECENTS" tab to select a log you want to call, then tap "📞".

●

To return to the keypad screen from the "RECENTS" tab, tap "📞".

Calling from the contacts

1

On the home screen, flick up or flick down → [Contacts]

2

Tap a contact to call

3

[📞]

Calling overseas (au International Call Service)

You can make international calls without any special procedure from the product.

To call overseas, on the keypad screen, enter an access code, country code, area code*, and the phone number of the other party, then tap "📞".

* If the area code starts with "0", dial it without including the "0". (There are some exceptions such as Italy).

Receiving a call

1

Drag/slide "📞" out of the circle

2

Your call will begin

3

To end the call, [📞]

●

To reject a call, in step 1, drag/slide "📞" out of circle. When a call rejected, the caller hears the guidance.

●

To answer with an answering message, slide "SEND MESSAGE" up → [Answering message] in step 1.

●

When you receive a call while using the product, a pop-up screen will appear. To answer the call, tap [ANSWER].

●

Tap [DECLINE] on the pop-up screen to reject a call.

●

On the pop-up screen, tap [SEND MESSAGE] → [Answering message] to answer the call with an answering message.

Importing/Exporting contacts

You can transfer contacts data in the previously used au Nano IC Card 04 or microSD memory card.

1

On the home screen, flick up or flick down → [Contacts]

2

[⋮] → [Manage contacts] → [Import/Export contacts]

3

[IMPORT] → [Internal storage]/[SD card]/[SIM card]

4

Select contacts data to import → [DONE]

5

[Phone]/[Synchronized account] → [IMPORT]

●

To export contacts, in step 3, [EXPORT] → [Internal storage]/[SD card]/[SIM card].

●

You can export up to 50 contacts to the au Nano IC Card 04.

●

If there is only one contact data saved, go to step 5.

●

Contacts data is imported.

How to transfer data from the au Settings Menu

You can restore/store data from your previous au phone to this product using a microSD memory card or au servers.

- If you restore data using au server, store the data using your previous au phone to the au server in advance. You need to set up an au ID to use the au server. (If your previous au phone does not have the au Settings Menu, use the au Cloud app.)
- If you restore data using microSD memory card, save the data using your previous au phone to a microSD memory card. (If your previous au phone does not have the au Settings Menu, use the au backup app.)

1

On the home screen, [基本フォルダ (Basic folder)] → [Settings]

2

[au Settings Menu]

3

[Data Transfer]

4

[機種変更はこちら (Model changing is here)] and perform data transfer according to the screen guidance.

●

If you want to store your pictures, address book (contacts), etc. automatically to the au server using "データお預かり (Data Storage)" app, you can set up by following procedure.

●

On the home screen, [基本フォルダ (Basic folder)] → [Settings] → [au Settings Menu] → [Backup Setting]

Viewing/playing data

View/play images or videos saved in the phone memory or a microSD memory card.

1

On the home screen, flick up or flick down → [Gallery]

2

Select an album

3

Select data to view

●

To play video, tap [📺].

How to back up data to a PC

How to back up data to a PC using Smart Switch

Smart Switch is an app for transferring data. There are two versions of Smart Switch: Smart Switch for PC and Smart Switch for mobile. By using Smart Switch for PC, you can back up data to and restore data from a PC.

You can download "Smart Switch" from Smart Switch homepage. For details of downloading and the way to use, refer to Smart Switch homepage. <http://www.galaxymobile.jp/apps/smart-switch/> (in Japanese only)

You can only forward content that you own or have the rights to. Samsung Electronics Co., Ltd. takes no responsibility for any infringements on the Copyright Law.

Setting screen brightness and screen timeout

Setting screen brightness

1

On the home screen, [基本フォルダ (Basic folder)] → [Settings]

2

[Display]

3

Drag the "Brightness" slider to the right and left to adjust the brightness

Setting screen timeout

1

On the home screen, [基本フォルダ (Basic folder)] → [Settings]

2

[Display]

3

[Screen timeout]

4

Tap the time until screen turns off