# au AQUOS K

SHF32

**Basic Manual** 

Safety Precautions
Basic Operations
Character Input
Phone
Address Book
Mail
LINE
Internet
Camera
1Seg
Settings
Appendix

Contents

## **Preface**

Thank you for buying the "AQUOS K SHF32" (simply called the "SHF32" or the "product" from here on).

Before using the product, be sure to read the "Basic Manual" (this manual) and "Setting Guide" available on the au homepage to ensure correct use. After you have finished reading the manuals, be sure to keep them accessible and store the printed manuals ("取扱説明書" (Basic Manual) and "設定ガイド" (Setting Guide)) (Accessories) in safe places so that you can refer to them whenever you need them. If you lose the printed manuals (Accessories), contact an au shop or Customer Service Center.

## List of Packaged Items

Before you start using the product, make sure that you have all the following packaged items with the product.



- 取扱説明書 (Basic Manual) (Japanese)
- ・設定ガイド (Setting Guide) (Japanese)

The following items are not included in the package.

- Desktop holder
- · microSD memory card
- · AC adapter
- Earphone
   microl ISB 3 5mm conversion cable
- microUSB cable
- \* ITIICIOOSD Cable
- · Purchase a specified charger (sold separately).
- Illustrations of cell phones in this manual are only for reference. They may look different from the actual product.

## **Operating Instructions**

■ "取扱説明書" (Basic Manual) and "設定ガイド" (Setting Guide)

The "Basic Manual" (this manual) and "Setting Guide" available on the au homepage describe basic operations of major functions. Initial settings, charging, and other preparations before using the product for the first time are explained in the "Setting Guide".

For detailed descriptions of various functions, refer to the "Full Instruction Manual" (Japanese) available on the au homepage:

http://www.au.kddi.com/support/mobile/guide/manual/

## When Using the Product

Before you start using the product, be sure to read the "Safety Precautions" to ensure correct use.

Before you assume that the product is malfunctioning, check for possible remedies in the following au Customer Support site of au homepage:

## http://www.au.kddi.com/english/support/

- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication may not be possible in poor reception areas. Communication may be interrupted if you move into a poor reception areas during communications.
- Since this product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated. (Though the LTE/GSM/UMTS system has highly secure confidential communication features.)
- VoLTE (LTE network) by au is used when connecting with emergency organizations within Japan. You cannot connect using 3G (circuit-switched network).
- The product is compatible with the international roaming service.
   Each network service varies depending on the area and service content.
- For details, refer to "auのネットワークサービス・海外利用" (au Network Services/International Roaming) described in "Full Instruction Manual" (Japanese) available on the au homepage.
- Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.
- The IMEI information of your cell phone is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of your cell phone.
- The product initiates data transmission regularly to obtain information required for the product to operate including the time.
   Communication charges are incurred separately.

- If you are using the product overseas, check the relevant laws and regulations of the country/region you visit.
- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional or mistaken operation by the customer, or use under other unusual conditions outside the responsibility of the Company.
- The Company is not liable for any incidental damages (change/ disappearance of saved content, loss of business income, disruption of business, etc.) arising from use of or inability to use the product. It is recommended that you keep a copy of important phone numbers etc.
- The Company is not liable for any damages arising from failure to observe the described content of this manual.
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product.
   The Company is not liable for any damage or lost income resulting from recovery of these data.
- It is recommended you keep a copy of important data on your PC's hard disk, etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.
- Contents saved in the product, such as contacts, mails and bookmarks might be altered or lost by an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that the Company assumes no responsibility for any damages or lost profits resulting from altered or lost contents.
- Note that content data (both charged or free content) saved on the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.

- The product uses liquid crystal for its main display. Wearing polarizing sunglasses may result in the display appearing dark or distorted due to the characteristics of the sunglasses and the angle viewed at.
- The product uses liquid crystal for its main display. The main display response speed may become slow when the ambient temperature is low, which is due to the characteristics of liquid crystal and is not a malfunction. The main display response speed will return to normal at room temperature.
- Although the main display used on the product is made using high-precision technology, some pixels (dots) might be lit or out at all times. This is not a malfunction.
- Allowing the same image to be displayed on the sub-display for a long period may leave a ghost image, however, this is not a malfunction.
- You are recommended to store copies of individual data such as still
  pictures/videos you took and music in your PC by sending each file
  as mail attachment, etc. Note, however, that you may not be able to
  make copies of some copyrighted data even by the abovementioned means.
- Do not discard the product together with regular trash. Please cooperate in the collection of the product when it is no longer needed to protect the environment and effectively use resources. Old products are collected at au shops and other places.
- "The Company" as appears in this manual refers to the following companies:
   Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY
   Manufactured by: SHARP CORPORATION
- Reproduction of the content of this manual in part or in whole is prohibited.
- The content of this manual is subject to change without notice.
- © Every effort has been made in the preparation of this manual. Should you notice any unclear points, omissions, etc., feel free to contact us.

## **Cell Phone Etiquette**

## Use of cell phones is not allowed in the following places!

- Do not listen to music, watch videos or TV (1Seg) while driving a car or motorbike, or riding a bicycle. Use of cell phones while driving a car or motorbike is prohibited by law. (Use of cell phones while riding a bicycle may also be punishable by law.) In addition, stay alert to the traffic around you even when walking. Surrounding sounds might not be heard clearly, and gazing at the screen may distract your attention causing a traffic accident. Be especially careful at railroad crossings, station platforms and pedestrian crossings.
- Since using the product on airplanes is restricted, follow the instructions given by the respective airlines.


## Be considerate of people around you

- Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode so as not to disturb others around you with your ringtones.
- Do not use the cell phone outside in town where you might hinder other pedestrians.
- Viewing a cell phone screen while walking is a serious hazard. Do not suddenly stop to talk on/operate the cell phone or do so while walking.
- Move to areas where you will not inconvenience others on bullet trains, in hotel lobbies, etc.
- · Refrain from talking in a loud voice.
- Be careful of sound leakage from earphones in trains or other places with many people around you.
- Obtain the permission of other people before you take their photos with the cell phone's camera.
- Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker. Turn on "Airplane mode" or turn the cell phone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.

## Illustrations and Descriptions in This Manual

### ■ Note on Key Illustrations

In this manual, the key illustrations are simplified as shown below.

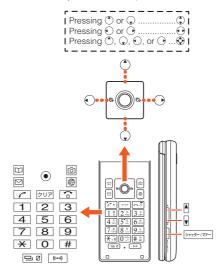

## Description of Operations for Selecting Item/Icon/ Key etc.

In this manual, descriptions enclosed in [] abbreviate the steps for selecting an item/icon/onscreen button/etc. in the 🗘 or 🏵 menu and then pressing 

 (OK/Check/Set/Commit/Done).

#### Example: To edit address book contacts

When the standby screen is displayed, press □ →
Select contact to edit → □ (Submenu) → [Edit].
Indicates to select "Edit" with ③ and commit with ④.



#### ■ Notes on Screenshots

The screenshots in this manual are simplified and may look different from the actual screens. Also, part of the screen may be omitted.

In this manual, part of the screen such as icons are omitted.



- In this manual, keys, screenshots, and icons are described based on default settings of the product with the body color "umber". However, actual keys, screenshots, and icons may differ or be partially omitted.
- © Content at the bottom of the screen that can be operated by pressing ●, □, ⊚, □, or ⊚ are indicated in parentheses, such as □ (Submenu).
  - \* However, 

    (OK), 

    (Check), 

    (Set), 

    (Commit), and 

    (Done) are abbreviated as 

    only.
- Menu items, layers and icons described in this manual may be different according to functions being used and conditions.
- In this manual, "microSD™ memory card (commercially available)" and "microSDHC™ memory card (commercially available)" are abbreviated as "microSD memory card" or "microSD".
- All of the indicated amounts exclude tax unless otherwise specified.

## Using au Disaster Countermeasure Application

au Disaster Countermeasure is an application in which you can use Disaster Message Board, Emergency Rapid Mail (Earthquake Early Warning, Disaster and Evacuation Information, and Tsunami Warning), Disaster Voice Messaging Service and Disaster Information.

When the standby screen is displayed, press ● → [Service] → [au災害対策] (au Disaster Countermeasure).

The au Disaster Countermeasure menu is displayed.

If terms of use or an initial settings screen is displayed, check the contents and follow the on-screen instructions.

## **■** Using Disaster Message Board

Disaster Message Board is a service to enable customers in disaster areas to register their safety information via LTE NET when large-scale disasters, such as an earthquake whose Japan seismic scale is approximately 6-lower or more, occur. The registered safety information can be checked by customers using au phones, and also from other carriers' cell phones, PCs, etc.

For details, refer to "Disaster Message Board Service" on the au homepage.

I From the au Disaster Countermeasure menu, [災害用 伝言板] (Disaster Message Board).

Follow the on-screen instructions for registration/confirmation.

- To register the safety information, an e-mail address (@ezweb. ne.io) is required. Set the e-mail address in advance.
- © Deletion of the safety information and configurations for Safety Notification Mail are not available during wireless LAN (Wi-Fi®) connection.

The Company does not guarantee the quality of this service. The Company, regardless of the cause, shall not be liable for any problems related to registration of safety information due to the concentration of access to this service or equipment errors, any loss due to the damage, ruination, etc. of safety information or any loss arising from registered safety information.

## Using Emergency Rapid Mail

Emergency Rapid Mail is a service to collectively deliver Earthquake Early Warning and Tsunami Warning provided by the Japan Meteorological Agency, and Disaster and Evacuation Information provided by the national government or the local governments to au phones in the specified areas.

 At the time of purchase, receiving setting of Emergency Rapid Mail (Earthquake Early Warning, and Disaster and Evacuation Information) is set to "受信する" (Receive). You can receive Tsunami Warning by setting 災害・避難情報 (Disaster and Evacuation Information).

When receiving Earthquake Early Warning, secure your safety and act composedly according to the surrounding situations.

When receiving Tsunami Warning, leave sea coasts immediately and evacuate to safe places such as hills and strongly-built tall buildings.

From the au Disaster Countermeasure menu, [緊急速報メール] (Emergency Rapid Mail).

The inbox is displayed.

Select a mail to check to display the details of the mail.

ſ	当原全	Delete received mails.
- 1	אנאניבו	Delete received mails.
l	(Delete)	

## 設定 (Settings)

#### 緊急地震速報 (Earthquake Early Warning)

- 受信設定 (Receive settings)
   Set whether to receive Earthquake Early Warning.
  - ・[受信する] (Receive)/[受信しない] (Not receive).
- 音量 (Volume)
- Set the volume of the receiving sound.
- マナー時の鳴動 (Linkage to the manner mode) Set whether to make the product ring at the time of reception while the manner mode is applied.
- ・バイブ (Vibrator)
- Set whether to activate the vibrator at the time of reception.

## 災害・避難情報 (Disaster and Evacuation Information)

- 受信設定 (Receive settings)
   Set whether to receive Disaster and Evacuation Information, and Tsunami Warning.
- ・[受信する] (Receive)/[受信しない] (Not receive)
- 音量 (Volume)
  - Set the volume of the receiving sound.
- マナー時の鳴動 (Linkage to the manner mode) Set whether to make the product ring at the time of reception while the manner mode is applied.
- ・バイブ (Vibrator)
  Set whether to activate the vibrator at the time of reception.

- This service is available only in Japan (Not available overseas).
- © Emergency Rapid Mail is free of both information charges and communication charges.
- © Emergency Rapid Mail cannot be received while the power is turned off.
- © Emergency Rapid Mail may not be received when you are in a place where the signal cannot be received (e.g. tunnels and basements) or the signal is weak, even within the service area.
- © Emergency Rapid Mail which failed to be received will not be able to be received again.
- When you receive Emergency Rapid Mail, you will be notified by the dedicated alarm tone and the vibrator. The alarm tone cannot be changed.
  - \* When you receive Earthquake Early Warning, you will be notified by the alarm tone, voice ("地震です" (Jishin-desu)("Earthquake!")) meaning that an earthquake has occurred and the vibrator.
- The alarm tone does not ring if Emergency Rapid Mail is received during a call.
- Information intended for the areas of other than your present location may be received.
- As for this service, the Company shall not be liable for any damage incurred on the users resulted from failure or delay of information delivery due to communication disturbance or system failure, contents of the information or other problems that are not supposed to be blamed on the Company.
- © For details on Earthquake Early Warning and Tsunami Warning provided by the Japan Meteorological Agency, refer to the agency's homepage.

## http://www.jma.go.jp/jma/indexe.html

#### Earthquake Early Warning

© Earthquake Early Warning notifies areas where a strong shaking (Japan seismic scale 4 or more) is expected when an earthquake whose maximum Japan seismic scale is predicted of 5-lower or more has been detected.

- This service detects an earthquake (P-wave, preliminary tremors) near the seismic center immediately after the earthquake occurs and automatically calculates its location, scale and predicted strength of the shaking. After that, you will be notified of the earthquake as soon as possible within a few seconds to dozens of seconds before a strong shaking from the earthquake (S-wave, principal shock) occurs.
- In the vicinity of the seismic center, a strong shaking may reach you before Earthquake Early Warning.
- The Earthquake Early Warning distribution system provided by this service is different from that provided by TV, radio and other communication media and thus the arriving time of Earthquake Early Warning may be different among those media.

#### Tsunami Warning

Tsunami Warning notifies areas including target sea coasts of Major Tsunami Warning and Tsunami Warning provided by the Japan Meteorological Agency.

## **Disaster and Evacuation Information**

Disaster and Evacuation Information notifies information related to the safety of citizens, such as evacuation advisories, evacuation orders or various alarms delivered by the national government or the local governments.

## ■ Using Disaster Voice Messaging Service

Disaster Voice Messaging Service is a service to record voices with a cell phone and deliver them as a voice message to people to whom you want to deliver the information that you are safe when large-scale disasters occur.

From the au Disaster Countermeasure menu, [災害用音声お届けサービス] (Disaster Voice Messaging Service).

Follow the on-screen instructions.

## ■ Sending voices (Send)

Select "声をお届け" (Send voices) and then "あて先入力"\* (Enter recipient) → "声を録音" (Record voices to send).

\* You can also select to whom to send your voices from the address book.

## ■ Receiving voices (Receive)

You will be notified via a pop-up screen or an SMS that a voice message has been received. You can listen to the message by receiving (downloading) and playing the voice message.

- If the recipient's cell phone does not have an au災害対策 (au Disaster Countermeasure) application activated that supports 災害 用音声お届けサービス (Disaster Voice Messaging Service), SMS is sent instead.
- If the receivers are notified via an SMS, the information will not be saved in the au Disaster Countermeasure application.
- To use this service via Wi-Fi®, making initial settings via 4G (LTE) networks is required.
- O Voice messages can be recorded for up to 30 seconds.
- O Voice messages can be exchanged among au phones as well as other carriers' cell phones and PHS devices.
- O Voices may not be heard when the media sound volume is set to low
- When no free space is left on the internal memory, voice messages may not be saved or played.
- Some cell phones cannot receive voice messages. For details, refer to the au homepage.

## Using Disaster Information

You can check disaster information, histories of Disaster and Evacuation Information delivered by the local governments, etc.

From the au Disaster Countermeasure menu, [災害関連情報] (Disaster Information).

Select an item to check.

## Contents

Preface	1i 1 2 3
Safety Precautions	10
Safety Precautions (Observe Strictly)  Handling Precautions  Available Security Codes  Security Codes  PIN  Notes on Waterproof Property  Notes on Using Bluetooth®/Wireless LAN (Wi-Fi®) Fur  Precautions about Bluetooth®  Precautions about Wireless LAN (Wi-Fi®)  Frequency Band  Notes on Packet Communication Charge  Notes on Applications	
Basic Operations	31
Names and Functions of Parts	33

	Switching the Display Language to English	ა:
	Using the Standby Screen	36
	Using shortcuts in the Standby Screen	36
	Using the Status Bar	37
	Icons	37
	Using the Notification/Status Panel	38
	Using the Sub-display	39
	Using the Main Menu	40
	About Applications	43
	Learn Common Operations	44
	Learn Basic Key Operations	44
	Using Checkboxes	45
c	Character Input	46
	•	
	Learn How to Enter Characters	46
F	Phone	49
	Making Calls	40
	Entering a Phone Number and Making a Call	
	Using Call Histories and Making a Call	
	Using Speed Dial and Making a Call	
	Using Kantan Hasshin (Speech Recognition) and Making a Call.	
	Calling Overseas from au Phones (au International Call Service).	
	Receiving Calls	
	Answering an Incoming Call	53
	Rejecting an Incoming Calls	53
	Sending SMS to an Incoming Call	54
	Using au VoLTE	54
	Using Voice party (Optional Service)	54
	Checking Your Phone Number	5
	Checking Your Profile	55
	Editing Your Profile	55

Address Book 56
Registering to the Address Book
Mail 58
Checking E-Mail       .58         Sending E-mail       .61         Receiving E-mail       .62         Inquiring for and Receiving New Mail       .63         Sending SMS       .63         Receiving SMS       .64
LINE65
Using LINE65
Internet
Accessing the Internet         .66           Using Packet Communication         .66           Using the Browser         .67           Using the Browser Menu         .67           Operating the Browser with Touch Cruiser EX         .67
Camera
Before Using the Camera68 Capturing Still Pictures/Video69

1Seg	71
1Seg	72
Settings	74
Displaying the Settings Menu	74
Appendix	75
Introduction of Peripheral Devices Using an Earphone Microphone with Switc Microphone/Earphone	:h/Earphone
Troubleshooting	77
Updating SoftwareRemotely Locking the Product with Anshir	
Using Keitai Sagasete Anshin (Keitai Searc	
After-Sales Service	
SIM-Unlocking the Product	
Specific Absorption Rate (SAR) of Cell Pho	
CE Declaration of Conformity	
FCC Notice	
Export Administration Regulations	
Intellectual Property Rights	88

## Safety Precautions (Observe Strictly)

■ Before using the product, thoroughly read these safety precautions for proper use. After reading, store the precautions in a safe place.

These "Safety Precautions" describe instructions that should be observed to prevent damage to property or injury to the customer or others using the product.

If the product is going to be used by a child, a parent or guardian should read the manual and provide instruction in proper use. These instructions are divided into the following categories.

## Explanation of Indications Used in This Manual

<b>DANGER</b>	Indicates imminent risk of death or serious injury*1 with improper handling.
<b>₩ADNING</b>	Indicates risk of death or serious injury*1 wit

or serious injury\*1 with improper handling.

Indicates risk of minor injury\*2 and physical damage\*3 with improper handling.

- \*1 Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long-term hospital attendance as an outpatient.
- \*2 Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.
- \*3 Physical damage: This refers to extended damage to buildings, furniture, livestock or pets.

## Explanation of Graphic Symbols Used in This Manual

0	
Prohibited	

Indicates an action that is not allowed.



Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.



Indicates that handling with wet hands is not allowed.



Indicates an action that must be done.



Indicates that disassembly is not allowed



Indicates that the power plug must be disconnected from the power outlet.

Precautions Common to the Main Unit, battery pack, back cover, Charger, au Nano IC Card 04, **Peripheral Devices** 



Be sure to read the following hazards before use.



Be sure to use only the specified peripheral devices. Use of other peripheral devices might cause overheating, Instruction ignition, rupture, fault, or leakage of liquid.



Do not use, store or leave the product in hot places (e.g. by the fire, near a heater, under a kotatsu, in direct Prohibited sunlight, in a car in the hot sun). Doing so might cause ignition, rupture, fault, fire or injury.



Do not put the product in a cooking apparatus such as microwave oven or a pressure vessel. Doing so might Prohibited cause leakage of liquid, ignition, rupture, fault, fire or injury,



Do not throw the product into a fire or heat it. Doing so Prohibited might cause ignition, rupture or fire.



The customer is not allowed to disassemble, modify or repair the product. Doing so might cause a fault, ignition, electric shock, or injury. The Company is not liable even in the event of any nonconformities arising on the product or peripheral devices as a result of modification, etc. Modification of the product is in violation of the Radio Law.



## Be sure to read the following warnings before use.



Before entering an area where flammable gas is generated such as a gas station, be sure to turn off the product. Do not charge the battery. Failure to observe these precautions might cause the gas to catch fire. In addition, when using Osaifu-Keitai® payment function at a gas station, be sure to turn off the power in advance. If Osaifu-Keitai® has been set, cancel the lock before turning off the power.



When using a metal accessory etc., do not allow the metal part to come in contact with the connection jack or power Prohibited outlet. Doing so might cause electric shock, ignition, injury or a fault.



Do not drop or subject to strong impact, such as throwing. Doing so might cause rupture, overheating, ignition or a



Do not use outside when you can hear thunder. Doing so might risk lightning strikes and electric shock.



To prevent short-circuiting of the charger terminal and external connection jack, do not allow your fingers or any other part of your body or conductive materials (metal, pencil lead, etc.) to come in contact with or enter these areas. Doing so might cause overheating, fire, a fault, electric shock, or burns.



If the product is damaged because it is dropped, etc. and its display is cracked or internal parts are exposed, do not Prohibited touch the cracked display or exposed parts. Doing so might cause electric shock or injury from damaged parts.



Never connect the microUSB plug when the product or specified charger (sold separately) is wet. While the product is water resistant, any water or foreign

water nighthited matter on the product or microUSB plug when inserting the microUSB plug while wet might cause electric shock or short circuit/corrosion causing abnormal overheating. burnout, fire, burns, or a fault,



Although the product has waterproof capability, do not use if liquid such as water gets inside the product from a gap in the back cover, etc. Continued use of the product in this water prohibited state might cause overheating, ignition or a fault.



Do not use product while driving a car or riding a motorbike or bicycle or while walking. Doing so might Prohibited cause a traffic accident. Use of a cell phone while driving a car or riding a motorbike is prohibited by law. Use of a cell phone while riding a bicycle may be punishable by some regulations.

If charging is not completed after the specified charging time, stop charging. Failure to do so might cause leakage Prohibited of liquid, overheating, rupture or ignition.

Do not leave in places within the reach of small children. Small children might swallow part of the equipment by Prohibited mistake and choke on them, or might drop them by mistake and cause accidents or injury.



Do not cover or wrap the product with cloth, bedding, etc. while using or charging the product. Doing so might cause Prohibited fire, fault or injury.



When using a charger or external device, insert/remove the connector straight to/from the jack. Inserting/removing in an incorrect orientation might cause overheating, fire, damage or a fault.



## Be sure to read the following cautions before use.



When removing the back cover, do not apply excessive force. Doing so might cause the battery pack to fly out, Prohibited causing injury or malfunction.

Do not expose the camera lens to direct sunlight for an extended period. Doing so might cause ignition, rupture, Prohibited fire or a fault by the light-collecting mechanism of the lens.



Do not store the product in places subject to direct sunlight (e.g. in automobiles), places that get hot, places that get Prohibited extremely cold, and in humid or dusty places. Doing so might cause overheating, deformation or a fault.



Do not place the product on top of a wobbly table, sloped surface, or other unstable location, and do not charge Prohibited when placed unstably. Doing so may allow the product to fall and cause injury or damage. Be careful especially when the product is set to vibrate.

> Also use adequate caution with impact, etc. Failure to do so might cause a fault or injury.



The product may become hot when used for a long period or when connected to an external power supply. Avoid Prohibited contact with the product and specified charger for long periods. Failure to do so may cause low-temperature hurns

> Do not cover with paper, clothing, bedding, etc. Doing so may cause fire, injury, or a fault,



When charging the product, do not exceed the ratings given for outlets and wiring. Exceeding ratings for power Prohibited strips, etc. might cause overheating and result in fire.



Do not use with the back cover removed. Do not leave or store in that manner. Doing so may allow dust or other Prohibited foreign matter to enter and cause a fault.



Do not place near corrosive chemicals or in places where corrosive gas is generated. Doing so might cause a fault Prohibited or loss of internal data.

Do not leave or store the product with its back cover removed. Doing so might allow dust or other foreign Prohibited particles to enter and cause malfunction.



Instruction

Stop use if there is smoke, abnormal odor or noise, excessive overheating, or other abnormalities. During charging, disconnect the specified charger (sold separately) from the power outlet or the socket, make sure that the product is not overheating before turning the power off, remove the battery pack and contact an au shop or Keitai Guarantee Service Center. Also, if you have dropped or damaged the product, do not continue to use it in that state, and contact an au shop or Keitai Guarantee Service Center.



When inserting an earphone, etc. into the product, adjust the volume to the proper level by increasing it gradually. Suddenly turning the sound on with the volume set too high, too loud a volume or using the earphone continuously for a long period of time might adversely affect your ears. Also, raising the volume too high might prevent you from hearing sounds around you, which might in turn lead to a traffic accident at a railroad crossing or pedestrian crossina.



When using handsfree call, take care to keep the speaker at a safe distance from your ears, as the speaker volume Instruction may be too loud.



When small children use the equipment, have the guardian teach them the proper handling procedures so as to avoid Instruction potential dangerous situations. In addition, check that they are using the equipment as directed during use. Failure to do so might cause injury etc.

## Main Unit



## Be sure to read the following warnings before use.



Turn off the product or set it to Airplane mode before going aboard an airplane. Since using the product on airplanes Instruction is restricted, follow the instructions given by the respective airlines. Failure to do so might affect an airplane's electronic instrumentation. If you commit a prohibited act while using the product on an airplane, you might be punished by law.



Follow the instructions given by the respective medical institution regarding the use of the product in a hospital. Turn off the product in areas where the use of cell phones is prohibited.

Failure to do so might cause interference with the operation of electronic devices and electronic medical devices.



Do not send data by infrared communication with the infrared port pointing toward eyes. Doing so might affect Prohibited eyes. Also, sending data with the infrared port pointing toward some other infrared device might cause false operation, etc.



Do not point the illuminated light directly at someone's eyes, or at the eyes of someone driving a car or riding a Prohibited motorbike or bicycle. Be especially careful not to shoot small children from a very close distance. Do not use Mobile light near people's faces. Evesight may be temporarily affected leading to accidents.



Sometimes, very rarely some people demonstrate symptoms such as temporary muscle spasms, loss of consciousness, etc. by watching repeatedly flickering screens. Those with a past history of this should consult with a physician beforehand.



## Be sure to read the following cautions before use.



Use of the main unit in an automobile might sometimes affect on-vehicle electronic devices, though this rarely Prohibited happens. If this happens, do not use since this may impair safe travel



If you feel any abnormality with your skin, immediately consult a dermatologist. Itching, rashes, eczema, etc. Instruction sometimes occurs depending on your physical constitution and condition.

The materials of parts used on the product are as follows.

## Main Unit (SHF32)

Part	Material	Surface treatment
Outer case (operation key sheet)	PET	Acrylic UV cured coating
Outer case (lower key circumference)	Glass fiber polyamide resin	Acrylic UV cured coating
Outer case (lower back)	Glass fiber PC+ABS resin	Acrylic coating
Outer case (main display frame)	Acrylic resin	Hard coating
Outer case (main display back)	Acrylic resin	Acrylic UV cured coating

Part	Material	Surface treatment
Outer case (main display	Glass fiber	Acrylic UV
side/hinge side/tip)	polyamide resin	cured coating
Main display	Acrylic resin	Hard coating
Sub-display	Acrylic resin	Acrylic UV cured coating
Hinge stopper	POM resin	None
Hinge cover	PC+ABS resin	Acrylic UV cured coating
Hinge panel	Acrylic resin	Acrylic UV cured coating
Camera lens	Acrylic resin	Hard coating
Camera lens fringe	Aluminum	Dye anodized
Mobile light lens	PC resin	None
Infrared port cover	Acrylic resin	None
Center key	Acrylic resin	None
Cursor key	Acrylic resin	None
Key cosmetic (Cursor key, Address book key, etc.)	Acrylic resin	None
Address book key Camera key Mail key Browser/Apps key	Acrylic resin	None
Call key Clear key Power/End call key Number keys	Acrylic resin	None
Recent Apps key Tethering key	Acrylic resin	None
Volume UP/DOWN key	PC resin	Acrylic UV cured coating

Part	Material	Surface treatment
Shutter/Manner key	PC resin	Acrylic UV cured coating
Charger terminal	SUS	Gold plating
Back cover	Glass fiber PC rasin+Silicon	Acrylic UV cured coating
Contacts	Copper alloy	Gold plating
Cushion pads	Silicon	None
au Nano IC Card 04 tray	POM resin	None
Magnetic sheet	Ferrite (mainly iron oxide)	PET film (polyethylene terephthalate)
External connection jack (metal exterior)	SUS	Tin plating
External connection jack (metal terminal reinforcement)	SUS	Tin plating
External connection jack (resin terminal portion)	Polyamide resin	None
External connection jack (terminal connection)	Corson alloy	Gold plating
Screw	SUS	None
Rubber seal	Silicon rubber	None
Back cover cushion	Urethane foam	None

## ■ Battery Pack

Part	Material	Surface treatment
Outer	PC resin+PET	None
Connection jack	Copper alloy	All-surface Ni-base plating, Gold plating



Do not bring the product close to magnetized objects such as cash cards, floppy disks, credit cards, and prepaid Prohibited cards. Doing so might result in loss of recorded information.



Do not allow liquids, metal objects, burnable items, and other foreign matter to get inside the microSD memory Prohibited card slot. Doing so might cause fire, electric shock, a fault. or injury.



Do not swing the product around by holding the strap, etc. Doing so might cause an accident or damage.



If you have a weak heart, be careful when setting the ringtone vibration and incoming volume to prevent adverse Instruction effects on your heart.



Pay attention to items becoming stuck to the main unit. The speaker uses magnets, and so thumbtacks, pins, craft knife blades, staples, and other metal objects sometimes become stuck to the main unit, and cause unexpected injury.



Do not put the product directly on sand at a beach, etc. Sand or other small particles might get inside the earpiece, Prohibited mouthpiece, speaker causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.

## ■ Battery Pack



#### (The battery pack of the product is a lithium-ion battery.)

The battery pack is not fully charged at the time of purchase. Charge the battery before using the product. Also charge the battery after long periods of disuse before using the product.



Be sure to read the following hazards before use.



Do not short-circuit the plus (+) and minus (-) terminals on the battery pack.



Do not fail to connect the battery pack to the product in the correct orientation. Connecting in an incorrect orientation Prohibited might cause rupture, fire or overheating. Do not try to forcibly connect the battery pack, instead thoroughly check the contact terminal before connection.



Do not puncture the battery pack with a nail, hit it with a hammer or step on it. Doing so might cause ignition, Prohibited overheating, rupture or damage.



Do not allow metal objects (such as necklaces and hairpins) to come in contact with the contact terminal when Prohibited carrying or storing the battery pack. Short-circuiting might cause overheating, ignition, fire, leakage, or malfunction.



Do not disassemble, modify or directly solder the battery pack. Doing so might cause battery fluid to spurt, causing blindness if entering eyes, etc. or causing overheating, prohibited ignition, rupture, or injury,



Do not use a battery pack that has been dropped, stepped on, damaged, or that is leaking battery fluid. Doing so Prohibited might cause overheating, ignition, leakage, malfunction. or injury. Immediately move the battery pack away from fire if you notice leakage of fluid or unusual odor. Failure to do so might cause the leaked fluid to catch fire resulting in ignition or rupture.



Do not wet the battery pack with water, seawater, pet urine, etc. A wet battery pack might cause overheating, rupture. ignition, malfunction, or injury. If you drop the product into water prohibited water by mistake, immediately turn off the power, remove the battery pack, and contact an au shop or the Keitai Guarantee Service Center. Never charge a wet battery pack.



Battery fluid on skin and clothes might cause injury: immediately rinse with water. Battery fluid in eyes can cause blindness; rinse with water without rubbing, and immediately and seek medical attention. Wipe away battery fluid on the product without directly touching fluid.



The battery pack is a consumable item. If the performance of a battery pack does not recover (e.g. the usable time after each charge has become extremely short), the battery pack is at the end of service life, so stop use and buy a new one of the specified type. Failure to do so might cause overheating, ignition, rupture or leakage. Note that the length of service life varies depending on the usage condition, etc.



Be careful not to let a pet bite the battery pack. Letting it do so might cause leakage, overheating, rupture, Instruction ignition, fire, injury, etc.

## Charger



## Be sure to read the following warnings before use.



Do not use at other voltages than the specified power supply voltage. Doing so might cause ignition, fire, Prohibited overheating, electric shock or injury.

- - . Specified AC adapter (sold separately): 100 V AC to 240 V AC
    - Do not charge with voltage converter for overseas travel.
  - · Specified DC adapter (sold separately): 12/24 V DC (for negative grounded vehicles only)



Firmly insert the power plug of the specified charger (sold separately) into the power outlet or cigarette lighter socket down to the base of its pins. Incomplete insertion of the power plug might result in electric shock, overheating, ignition, fire, or injury. Do not use damaged specified charger (sold separately) or loose power outlets or cigarette lighter sockets.



If the fuse in the common DC adapter 03 (sold separately) blows, replace it with a fuse of the specified type (250 V, 1 A). Replacing with a different type of fuse might cause overheating or ignition. (For information about fuse replacement, carefully read the manual for the common DC adapter 03 (sold separately).)



Do not damage, modify, twist, pull or place a heavy object on the cable of the specified charger (sold separately). Do Prohibited not use a damaged cable. Doing so might cause electric shock or short circuit causing fire, a fault, or injury.



If you hear thunder, do not touch the specified charger. Doing so might cause an electric shock as a result of a Prohibited lightning strike.

Before cleaning the specified charger (sold separately).



unplug its power plug from the outlet or cigarette lighter socket. If the plug remains plugged in when you clean the from power guillet charger, it might cause electric shock or short circuit causing fire, a fault, or injury.



Wipe off dust on the power plug. Failure to do so might cause fire, burns or electric shock,



When the charger is not to be used for a long time, disconnect the charger's power plug from the power outlet Disconnect plug or cigarette lighter socket. Failure to do so might cause fire from power outlet or a fault.



Specified chargers (sold separately) are not waterproof. Never use in places subject to direct splashing with water, pet urine, etc. or in humid places such as a bathroom. water prohibited Doing so might cause overheating, fire, electric shock, or injury. In the event that a charger is splashed with liquid, immediately disconnect its power plug.



Do not plug in or unplug the specified charger (sold separately) with wet hands. Doing so might cause electric shock, a fault, or injury.



When not using the specified charger (sold separately), do not leave it plugged into an outlet or cigarette lighter Prohibited socket. Do not wrap power cord of the specified charger (sold separately) around the charger. Doing so might cause electric shock, overheating, fire, a fault, or injury.



Do not forcibly bend the charger's plug or the connection between the connector and power cord. Doing so might Prohibited cause electric shock, overheating, fire, a fault, or injury,



Do not use the desktop holder (sold separately) inside a car. Doing so could hinder driving and cause an accident.



Be sure to read the following cautions before use.



When unplugging the power plug of the specified charger (sold separately) from the outlet or cigarette lighter socket, hold the charger body to do so. If you pull the cable, it from power guillet might be damaged, causing overheating, ignition, electric shock, or injury.



Do not use the common DC adapter 03 (sold separately) with the car engine stopped. Doing so might result in Prohibited draining of the car battery.



Do not leave the specified charger connected to the product with the battery pack removed. Doing so might Prohibited cause ignition, electric shock, or injury.

#### au Nano IC Card 04



## Be sure to read the following cautions before use.



Be careful not to injure your hand or finger when attaching/ removing the au Nano IC Card 04.



Do not subject the au Nano IC Card 04 to actions that can damage it (use in high-temperature conditions, throwing in Prohibited a fire, allowing metal contacts to come in contact with foreign objects, subjecting to shock, bending or pressing, wetting, etc.). Doing so might erase data or cause a fault.



Do not store the au Nano IC Card 04 in places that get hot (places subject to direct sunlight, etc.) or in dusty places. Prohibited Doing so might cause a fault.



Store the au Nano IC Card 04 out of reach of small children. Accidental swallow might cause asphyxiation, Instruction injury, etc.

## Use near Medical Instruments and Inside Medical **Facilities**



## Be sure to read the following warnings before use.



When using the product near an implanted pacemaker. implanted cardioverter-defibrillator or other electronic medical device, radio waves might affect these units and devices. So, please observe the following.

- 1. Those with an implanted pacemaker or implanted cardioverter-defibrillator should carry or use the product at least 15 cm away from where the implant is.
- 2. Change to Airplane mode on the product beforehand or turn the product off before entering a place where it may not be possible to maintain a distance of 15 cm. such as where movement is restricted, since there may be people with a cardiac pacemaker or implanted cardioverter-defibrillator nearby.
- 3. When a medical institution has laid down designated areas where use of the product is prohibited or is not allowed to be brought in, abide by the instructions of that medical institution
- 4. When using electronic medical devices other than an implanted pacemaker and implanted cardioverterdefibrillator outside a medical institution (e.g. home medical treatment), check individually with the manufacturer of the electronic medical device regarding the influence of radio waves

## **Handling Precautions**

These precautions are provided to prevent product faults and to ensure that performance can be fully demonstrated.

Thoroughly read these precautions to ensure correct use.

## ■ Precautions common to the main unit, battery pack, back cover, charger, au Nano IC Card 04, peripheral devices

Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heavy object on the product in a bag. Sitting on the product in your pocket might damage the display or internal circuit board resulting in a malfunction.

Keeping an external device connected to the external connection jack might damage the connector resulting in a malfunction. Such damage and malfunction are not covered by the warranty, even if there is no external damage.

To ensure waterproof property (equivalent to IPX5 and IPX7) of the product, use the product with a specified back cover tightly closed. Note that the waterproof property is not guaranteed in every usage condition. Do not allow water to get inside the product or splash water on the battery pack, charger, or optional accessories. Do not open/close the back cover in the rain or with any water on the surface of the product. Doing so might cause water intrusion resulting in internal corrosion.

Malfunctions determined to be caused by such water intrusion are not covered by the warranty.

- Do not use the product in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%.)
  - Charger
  - · Peripheral devices

- Do not use the product in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%.)
  - SHF32
  - · Battery pack (installed in SHF32)
  - au Nano IC Card 04 (inserted into the SHF32)
- Do not use in places subject to lots of dust or vibration.
- Clean the product with a soft dry cloth (such as the type used for eyeglasses). Forceful rubbing with a dry cloth may scratch the display. The display may be stained if splash or smear is left attached to the surface. Wiping the product using alcohol, thinner, benzene, detergent, etc. might erase the printing on the outer casing or cause discoloration.
- Use as far away as possible from fixed-line phones, TVs and radios. Use nearby might affect them.
- The product may become warm while charging or during other operations, depending on the situation, but this is not abnormal.
- Turn off the power of the product before removing the battery pack.
   If you remove the battery pack with the power on, saved data might be altered or lost.
- When the temperature of the product gets high during use, the product may temporarily lower the screen brightness or may stop part of its functions to protect the main unit.

## Main unit

- Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so might cause scratching or damage.
- Do not forcefully press sharp objects or hard objects against keys or display surface. Doing so might cause scratching or damage.

- The product's keypad (touch area) can be operated with your fingers as a touchpad (Touch Cruiser EX). However, in the following cases, the touch area may not respond to touch operation. These may also result in malfunction.
  - · with gloves on
  - · with fingernails
  - · with another object placed on the operation area
  - · with a sticker adhered
  - with any water or condensation on the touch area
  - · with wet or sweaty fingers
- Do not remove the sticker printed with the IMEI number in the battery compartment visible when the battery pack is removed. This sticker bears a "Technical Conformity Mark &" certificating that the product and the communication module you are using comply with the Radio Law and Telecommunications Business Law.
- Never use modified au cell phones. Use of a modified device violates the Radio I aw.
  - The product has acquired the certification of conformity with technical regulations for a specified radio station based on the Radio Law, and the "Technical Conformity Mark \( \mathbb{E} \)" can be confirmed on the product nameplate sticker.
  - If the screws of the product are removed and modifications are made to the internal components, the certification of conformity with technical regulations will become invalid. Never use the product without this valid certification. Doing so violates the Radio Law.
- Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product, as it might cause malfunction.
- Putting strong magnetism close to the product might cause false operation.
- When you put the product in your pocket or bag, take care so that the display does not come in contact with metal objects or other hard objects, as it might cause scratching or damage. Straps with metal or other hard parts that may come in contact with the display may cause scratching or breakage.

- When suddenly brought into a warm place from a cold place, or when in a humid location, or when used where temperature suddenly changes (e.g. near the air discharge port of an air conditioner), water drops (i.e. condensation) sometimes are formed inside the product. Note that when used under conditions such as this, humidity might cause corrosion or a fault.
- When wiping the display, wipe with a soft, dry cloth. Use of a moistened cloth, glass cleaner or other similar liquid might cause a fault.
- When connecting/disconnecting an external device to/from the external connection jack make sure to insert/remove the connector of the external device straight to/from the jack.
- Note that applying unnecessary force with an external device connected to the external connection jack may cause damage.
- Do not exert excessive force when attaching/removing a microSD memory card. Doing so might injure your hands or fingers.
- While writing/reading data to/from a microSD memory card, do not subject the product to vibration or impact, remove the battery pack, or turn off the power. Doing so might cause loss of data or a fault.
- Do not remove the black sheet on the inside of the back cover.
   Doing so may prevent Osaifu-Keitai<sup>®</sup> from reading/writing properly.
- Covering earpiece (receiver), mouthpiece (microphone), speaker,
- or air vent with stickers or fingers may hinder product performance.

  If the display gets damaged, immediately stop use and contact an
- au shop or Keitai Guarantee Service Center. Keeping using it may cause injury.

  Putting a sticker, etc. on the main display or a key may cause
- Putting a sticker, etc. on the main display or a key may cause malfunction or shortened usage time. Also, doing so may damage the product.
- Be careful not to pinch your fingers when opening/closing the product.
- If you put magnetized objects, metal straps, etc. close to the product, the speaker section sometimes emits sounds. This is not a fault.

 Bright places such as under the direct sunlight sometimes make it hard to see the display. This is not a fault.

## OLED Display

- The product uses an OEL display in its sub-display. While OEL displays may experience lowered partial brightness if same images are displayed for a long time or if used for an extremely long time, this is due to the characteristics of the OEL display and is not a malfunction.
- OEL displays are manufactured with high-precision technology, and may experience very limited instances of pixels not lighting or being always on.
   Brightness may also appear unevenly in bands depending on the
- angle. This is due the structure of the OEL display, and is not a malfunction.

  Leaving an OEL display under direct sunlight might cause malfunction. Use caution when placing near a window or outdoors.

## ■ Battery pack

- Use in very hot or cold environments, for example, when left in an automobile with the windows closed in summer, will cause the battery capacity to drop and shorten the available battery usage time. This will also shorten the battery pack's service life. Try to use the battery pack as much as possible at room temperature.
- When the battery pack is not to be used for a long time, remove the battery pack from the main unit, and store it away from hot and humid places.
- Battery packs sometimes swell up as they approach the end of their service life depending on the usage condition.
   This is due to the properties of lithium-ion batteries, and is not a problem in terms of safety.

#### au Nano IC Card 04

 Do not forcibly remove or insert the au Nano IC Card 04. Be careful not to exert excessive force when inserting the card into your au cell phone.

- You are responsible for any damage caused by inserting your au Nano IC Card 04 into some other IC card reader/writer, etc.
- Keep the IC (metal) part of your au Nano IC Card 04 clean. Wipe the card with a dry, soft cloth (such as for cleaning eyeglasses) for cleaning.
- Do not put stickers, etc. on the au Nano IC Card 04.

#### Camera

- When using the camera, follow common rules of etiquette regarding camera use.
- When photographing important occasions (such as a wedding), take a trial shot and check the shot image to make sure it is correctly shot.
- Do not use the camera for recording commercially available books or information of which photographing is not allowed.

## Copyrights and rights of portrait

- If the data you shot or recorded using the product or the data you downloaded from the Internet etc. is in part or in whole protected by the third party's copyright, you are not allowed to copy, distribute, publicly send, modify the data without consent of the copyright holder, except for personal use, under the copyright law. In addition, do not use or modify portraits or names of other individuals without their consent, as it may infringe on rights of portrait.
- Note that shooting and recording might be restricted at some live performances, shows and exhibitions even for personal use.
- Be careful about the copyright and portrait right when posting still pictures you shot, etc. on Internet homepages.

## ■ Back up content on the product

 Please back up important content recorded or downloaded to the product to an outside source. Content recorded to memory on the product sometimes disappears or is altered by unexpected factors, such as static electricity or a fault, or by repair, mishandling, etc.

## **Available Security Codes**

## **Security Codes**

The product has various security codes that you can use.

The available security codes are as follows. Do not forget the various security codes that are set as they are necessary for various operations and contracts.

Be sure to change the initial values to your own numbers you have chosen.

#### ■ Security code

Example of usage	To do remote operation of voice mail and call forwarding services from a landline phone     To use Customer Service Center and to do various inquiries, applications, and modifications on the au homepage
Initial value	A four digit number chosen by the customer and noted on the application form

#### Security key (Passcode/Password)

	To set/cancel voice calling restrictions, etc. or lock Osaifu-Keitai®
Initial	1234
value	

Be sure to change the initial values to your own numbers you have chosen.

## ■ PIN code

1 '	To prevent unauthorized use of the au Nano IC Card 04 by third parties
Initial value	1234

Be sure to change the initial values to your own numbers you have chosen.

### PIN

#### PIN Code

To prevent unauthorized use of the au Nano IC Card 04 by a third party, you can set the product to require PIN code entry every time the power is turned on. You also need to enter PIN code when setting whether PIN code entry is required.

If PIN code is incorrectly entered three times consecutively, the PIN code will be locked. You can unlock the PIN code using PUK code.

- At the time of purchase, the PIN code is "1234", and entry requirement is "not required". You can change the PIN code to any 4- to 8-digit number and the entry requirement to "required" if necessary.
- To use the product with a PIN code "required", be sure to change the PIN code to your own number you have chosen.

#### PUK Code

In case PIN code is locked, you can unlock it by entering PUK code.

- PUK code is an eight-digit number given at the time of purchase, which is printed on the back side of the plastic card on which your au Nano IC Card 04 is attached.
- · After entering PUK code, you need to set a new PIN code.
- If PUK code is incorrectly entered ten times consecutively, contact an au shop, PiPit or Customer Service Center.
- "PIN code" is not reset by initializing the product.
- When the PIN code is locked, the product may restart for the security reasons.

## **Notes on Waterproof Property**

Before using the product, thoroughly read the contents of "Notes on Waterproof Property" to ensure correct use. Failure to follow the contents described in these sections may cause intrusion of water, sand or other foreign material, resulting in overheating, ignition, electric shock, injury or fault.

Proper operations of the product are not guaranteed in every possible condition during actual use. Faults determined, after an inspection, to be caused by mishandling by the customer such as by using the product without following the contents written on "Notes on Waterproof Property" are not covered by the warranty.

## ■ Waterproof Property of the Product

The product has a protection rating (JIS C 0920) for waterproof property equivalent to IPX5<sup>-1</sup> and IPX7<sup>-2</sup> on the condition that the back cover is securely closed (based on testing by the Company). The product does not have dustproof property.

- \*1 IPX5 means that the cell phone continues to function as a phone after being subjected to a water jet (approximately 12.5 liters/min) discharged from a water pouring nozzle (inner diameter: 6.3 mm), from all directions and approximately 3 meters away from the cell phone for at least 3 minutes.
- \*2 IPX7 means that the cell phone continues to function as a phone after being gently lowered into a tank filled with still tap water (at room temperature) to the depth of 1 meter, immersed at the bottom for approximately 30 minutes and then taken out of the tank.

## ■ Waterproof property of the product enables you

- To talk on the product in the rain without an umbrella (with a precipitation of 20 mm/hour or smaller).
- To use the product at the poolside. However, do not get it wet with water other than tap water such as water in the swimming pool or submerge it in water in the swimming pool.
- To wash the product with the low-pressure water flow of a tap water (6 liters/min or lower) at the room temperature (5°C to 35°C).

## Handling the product

- Close the back cover securely. Even a fine particle (a hair, grain of sand, tiny fiber, etc.) pinched between contact surfaces may allow intrusion of water.
- If liquid such as water is splashed onto the product with the back cover opened, the liquid may seep inside and cause electric shock or malfunction. Discontinue using the product, turn off the power and then contact an au shop near you or the Keitai Guarantee Service Center.
- · When the product is wet, wipe it with a dry and clean cloth.
- When your hand or the product is wet, never open/close the back cover.
- The product is resistant to fresh and tap water at room temperature (5°C to 35°C) only. If you let the product get wet with or submerged into the liquids other than fresh and tap water at room temperature, stop using it and wash it with fresh and tap water at room temperature.
- Do not use the external connection jack when the jack is wet or sand or dust is attached to it. Doing so may cause impairment of the waterproof property or cause electric shock, short circuit, etc. resulting in a fire, burns, or a fault.

## ■ Notes on Using the Product

- Do not let the product get wet with or submerged into the following liquids.
  - · Water containing soap, detergent or bath powder
- · Seawater or water from a swimming pool
- · Hot spring, hot water, etc.
- If the product gets wet with seawater, water from a swimming pool, soft drink, etc. or dust, sand, mud, etc. is attached on the product, immediately wash it away with fresh and tap water at room temperature (5°C to 35°C). When it gets dry and coagulated on the product, the stains get hard to get rid of and may cause fault.
- Using the product without completely washing sand or mud away may cause fault such as scratches and damages on the product.

- Do not immerse the product in a bathtub or swimming pool. Also, do not use it under water. (including key operations.)
- The product is not designed to withstand high water pressure. Do not expose the product to a strong water flow with tap water, shower, etc. (6 liters/min or more) or submerge it under water.
- To prevent condensation, wait until the product reaches room temperature before you bring it from a cold place into a warm place.
   If condensation occurs, leave it in room temperature until the condensation is removed.
- Do not get the product wet with hot water, use it in saunas or expose it to hot air from hair dryer etc.
- Do not place the product where it gets extremely hot or cold such as near a stove or in a refrigerator.
- Volumes may temporarily become lower due to water entering in the earpiece, mouthpiece and speaker. Drain water and dry the product well before use.
- . The product does not float on water.
- . Do not use the product in heavy rain.
- Do not leave the product wet. Doing so may let the liquids freeze on the product in cold places or otherwise cause fault.
- Do not drop or otherwise subject the product to strong impact or jab the earpiece, mouthpiece, speaker, etc. with a sharp object. Doing so may cause scratching, deformation, etc. on/of the product, resulting in impairment of waterproof property.
- Do not place the product directly on sand at a beach, sandbox, etc. or on mud. Grains of sand may get into the earpiece, speaker, etc., causing the volume to drop.
- The battery pack, desktop holder (sold separately), and optional accessories are not waterproof. Do not use in a bathroom, shower room, kitchen, sink, or other location where water is regularly used.
- If the back cover degrades or is damaged, the waterproof property cannot be maintained. In such case, contact an au shop near you.

## ■ Maintaining the Waterproof Property

#### Rubber seal

The rubber seal on the back cover is important in maintaining the waterproof property. Be sure to observe the following items.

- · Do not remove or scratch it.
- When closing the back cover, do not let the rubber seal caught.
   Also, do not insert sharp objects into gaps around the back cover or the external connection jack section. Doing so may damage the rubber seal and allow intrusion of water.
- It is recommended to replace the parts for maintaining the waterproof property (pay service) once every two years regardless of whether any abnormality is present. For information on part replacement, contact an au shop near you.

## Precautions on Charging

The battery pack, desktop holder (sold separately), specified charger (sold separately), and optional accessories are not waterproof. Be sure to check the following items before and after charging.

- Check that the product is not wet. If it is wet or after it gets wet, drain
  water well and wipe remaining water off with a clean dry cloth etc.
  before mounting in the desktop holder (sold separately) or inserting
  the microUSB plug into the external connection jack.
- Never connect the microUSB plug when the product, desktop holder (sold separately), or specified charger (sold separately) is wet.
   Although the product is water resistant, any water or foreign matter on the product or microUSB plug when inserting the microUSB plug while the product/specified charger is wet might cause electric shock or short circuit/corrosion causing abnormal overheating, burnout, fire, burns, or malfunction.
- Do not touch the desktop holder (sold separately) or specified charger (sold separately) with wet hands. Doing so may cause electric shock.

 Do not splash water onto the desktop holder (sold separately), specified charger (sold separately), or optional accessories when using the equipment. Do not use the equipment in places where water is regularly used such as a bathroom, shower room, kitchen, and lavatory. Doing so may cause fire, electric shock, malfunction, or injury.

## Washing the Product

If any stain, dust, sand, soft drink, etc. is attached to the surface of the product, gently wipe it off with a cloth and wash the product under a mild water flow (up to 6 liters/min) of tap water at room temperature (5°C to 35°C) approximately 10 cm away from the faucet or shower head.

Hold the back cover so that it does not open, and wash the product with your hands without using a brush or sponge. After washing the product, drain water off and before using the product.

- Make sure that the back cover is securely closed before washing the product.
- Do not wash the product with a washing machine or an ultrasound bath.
- The external connection jack section is especially subject to stain such as dust or sand adhesion. Wash away stain carefully so as not to keep it remaining in the sections. Also, after washing it away, make sure the sections get sufficiently dried off before using the product. Using the product with sand or water drops remaining in the jack sections may cause fault.
- When cleaning the external connection jack section, do not use tools such as a cotton swab or jam a cloth into the jack sections. Doing so may cause impairment of waterproof property etc., resulting in fire, burns, or a fault.
- Never put the product in a microwave oven for drying it. Doing so may cause the battery pack to leak liquid, overheat, rupture or ignite. Also, doing so may cause the product to overheat, emit smoke, ignite or cause destruction of circuit components.

 
 Do not expose the product to hot air from a hair dryer or leave it in a high temperature environment for drying it. Doing so may cause the product to deform, discolor, get out of order, etc.

## Draining Water

If the product gets wet, make sure to drain water remaining in the "external connection jack section", "earpiece (receiver) section", "mouthpiece (microphone) section", "speaker section", "key section", "hinges (joint)", "air vent", etc.

- Wipe off water on the surface of the product carefully with a dry and clean cloth etc.
  - If a strap is attached, dry it sufficiently as well.
- 2 Hold the product securely at its hinges (joint) and shake it approximately 20 times until there is no more water splashing.

 
Make sure of the safety around you and shake the product while holding it securely not to let it drop.












## Wipe off water remaining in the grooves of each section by gently putting the product against a dry and clean cloth etc.

Since water is sometimes left in the grooves of each section, clear them of water by putting a cloth against their openings and gently patting them.

 Make sure that there is no more water or foreign objects remaining in them.



4 Lay out a dry cloth etc. beneath and leave the product on the cloth at room temperature for approximately 2 to 3 hours to dry it.

Water, if any, remaining in the product may ooze up after wiping off.

Do not wipe off water remaining in the grooves directly by a cotton swap etc.

#### Precautions to be taken after water draining

Do not use the product with water drops still left on it.

- Doing so may cause call disruption or cause clothes or bags to get wet.
- Doing so may cause the external connection jack, etc. to shortcircuit, causing fire or malfunction.
- Doing so in a cold region may cause a fault due to water drops freezing.

## Notes on Using Bluetooth®/Wireless LAN (Wi-Fi®) Functions

## Precautions about Bluetooth®

- The Bluetooth<sup>®</sup> function of the product conforms to the domestic standards of Japan and FCC standards and EC directives, and has been certified.
- The 2.4 GHz band used by wireless LAN (Wi-Fi®) and Bluetooth® devices is shared by various other devices. For this reason, Bluetooth® devices use technologies for minimizing effects from other devices using the same radio frequency band. In some cases, however, the communication speed and connectable range may be decreased, or disconnection may occur, due to interference by other devices.
- The communication speed and connectable range vary depending on the distance between communication devices, obstacles and the connected devices used.

## Precautions about Wireless LAN (Wi-Fi®)

- The wireless LAN (Wi-Fi®) function of the product conforms to the domestic standards of Japan, FCC standards and EC directives, and has been certified.
- Do not use the product in places where electromagnetic waves are generated or near electric products, AV and OA equipment, or other magnetized devices.
- Subjecting the product to magnetic or electrical noise might increase noise and prevent it from performing communications. (The product is particularly susceptible to noise when it is used near a microwave oven.)
- Using the product near a TV, radio or similar appliance might cause reception interference and disrupt TV images.

- Searching might not be successful if there are multiple wireless LAN (Wi-Fi®) access points near the product and the same channel is being used.
- The communication speed and connectable range vary depending on the distance between communication devices, obstacles and the connected devices used.

## Frequency Band

Bluetooth® and wireless LAN (Wi-Fi®) functions (2.4 GHz band) of the product use frequencies in the 2.4 GHz band ranging from 2.402 GHz to 2.480 GHz.

The frequency bands used by this product's Bluetooth® and wireless LAN (Wi-Fi®) functions are given on the sticker located in the battery compartment.

. Bluetooth® function: 2.4FH1/XX4



The product uses the 2.4 GHz band.

FH1 uses FH-SS as the modulation scheme. The interference distance is about 10 m or less.

 $\ensuremath{\mathsf{XX4}}$  uses other schemes. The interference distance is about 40 m or less.

Bands of mobile unit identification devices cannot be avoided.

· Wireless LAN (Wi-Fi®) function: 2.4DS/OF4



The product uses the 2.4 GHz band.

DS-SS and OFDM are used as the modulation schemes. The interference distance is about 40 m or less.

Bands of mobile unit identification devices can be avoided. Channels available with the 2.4 GHz band wireless LAN (Wi-Fi®) of the product are between 1 to 13.

Available channels differ depending on the country. For use in airplane, check with the airline company in advance.

#### ■ Bluetooth® function precautions

The frequencies used by the Bluetooth<sup>®</sup> function of the product are in the 2.4 GHz band. In this frequency band, in addition to home electrical appliances such as microwave ovens and industrial, scientific and medical devices, other similar wireless stations, in-plant wireless stations for mobile unit identification that require a license for use such as factory production lines, specific small power wireless stations that do not require licenses, and amateur wireless stations (collectively called "other wireless stations" from here on) are operated.

- Before using the product, make sure that "other wireless stations" are not in operation nearby.
- In the event that instances of radio wave interference have occurred between the product and "other wireless stations", immediately either relocate the product or stop operation of the device (stop emission of radio waves).
- If you are unclear on any points or are troubled by anything, contact an au shop or Customer Service Center.

## ■ 2.4 GHz band wireless LAN (Wi-Fi®) precautions

The frequencies used by the wireless LAN (Wi-Fi®) function of the product is in the 2.4 GHz band. In the 2.4 GHz frequency band, in addition to home electrical appliances such as microwave ovens and industrial, scientific and medical devices, other similar wireless stations, in-plant wireless stations for mobile unit identification that require a license for use such as factory production lines, specific small power wireless stations that do not require licenses, and amateur wireless stations (collectively called "other wireless stations" from here on) are operated.

 Before using the product, make sure that "other wireless stations" are not in operation nearby.

- In the event that instances of radio wave interference have occurred between the product and "other wireless stations", immediately either relocate the product or stop operation of the device (stop emission of radio waves).
- If you are unclear on any points or are troubled by anything, contact an au shop or Customer Service Center.
- Connections between the product and all other Bluetooth® and wireless LAN (Wi-Fi®) devices have not been confirmed. Therefore, connections with all Bluetooth® and wireless LAN (Wi-Fi®) devices are not quaranteed.
- The product supports security features for wireless communications that are compliant with the Bluetooth® and wireless LAN (Wi-Fi®) standard specifications, but the security may not be sufficient depending on the usage environment and configuration. Be careful when making data communication using Bluetooth® or wireless LAN (Wi-Fi®) function.
- Wireless LAN (Wi-Fi®) has the advantage that it can be freely connected anywhere within the radio wave range, as it uses radio waves for exchanging information. At the same time, there is a risk that a malicious third party may obtain unauthorized access if security settings have not been configured. You are recommended to configure security settings before using wireless LAN (Wi-Fi®) at your decision and responsibility.
- The Company assumes no responsibility for leakage of data or information that may occur during Bluetooth®/wireless LAN (Wi-Fi®) communication.
- Since Bluetooth® and wireless LAN (Wi-Fi®) functions use the same frequency band, using the both functions at the same time may cause radio wave interference resulting in decreased communication speed or disconnection from the network. If connection fails, stop using either of the Bluetooth® and wireless LAN (Wi-Fi®) functions.

## Notes on Packet Communication Charge


- Since constant Internet connection is possible with the product, packet communication may be performed automatically by some applications, resulting in high packet communication charges.
   Therefore, subscription to the flat-rate/discount service for packet communication charges is recommended.
- To browse homepages, download applications, communicate using applications, send/receive e-mails and configure various settings, connection to the Internet is required, to which packet communication charge applies.
- \* Packet communication charge does not apply to wireless LAN (Wi-Fi®).

## **Notes on Applications**

- To download applications, first set an au ID and access au スマート パス(au Smart Pass). For details on setting an au ID, refer to the "Setting Guide".
- This product does not permit use of Google Play™ or EZweb.
- Be sure to check the security of the application, then install it at your own risk. Some applications might cause virus infection, damage various data, and send out your location information, usage history or personal information stored in your cell phone via the Internet.
- The Company assumes no responsibility for any problems that might be caused by applications you have installed. In such case, you may be charged a repair fee even during the warranty period.
- The Company assumes no responsibility for any disadvantage brought to you or any third party by applications you have installed.
- Insertion of a microSD memory card is necessary to use some applications.
- Some applications keep the screen turned on while they are active, or rapidly drain the battery while running in the background.
- Operation procedures and screen appearances of the applications preinstalled in the product and those installed by you are subject to change without notice as a result of version upgrade. In addition, operation procedures described in the "Basic Manual" available on the au homepage and on the product or "Setting Guide"/"Full Instruction Manual" (Japanese) available on the au homepage may differ from the actual procedures.

## Names and Functions of Parts

#### Front/Back

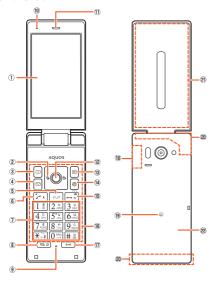

- 1 Main display
- 2 Cursor kev
  - €Left key/incoming call history
  - →Right key/outgoing call history
  - **⊕**Up key **⊋**Down key
- ⊕ Down key
- 3 Address book key
- ④ Mail key
- তি প্র্যাল Clear key
- 6 Call key
- ⑦ O 9, ★, #Number keys

Displays list of running applications. Hold down to set/cancel VeilView.

#### 9 Mouthpiece (Microphone)

Transmits your voice to the other party during a call. It is also used for recording sounds. Take care not to cover the microphone with your fingers etc. when using it.

- 10 Air vent
  - For maintaining performance.
- ① Earpiece (Receiver)

Hear the other party during a call, Answering memo messages, etc.

- (3) Camera key
- 14 Browser/Apps key
  - Displays browser menu. Hold down to display applications list.
- 15 Power/End call key

While using the product, end call or exit functions. Hold down to turn the power on, or to display a power menu for power off, reboot, or other operations.

## 16 Touch area (Touch Cruiser EX)

Use your fingers in the touch area to operate in the same way as a touchpad. (▶P.33)

- 17 Tethering key
- 18 Wi-Fi®/Bluetooth® antenna
- 19 20 mark

Hold it over a reader/writer when using Osaifu-Keitai®.

 
20 Internal antennas


Used when making calls or using the Internet or 4G (LTE).

② TV antenna

The product contains an antenna for viewing TV (1Seg).

- 22 Back cover
- Folded (Front/Back/Side)



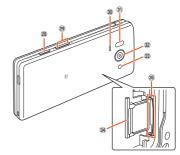

## 23 External connection jack

Use for connecting the common AC adapter 05 (sold separately), microUSB cable 01 (sold separately), or a USB cable (commercially available) for peripheral devices.

When you connect the common AC adapter 05 (sold separately), the microUSB cable 01 (sold separately), etc. to the product, some applications may not function properly since the geomagnetic sensor is affected by the magnetism of connected devices. Use the product after removing the cable.

## ② Charger terminal

Terminal for charging with the desktop holder (sold separately).

#### 25 Sub-display

Notifies you with information when a call is arriving, new mail is received, an alarm sounds, etc.

- 26 Strap evelet
- 2 Charging/Incoming indicator

Lights red/green while charging depending on the battery level. Flashes for an arriving call or new mail according to settings.

28 [3979-/37-] Shutter/Manner mode key

#### 29 A Volume UP/DOWN key

Adjust the volume.

Hold down when the product is folded to turn on the mobile light.

## 30 Speaker

Ringtones, alarms, etc. sound from here.

### 3 Infrared port

Transfer data by infrared communication.

- 32 Camera lens
- 33 Mobile light
- 34 au Nano IC Card 04 tray/slot
- 35 microSD memory card slot

#### Internal antennas, Wi-Fi®/Bluetooth® antenna and TV antenna

Antennas are built into the product. Do not cover with hand during calls or data communication, or place stickers over antennas. Doing so may affect call/communication quality.

## Earpiece (receiver), mouthpiece (microphone), speaker, air vent

© Covering earpiece (receiver), mouthpiece (microphone), speaker, or air vent with stickers, fingers, etc. may hinder product performance.

#### About IMEI

- MEI (international mobile station equipment identity) is a unique identifying code assigned to each device. The product's IMEI can be found on the sticker visible in the battery compartment.
- As the IMEI is required information for requesting repairs or after-sales service, do not remove the sticker with the IMEI printed on it.

## **Using Touch Cruiser EX**

Use your fingers in the touch area to operate in the same way as a touchpad (Touch Cruiser EX). Activating a function/application supporting Touch Cruiser EX enables Touch Cruiser EX and allows the on-screen pointer to be operated.

## Activate function/application supporting Touch Cruiser EX.

Touch Cruiser EX is enabled and "▶" (pointer) is displayed.

- Hold down to toggle Touch Cruiser EX on/off. If a function/ application is exited while Touch Cruiser EX is disabled, reactivating a Touch Cruiser-capable function/application does not enable Touch Cruiser EX
- Ending a function/application supporting Touch Cruiser EX disables Touch Cruiser EX
- Key operation is still possible even when Touch Cruiser EX is enabled (Except for some applications).

## Operation with Touch Cruiser EX

When using the browser, LINE, etc., the on-screen pointer can be operated like a mouse.



## ■ Tap/Double-Tap

Gently tap the touch area. To double-tap, tap the same position twice.

Select items and icons under the pointer.
 Double-tap a displayed still picture, etc. to zoom in or out. Zooming is carried out centered around the pointer. Zoom after placing the pointer where you want to zoom.



## Long-Touch

· Display menus, etc.

Keep gently touching the touch area. "\" " changes to ".\" . Tap the touch area or, after releasing your finger and several seconds of no operation, the indication returns to "\" ."



#### Slide

Long-touch the touch area to change "▶" to "♣"

While gently touching the touch area, slide in the desired direction or to the desired position.

 Slide in the desired direction to scroll and switch pages.



## Flick

Long-touch the touch area to change "\rightrangle" to "\rightrangle".

While touching the touch area, flick up, down, left, or right.

 Flick in the desired direction to quickly scroll the screen, switch pages, etc.



#### Pinch

While touching the touch area with two fingers, widen (pinch out) or close (pinch in) your fingers.

 Zoom in or out on the browser, etc.
 Zooming is carried out centered around the pointer. Zoom after placing the pointer where you want to zoom.



- The touch area is designed to be touched gently. Avoid pressing forcefully or using sharp objects (ballpen, pin, etc.).
- The touch area might not respond to the following types of operation, and may also cause malfunction.
  - · with gloves on
  - · with fingernails
  - · with another object placed on the operation area
  - · with a sticker adhered
  - · with any water or condensation on the touch area
  - · with wet or sweaty fingers

# Switching the Display Language to English

You can switch the display language for function names and other items to English.

- When the standby screen is displayed, press → [設定](Settings).
- [その他](Other settings) → [言語(Language)を選択] (Select language).
- [English].

## **Using the Standby Screen**

Check the status of the product in the standby screen.

### ■ Viewing the Standby Screen



(Standby Screen)

- ① Status Bar
- ② Search
- 3 Calendar
- 4 Indicator icons Indicators for missed calls, unread e-mail/SMS, and notifications are displayed.
- ⑤ Kantan Hasshin icon When displayed, you can use Kantan Hasshin (speech recognition) to make a call. (▶P.52)
- 6 Clock

## Using shortcuts in the Standby Screen

You can use the calendar and indicator icons in the standby screen as shortcuts.

- When the standby screen is displayed, press ⊕ → Select item → ⑥.
  - Selecting an indicator icon displays its content in a balloon.

# **Using the Status Bar**

## Icons

The notification icons to notify you of a missed call, a new mail message, a running operation, etc. are displayed on the left side of the status bar, while the status icons to show the status of the product are on the right side.

#### ■ Main Notification Icons

Icon	Description
č	Missed call
$\stackrel{\circ}{\mathbb{Z}}$	New e-mail message
See	New SMS message
	1Seg signal strength ☑ - █: Level display
C	Making a call, talking, receiving a call
<b>C</b>	Talking in high quality sound with a model supporting VoLTE provided by au.
G	Call on hold
00	Answering memo
.0.	Available space on the internal memory being run out
C	Software update available
+	Icons collected

Some icons are displayed with their number superimposed on them.

#### ■ Main Status Icons

Icon	Description
12:34	Time
<b>=</b>	Battery level ☐ - ☐: Battery level display ☐: No battery  While charging, the battery icon is displayed with  superimposed.
*	Airplane mode set
.1111 .11	Signal strength (Receiving electric field)  1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1
あ AB 12 カナ A 1 カ 区	Character type
<b>⊕</b>	Manner mode status  ☐: Standard manner mode  ☐: Drive manner mode
<b>②</b>	During a call using hands-free
<b>₩</b>	Arriving call volume set to "Silent"
<i>¾</i>	Microphone set to "Mute" during a call
ି - ଚି	Wi-Fi® signal strength
00 50 08	Answering memo set  Solution: No Answering memo Answering memo (one to nine entries) Answering memo full (ten entries)

 
## Using the Notification/Status Panel

In the notification/status panel, you can check the details on notification icons and status icons or activate an application corresponding to a notification.

You can also set the manner mode and check Answering memo.

- When the standby screen is displayed, press ♣ → Select the status bar → ●.
- Select the notification → ●.
  The application corresponding to the notification is activated.

■ Viewing the Notification/Status Panel



(Notification/Status Panel)

① Music controller

Displayed when playing music with LISMO. Only allows pausing.

2 Notification area

Check the status of the product and contents of notifications.

## Using notifications

Options corresponding to the content of the notification are displayed.

Select an option → ●.

You can activate a corresponding application, etc.

### ■ Deleting 1 notification

- Select the notification to delete in the notification/ status panel → □ (Submenu) → [Delete one item] → ●.
- Deleting all notifications
- ☐ (Submenu) in the notification/status panel → [Delete all] → •.
  - You may not be able to delete a notification, such as for battery level or signal strength.

## Using the Sub-display

The sub-display shows information including manner mode, battery level, and other product status, the date and time, and caller and other information.

Press // // // // to switch displays.

#### ■ Viewing the Sub-display



#### Main Icons

Icon	Description
al al a . X	Signal strength (Receiving electric field)  ∭Strong / ∭Fair / ∭Weak / ∭Faint /
	Battery level  The state of the
C	Missed call  • Displays number of calls.
	✓: New mail (e-mail/SMS)     Displays number of new mails.     ✓: Emergency Rapid Mail

Icon	Description
~ # #	Manner mode status
	🖁 : Standard manner mode
	🖀 : Drive manner mode
	: Silent manner mode
<b>2</b>	Answering memo set     Displays number of unread Answering memo messages.
<b>?</b>	Screen locked
本	Airplane mode set

#### ■ Displayed Information

Status		Display	
Voice call arriving	Display caller (Registered in address book)	Registered name	
	Display caller (Not registered in address book)	Phone number	
	Not display caller	"Incoming call"	
	Answering memo	Answering: "Playing answering memo guidance" Recording: "Recording answering memo"	
In call	In call	"In call"	
	Sound memo	"Recording sound memo"	
	Volume change	Volume change screen	

Status		Display
Mail arriving	Display caller (Registered in address book)	Registered name
	Display caller (Not registered in address book)	E-mail address Sender designation
	Not display caller	"Received mail"
SMS arriving	Display caller (Registered in address book)	Registered name
	Display caller (Not registered in address book)	Phone number
	Not display caller	"Received message"
Alarm	Alarm sounding	Alarm time, alarm name
	Snoozed	"Snoozing"
Emergency Rapid Mail		"Emergency mail"
Manner	When set: normal	"Standard manner set."
mode	When set: drive	"Drive manner set."
	When set: silent	"Silent manner set."
	When not set: normal	"Standard manner canceled."
	When not set: drive	"Drive manner canceled."
	When not set: silent	"Silent manner canceled."
Music playing	Volume change	Volume change screen
LINE application notification		Message from LINE application is displayed.

# **Using the Main Menu**

In the main menu, applications are grouped in menus. Select a menu and then an item to activate an application.

- When the standby screen is displayed, press .
  The main menu is displayed.
- 2 Select menu → ⑥.
  Menus have correspondence with the dial keys (⑥ to ⑨, ※,
  #). Press any key to select a menu.
- Select application → ●.
- Viewing the Main Menu



《Main Menu》

## ■ Main Application List

Menu	Description
auスマートパス (au Smart Pass)	In addition to up-to-date news, horoscope, and train connection information, this service also has benefits such as all-you-can-download applications, bargain coupons, and presents, for enjoying using the product with security and freedom.
Browser	View webpages the same way as with a PC. (▶P.67)
au WALLET	Allows you to get the most convenience from your au WALLET card. In addition to loading cash to your card, use the screen optimized for cell phones to check your card's cash balance, point balance, bonuses, and more.
Camera	Capture still pictures and video. (▶P.69)
Datafolder	View captured still photos/videos, downloaded files, etc.
LINE	This communication app allows you to enjoy calling and texting as much as you want, any time and any place. ( > P.65)

Menu	Description	
Application*		
au ID Setting	Set au ID.	
auナビウォーク(	au navi walk)	
LISMO		
au Wi-Fi接続ツー	レ (au Wi-Fi connection tool)	
GLOBAL PASSPO	PRT	
リモートサポート (Remote support)		
Safety Access		
au Backup App		
au災害対策 (au Disaster Countermeasure)		
OfficeSuite	This application allows viewing of Microsoft Word, Excel, PowerPoint and PDF files created on a PC or other device. Use easily whenever you want to view these types of files.	

Menu	Description		
Tools			
Alarm	Use alarms.		
Timer	Use a timer.		
Calendar	Use a calendar.		
Notepad	Use a notepad.		
Calculator	Use a calculator.		
PASSNOW	By pairing with a compatible tablet or other device, you can enjoy still pictures and videos captured with the product on the tablet, as well as view notifications arriving on the product or tablet from either.		
TV (One Seg)	View digital terrestrial TV broadcast service for mobile devices. (▶P.72)		
Infrared	Transfer data between the product and another device with an infrared communication function.		
Osaifu-Keitai	Use services compatible with Osaifu-Keitai®.		
TOUCH CRUISER EX Guide	Display operating instructions (Japanese) for Touch Cruiser EX. (▶P.33)		
Widget sheet	Add and use widgets.		
GLOBAL PASSPORT	When overseas, use this application to confirm fees applicable for your country of stay, how to make settings, the method of making international calls, etc.		
au Wi-Fi接続 ツール (au Wi-Fi connection tool)	Allows simple connection to a HOME SPOT CUBE or other wireless LAN (Wi-Fi®) base set in your home. All au Wi-Fi SPOTs become available when outside. Spot searching also possible.		
StopWatch	Use a stopwatch.		
World clock	Use a world clock.		

Menu	Description	
Service		
auお客さまサ ポート (au Customer Support)	Display the au Customer Support webpage. Check charges, change details of subscription, etc.	
LISMO	Play music and look for the latest music information. Also, listen to samples and buy songs you searched for.	
auナビウォーク (au navi walk)	View navigation for a best route that combines transportation and walking.	
au災害対策 (au Disaster Countermeasure)	This is an application in which you can use Disaster Message Board, Emergency Rapid Mail (Earthquake Early Warning, Disaster and Evacuation Information, and Tsunami Warning) and Disaster Voice Messaging Service. (▶P.5)	
リモートサポート (Remote support)	When unsure how to operate the product, obtain assistance from staff who also share a view of your screen.	
Safety Access	Filtering application that restricts access to webpages and use of applications that are likely inappropriate, allowing your child to use the cell phone worry free.	
au Backup App	Allows all the different data stored on your au phone to be backed up or restored using a microSD memory card.  The auto backup function automatically backs up data on the day and at the time you set.	
メーカーサービ ス(SHSHOW) (Manufacturer service (SHSHOW))	Download, view, etc. contents.	

Menu		Description
Call/mail		
	Incoming/ outgoing call history	View incoming and outgoing call histories. (▶P.50)
	Address Book	Register contacts to the address book and use registered information. (▶P.56)
	Call settings	Make call settings.
	Speed dial	View a speed dial list. (▶P.52)
	Voice party	Call with up to 30 people at the same time. (▶P.54)
	E-mail	Use an e-mail (@ezweb.ne.jp) address to send and receive e-mail. ( P.61)
	SMS	Send and receive SMS using a phone number as the recipient. ( > P.63)
Profile		Check and edit your profile. (▶P.55)
Settings		Specify and manage settings in the settings menu. (▶P.74)

 <sup>\*</sup> Additionally downloaded applications are displayed in "DOWNLOAD" (▶P.43).

- When activating applications and using their functions, communication charges may result for some functions.
- After upgrading an application version or in similar instances, the design of applications, icons, etc. on the product may differ from this manual.
- O Initializing the product does not delete preinstalled applications.

## About Applications

"Application" allows you to use applications pre-installed at time of purchase as well as additionally downloaded applications.

When the standby screen is displayed, press ● → [Application].

The application list is displayed.

- Switching tabs
- When the application list is displayed, press ⊕.
  The "PRESET"/"DOWNLOAD" tabs switch.
- Searching for applications
- When the application list is displayed, press (AppSearch).

The auスマートパス(au Smart Pass) site is displayed. Follow the on-screen instructions to search for and download applications.

## **Learn Common Operations**

## Learn Basic Key Operations

#### Using Functions that Appear at the Bottom of the Screen

Press the key corresponding to a function that appears at the bottom of the screen.



- ① For "Done", press ①.
- ② For "Submenu", press .
- ③ For "あA1", press ☑.
- 4 For "Emoji/Sym", press a.
- (5) For "Select area", press @

#### ■ To Select Items

To select a displayed item, select the item using ♠ or ♠ and press ♠. If ♠ to ♠, ##, etc. are displayed in the menu, you can also press a corresponding dial key.

You can also sometimes press .

#### ■ To Return to Previous Screen

You can press your to go back one screen.

 You can also sometimes press ⊙, □, or □ to return to the previous screen.

#### ■ To Return to the Standby Screen

To return to the standby screen from any function, press .

- After a certain period of no key operation, the product may return to the standby screen automatically.
- . If activating a function while in a call, the call may be interrupted.
- · The function or application being used is ended.

#### ■ To Enter Numbers

You can press O to 9 to enter numbers.

If "▲" and "▼" are displayed above and below the number entry field, you can press \$\mathbb{O}\$ to increase or decrease the number.

#### ■ To Move to Previous or Next Data

While displaying mail, etc., you can press n to move to the next data or  $\boxtimes$  to move to the previous data.

## ■ To Scroll the Page

When browsing a webpage or displaying a mail list, message, data list, etc., you can press  $\boxtimes$  to scroll up or  $\circledcirc$  to scroll down.

## Using Checkboxes

If a checkbox is displayed next to a setting item, you can select the item or the checkbox to enable or disable the item.

When performing operations on data such as "Move selected", "Save selected", or "Delete selected", you can select checkboxes to select or deselect items.

	Icon example	Description
	~	Setting is enabled or item is selected.
		Setting is disabled or item is not selected.

# Learn How to Enter Characters

## **■** Key Assignments for Character Entry

Character type	Kanji	Alphabet (2-byte)	Digits (2-byte/1-byte)
	▶あいうえおぁぃうえぉ	▶.@/:~1	1
1	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ アイウエオァィウェオ ]	<b>▶</b> .@/:~1	1
Character type	Kanji	Alphabet (2-byte)	Digits (2-byte/1-byte)
	▶ かきくけこ -	► abcABC2	2
2	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ カキクケコ ]	► abcABC2	2
Character type	Kanji	Alphabet (2-byte)	Digits (2-byte/1-byte)
	→ さしすせそ -	→ defDEF3	3
3	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	<b>▶</b> サシスセソ	defDEF3	3
Character type	Kanji	Alphabet (2-byte)	Digits (2-byte/1-byte)
	▶たちつてとっ	► ghiGHI4	4
4	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ タチツテトッ つ	phiGHI4 →	4

type Ttanii 7 apriadot (2 dyto) (3	2-byte/1-byte)
► tcatao j kIJKL5	5
5 Kana (2-byte/1-byte) Alphabet (1-byte)	Dial entry
<b>▶</b> ナニヌネノ <b>▶</b> jklJKL5 ]・	5
Character type Kanji Alphabet (2-byte) (3	Digits 2-byte/1-byte)
<b>▶</b> はひふへほ ] <b>▶</b> mnoMNO6 ]	6
	Dial entry
▶ ハヒフヘホ ] ▶ mnoMNO6 ]	6
Character type Kanji Alphabet (2-byte)	Digits 2-byte/1-byte)
<b>▶</b> まみむめも ] <b>▶</b> pqrsPQRS7	7
Kana (2-byte/1-byte) Alphabet (1-byte)	Dial entry
► マミムメモ ] PqrsPQRS7 ]	7
Character type Kanji Alphabet (2-byte) (;	Digits 2-byte/1-byte)
<b>▶</b> ************************************	8
8 Kana (2-byte/1-byte) Alphabet (1-byte)	Dial entry
[► tuvTUV8 ].	8
Character type Kanji Alphabet (2-byte) (3	Digits 2-byte/1-byte)
► SUSAAS ] ► WX Y Z WX Y Z 9	9
9 Kana (2-byte/1-byte) Alphabet (1-byte)	Dial entry
▼ ラリルレロ ] wxyzWXYZ9 j.	9

Character type	Kanji	Alphabet (2-byte)	Digits (2-byte/1-byte)
	かをんゎー~、。 ?!・space	► 0 — space	0
	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
0	2-byte   1-byte   -~   -~	0- space !"# \$%&'()*+,./:; <=>?@[¥]^_`{ }`	0

Alphahet (large/email | Digite

<sup>\*</sup> When entering at the start of a line, a capital letter is displayed first.

type	Kanji	Kana (2-byte/1-byte)	2-byte/1-byte)	(2-byte/1-byte)	Dial entry
*	Short-press toggle large/small (where characters allow) Add "(ten-ten) or "(maru) (where characters allow)  o ?! space		oggle large/small where characters allow) Add '(ten-ten) or (maru) (where characters allow)  o?!'-& () ¥space		*
	Long-	oressPaste rec	ently-copied/cut t	ext	
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
#	charac	entering characte cter before (back not entering char	function)	Linebreak	#

Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
	phrase Switch Displa than h During range charae	es, etc.  2-byte/1-byte syly facemark edit sistory is displayed normal conversion (when character)	function quote, u mbol lists creen (when cate d in facemark list) on, shorten the se type is "kanji" and	gory other	_
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
0	size: 2 (D-Em Switch conver "ON", charace During range charace	-byte) / (Half size oji displayed only prediction conversion candidates character type is oters) prormal conversion (when character tetrs)	ct)  D-Emoji  : 1-byte)  Tacer when entering e- resion candidates (when word predi "kanji" and enteri on, expand the se type is "kanji" anc	mark mail text) and normal ction is ng elected text d entering	_
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
Ø	Kana/a type is Chang type is "digits Switch	"kanji" and enter ge character type type other than " (1-byte)") pages/categorie	conversion (wher ing characters) to "kanji" (when c kanji", "alphabet s (when emoji, sy on candidates are	haracter (1-byte)", or mbols,	-

Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
6	Switch		s (when emoji, sy on candidates are		_
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
	Restor Delete conve quote (when	e deleted charac learned convers rsion candidates conversion candi character type is	return to preceding ters (up to 5 times ion candidates / s in browser / searc dates in other app "kanji" or "alphab version candidates	s in a row) learch for th for and plication pet (large/	_
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
•	Move cursor left Select conversion candidate During prediction conversion, shorten the selected — text range Delete 1 "" character when entering ** (wild card)				
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
•	Move cursor right Select conversion candidate During prediction conversion, enlarge the selected text range Enter 1 "*" character when entering ** (wild card) when unfinalized characters are entered (when character type is "kanji" or "alphabet (large/small, 1-byte)" and word prediction is "ON") When cursor is at end of text string, enter 1-byte space				

Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
٥	Move cursor up Select conversion candidate			-	
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
Q	Select When		of text string, lineb		_
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
217	Short-pressDelete 1 character to right of cursor If no characters are to right of cursor, delete 1 character to left of cursor Stop conversion (return to character entry screen)			Short-press Delete 1 place	
	Long-	When cur	characters to right sor is at start or ealete all characters	nd of text	Long-press Delete all

## **Making Calls**

# Entering a Phone Number and Making a Call

When the standby screen is displayed, enter phone number.

The dial screen is displayed and the number is entered.

- You can press in the standby screen to display the dial screen with no number entered.
- : Move cursor position
- ্র্যাস: Delete digit to left of cursor
- [ব্যুম্ম (Hold down): Delete all digits
- : Redial previous number\*
- \* Available when no number is entered.
- - (Speaker/OFF): Hands-free call on/off
  - @ (Mute/Unmute): Mute on/off
  - (Address): Display address book (▶P.56)
  - (Profile): Display profile ( P.55)
  - (Yel/g: Adjust call volume (volume of other party's voice)
    (Hold): Place call on hold
    - \* Press (Unhold)/ (Unhold) to return to a call on hold.

#### 3

You can select "Register to address book" to register a number in the address book that a call was made to.

· You can also fold the product to end a call.

- In functions including "Calc (Calculator)", "Timer", "Schedule (Calendar)", and "Alarm", you can also quote numbers entered in the dial screen. Follow the on-screen display after entering the number. Usable functions depend on the number that was entered.
- © Even when "In Call" is displayed, the other party may not have taken the call. Start talking after making sure that the other party has taken the call.
- Note that even if you cover the mouthpiece, the sound can be
   conveyed to the other party.
- © Even if "Airplane mode" is set, you can call to the emergency number (110, 119, 118) and Customer Service Center (157).
- O You can press the dial keys during a call to send push signals for the entered number.
- To return to the call screen after activating an application during a call, press [207] to end the application.

#### ■ Emergency Call Location Notification

The product supports "Emergency call location notification" so that if you make an emergency call to Police, Fire and Ambulance or Regional Coast Guard Headquarters, your current location (GPS information) will be transmitted to the agency receiving the emergency call.

- In this section, Police (110), Fire and Ambulance (119) and Regional Coast Guard Headquarters (118) are collectively referred to as the emergency call receiving agency.
- This feature may not yet be available at some emergency call receiving agencies.

- If you add "184" before the Japan emergency call number 110/119/118, the emergency call responding agency will not be notified of your location and phone number.
- O VolTE (LTE network) by au is used when connecting with emergency organizations within Japan. You cannot connect using 3G (circuit-switched network).
- In places where signal reception from GPS satellites or a base station is relatively poor, such as in an underground mall, inside a building or behind a tall building, the emergency call receiving agency may be notified of some other place different from your actual location.
- When GPS cannot be used to notify of your location, base station signal is used instead.
- When making an emergency call to Police, Fire and Ambulance or Regional Coast Guard Headquarters, always confirm where you are, and tell them your exact location on the phone. Note that depending on the area where you are calling, your call may not be connected to the agency having jurisdiction over that area.
- If the emergency call receiving agency determines that human lives and health are in danger, they will be able to acquire the caller's location information during the call or within a certain period of time after the call.

#### Using P (Pause) Dialing and Making a Call

Enter the push signals to send beforehand and then select "Yes" during the call to send the push signals. This is a convenient feature when using information services and automatic reservation services.

Example: To dial "03-0001-XXXX (bank phone number)" and send the branch "22X" and the account "123XX"

- Enter bank phone number "030001XXXX".

### 

You can enter P (pause) between numbers to enter several push signals at the same time.

## 

After dialing, a confirmation screen is displayed. Confirm that the destination has answered the call and then select "Yes". A push signal is sent each time you select "Yes" and press  $\odot$ .

## Using Call Histories and Making a Call

- When the standby screen is displayed, press ⊙ (Outgoing)/ ⊙ (Incoming).
  - Press  $\Theta$  to toggle the outgoing and incoming call histories.

2 Select contact to call from history → ●.
The outgoing/incoming call history details screen is displayed.

- When a history with the number of outgoing/incoming calls displayed is selected and (Switch) is pressed, collected outgoing/incoming call history information is displayed.
- 3 .


You can also dial by selecting the contact in the outgoing/incoming call history list and pressing .

Up to 100 calls can be saved in the outgoing/incoming call histories. Once more than 100 calls are made/received, calls are deleted starting with the oldest. The number of calls that can be saved may be fewer depending on available memory.

### ■ Viewing the Outgoing/Incoming Call History Lists



(Outgoing Call History List)

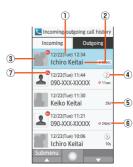

《Incoming Call History List》

- 1) Call date and time
- ② Name, number, reason for withheld number, network service information
- 3 Face image registered in address book
- (4) Number of calls

The number of calls are displayed for a same contact in the incoming/outgoing call histories.

- (5) Call time
- 6 Ring time
- (7) Incoming call status icon
  - : Missed call
  - : Missed call (one-ring phone scam\*)
  - 2: Call rejected
- \* Missed calls of less than 3 seconds are deemed to be one-ring phone scam calls. These may be calls to get the customer to call back and connect them to a malicious pay-for program. Use caution.

## Using Speed Dial and Making a Call

You can make calls quickly to contacts registered to speed dial.

#### ■ Registering to Speed Dial

- When the standby screen is displayed, press → [Call/mail] → [Speed dial].
- Select <Not registered> for the number to register → ● (Register).
  - If a number is selected with a destination already registered, operations such as dialing are available.
- Select the destination to register → (Set).

## Dialing with Speed Dial

- When the standby screen is displayed, enter the speed dial number (0 to 99).
- 2 .
- © Entering an unregistered speed dial number and pressing displays the speed dial list. From the list, you can dial or register a new speed dial.
- If an e-mail address is registered to a destination registered in speed dial, you can enter the speed dial number and press (Mail) to create e-mail.

# Using Kantan Hasshin (Speech Recognition) and Making a Call

You can use Kantan Hasshin (speech recognition) to make a call by voice command to a speed dial contact without using the dial keys.

- For details on registering contacts to speed dial, refer to "Registering to Speed Dial" ( P.52).
- Open the product/in the standby screen, 🔀 (hold down).
  - is displayed in the main display.
  - If "Screen lock" is set, unlock the screen, then in the standby screen, \*\*\frac{\text{X}}{2}\$ (hold down).
- Say the information for the contact into the product. Say the name of the contact and then say "Dennwa" or "Hasshin". Example: "Bob, dennwa", "Taro, hasshin"
- Confirm the contact as displayed → [Yes].
- This feature may not work correctly if several phone numbers are given for a contact in the address book or several contacts by the same name are registered.

# Calling Overseas from au Phones (au International Call Service)

You can make international calls without any special procedure from the product.

Example: To call "212-123-XXXX" in the USA from the product

- Enter the international access code "010".
  - Entering (O) (hold down) in the dial screen enters a "+" and adds "010" when the number is dialed.
- Enter the country code of the USA "1".

#### 3 Enter the area code "212".

If the area code starts with "0", dial it without including the "0" (There are some exceptions such as fixed-line phones in some countries or regions including Italy and Moscow).

- 4 Enter the phone number of the other party "123XXXX" → <a> □</a>.
- The monthly limit fee is set for the au International Call Service. The au International Call Service is unavailable from when the limit fee is confirmed to be exceeded until the end of the same month
- © Even if you cannot use the service by exceeding the limit fee, you can use from the first day of the next month. Also, you can use the domestic call as usual while the service is stopped.
- $\ensuremath{\mathbb{Q}}$  International call charges are billed together with monthly local call charges.
- If you do not wish to use the service, you can set not to use the au International Call Service.

  For au International Call Service:

From au phones **157** (area code not required) (toll free)

From fixed-line phones 0077-7-111 (toll free)
Open 9:00 to 20:00 (everyday)

## **Receiving Calls**

## Answering an Incoming Call

Press (a) (Silent) to stop the ringtone. You can press (a), (b), or (b) to change the volume of the ringtone.

- 2 Talk → 🕤.
- If you are not subscribed to LTE NET or LTE NET for DATA, disable "Data transmission" for "Mobile networks" and set "Network Mode" to "Japan(4G)" before using the product.
- If a call arrives while using the address book, e-mail, etc., the call is given priority and the function can be used again once the call ends.

## Rejecting an Incoming Calls

The ringtone stops and the incoming call is disconnected. The other party will hear voice guidance.

## Sending SMS to an Incoming Call

- 2 Select a message to send → ●.
  The incoming call is disconnected. The other party will hear voice quidance.
- You can select "Write your own..." with the message to create
   and send an SMS.
- O You can edit the message to send beforehand with "Quick responses" in "Call settings".
- If the other party's phone number is not notified, Quick reply is not available. Also, Quick reply may not be available depending on the communication condition.
- A ring call is audible to the caller until the SMS is sent.

   Answering memo may answer the call before the SMS is sent.

# **Using au VoLTE**

## Using Voice party (Optional Service)

Voice party is a voice service that allows up to 30 people including the caller to call at the same time, regardless of the type of device the other parties may have.

If a confirmation screen is displayed, confirm the content and follow the on-screen instructions.

2 (Create new).

Outgoing history → ● to make a call from the history.

- 3 (Submenu).
- 4 Use address book Add phone number in address book to members.

  Use history Add phone number in outgoing/ incoming call history to members.

  Direct entry Directly enter phone number to add to members.
- 5 (Call) → Talk.

Select member who has not answered yet/you are talking with → 
● → [Yes] to end call.

Select a non-present member  $\rightarrow \odot$  to place a call/delete the member.

- 6 3.
- O Voice party requires a subscription.
- © Call charges to the caller are according to the number of callees (number of people).

- © Calls with this feature cannot be made to emergency responders (110, 119, 118) or time information (117) and other special numbers.
- When placing a call with Voice party, your phone number is sent regardless of the "Send caller ID" setting.
- After the call is initiated, no answer from any of the callees within
   20 seconds causes Voice party to end.
- The caller and callees cannot make a three-party call with Voice party at the same time.
- The caller and callees cannot use call waiting during Voice party.
- The caller and callees cannot send push-tones during Voice party.
- © Callees using call answering or call forwarding cannot participate in Voice party.
- A device supporting au VoLTE and receiving a Voice party call cannot answer with Answering memo.
- Callees can only see the name and phone number of the caller, and cannot see those of other members.

## **Checking Your Phone Number**

## Checking Your Profile

When the standby screen is displayed, press ● → [Profile].

## Editing Your Profile

When the standby screen is displayed, press 

[Profile] → 

(Edit).

The profile edit screen is displayed.

- Enter required items.
- 3 @ (Save).

## **Registering to the Address Book**

You can register contact information including phone number and e-mail address. You can also set ringtone, vibration, etc. individually for contacts.

When the standby screen is displayed, press ☐ (hold down).

The address book registration screen is displayed

- Set required items.
- 3 (Save).
- O If the number is a landline number, enter the area code first.
- If the name includes 1-byte letters and numbers, it may be displayed in the order of given name, family name.
- To register GPS information, "Location" must be set to "ON" beforehand.
- O If a caller's number is withheld, "Ring Set" does not operate.
- Numbers and names registered in the address book can become erased due to accident or malfunction. Keeping a separate copy of numbers and other important information is recommended. The Company is not liable for any damages or lost profits whatsoever due to alteration or loss of contact information resulting from accident or malfunction.

## **Using the Contacts List**

## Displaying the Contacts List

When the standby screen is displayed, press ⊡. When the contacts list is in "Group" view, a list of groups is displayed. Selecting a group displays a contacts list for that group.

#### ■ Viewing the Contacts List



(Contacts List (Name Order))

1 Search by dial keys

You can search for contacts by pressing the dial keys in the contacts list and entering yomigana readings. Pressing the your key deletes yomigana and ends search.

② Contacts

Contacts are displayed for the selected tab.

3 Tabs

- 4 Face image
  - A face image is displayed if registered.
- O Press O to switch tabs.

# **Using Information Registered for Contacts**

- When the standby screen is displayed, press 

  Select the contact → 

  .
- Viewing Address Book Details



《Address Book Details》

- ① Name
- 2 Registered information
- 3 Face image
- (4) Main phone number/main e-mail address

- When several phone numbers or e-mail addresses are set, you
   can select a phone number/e-mail address and press → [Set
   main phone number]/[Set main mail address] to set as the main
   phone number/e-mail address.
- O You can press (Edit) to edit registered information.

## **Checking E-Mail**

Received e-mail is saved in the "Inbox". Sent e-mail is saved in the "Outbox". Received and sent e-mail that meets filtering criteria is saved in a designated folder.

E-mail that was saved without being sent and send-failed e-mail is saved in the "Unsent" box.

- When the standby screen is displayed, press ☑.

  The folder list is displayed.
- [Inbox] / [Outbox] / [Unsent] / Select folder → ①.
  The e-mail list is displayed.
  - @ (2L/3L): Switch mail list views.
- Select e-mail → ●.

 
The e-mail message is displayed.

- 🖾 (Prev): View previous e-mail
- (Next): View next e-mail
- Once the capacity of the "Inbox" is exceeded, oldest read e-mail is automatically deleted. E-mail that is unread, protected, or for which the text body is unreceived is not deleted.
- New e-mail cannot be received if the "Inbox" is full and it contains all unread e-mail.
- Once the capacities of the "Outbox" and "Unsent" box are exceeded, oldest sent e-mail is automatically deleted. If there is no sent e-mail that can be deleted, send-failed e-mail is deleted, followed by unsent e-mail. Protected e-mail is not deleted.

## ■ Viewing the Folder List

In the folder list, the "Inbox", "Outbox", folders, etc. are displayed. Folders created by selecting "Create new folder" are displayed.

- (red, number of e-mail) is displayed for new e-mail in the "Inbox".
   After checking new mail in the received e-mail list, the icon turns
- (blue, number of unread e-mail). The icon is not displayed if there is no unread e-mail.
- 1 (blue, number of unread e-mail) is displayed for e-mail in the "Unsent" box. The icon is red if there is send-failed e-mail.



- 1) Create new
- ② Inbox
- (3) InfoBox View InfoBox mail
- 4 Outbox
- ⑤ Unsent
- 6 Folder
- ① Create new folder
- 8 Number of unread/unsent e-mail


## ■ Viewing the E-mail List



Received E-mail List

(3)-

(8)

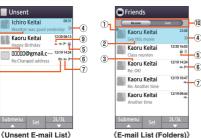

① :Unread e-mail
O:E-mail with unreceived text body

- 2 Subject
- 3 Recipient's/sender's name or e-mail address

The registered image/name is displayed if the e-mail address is registered in the contacts. If the e-mail address is unregistered, the e-mail address is displayed.

If a sender designation is set for the received e-mail, the set name is displayed.

- If the e-mail address is registered in the contacts, the registered name takes priority.
- 4 Electronic file attached
- ⑤ Protected mail
- 6 Flagged e-mail
- ⑦ ♠: Replied-to e-mail/reply e-mail
  - : E-mail that has been forwarded/Received forwarded e-mail
  - : Replied-to e-mail/e-mail that has been forwarded
- ® E-mail waiting to be automatically resent
- E-mail text unreceivable due to no mail on server/Send failure
  mail
- ® Received/sent slider

Switch between received and sent e-mail lists in a folder.

#### ■ Viewing an E-mail Message



- 1) Recipient's/sender's name or e-mail address
- ② Subject
- ③ <: Replied-to e-mail/reply e-mail</p>
  - : E-mail that has been forwarded/Received forwarded e-mail
  - Replied-to e-mail/e-mail that has been forwarded
  - . Multiple recipients
  - BCC: E-mail received with BCC recipients
  - : E-mail waiting to be automatically resent
  - A: Send-failed e-mail
  - : Protected mail
  - : Flagged e-mail

4 : Address/electronic file

Select and press 

to display e-mail address and attached data

- list.
  - : Sender's name or e-mail address
  - To / cc / Bcc : Recipient's name or e-mail address
  - : Saved electronic file
  - : Save-failed electronic file
  - 🖟: Saved inline electronic file
  - Unreceived electronic file
  - : Receive-failed electronic file
- ⑤ Mail text

## Sending E-mail

When the standby screen is displayed, press □ → [Create new].

The e-mail create screen is displayed.

Select 

for the address entry field 

o.

You can also enter the recipient directly in the address entry field.

\* Menu items may depend on the function you are using, conditions of usage, etc.

Address book	Enter e-mail address from contacts as a recipient.
Address group	Enter all e-mail addresses registered to a contacts group as the recipients.  If the number of e-mail addresses in the group exceeds the limit available for recipients, addresses are entered up to the limit.  You can select "Add group by Friends Note" to create a group. Download the latest Friends Note app from auスマートパス(au Smart Pass) if it is uninstalled or if it is an older version.
Receive history	Select and enter an e-mail address from the received e-mail history.  ■ ☐ (Del history) → Select e-mail address → ● (Select) → ☐ (Delete) → [Delete] to delete the history.
Send history	Select and enter an e-mail address from the sent e-mail history.  • ☑ (Del history) → Select e-mail address → ● (Select) → 図 (Delete) → [Delete] to delete the history.

Profile	Enter own e-mail address as recipient.
Paste	Paste copied e-mail address.

- 5 Select text field → → Enter text → (Complete).
- 6 (Send).
- O You can select "Save" in the e-mail create screen to save e-mail that is being created to the "Unsent" box.
- ◎ デコレーションアニメ (decoration anime) is not supported.
- Up to 1000 e-mails as the total for all recipients can be sent in one day.
- One e-mail can be sent to up to 30 recipients (including To, Cc, Bcc, up to 64 1-byte characters per e-mail) at a time.
- © Emoji sent to an other-brand cell phone, PC, etc. may sometimes be converted to the other-brand emoji or may not be displayed properly. Emoji sent to another au phone may sometimes be converted to an older-version au emoji.
- The confirmation screen when sending an e-mail can be disabled with "Confirmation dialog before sending".
- By enabling "Automatic resend", you can have failed e-mail automatically sent again later.
- You can insert up to 20 (totaling up to 100 KB) decoration emoji in the mail text.
  - A same entered decoration emoji can be entered repeatedly any number of times.

#### ■ Adding/Deleting Recipients

- Adding a recipient
- E-mail create screen → Select "®" for empty address entry field → ®.

A menu for selecting a recipient entry method is displayed. Refer to step 3 of "Sending E-mail".

You can also add recipients by entering them directly in the address entry field.

- Deleting a recipient
- E-mail create screen → Select "

  " for recipient to delete → 

  " Tolete].
- O You can change the recipient type by selecting "
   To "
   → ●. You cannot change the recipient type for the topmost recipient.

# **Receiving E-mail**

### Receive E-mail.

Once an e-mail is received, you are notified of the new mail in the following ways.

- is displayed in the status bar, and the ringtone sounds.
- The e-mail address, name, and subject are displayed in the status bar. If a sender designation is set for the received e-mail, the set name is displayed. If the e-mail address is registered in the contacts, the registered name takes priority.
- · The charging/incoming indicator flashes blue.
- If the product is folded, is displayed in the sub-display.
- When the standby screen is displayed, press 

  [Inbox].

The e-mail list is displayed.

Select a received e-mail → ●.

The e-mail message is displayed.

- © E-mail is received in the background even while using e-mail or other functions. 
  ☐ is displayed in the status bar and a ringtone sounds. However, e-mail is not received in the background if "Auto-receive" is disabled
- If "Auto-recieve" is disabled or there is a receive failure, a ringtone sounds and is displayed. Use "Mail check" to receive the e-mail.
- Packet fees may be incurred even if mail is not properly received due to reception conditions or the data being received.
- The maximum size of mail text that can be received is 1 MB per e-mail. If a mail text exceeds that, a message appears at the end of the received portion indicating that it is truncated.
- Received e-mail may not be correctly displayed depending on the content of the mail.

## Inquiring for and Receiving New Mail

You can inquire for and receive new mail if "Auto-receive mail" is disabled or there was an e-mail receive failure.

- When the standby screen is displayed, press 

  The folder list is displayed.
- [2] (Mail check).

  Confirm whether there is new e-mail.

# Sending SMS

Send messages (mail text body) with kanji, hiragana, katakana, alphabet and numbers, symbols, emoji, and facemarks.

When the standby screen is displayed, press 

(hold down).

Alternatively, to access the screen from the standby screen,  $\square \rightarrow \square$  (SMS).

A thread list grouped by contact is displayed.

(Create new).

The SMS create screen is displayed.

 When sending to a contact you have exchanged SMS with before, you can also select the thread to create SMS. In this instance, proceed to step 4. Select the recipient entry field → Enter the contact's phone number.

You can also select from [ ( ) ] → contacts.

Before sending SMS overseas, enter "010" and the "country code" at the start of the phone number for the recipient.

"010" + "country code" + "phone number for recipient"

- \* If quoting the cell phone number for the recipient from the address book, etc., select the recipient entry field again and enter "010" and the "country code".
- \* If the cell phone number for the recipient starts with a "0", enter the number without the "0".
- 4 Select text field → Enter text → (Done).

You can enter up to 70 full size/160 half size characters in the mail text.

5 (Send).

Select a sent message → □ (Submenu) → [Result Delivery Report] to check the send result.

- Before step 5, you can press DIT to display "Draft" in the thread list and save mail without sending it.
- SMS is held (accumulated) at the SMS center for 72 hours. SMS that has accumulated for more than 72 hours is erased. There is no limit on the number of SMS that can be held.
- It may not be possible for the SMS center to hold SMS depending on conditions of the receiving customer's phone/service use or the sending customer's phone model.
- O Accumulated SMS is delivered at the following times:
  - Delivery soon after SMS accumulation: as new SMS is accumulated at the SMS center, all SMS that had been held is delivered.
  - Delivery with the retry function: if SMS cannot be delivered as soon as it has accumulated due to the recipient being where there is an inadequate signal or their phone is switched off, the retry function repeatedly sends SMS to the recipient for up to 72 hours.
- Delivery after ending a call: if SMS cannot be delivered as soon as it has accumulated, all SMS that had been held at the SMS center is delivered as soon as the customer ends their call.
   The time that SMS is delivered may differ with international SMS.
- When sending SMS, the number of the sender is displayed for the recipient regardless of the "Send caller ID" setting.
- © Emoji sent to an other-brand cell phone may sometimes be converted to the other-brand emoji or may not be displayed properly. Emoji sent to another au cell phone may sometimes be converted to an older-version au emoji.
- A 
   may be displayed, although rarely, for a sent message that
   was sent successfully but where signal was weak, etc.
- © For details on international SMS, refer to the au homepage. http://www.au.kddi.com/mobile/service/global/sms/

## **Receiving SMS**

#### Receive an SMS.

Once an SMS is received, you are notified of the new mail in the following ways.

- A new SMS icon is displayed in the standby screen, in the status bar, and a mail ringtone sounds.
- If the product is folded, is displayed in the sub-display.
  The charging/incoming indicator flashes.
- When the standby screen is displayed, press 

  (hold down).

The SMS thread list is displayed.

is displayed for threads with unread SMS.

#### 3 Select the thread for the contact to check.

The content of the thread that includes the received SMS is displayed.

- O Receiving SMS is free.
- O You can confirm the phone number of the sender with received SMS.
- Received SMS may not be correctly displayed depending on the content of the mail.
- While data is being backed up or restored with the Data Storage application, do not exit the SMS app. This may prevent data from being properly received.

# **Using LINE**

This communication app allows you to enjoy calling and texting as much as you want, any time and any place.

- Registration of an account is required for using LINE. For details on using LINE, visit the LINE website, or from the LINE screen → [More]
   → [Settings] → [Help] and refer to the help.
- When the standby screen is displayed, press → [LINE].

The LINE top page is displayed.

Terms of use, login screen, etc. appear the first time using LINE. Confirm the content and follow the on-screen instructions. After activating LINE, Touch Cruiser EX is enabled. For details on operating Touch Cruiser EX, refer to "Using Touch Cruiser EX" ( P.33).

Games and some other functions cannot be used on the product.
 By changing "Key Translator" in "Accessibility" to OFF, the key focus in LINE is no longer displayed. Please use "Accessibility" without changing the settings.

## **Accessing the Internet**

You can access the Internet by packet communication or the wireless LAN (Wi-Fi®) function.

Packet communication is available only with subscription to LTE
 NET or LTE NET for DATA.

## **Using Packet Communication**

This product provides easy access to the Internet for packet communication with use of "LTE NET" or "LTE NET for DATA". Settings for connecting to the Internet with LTE NET are pre-installed on the product, and activating an application that requires an Internet connection automatically connects the product to the Internet. To access the Internet with LTE NET for DATA, in the standby screen,  $\Theta \to [\text{Settings}] \to [\text{Communication/network}] \to [\text{Network settings}] \to [\text{Mobile networks}] \to [\text{Access Point Names}] \to [\text{LTE NET for DATA}].$ 

© Subscription to LTEフラット (LTE flat) or other packet communication flat-rate/discount service allows you to use an Internet connection with flat-rate charges. For details on LTE NET, LTE NET for DATA, and packet communication flat-rate/discount services, refer to the latest au総合カタログ (au general catalog)/the au homepage.

#### ■ Precautions when Using Packet Communication

- Using large-volume data communication, such as browsing websites containing images, downloading video and other data, and using applications that use data communication, results in high packet communication charges. Therefore, subscription to a flat-rate/ discount service for packet communication charges is recommended.
- To prevent excessive burdens on the network, communication speed is sometimes reduced due to continued large-volume data transfers, busy network conditions, etc.

### How to Confirm Your Packet Communication Charges

You can confirm your packet communication charges at the following URL.

https://cs.kddi.com/ (auお客さまサポート(au Customer Support))

• Subscription required for first-time use.

## **Using the Browser**

You can use the browser to view webpages the same as with a PC.

- After a webpage is displayed in the browser, Touch Cruiser EX is enabled. For details on operating Touch Cruiser EX, refer to "Using Touch Cruiser EX" ( P.33).
- When a webpage is displayed for the first time, a permission screen is displayed. Confirm the content and follow the on-screen instructions.

## Using the Browser Menu

When the standby screen is displayed, press .

The browser menu is displayed.

2

l	Homepage	Connect to the Internet and view webpages.
	Bookmark	Use and manage registered bookmarks.
	auお客さまサ ポート(au Customer Support)	Display the au Customer Support webpage.
	URL input/ Web search	Enter a URL directly to display a site. You can also enter keywords to search for information on webpages.
	History	Display the browsing history.
	Downloads	Display the download history.
	Settings	Change browser settings.

# Operating the Browser with Touch Cruiser EX

You can use Touch Cruiser EX's features to smoothly browse webpages. For details on Touch Cruiser EX, refer to "Using Touch Cruiser EX" (▶P.33).

- · After activating the browser, Touch Cruiser EX is enabled.
- Use Touch Cruiser EX to operate the browser.

  Tap: Select or finalize items.

Flick: Long-touch the screen to display " - and then scroll up or down

Double-tap: Zoom out or in on images.

O If the Se key does not respond while using the browser, enabling Touch Cruiser EX sometimes enables the cursor to be operable.

## **Before Using the Camera**

- Fingerprints and smudges on the lens prevent capture of clear still pictures/video. Before capturing images, wipe the lens clean with a soft cloth. Rubbing forcefully may scratch the lens.
- Avoid fingers, hair, strap, etc. from covering the lens or mobile light during image capture. Hold the strap if it interferes with capture.
- If capturing images with the mobile light on, its light reflecting from fingers, a cover, etc. around the lens can cause captured still pictures/video to turn out whitish.
- When capturing video, avoid covering the microphone with fingers.
   Loudness of voices and surroundings during video capture may affect the sound quality of the microphone.
- When using the self-timer for image capture and the product is placed on an unstable surface, the product vibrating such as when a call arrives or other conditions may cause the product to fall.
- Even in manner mode, the focus lock beep and shutter click for still
  pictures and start and stop beeps for video sound. The volume
  cannot be adjusted.
- Exposure of the lens for extended periods to direct sunlight or other sources of strong light may discolor the internal color filter and cause discoloration in still pictures/video.
- Capturing or saving still pictures/video after the product has been left in a warm place for an extended period may affect the still pictures/video.
- The camera comprises high-precision components, and includes pixels that are always on or that do not light. Image capture in extremely dark conditions will result in blue, red, and white dots, etc.
- Release the shutter after confirming that the subject is properly displayed in the main display. Moving the camera while releasing the shutter may cause still pictures to be blurry.
- When capturing images indoors under fluorescent lighting, faint stripes may be visible on the screen from fluorescent light flickering (very faint, invisible to the human eye), but is not a malfunction.

- The color of still pictures/video captured with the product camera may differ from the actual subject. Images may appear partially darker or brighter due to the characteristics of the lens and depending on the subject and illumination when capturing. Subjects may also appear partially distorted.
- Subjecting the product to shock while capturing images may cause the camera to lose focus. If focus is lost, activate the camera again.
- . Focusing may not be possible for the following types of subjects.
  - · Low-contrast subjects such as plain walls
  - · Subjects with strong backlighting
  - · Shiny subjects that reflect light brightly
- · Subjects with a pattern that repeats horizontally such as blinds
- · Several subjects with differing distances from the camera
- · Subjects in dark conditions
- · Fast-moving subjects
- Do not shine the mobile light near eyes. Do not look directly into shining mobile light. Do not shine mobile light at other persons' eyes.
   Doing so may affect vision or cause other impairment.
- Faint sound may audible when using the camera such as when activating the camera. This is from the internal components and is normal.
- Directly capturing the sun, a lamp, or other strong source of light may cause still pictures/video to be dark or noise may appear.
- The screen may appear momentarily white or dark when capturing a moving subject or when moving from light to dark conditions. Noise may also momentarily appear.
- Noise may increase and result in grainy still pictures when capturing in dark conditions.
- Immediately after switching camera modes or changing camera settings, it may take time for brightness, color, etc. to be displayed optimally.
- Creating a public nuisance with use of the product camera may be punishable by law.
- If the battery level is less than (about 10%), the camera cannot be activated

- · It may not be possible to use the camera in the following instances.
- When the temperature of the product is high after using for an extended period
- · When using the product in extremely low temperatures such as outdoors in the winter
- · When other applications are activated

## Capturing Still Pictures/Video

You can capture still pictures and video. You can also switch camera settings to match the subject you want to capture.

After activating the camera, Touch Cruiser EX is enabled. For details on operating Touch Cruiser EX, refer to "Using Touch Cruiser EX" ( P.33).

### ■ Capturing Still Pictures


When the standby screen is displayed, press ⊚.

The still picture viewfinder is displayed.

- : Zoom out/zoom in
- (2): Adjust brightness
- (Settings): Display camera settings menu
- (Preview): Display captured still pictures
- (Focus): Lock focus
- (VideoCam): Switch to video capture
- ★: Toggle screen icon show/hide
- 2 (Shutter)/ (5479-/77-).

The still picture is captured and saved.

## ■ Viewing the Still Picture Viewfinder

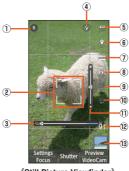

**《Still Picture Viewfinder》** 

- 1 Voice recognition
- ② Focus mark

If "Face AF" is set, faces are detected for focusing. You can specify where to focus by tapping the subject's position with the pointer.

- 3 Zoom
- (4) Flashlight
- ⑤ Capture mode
- Auto-add location information
- (7) Resolution
- ® NightCatch

- 9 HDR
- 10 HQ mode
- 11 Adjust brightness
- (2) Shots remaining

Displayed when 99 or fewer shots remain.

Minipreview

Display thumbnail of preceding captured data.

Select an icon or minipreview with the Touch Cruiser EX pointer to activate the function corresponding to the icon or play a captured still picture.

#### ■ Capturing Video

When the standby screen is displayed, press (hold down).

The video viewfinder is displayed.

: Adjust brightness

: Zoom in/zoom out

(Settings): Display camera settings menu

(Preview): Play back captured video

(StillCam): Switch to still picture capture

X: Toggle screen icon show/hide

2 (Start)/ (5479-/77-).


Video capture begins.

 You can press (Shutter) during recording to capture a still picture.

3 ● (Stop)/ (

Capture ends and the video is saved.

## ■ Viewing the Video Viewfinder

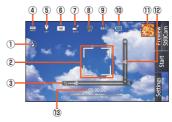

#### (Video Viewfinder)

- ① Mobile light
- ② Focus mark
- 3 Zoom
- 4 Capture mode
- ⑤ Auto-add location information
- 6 Video Size
- NightCatch
- ® HDR
- 9 Recording time remaining
- 10 Battery level
- Minipreview
   Display thumboni

Display thumbnail of preceding captured data.

- Adjust brightness
- (3) Capture time
- Select an icon or minipreview with the Touch Cruiser EX pointer to activate the function corresponding to the icon or play a captured video.

# 1Seg

1Seg is a digital terrestrial TV broadcast service for mobile devices, and allows reception of image and audio as well as data broadcast.

For details on the "1Seg" service, refer to the below website. The Association for Promotion of Digital Broadcasting

http://www.dpa.or.jp/

### ■ Precautions when Using 1Seg

- No communication charges or packet communication charges are incurred for using 1Seg. However, packet communication charges are incurred for use of additional services associated with data broadcast that use data transmission. Regarding NHK reception fees, inquire with NHK.
- While displaying the 1Seg screen, the product may become warm and cause low-temperature burns, etc. if used in contact with the skin for an extended period.
- Listening at a volume that is loud to the ears continuously for an extended period may affect hearing.
- · 1Seg is for digital terrestrial TV broadcast 1Seg in Japan only.
- Overseas, 1Seg cannot be used due to differing broadcast formats and frequencies. Also, BS and 110-degree CS digital broadcasts cannot be viewed.
- Do not use 1Seg while operating a vehicle or riding a bicycle, motorcycle, etc. or while walking. Doing so may prevent surrounding sound from being heard and may distract you, causing a traffic accident

### Signal

Signal may be weak in the following places and may affect picture/ sound quality or prevent reception.

- Areas that are distant from or extremely close to the broadcast station
- In a moving train/car, underground shopping district, tunnel, indoors, etc.
- · In a valley or shade of a building
- Near high-power lines, neon lighting, a radio station, railway track, highway, etc.
- Other places where interfering signals are strong or signals are blocked

To improve signal reception, try the following.

· When viewing indoors, view near a window for better reception.

#### TV Antenna

The product has a built-in antenna.

### ■ Operation Based on Battery Level

TV cannot be activated if the battery level is less than (about 10%).

## **Making Initial TV Settings**

Set a channel list for viewing the first time activating TV. Once settings are complete, you can view TV programs.

If a license screen is displayed, confirm the content and select "Agree".

[Create by selecting the area].

If the area cannot be determined, select "Create by searching channels" and follow the on-screen instructions.

- Select the region → ●.
- Select the prefecture → ●.
- 5 Select the area → ●.
  Scanning for broadcast stations starts.

# Viewing TV Programs

## Viewing a TV Program

- When the standby screen is displayed, press 

  Tools] → [TV (One Seg)].
  - (Data mode/TV mode): Switch data operation mode/TV viewing mode
  - (Rotate): Switch screen display between vertical and horizontal

### Key Operation in TV Viewing Mode

You can switch channels and adjust volume.

(\$\^\*1\*2/\mathbb{\mathbb{e}}^\*2/\mathbb{e}^\*2 : Adjust volume (volume at 15 levels or mute)

⊕\*1: Switch channels, hold down to search channels

- O to 9 , ★ , #: Switch channels
- \*1 Operation depends on the screen view.
- \*2 While connected by Bluetooth®, volume adjustment from a Bluetooth® remote control is possible.

However, may not be possible depending on the Bluetooth® device.

### Key Operation in Data Operation Mode

You can use information (data broadcast) in the information display area

- : Move cursor, scroll
- O to 9, \* , #: Select item as assigned by contents
- Select item

ੈਂਹਾਂ : Go back one page in data broadcast

- When activating TV or changing channels, it may take time to obtain data for data broadcast and TV image due to digital broadcasting characteristics.
- Image and sound may be disrupted or stop due to signal conditions.
- O The camera is unavailable while TV is activated.
- No communication charges or packet communication charges are incurred for viewing data broadcast. However, packet communication charges are incurred for accessing related sites in information obtained from data broadcast or obtaining additional information.

### ■ Viewing the TV Screen



1) Program information

Displays the program title and station name.

- ② Image
- ③ Subtitles
  If subtitles are enabled, subtitles are displayed in the subtitle area.
- 4 Information display area
- (5) Volume

# Displaying the Settings Menu

Set and manage functions from the settings menu.

When the standby screen is displayed, press ● → [Settings].

Item	Description
Wallpaper/display	Set wallpaper and screen brightness, change text fonts, etc.
Sound/lamp	Change manner mode settings, volume and sound of ringtone, etc.
au ID setting	Set an au ID.
Lock/security	Set product lock and security feature and secret mode.
Energy saving/ battery	Set energy saving mode and check battery usage.
Wi-Fi	Set Wi-Fi®.
Bluetooth	Set Bluetooth®.
Communication/ network	Make settings for airplane mode, tethering, VPN or other network, etc.
Data transfer/reset	Transfer data or initialize the product.
Other settings	Set the date and time, select language, screensaver, etc.

# **Introduction of Peripheral Devices**

- Battery Pack (SHF31UAA) (sold separately)
- au Carrying Case F Black (0105FCA) (sold separately) au Carrying Case G Black (0106FCA) (sold separately) au Carrying Case H Black (0107FCA) (sold separately)



au Carrying Case F Black

■ Common AC Adapter 03 (0301PQA) (sold separately)
Common AC Adapter 05 (0501PWA) (sold separately)
Common AC Adapter 03 Navy (0301PBA) (sold separately)
Common AC Adapter 03 Green (0301PGA) (sold separately)
separately)

Common AC Adapter 03 Pink (0301PPA) (sold separately) Common AC Adapter 03 Blue (0301PLA) (sold separately) AC Adapter JUPITRIS (White) (L02P001W) (sold separately)

AC Adapter JUPITRIS (Red) (L02P001R) (sold separately) AC Adapter JUPITRIS (Blue) (L02P001L) (sold separately) AC Adapter JUPITRIS (Pink) (L02P001P) (sold separately) AC Adapter JUPITRIS (Champagne) (L02P001N) (sold separately)



Common AC adapter 05

- Illustrations and forms may not match depending on the AC adapter you use.
- Common DC adapter 03 (0301PEA) (sold separately)



- Portable charger 02 (0301PFA) (sold separately)
- Desktop holder (SHF31PUA) (sold separately)
- microUSB cable 01 (0301HVA) (sold separately) microUSB cable 01 Navy (0301HBA) (sold separately) microUSB cable 01 Green (0301HGA) (sold separately) microUSB cable 01 Pink (0301HPA) (sold separately) microUSB cable 01 Blue (0301HLA) (sold separately)
- Sharp microUSB 3.5mm conversion cable 01 (SHX11QVA) (sold separately)
- O For the latest information about available peripheral devices, check the au homepage (http://www.au.kddi.com/english/) or contact Customer Service Center.
- The product does not support ASYNC/Fax transmission.


The above-mentioned peripheral devices can be purchased from au Online Shop. You may not be able to purchase one depending on the stock status.

http://auonlineshop.kddi.com/

# Using an Earphone Microphone with Switch/Earphone Microphone/ Earphone

You can connect a "Sharp microUSB 3.5mm conversion cable 01 (sold separately)" to the product and use an earphone.

Insert microUSB plug of Sharp microUSB 3.5mm conversion cable 01 (sold separately) in external connection jack on product in direction shown, confirming its orientation.

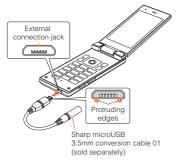

- Insert earphone microphone with switch, earphone microphone, or earphone in earphone jack of Sharp microUSB 3.5mm conversion cable 01 (sold separately).
- Answering a Call with an Earphone Microphone with Switch
- Press switch on earphone microphone with switch while call is arriving.

To end the call, press the switch on the earphone microphone with switch again.

- You may not be able to use this feature depending on the type of earphone microphone with switch or earphone microphone.
- © For information on operation-tested 3.5mm-plug earphone microphone with switch, (commercially available), refer to the following support page.

http://k-tai.sharp.co.jp/support/a/shf32/

# Troubleshooting

Before you assume that the product is malfunctioning, check the following:

Trouble	Detail
Battery usage time is short.	Make sure you do not often use the product in places where
Cannot make calls.	Is an au Nano IC Card 04 inserted? (▶P.33) Was the number entered correctly? (Was the area code entered?) (▶P.49) Is "Airplane mode" set? (▶P.37) Is the power turned on? Did you press ☐ after entering the number?
Cannot receive calls.	Is reception good enough? (▶P.37)     Is the product within the service area? (▶P.37)     Is "Airplane mode" set? (▶P.37)     Is the power turned on?     Is an au Nano IC Card 04 inserted? (▶P.33)
1Seg is not displayed, image stops, audio stops, noise appears.	Is the digital terrestrial TV broadcast signal adequate? (▶P.37)     Is your hand covering the TV antenna area? (▶P.32)
Camera does not operate.	Is the battery low? (▶P.37)     Check how to use the camera. (▶P.68)
Cannot operate the keys panel.	Turn off the power and then turn it on. Is the power turned on?

Trouble	Detail
Cannot operate/The screen does not respond/ Cannot turn off the power.	You can force the power off by holding down of at least 8 seconds and releasing your finger after the product vibrates. Turn the product on again after a while.
The power is turned off automatically.	Make sure the battery has not run out.
The power is turned off while the wake-up logo is displayed.	Make sure the battery has not run out.
(out of service area) is displayed.	Is reception good enough? (▶P.37) Is the product within the service area? (▶P.37) Is your hand off the area around the internal antenna? (▶P.32) Is the au Nano IC Card 04 inserted? (▶P.33)
A message indicating that charging is necessary is displayed.	The battery is almost empty. (▶P.37)
The product answers calls when it shouldn't.	<ul> <li>Is Answering memo set? (▶P.37)</li> <li>Is manner mode set? (▶P.37)</li> <li>Is auto answer set?</li> </ul>

Trouble	Detail
When making a call, a beeping sound is heard from the earpiece and	Is reception good enough? (▶P.37)     Is the product within the service area? (▶P.37)     The line traffic is busy or the other party is in a call. Dial again.
a connection cannot be established.	

If symptoms do not improve after checking each of the above, information is provided through au Customer Support on the au homepage below.

http://www.au.kddi.com/english/support/

# **Updating Software**

The product supports the software update.

- When the standby screen is displayed, press → [Settings] → [Other settings] → [Device info] → [Software update].
- Software update

  Check whether a software update is necessary or not.

  Press (a) (Exec) to start a check. When an update is necessary, you can download data for a software update.

  To update immediately, press (a) (Exec) and
  - follow the on-screen instructions.
     To update later, select "Later" to end the application, and "The install confirmation message will reappear in 24 hours" is displayed. Press "OK" and is displayed in the status bar.
    To update software, select "Software update" in the status bar and follow the on-screen
  - instructions.If a software update is possible, information on the software update to download is displayed.

Notification Switch the notification on/off for indicating whether a software update is available.

If set to "ON", information on the software update to download is displayed.

### ■ Notes on Software Update

- When software update is necessary, you will be informed on au homepage, etc. For details, contact an au shop or Customer Service Center (call toil-free 157). In addition, users of the SHF32 will receive a notice from au, when software update is necessary to improve the functionality of the SHF32.
- It is recommended to back up your data before updating software.
- If the software update is performed, the product will reboot before and after the update.
- If the software update has failed or stopped, perform the same procedures again.
- If the software update fails, it may become impossible to operate the product. If this happens, bring it to an au shop or PiPit (not accepted by some shops).
- Charge the battery sufficiently before starting update. If the battery level is insufficient or the battery runs out during the update, the software update may fail.
- Check out the signal reception status. The software update may fail
  if the product is in a place with bad signal reception status.
- Various data registered on the product (address books, mails, still
  pictures, music data, etc.) and information of settings will not be
  changed even after software is updated. However, note that data
  may not be protected depending on the state of the product (fault,
  damage, getting wet with water, etc.).
- After software is updated, the download of next update software may automatically start (consecutive update).
- During international roaming, the software update function can only be used with a Wi-Fi<sup>®</sup> connection. As this function cannot be used without a Wi-Fi<sup>®</sup> connection, be sure to first connect via Wi-Fi<sup>®</sup> before updating software.

# Do not conduct the following operations during the software update

Do not move during software update.

The following operations are not available during the software update

 Operations are not available during software update. Making a call to 110 (Police), 119 (Fire and Ambulance), 118 (Regional Coast Guard Headquarters) or 157 (Customer Service Center) is not available either. Also, the alarm etc. does not function.

# Remotely Locking the Product with Anshin Lock Service

Even if you have not set remote locking beforehand, you can call the Customer Service Center and have the screen, Osaifu-Keitai<sup>®</sup>, etc. remotely locked.

Anshin Lock Service is available at no charge.

# ■ Calling the Customer Service Center and Remotely Locking/Unlocking the Product

From a fixed-line phone,
From an au cell phone,
Business hours: 24 hours (7 days a week)

From an au cell phone,
Todays a week)

· Follow voice guidance to complete procedure.

For detailed descriptions, refer to the "Full Instruction Manual" (Japanese) available on the au homepage.

# Using Keitai Sagasete Anshin (Keitai Search) Service

You can use the Keitai Sagasete Anshin (keitai search) service to have the Customer Service Center find your au phone's approximate location if misplaced or lost.

The locationing setting on the product is preset to "Allow" to allow it to be found.

- © For detailed descriptions, refer to the "Full Instruction Manual" (Japanese) available on the au homepage.
- If the product's location was searched for by the Customer Service Center, a message is displayed on the screen.

## **After-Sales Service**

## When Asking for Repair

For repair, contact Keitai Guarantee Service Center.

During the	Repairs will be done based on the Company's terms
warranty	of services of the free-of-charge repair warranty
period	described on the warranty card.
Outside the	We shall repair the product for a charge as requested
warranty	by the customer if repair renders it usable.
nerind	

- Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
- Recycled parts that meet the Company's quality standards are sometimes used for repair.
- au cell phones collected by Replacement cell phone delivery service which you used before are recycled to cell phones for replacement after repairs. Also parts replaced by au after-sales service are collected and recycled by the Company. They are not returned to customers.
- Instances where the product has been changed, modified, or analyzed (including software modification or analysis (including rooting, etc.) reverse-engineered, reverse-compiled, or reverse-assembled) or has been repaired at a location other than an authorized repair location designated by the Company may not be covered by warranty or may prevent the product from being accepted for repairs.

## Performance Parts for Repair

The Company retains performance parts for repair of the SHF32 main unit and its peripheral devices for 4 years after discontinuation of production.

"Performance parts for repair" refers to parts required for maintaining the functions of the product.

## Warranty Card

At the store of purchase, thoroughly check and read the name of the retailer, date of purchase and other necessary details filled in on the warranty card, and be sure to keep it in a safe place.

### ■ Keitai Guarantee Service Plus LTE

An after-sales service membership program on a monthly basis called "Keitai Guarantee Service Plus LTE" (monthly fee: 380 yen, tax excluded) is available for using your au cell phone for a long time without worries

This service expands coverage for many troubles including malfunction, theft and loss. For details of this service, check on the au homepage or contact Keitai Guarantee Service Center.

- O You can apply for membership only at the time of purchasing your au cell phone.
- Once you cancel the membership, you cannot reapply for it until you purchase an au cell phone next time.
- Note that when changing the model or purchasing an extra cell phone, this service only covers the most recently purchased au cell phone.
- When an au cell phone is handed over to you or someone else, the "Keitai Guarantee Service Plus LTE" membership is also handed over to the successor of the cell phone.
- When you get a new au cell phone by changing the model, purchasing an extra cell phone, etc., the "Keitai Guarantee Service Plus" or "Keitai Guarantee Service Plus LTE" membership for the old au cell phone is automatically canceled.
- O Service contents are subject to change without notice.

### au Nano IC Card 04

The au Nano IC Card 04 is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When malfunction is suspected, or in case of theft or loss, contact an au shop or PiPit.

### ■ After-Sales Service

If you are unsure about anything regarding after-sales service, contact the following service counter.

# Customer Service Center (service cancelation procedure in case of loss or theft)

From a fixed-line phone. 

6 0077-7-113 (toll free)

From an au cell phone, 113 without area code (toll free)

Business hours: 24 hours (7 days a week)

### Keitai Guarantee Service Center (for loss, theft or damage)

From a fixed-line phone/an au cell phone,

0120-925-919 (toll free)

Business hours 9:00 to 21:00 (7 days a week)

### Servicing requests online (24 hours)

\* From the product, PCs and smartphones only https://cs.kddi.com/support/n\_login.html



- Applications for servicing can be made via the Internet for "damage", "water seepage", "theft", or "loss". Naturally-occurring malfunction (power does not turn on, the screen is frozen, etc. due to causes other than damage or water seepage) require consultation by telephone.
- Applications via the Internet require that you provide your e-mail address

#### au After-Sales Service Information

Service contents	Keitai Guarantee Service Plus LTE member	Non-Keitai Guarantee Service Plus LTE member
Replacement cell phone delivery service (spontaneous failure: 1st year)	Free	N/A
Replacement cell phone delivery service (spontaneous failure: 2nd year and later)	Customer charge 1st: 5,000 yen 2nd: 8,000 yen	N/A
Replacement cell phone delivery service (partial damage, water soak, irreparable damage, theft and loss)	Customer charge 1st: 5,000 yen 2nd: 8,000 yen	N/A
Holding over and repair (spontaneous failure: 1st year)	Free	Free
Holding over and repair (spontaneous failure: 2nd year and later)	Free (three-year warranty)	Actual cost
Holding over and repair (partial damage)	Customer charge Upper limit: 5,000 yen	Actual cost
Holding over and repair (water soak and irreparable damage)	Customer charge 10,000 yen	Actual cost
Holding over and repair (theft and loss)	N/A	N/A (By model replacement)

<sup>\*</sup> Charge amounts are all tax excluded.

### Replacement cell phone delivery service

- When you have trouble with your au cell phone, you can have a cell phone for replacement (same model and color as your old one, new battery pack included) delivered to any destination that you specify by calling us. Please return your old faulty au cell phone within 14 days after the cell phone for replacement is delivered to you.
- O You can use this service up to twice within one year starting from the day when you first use this service. If you have not used this service over the past one year at the time of your application for this service, the application will be regarded as your first time. If you have, the application will be regarded as your second time. \* For details, check on the au homepage.

### Holding over and repair

- Damages and malfunctions intentionally caused by the customer as well as those due to modification (e.g. disassembly, change of parts, painting, etc.) by the customer are not covered by this service.
- You cannot receive a refund for replacement of the outer casing due to stains, scratches, paint removal, etc. on the outer casing.

# **SIM-Unlocking the Product**

This product can be SIM-unlocked. SIM-unlocking the product allows other-carrier SIM cards to be used with it.

- Requests can be made for SIM-unlocking on the au homepage or at an au shop.
- Some services, functions, etc. may have restrictions when an other-carrier SIM card is used. The Company does not guarantee operation whatsoever.
- · For details, refer to the au homepage.

# **Main Specifications**

Main display	Approx. 3.4 inches, approx. 16.77 million colors, TFT, 960×540 (QHD)
Sub-display	Approx. 0.9 inches, 1 color, OEL display
Weight	Approx. 128 g (including the battery pack)
Size (W×H×D)	Approx. 51 mm×113 mm×16.9 mm (thickest part approx. 17.4 mm)
Memory (built-in)	ROM: Approx. 8 GB RAM: Approx. 1 GB
Continuous talk time (in Japan)	Approx. 660 min.
Continuous talk time (overseas (GSM))	Approx. 390 min.
Continuous standby time (in Japan)	Approx. 430 hours
Continuous standby time (overseas (GSM))	Approx. 610 hours
Continuous tethering time	Approx. 280 min.
Maximum Wi-Fi® tethered connections	10 devices
Charging time	Common AC adapter 05 (sold separately): Approx. 110 min. Common DC adapter 03 (sold separately): Approx. 180 min.
1Seg continuous watching time*1	Approx. 6 hours and 20 min.

	Tours !	
Camera device	CMOS image sensor	
Effective pixels	Approx. 13.10 million pixels	
Bluetooth®	Communication method: Bluetooth® Standard	
function	Ver.4.0	
	Output: Bluetooth® Standard Power Class 1	
	Communication distance*2: Within 10 m with no	
	obstacles in the range	
	Compatible Bluetooth® profiles*3:	
	HSP, HFP, A2DP, AVRCP, OPP, SPP, PBAP*4,	
	HID, PAN, PAN NAP, PAN U, SCMS-T,	
	HOGP*5, DUN*6, Bluetooth LE GATT	
	Frequency bands: 2.4 GHz band	
Network	Wireless LAN (Wi-Fi®) function:	
environment	IEEE802.11b/g/n (2.4 GHz) conformant	
Interface	microUSB iack	

- \*1 Possible continuous watching time depends on usage conditions.
- \*2 It changes according to objects obstructing devices and signal reception.
- \*3 This is the specification provided in Bluetooth® standards for making communication between Bluetooth® compatible devices in accordance with their intended use.
- \*4 Some contents of address books data may not be properly displayed on the device of the other party.
- \*5 This profile supports Bluetooth® Standard Ver.4.0.
- \*6 Supported for some car navigation systems only. See the au homepage for usage.
- The continuous talk time and continuous standby time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings.

# Specific Absorption Rate (SAR) of Cell Phones

This model [SHF32] cell phone complies with Japanese technical regulations for exposure to radio waves and international guidelines on radio wave protection.

This cell phone has been designed in observance of the Japanese technical regulations regarding exposure to radio waves<sup>(\*)</sup> and limits to exposure to radio waves recommended by equivalent international quidelines.

These international guidelines were set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition. The Japanese technical regulations and international guidelines define the limits using a unit of measurement known as the Specific Absorption Rate (SAR), which represents the average amount of radio frequency energy absorbed by the human body. The SAR limit for cell phones is 2.0 W/kg. The highest SAR value for this cell phone when tested for use at the ear is 0.410 W/kg, and when worn on the body, is 0.439 W/kg<sup>(\*2)</sup>. There may be slight differences in SAR levels among individual products, but they all satisfy the limit.

The actual SAR of this cell phone while talking on the phone can be well below that indicated above. This is due to the cell phone being designed to only output the minimum power required to communicate with a base station. Therefore in general, the closer you are to a base station, the lower the power output of the cell phone.

This cell phone can be used in positions other than against your ear. Use a carrying case or similar accessory that holds the phone at least 1.5 cm separated from the body and ensure no metal parts are located between you and the cell phone. Under these conditions, this cell phone satisfies Japanese technical regulations and international guidelines for radio wave protection.

The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use".

If you would like to know more detailed information, please refer to the WHO website.

# http://www.who.int/docstore/peh-emf/publications/facts\_press/fact english.htm

Please refer to the websites listed below if you would like to know more detailed information regarding SAR.

- Ministry of Internal Affairs and Communications website: http://www.tele.soumu.go.jp/e/sys/ele/index.htm
- Association of Radio Industries and Businesses website: http://www.arib-emf.org/01denpa/denpa02-02.html
- O SHARP homepage:
  - http://k-tai.sharp.co.jp/support/sar/
- O au homepage:
  - http://www.au.kddi.com/english/
- \*1 Technical regulations are defined by the Ministerial Ordinance Related to the Radio Law (Article 14-2 of Radio Equipment Regulations).
- \*2 The value is under simultaneous transmission use condition.

# **CE Declaration of Conformity**

# **CE0168**

Hereby, Sharp Telecommunications of Europe Ltd, declares that this SHF32 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the original declaration of conformity can be found at the following Internet address:

http://www.sharp.co.jp/k-tai/

### Mobile Light

Do not point the illuminated light directly at someone's eyes.

Be especially careful not to shoot small children from a very close distance.

Do not use Mobile light near people's faces. Eyesight may be temporarily affected leading to accidents.

### AC Adapter

Any AC adapter used with this handset must be suitably approved with a 5Vdc SELV output which meets limited power source requirements as specified in EN/IEC 60950-1 clause 2.5.

### ■ Battery - CAUTION

#### Use specified Charger only.

Non-specified equipment use may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.

The battery is embedded inside the product. Avoid removing the embedded battery since this may cause overheating or bursting.

Do not dispose of the product with ordinary refuse. Take the product to an au Shop, or follow the local disposal regulations.

Charge battery in ambient temperatures between 5°C and 35°C; outside this range, battery may leak/overheat and performance may deteriorate

### ■ Volume Level Caution



To prevent possible hearing damage, do not listen at high volume levels for long periods.

## ■ Headphone Signal Level

The maximum output voltage for the music player function, measured in accordance with EN 50332-2, is 125 mV.

### Stand-by Mark

: This symbol means the stand-by on/off.

## **■** European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear is 0.370 W/kg\* and when worn on the body is 0.543 W/kg\*. For body-worn operation, this mobile device has been tested and meets the RF exposure guidelines when used with an accessory containing no metal and positioning the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head.

## **FCC Notice**

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.
- The device is electronically labeled and the FCC ID can be displayed via the Device info & the Authentication under the Setting menu.

### ■ Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient/relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced radio/TV technician for help.

<sup>\*</sup> The tests are carried out in accordance with international guidelines for testing.

### FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

#### **Highest SAR value:**

Model	SHF32
FCC ID	APYHRO00224
At the Ear	0.48 W/kg
On the Body	1.18 W/kg

This device was tested for typical body-worn operations with the back of the handset kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0 cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found at http://transition.fcc.gov/oet/ea/fccid/ under the Display Grant section after searching on the corresponding FCC ID (see table above).

Additional information on Specific Absorption Rates (SAR) can be found on the FCC website at http://www.fcc.gov/encyclopedia/radio-frequency-safety.

# **Export Administration Regulations**

The product and its accessories may be subject to the Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Law" and its related laws). In addition, U.S. Re-export Regulations (Export Administration Regulations) may apply to the product and its accessories. To export and re-export the product and its accessories, take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry or the U.S. Department of Commerce.

# **Intellectual Property Rights**

### Trademarks

The company names and product names appearing in this manual are trademarks or registered trademarks of their respective holders.

 $\bullet$  The microSD logo and microSDHC logo are trademarks of SD-3C, LLC.





 The Bluetooth® word mark and logo are registered trademarks owned by the Bluetooth SIG, Inc., and SHARP CORPORATION is licensed to use these trademarks.

# **Bluetooth**

 Wi-Fi<sup>®</sup>, Wi-Fi CERTIFIED logo, Wi-Fi Protected Setup logo, Wi-Fi Direct<sup>®</sup>, and Miracast<sup>®</sup> are registered trademarks of Wi-Fi Alliance<sup>®</sup>.





- Wi-Fi CERTIFIED™ and Wi-Fi Protected Setup™ are trademarks of Wi-Fi Alliance®.
- The official name for Microsoft<sup>®</sup> Windows<sup>®</sup> is Microsoft<sup>®</sup> Windows<sup>®</sup> Operating System.
- Microsoft<sup>®</sup>, Windows<sup>®</sup>, Windows Vista<sup>®</sup>, Microsoft<sup>®</sup> Excel<sup>®</sup>, Microsoft<sup>®</sup> PowerPoint<sup>®</sup>, Windows Media<sup>®</sup> and Exchange<sup>®</sup> are trademarks or registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

- Microsoft<sup>®</sup> Word and Microsoft<sup>®</sup> Office are product names of Microsoft Corporation in the U.S.A.
- QR code is a registered trademark of DENSO WAVE INCORPORATED.
- FeliCa is a contactless IC card technology developed by Sony Corporation.
- FeliCa is a registered trademark of Sony Corporation.
- D is a registered trademark of FeliCa Networks, Inc.
- Google<sup>™</sup>, the Google logo, Android<sup>™</sup>, the Android logo, Google<sup>™</sup>
   Search and the Google Search logo are trademarks of Google Inc.
- "LINE" is a trademark or registered trademark of LINE Corporation.
- The internal voice recognition engine uses AmiVoice® by Advanced Media, Inc.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.



• "NightCatch/ナイトキャッチ", "翻訳ファインダー", "AQUOS/アクオス" and the "AQUOS" logo, "AQUOS K", the "SHSHOW" logo, "フレーミングアドバイザー/FramingAdviser", "バスナウ/PASSNOW", "TOUCH CRUISER EX", "ベールビュー/VeilView", "LCフォント/LCFONT" and the LC logo symbol are registered trademarks or trademarks of Sharp Corporation.



 iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language, and for phrase prediction methods for English.

iWnn © OMRON SOFTWARE Co., Ltd. 2008-2015 All Rights Reserved.

iWnn IME © OMRON SOFTWARE Co., Ltd. 2009-2015 All Rights Reserved

- The font type pre-installed in this product, Shin Go M, is licensed by Morisawa Inc. solely for the use with this product.
- "Morisawa" and "Shin Go" are registered trademarks or trademarks of Morisawa Inc.
- Portions Copyright ©2004 Intel Corporation
- The product includes pictograms that SHARP CORPORATION is licensed by NTT DOCOMO, INC.

### ■ Open Source Software

 The product includes software based on GNU General Public License (GPL), GNU Lesser General Public License (LGPL) and other licenses.

For details on licenses of related software, in the standby screen, ●
→ [Settings] → [Other settings] → [Device info] → [Legal information] → [Open source licenses].

 Source codes of software based on GPL, LGPL and Mozilla Public License (MPL) can be referred to on the following site for free. For details, refer to the following site.

https://sh-dev.sharp.co.jp/android/modules/oss/

### OpenSSL License

[OpenSSL License]

Copyright © 1998-2009 The OpenSSL Project. All rights reserved.

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/)

THIS SOFTWARE IS PROVIDED BY THE OPENSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

### [Original SSLeav License]

Copyright © 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING RIEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

### **■** Windows Notations

The names of operating systems (Japanese versions) used in this manual are as follows.

- Windows 8.1 is the abbreviation for Microsoft<sup>®</sup> Windows<sup>®</sup> 8.1, Microsoft<sup>®</sup> Windows<sup>®</sup> 8.1 Pro and Microsoft<sup>®</sup> Windows<sup>®</sup> 8.1 Enterprise.
- Windows 8 is the abbreviation for Microsoft<sup>®</sup> Windows<sup>®</sup> 8, Microsoft<sup>®</sup> Windows<sup>®</sup> 8 Pro and Microsoft<sup>®</sup> Windows<sup>®</sup> 8 Enterprise.
- Windows 7 is the abbreviation for Microsoft<sup>®</sup> Windows<sup>®</sup> 7 (Starter, Home Basic, Home Premium, Professional, Enterprise, Ultimate).
- Windows Vista is the abbreviation for Microsoft® Windows Vista® (Home Basic, Home Premium, Business, Enterprise, Ultimate).

### More

The software installed on this product or part of it may not be altered, translated/adapted, reverse-engineered, decompiled or reverse-assembled and any such actions are prohibited.

Under the MPEG-4 Visual Patent Portfolio License, customers have licensed permission for the following use of this product to engage in non-profit personal use. Other uses are not permitted.

- Recording MPEG-4 Visual standard video (henceforth referred to as MPEG-4 Video)
- Playing back MPEG-4 Video that a customer engaged in personal and non-profit activities has recorded
- Playing back MPEG-4 Video obtained from a provider licensed by MPEG-I A

When using for promotion, in-house use, profit use, and other intended uses, contact MPEGIALIC.

- This product is licensed under the AVC patent portfolio license for the personal and noncommercial use of a consumer to (i) encode video in compliance with the AVC standard (henceforth referred to as AVC video) and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and noncommercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C. Visit http://www.mpedla.com
- This product is licensed under the VC-1 Patent Portfolio License for the personal and noncommercial use of a consumer to (i) encode video in compliance with the VC-1 standard (henceforth referred to as VC-1 video) and/or (ii) decode VC-1 video that was encoded by a consumer engaged in a personal and noncommercial activity and/or was obtained from a video provider licensed to provide VC-1 video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C. Visit http://www.mpeola.com

This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Video Standard ("MPEG-4 Video") and/or (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use. Additional information may be obtained from MPEG LA. See http://www.mpegla.com.

This product is licensed under the MPEG-4 Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard, except that an additional license and payment of royalties are necessary for encoding in connection with (i) data stored or replicated in physical media which is paid for on a title by title basis and/or (ii) data which is paid for on a title by title basis and is transmitted to an end user for permanent storage and/or use. Such additional license may be obtained from MPEG LA, LLC. See http://www.mpegla.com for additional details.

### [Dear customers]

Thank you for buying the SHF32.

We would like to apologize for errors made in the SHF32 Basic Manual, which we correct as follows.

• "Entering a Phone Number and Making a Call" (P.49) notes section

Error) © Call charges for calls made with "1401" added are subtracted from the registered balance on an au prepaid card that you have bought.

Corrected) Description deleted.

# For inquiries, call:

### Customer Service Center

For general information, charges, and operation assistance (toll free)

Business hours: 9:00 to 20:00 (7 days a week)

From fixed-line phones: | From au cell phones:

0077-7-111

Pressing "zero" will connect you to an operator. after calling "157" on your au cellphone.

For service cancelation procedure in case of loss or theft (toll free)

Business hours: 24 hours (7 days a week) From fixed-line phones: | From au cell phones:

0077-7-113

In case above numbers are not available, call toll-free:

0120-977-033 (except Okinawa)

0120-977-699 (Okinawa)

## Keitai Guarantee Service Center

For loss, theft or damage (toll free) Business hours: 9:00 to 21:00 (7 days a week) From fixed-line phones/au cell phones:

0120-925-919





モバイル・ロサイクル・ネットワーク

Cell phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the (2) logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

June 2015, Edition 1.1 Sold by: KDDI CORPORATION. OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by: SHARP CORPORATION

# [Notification regarding LINE]

Distribution of the application LINE to this model stopped as of November 5th, 2019. New installations or updates of LINE are no longer possible.

On and after March 31st, 2020, notifications for messages and free calls that arrived while LINE was not activated cannot be received. You can receive messages and view call history after activating LINE.

OInformation in this notification is current as of March 1st, 2020. Subject to change without notice.