



# AQUOS *K*

SHF33

Basic Manual

---

Contents

---

Safety Precautions

---

Basic Operations

---

Character Input

---

Phone

---

Address Book

---

Mail

---

LINE

---

Internet

---

Camera

---

1Seg

---

Settings

---

Appendix

 
## Preface

Thank you for buying the "AQUOS K SHF33" (simply called the "SHF33" or the "product" from here on).


Before using the product, be sure to read the "Basic Manual" (this manual) and "Setting Guide" available on the au homepage to ensure correct use. After you have finished reading the manuals, be sure to keep them accessible and store the printed manuals ("取扱説明書" (Basic Manual) and "設定ガイド" (Setting Guide)) (Accessories) in safe places so that you can refer to them whenever you need them. If you lose the printed manuals (Accessories), contact an au shop or Customer Service Center.

## List of Packaged Items

Before you start using the product, make sure that you have all the following packaged items with the product.



SHF33

 

Battery Pack  
(SHF31UAA)



保証書 (Warranty)  
(Japanese)

- 取扱説明書 (Basic Manual) (Japanese)
- 設定ガイド (Setting Guide) (Japanese)

The following items are not included in the package.

- Desktop holder
- microSD memory card
- AC adapter
- Earphone
- microUSB 3.5mm conversion cable
- microUSB cable

- Purchase a specified charger (sold separately).

© Illustrations of cell phones in this manual are only for reference.  
They may look different from the actual product.

## Operating Instructions

### ■ “取扱説明書” (Basic Manual) and “設定ガイド” (Setting Guide)

The "Basic Manual" (this manual) and "Setting Guide" available on the au homepage describe basic operations of major functions. Initial settings, charging, and other preparations before using the product for the first time are explained in the "Setting Guide".

For detailed descriptions of various functions, refer to the "Full Instruction Manual" ("User Guide" Japanese) available on the au homepage:

<http://www.au.kddi.com/support/mobile/guide/manual/>

- Company and product names described in this manual are trademarks or registered trademarks of the respective companies. The TM and © marks are sometimes omitted.

## When Using the Product

Before you start using the product, be sure to read the "Safety Precautions" to ensure correct use.

Before you assume that the product is malfunctioning, check for possible remedies in the following au Customer Support site of au homepage:

<http://www.au.kddi.com/english/support/>

- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication may not be possible in poor reception areas. Communication may be interrupted if you move into a poor reception areas during communications.
- Since this product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated. (Though the LTE/GSM/UMTS system has highly secure confidential communication features.)
- VoLTE (LTE network) by au is used when connecting with emergency responding organizations within Japan. You cannot connect using 3G (circuit-switched network).
- The product is compatible with the international roaming service. Each network service varies depending on the area and service content.

For details, refer to "auのネットワークサービス・海外利用" (au Network Services/International Roaming) described in "Full Instruction Manual" ("User Guide" Japanese) available on the au homepage.

- Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.
- The IMEI information of your cell phone is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of your cell phone.
- The product initiates data transmission regularly to obtain information required for the product to operate including the time. Communication charges are incurred separately.

- If you are using the product overseas, check the relevant laws and regulations of the country/region you visit.
- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional or mistaken operation by the customer, or use under other unusual conditions outside the responsibility of the Company.
- The Company is not liable for any incidental damages (change/disappearance of saved content, loss of business income, disruption of business, etc.) arising from use of or inability to use the product. It is recommended that you keep a copy of important phone numbers etc.
- The Company is not liable for any damages arising from failure to observe the described content of this manual.
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.
- It is recommended you keep a copy of important data on your PC's hard disk, etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.
- Contents saved in the product, such as contacts, mails and bookmarks might be altered or lost by an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that the Company assumes no responsibility for any damages or lost profits resulting from altered or lost contents.
- Note that content data (both charged or free content) saved on the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.

- The product uses liquid crystal for its main display. Wearing polarizing sunglasses may result in the display appearing dark or distorted due to the characteristics of the sunglasses and the angle viewed at.
- The product uses liquid crystal for its main display. The main display response speed may become slow when the ambient temperature is low, which is due to the characteristics of liquid crystal and is not a malfunction. The main display response speed will return to normal at room temperature.
- Although the main display used on the product is made using high-precision technology, some pixels (dots) might be lit or out at all times. This is not a malfunction.
- Allowing the same image to be displayed on the sub-display for a long period may leave a ghost image, however, this is not a malfunction.
- You are recommended to store copies of individual data such as still pictures/videos you took and music in your PC by sending each file as mail attachment, etc. Note, however, that you may not be able to make copies of some copyrighted data even by the above-mentioned means.
- Do not discard together with regular trash. Please cooperate in the collection of the product (and optional accessories) when it is no longer needed to protect the environment and effectively use resources. Old products are collected at au shops and other places.
- \* "The Company" as appears in this manual refers to the following companies:  
Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY  
Manufactured by: SHARP CORPORATION

- Ⓒ Reproduction of the content of this manual in part or in whole is prohibited.
- Ⓒ The content of this manual is subject to change without notice.
- Ⓒ Every effort has been made in the preparation of this manual. Should you notice any unclear points, omissions, etc., feel free to contact us.

## Cell Phone Etiquette

### ■ Use of cell phones is not allowed in the following places!

- Do not listen to music, watch videos or TV (1Seg) while driving a car or motorbike, or riding a bicycle. Use of cell phones while driving a car or motorbike is prohibited by law. (Use of cell phones while riding a bicycle may also be punishable by law.) In addition, stay alert to the traffic around you even when walking. Surrounding sounds might not be heard clearly, and gazing at the screen may distract your attention causing a traffic accident. Be especially careful at railroad crossings, station platforms and pedestrian crossings.
- Since using the product on airplanes is restricted, follow the instructions given by the respective airlines.

 
 
### ■ Be considerate of people around you

- Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode so as not to disturb others around you with your ringtones.
- Do not use the cell phone outside in town where you might hinder other pedestrians.
- Viewing a cell phone screen while walking is a serious hazard. Do not suddenly stop to talk on/operate the cell phone or do so while walking.
- Move to areas where you will not inconvenience others on bullet trains, in hotel lobbies, etc.
- Refrain from talking in a loud voice.
- Be careful of sound leakage from earphones in trains or other places with many people around you.
- Obtain the permission of other people before you take their photos with the cell phone's camera.
- Mind general etiquette when using the camera.
- Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker. Turn on "Airplane mode" or turn the cell phone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.

## Illustrations and Descriptions in This Manual

### Note on Key Illustrations

In this manual, the key illustrations are simplified as shown below.

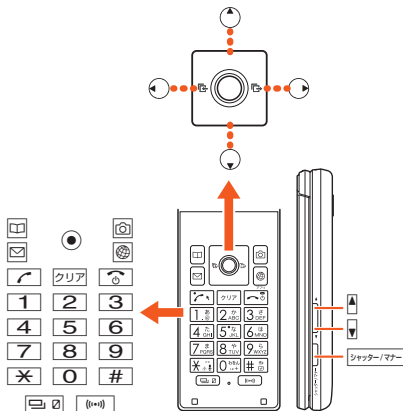


### Description of Operations for Selecting Item/Icon/Key etc.

In this manual, descriptions enclosed in [ ] abbreviate the steps for selecting an item/icon/onscreen button/etc. in the or menu and then pressing (OK/Check/Set/Commit/Done).

**Example: To edit address book contacts**

- When the standby screen is displayed, press → **Select contact to edit** → (Submenu) → [Edit].

 Indicates to select "Edit" with and commit with .

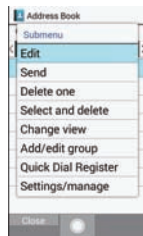


© For details on key operation, refer to "Learn Basic Key Operations" (▶ P.47).

## ■ Notes on Screenshots

 Screenshots and operation instructions in this manual are based on the product with an au Nano IC Card 04 inserted.



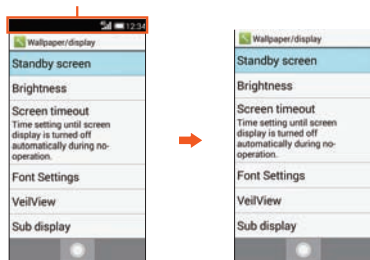

 

 
 




The screenshots are simplified and may look different from the actual screens. Also, part of the screen may be omitted.

In this manual, part of the screen such as icons are omitted.



Actual screen

 In this manual

- Display descriptions in this manual are for the product with the body color "royal green".
- Content at the bottom of the screen that can be operated by pressing , , , , or  are indicated in parentheses, such as  (Submenu).
  - \* However, , , , , and  are abbreviated as  only.
- Menu items, layers and icons described in this manual may be different according to functions being used and conditions.
- In this manual, "microSD™ memory card (commercially available)" and "microSDHC™ memory card (commercially available)" are abbreviated as "microSD memory card" or "microSD".
- All of the indicated amounts exclude tax unless otherwise specified.

<b>Contents</b>	
<b>Preface</b> .....	<b>ii</b>
<b>List of Packaged Items</b> .....	<b>ii</b>
<b>Operating Instructions</b> .....	<b>ii</b>
<b>When Using the Product</b> .....	<b>1</b>
<b>Cell Phone Etiquette</b> .....	<b>2</b>
<b>Illustrations and Descriptions in This Manual</b> .....	<b>3</b>
<b>Contents</b> .....	<b>5</b>
<b>Safety Precautions</b> .....	<b>7</b>
<b>Safety Precautions (Observe Strictly)</b> .....	<b>7</b>
<b>Handling Precautions</b> .....	<b>18</b>
<b>Available Security Codes</b> .....	<b>23</b>
Security Codes.....	23
PIN.....	23
<b>Notes on Waterproof/Dustproof/Shockproof Properties</b> .....	<b>24</b>
<b>Notes on Using Bluetooth®/Wireless LAN (Wi-Fi®) Functions</b> ..	<b>29</b>
Precautions about Bluetooth®.....	29
Precautions about Wireless LAN (Wi-Fi®).....	29
Frequency Band.....	29
<b>Voluntary Control of Radio Wave Interference</b> .....	<b>31</b>
<b>Notes on Packet Communication Charge</b> .....	<b>31</b>
<b>Notes on Applications</b> .....	<b>31</b>
<b>Basic Operations</b> .....	<b>32</b>
<b>Names and Functions of Parts</b> .....	<b>32</b>
<b>Using Touch Cruiser EX</b> .....	<b>34</b>
Operation with Touch Cruiser EX.....	35
<b>Using the Magnifier</b> .....	<b>36</b>

<b>Switching the Display Language to English</b> .....	<b>36</b>
<b>Using the Standby Screen</b> .....	<b>37</b>
Using Favorites.....	37
Using Indicator Icons/Shortcuts in the Standby Screen.....	38
Using Information.....	38
<b>Using the Status Bar</b> .....	<b>38</b>
Icons.....	38
Using the Notification/Status Panel.....	39
<b>Using the Sub-display</b> .....	<b>40</b>
<b>Using the Normal Menu</b> .....	<b>42</b>
About Applications.....	46
<b>Using the Simple Menu</b> .....	<b>46</b>
<b>Learn Common Operations</b> .....	<b>47</b>
Learn Basic Key Operations.....	47
Using Checkboxes.....	48

## Character Input ..... 49

<b>Learn How to Enter Characters</b> .....	<b>49</b>
--	-----------




## Phone ..... 52

<b>Making Calls</b> .....	<b>52</b>
Entering a Phone Number and Making a Call.....	52
Using Call Histories and Making a Call.....	53
Using Speed Dial and Making a Call.....	55
Using Kantan Hasshin (Speech Recognition) and Making a Call..	55
Making a Call with Voice party.....	56
Calling Overseas from au Phones (au International Call Service)..	57
<b>Receiving Calls</b> .....	<b>58</b>
Answering a Call.....	58
Rejecting an Incoming Call.....	58
Rejecting a Call and Sending a Message (SMS).....	58
<b>Checking Your Phone Number</b> .....	<b>59</b>

Checking Your Profile.....	59	Capturing Still Pictures/Video.....	74
Editing Your Profile.....	59	<b>1 Seg .....</b>	<b>76</b>
<b>Address Book.....</b>	<b>60</b>	1Seg .....	76
Registering to the Address Book.....	60	Making Initial TV Settings.....	77
Using the Contacts List.....	60	Viewing TV Programs.....	77
Displaying the Contacts List.....	60	Viewing a TV Program .....	77
Using Information Registered for Contacts.....	61	<b>Settings.....</b>	<b>79</b>
<b>Mail.....</b>	<b>62</b>	Displaying the Settings Menu .....	79
Checking E-Mail .....	62	Wireless LAN (Wi-Fi®) Function .....	79
Sending E-mail.....	65	Using the Wireless LAN (Wi-Fi®) Function.....	79
Receiving E-mail .....	66	Turning the Wireless LAN (Wi-Fi®) Function On .....	79
Inquiring for and Receiving New Mail .....	67	Connecting to a Wi-Fi® Network.....	79
Sending SMS.....	67	Disconnecting from an Access Point.....	80
Receiving SMS .....	68	<b>Appendix .....</b>	<b>81</b>
<b>LINE.....</b>	<b>69</b>	Introduction of Peripheral Devices.....	81
Using LINE.....	69	Using an Earphone Microphone with Switch/Earphone .....	82
<b>Internet.....</b>	<b>70</b>	Microphone/Earphone .....	82
Accessing the Internet.....	70	Troubleshooting.....	83
Using Packet Communication .....	70	Updating Software .....	84
Using the Browser .....	71	Remotely Locking the Product with Anshin Lock Service.....	85
Using the Browser Menu .....	71	Using Keitai Sagasete Anshin (Keitai Search) Service .....	86
Increasing/Decreasing the Size of the Browser Screen/Text.....	71	After-Sales Service .....	86
Operating the Browser with Touch Cruiser EX.....	72	SIM-Unlocking the Product .....	89
<b>Camera.....</b>	<b>73</b>	Main Specifications .....	90
Before Using the Camera .....	73	Specific Absorption Rate (SAR) of Cell Phones.....	91
		CE Declaration of Conformity.....	92
		FCC Notice.....	93
		Export Administration Regulations.....	94
		Intellectual Property Rights .....	95

## Safety Precautions (Observe Strictly)

- Before using the product, thoroughly read these safety precautions for proper use. After reading, store the precautions in a safe place.
- These precautions contain information intended to prevent injury to the user and to surrounding people, as well as damage to property, and must be observed at all times.
- The following symbols indicate the different degrees of injury or damage that may occur if information provided is not observed and the product is used improperly.







 <b>DANGER</b>	This symbol indicates that "death or serious injury" <sup>*1</sup> may directly and immediately result from improper use".
 <b>WARNING</b>	This symbol indicates that "death or serious injury" <sup>*1</sup> may result from improper use".
 <b>CAUTION</b>	This symbol indicates that "minor injury" <sup>*2</sup> and/or physical damage <sup>*3</sup> may result from improper use".

\*1 Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long-term hospital attendance as an outpatient.

\*2 Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.


\*3 Physical damage: This refers to extended damage to buildings, furniture, livestock, pets, etc.

## Explanation of Graphic Symbols Used in This Manual

 Prohibited	Indicates an action that is not allowed.	 Wet hands prohibited	Indicates that handling with wet hands is not allowed.
 Disassembly prohibited	Indicates that disassembly is not allowed.	 Instruction	Indicates that instructions specified are compulsory (must be followed).
 Wetting with water prohibited	Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.	 Disconnect plug from power outlet	Indicates that the power plug must be disconnected from the power outlet.

## Precautions Common to the Main Unit, battery pack, back cover, Charger, au Nano IC Card 04, Peripheral Devices

### DANGER

-  Prohibited **Do not use, store or leave the equipment in locations subject to high temperatures or accumulation of heat (near a fire or heating unit, in a kotatsu or bedding, under direct sunlight, inside a vehicle on a hot day, etc.).**  
May cause fires, burns, injury, electric shock, etc.



Prohibited

**Do not place the equipment inside cooking appliances such as microwave ovens and induction cookers or high pressure vessels such as pressure cookers, or near them.**

May cause fires, burns, injury, electric shock, etc.



Prohibited

**Do not sprinkle sand, soil or dirt on the equipment or put the equipment directly on it. Also, do not touch the equipment when sand etc. is adhering to your hand.**

May cause fires, burns, injury, electric shock, etc.  
Refer to the following for details on waterproofness/dustproofness.

▶ P.24 "Notes on Waterproof/Dustproof/Shockproof Properties"



Prohibited

**Do not charge the equipment while it is wet with liquids such as water (drinking water, sweat, seawater, pet urine, etc.).**

May cause fires, burns, injury, electric shock, etc.  
Refer to the following for details on waterproofness.

▶ P.24 "Notes on Waterproof/Dustproof/Shockproof Properties"



Disassembly prohibited

**Do not attempt to disassemble or modify the equipment.**

May cause fires, burns, injury, electric shock, etc.



Wetting with water prohibited

**Do not get the equipment wet with liquids such as water (drinking water, sweat, seawater, pet urine, etc.).**

May cause fires, burns, injury, electric shock, etc.  
Refer to the following for details on waterproofness.

▶ P.24 "Notes on Waterproof/Dustproof/Shockproof Properties"



Wetting with water prohibited

**Do not allow liquids such as water (drinking water, sweat, seawater, pet urine, etc.) to get inside the charging jack or external connection jack.**

May cause fires, burns, injury, electric shock, etc.  
Refer to the following for details on waterproofness.

▶ P.24 "Notes on Waterproof/Dustproof/Shockproof Properties"



Instruction

**Use only optional parts specified by au.**

May cause fires, burns, injury, electric shock, etc.

**WARNING**

Prohibited

**Do not subject the equipment to strong force, impacts or vibration such as letting it fall, stepping on it or throwing it.**

May cause fires, burns, injury, electric shock, etc.



Prohibited

**Do not allow conductive materials (such as metal objects and pencil lead) to come into contact with the charging jack or external connection jack or dust to get inside it.**

May cause fires, burns, injury, electric shock, etc.



Prohibited

**Do not cover or wrap the equipment with bedding etc. when using or charging.**

May cause fires, burns, etc.



Instruction

**If charging is not completed after the specified charging time, stop charging.**

May cause fires, burns, injury, etc. because of overcharging.



Instruction

**Be sure to turn off the product and not to charge the battery in locations where flammable gas may be generated such as gas stations and where dust is generated.**

May cause explosions, fires etc. if using the equipment in location where flammable gas etc. is generated.  
To use Osaifu-Keitai® in locations such as gas stations, be sure to turn off the power in advance.  
(If Osaifu-Keitai lock is set, disable the lock before turning off the power.)



Instruction

**If any trouble such as an unusual odor, unusual noise, smoking, overheating, discoloration or deformation is found during use, charge or storage, follow the instructions below.**

- Unplug the power plug from the outlet.
- Turn off the product.
- Remove the battery pack from the product.

May cause fires, burns, injury, electric shock, etc. if you do not follow the instructions above.

**CAUTION**

Prohibited

**Do not use a damaged equipment.**

May cause fires, burns, injury, etc.



Prohibited

**Do not leave the equipment on unstable surfaces, such as on a wobbly table or sloped surface. Be very careful while the vibrator is set.**

May fall and cause injury etc.



Prohibited

**Do not use or store the equipment in locations that are subject to humidity, dust or high temperatures.**

May cause fires, burns, electric shock, etc.

Refer to the following for details on waterproofness/dustproofness.

▶ P.24 "Notes on Waterproof/Dustproof/Shockproof Properties"



Prohibited

**If being used by a child, have a guardian teach him/her the proper handling procedures and do not have him/her use it improperly.**

May cause injury etc.



Prohibited

**Do not place the equipment where the young children can reach it.**

A young child may swallow the equipment, or suffer injury, electric shock, etc.



Instruction

**Be careful when using the product continuously for a long time or charging because it may become warm. Also, be careful not to touch it unintentionally for a long time when you fall asleep etc.**

The product, battery pack, or specified charger (sold separately) may become warm when using an application, a call, data communication, watching TV or video, etc. for a long time or charging. Directly touching a warmed part for a long time may cause redness, itching, rashes, low-temperature burns, etc. on your skin depending on your constitution or health condition.

## Main Unit



### DANGER



**Do not throw the product into a fire or heat it.**

Prohibited May cause fires, burns, injury, etc. because of catching fire, exploding, overheating or leaking of the battery.



**Do not apply excessive force on the product such as puncturing it with a nail (sharp object), hitting it with a hammer (hard object) or stepping on it.**

Prohibited May cause fires, burns, injury, etc. because of catching fire, exploding, overheating or leaking of the battery.



**If the substance etc. inside the display comes into contact with your eyes or mouth, do not rub the contacted area but immediately rinse the contacted area with clean water. Then seek prompt medical treatment.**

Instruction May result in loss of eyesight, sick, etc. because of the substance etc. inside the display.



### WARNING



**Do not send by infrared with the infrared port pointed at one's eyes.**

Prohibited May adversely affect one's eyes.



**When using infrared communication, do not operate with the infrared port pointed at the infrared device of a household appliance.**

Prohibited May cause misoperation, accident, etc.



**Do not point the illuminated light directly at someone's eyes. Especially when you use it for young children, keep sufficient distance from them.**

Prohibited Do not use Mobile light near people's faces. Eyesight may be temporarily affected leading to accidents etc.



**Do not illuminate or emit the mobile light at anyone driving a car or other vehicles.**

Prohibited May prevent a driver from driving safely and cause a traffic accident etc.



**Do not watch the screen which is flashing repeatedly for a long time.**

Prohibited May cause spasm or loss of consciousness.



**Do not allow water or other liquids (drinking water, sweat, seawater, pet urine, etc.), metal, flammable material or other foreign object to enter the au Nano IC Card 04 tray slot or microSD memory card slot on the product.**

Prohibited **Also, do not mistake the place and direction of the au Nano IC Card 04 tray slot or microSD memory card slot.** May cause fires, burns, injury, electric shock, etc.



**Do not expose the camera lens to direct sunlight etc. for an extended period.**

Prohibited May cause fires, burns, injury etc. because of the light-collecting mechanism of the lens.

**Turn off the product or set it to Airplane mode before going aboard an airplane.**

Instruction

Since using the product on airplanes is restricted, follow the instructions given by the respective airlines.

Failure to do so might affect an airplane's electronic instrumentation.

If you commit a prohibited act while using the product on an airplane, you may be punished by law.

**Follow the instructions given by the respective medical institution regarding the use of the product in a hospital.**

Instruction

**Turn off the product in areas where the use of cell phones is prohibited.**

Failure to do so might cause interference with the operation of electronic devices and electronic medical devices.

**Keep the product away from the ears during a call in which hands-free is set, while the ringtone is ringing, during stand-by, etc.**

Instruction

**When you attach the earphone/microphone etc. to the product to play games, video/music, etc., do not make the volume too loud.**

Excessively high volume or using the product continuously for a long time may damage your hearing etc.

Also, it may prevent you from hearing ambient sounds and cause an accident.

**If you have a weak heart, take extra precautions when setting functions such as the vibrator and ringtone volume for incoming calls.**

Instruction

May have harmful effects on your heart.

**If you are using electronic medical equipment etc., contact the respective manufacturer or dealer to check whether the operation of the equipment is affected by signals.**

Instruction

May interfere with the operation of electronic medical equipment etc.

**Turn off the product near high-precision electronic devices or devices that use weak electronic signals.**

Instruction

May interfere with the operation of electronic devices.


**※Take particular care with the following devices**

Hearing aids, implanted cardiac pacemakers, implanted cardioverter-defibrillators, other electronic medical equipment, other equipment controlled by electronic signals, etc. If you use an implanted cardiac pacemaker, implanted cardioverter-defibrillator or other electronic medical equipment, contact the respective manufacturer or dealer to check whether the operation of the equipment is affected by signals.

**If the display part or camera lens is damaged, be careful of broken glass and the exposed inside of the product.**

Instruction

May cause burns, injury, electric shock, etc. if you touch the broken or exposed parts.

 **CAUTION**

**Do not swing the product around by holding the strap etc.**

Prohibited May hit you or others around you, resulting in an accident such as injury.



**For using a motion sensor and geomagnetic sensor, check the safety around, hold the product and do not swing it more than necessary.**

Prohibited May cause an accident such as injury.



**If the display is broken and the internal substance etc. then leaks, do not get it on your skin (face, hands, etc.), clothes, etc.**

Prohibited May result in loss of eyesight or harm to your skin etc. If the internal substance etc. comes into contact with your eyes, mouth, skin or clothes, immediately rinse the contacted area with clean water. Also, if it comes into contact with your eyes or mouth, seek medical treatment immediately after rinsing the contacted area.



**Do not use more force than necessary when removing the back cover.**

Prohibited May damage the back cover, cause injury, etc.



**Be careful not to pinch your fingers when attaching the back cover.**

Prohibited May cause injury, etc.



**Do not use with the back cover not attached.**

Prohibited May cause burns, injury, electric shock, etc.



**Do not dispose of the product in ordinary garbage.**

Prohibited

May cause fires, burns, injury, etc. because of catching fire. Also, may damage to the environment. Take the unnecessary product to a sales outlet such as an au shop or follow the instructions by a local institution that handles used products.



**If you use the product in a vehicle, contact the vehicle manufacturer or dealer to check whether the operation of the vehicle is affected by signals.**

Instruction

May interfere with the operation of electronic equipment in some vehicle models. In this case, stop using the product.



**If any trouble on your skin is occurs due to using the product, immediately stop using it and seek medical treatment. Use of the product may cause itching, rashes, eczema, etc. depending on your constitution or health condition.**

Instruction

For details on materials of each part, refer to "Material List" (▶P.17).



**Be careful not to pinch yourself (finger, etc.) when opening/closing the product.**

Instruction

May cause injury, etc.



**Make sure that there is no metal (a blade of cutter, staple, etc.) on the product because the earpiece (receiver) and speaker section contain parts that generate magnetic waves.**

Instruction

May cause injury etc. because of the adhered object.



**Look at the display in a well-lit place, keeping a certain distance.**

Instruction

Eyesight may be weakened etc. if you look at it in a dark place or closely.

## Battery Pack



### DANGER



Prohibited

**Do not allow anything metal (necklace, hairpin, etc.), conductive, etc. to contact the connection terminal. Do not carry or store together with such objects.**

May cause the battery pack to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.



Prohibited

**If you cannot install the battery pack in the product, do not force it in.**

May cause the battery pack to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.



Prohibited

**Do not dispose of the battery pack in fire or heat the battery pack.**

May cause the battery pack to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.



Prohibited

**Do not pierce with nail (sharp object), hammer (hard object), step on, or otherwise subject to excessive force.**

May cause the battery pack to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.



Instruction

**Confirm the orientation of the battery pack before installing in the product.**

Installing in an incorrect orientation may cause the battery pack to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.



### WARNING



Prohibited

**If matter from the battery pack gets in your eyes, immediately rinse with clean water and without rubbing, and immediately seek medical attention.**

Matter from the battery pack may cause blindness, affect health, etc.



Prohibited

**Do not use if there is anything abnormal such as odor, overheating, discoloration, or deformation.**

May cause the battery pack to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.



Instruction

**If the battery pack leaks or emits odor, immediately discontinue use and keep away from flames.**


Leaked fluid may catch fire, causing the battery pack to ignite, rupture, etc.



Instruction

**Do not allow pets or animals to chew on the battery pack.**

May cause the battery pack to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.

 **CAUTION**



**If the battery pack leaks fluid, do not allow it to get on skin (hands, face, etc.) or on clothing.**

Prohibited

May cause blindness or harm skin. If matter from the battery pack gets in your eyes or mouth, or gets on your skin or clothing, immediately rinse with clean water.

If getting in your eyes or mouth, rinse and immediately seek medical attention.



**Do not dispose of with ordinary waste.**

Prohibited

May cause ignition, resulting in fire, burns, injury, etc. May also affect the environment. Tape the terminals of used battery packs to insulate them and bring to an au shop or other location accepting used battery packs, or cooperate with local collection regulations.



**Do not use or charge a wet battery pack.**

Prohibited

May cause battery pack to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.

 **Charger**

 **WARNING**



**Do not use if the cord of the specified charger (sold separately) is damaged.**

Prohibited

May cause fires, burns, electric shock, etc.



**Never use the specified charger (sold separately) or desktop holder (sold separately) in humid locations such as a bathroom.**

Prohibited

May cause fires, burns, electric shock, etc.



**Do not touch the specified charger (sold separately) if you hear thunder.**

Prohibited

May cause electric shock etc.



**Do not short-circuit the charging jack when connected to an outlet. Also, do not allow any part of your body (hands, fingers, etc.) to come into contact with the charging jack.**

Prohibited

May cause fires, burns, electric shock, etc.



**Do not place heavy objects on the cord of the specified charger (sold separately) or apply excessive force on it such as pulling it.**

Prohibited

May cause fires, burns, electric shock, etc.



**When plugging/unplugging the specified charger (sold separately) into/from the outlet, do not allow metallic straps or other metallic objects to come into contact with the prongs of the plug.**

Prohibited

May cause fires, burns, electric shock, etc.



Prohibited

**Do not connect the voltage converter for overseas travel (travel converter) to the specified charger (sold separately).**

May catch fire, or cause overheat, electric shock, etc.



Prohibited

**Do not apply excessive force on the connection part with the specified charger (sold separately) connected to the product.**

May cause fires, burns, injury, electric shock, etc.



Prohibited

**Do not use the desktop holder (sold separately) in a vehicle.**

May cause an accident by falling and hindering driving. The desktop holder assumes use indoors on a stable surface.



Wet hands prohibited

**Do not handle the cord, charging jack or power plug of the specified charger (sold separately) or desktop holder (sold separately) with wet hands.**

May cause fires, burns, electric shock, etc.



Instruction

**Always use the specified power supply and voltage. When using overseas, use the specified charger (sold separately) that is available overseas.**

Using the incorrect power supply and voltage may cause fires, burns, electric shock, etc.

AC adapter: 100V AC (Connect only with a household AC outlet)

AC adapter available overseas: 100 to 240V AC (Connect only with a household AC outlet)



Instruction

**Wipe off any dust on the power plug.**

May cause fires, burns, electric shock, etc. if you use the power plug with dust adhering.



Instruction

**Fully plug the specified charger (sold separately) into the outlet.**

May cause fires, burns, electric shock, etc. if you do not insert it securely.



Instruction

**Always grasp the body of the specified charger (sold separately) when unplugging the power plug from the outlet. Do not apply excessive force on it such as pulling the cord of the specified charger (sold separately).**

May cause fires, burns, electric shock, etc. since the cord of the specified charger (sold separately) is damaged by pulling it.



Instruction

**When plugging/unplugging a specified charger (sold separately) into/from the product, plug/unplug it straightly toward the jack to connect, not applying excessive force on it such as pulling the cord.**

May cause fires, burns, injury, electric shock, etc. if you do not plug/unplug it correctly.



Instruction

**If the charging jack is deformed such as bending it, immediately stop using. Also, do not use the deformed one by returning it to the original shape.**

May cause fires, burns, injury, electric shock, etc. because of short circuit of it.



Disconnect plug from power outlet

**Unplug the power plug of the specified charger (sold separately) from the outlet when not using.**

May cause fires, burns, injury, electric shock, etc. if you leave the power plug with it plugged into the outlet.



Disconnect plug from power outlet

**If water or other liquids (drinking water, sweat, seawater, pet urine, etc.) enter the equipment, immediately remove the power plug from the outlet.**

May cause fires, burns, electric shock, etc.



**Always unplug the power plug from the outlet before cleaning the equipment.**

Disconnect plug from power outlet

May cause fires, burns, electric shock, etc. if you do not unplug it.



**CAUTION**



**Do not touch the specified charger (sold separately) for a long time when connected to an outlet.**

Prohibited

May cause burns etc.

### ■ au Nano IC Card 04



**CAUTION**



**Be careful with the cutting surface not to injure any part of your body such as fingers when handling the au Nano IC Card 04.**

Instruction

May cause injury etc.



**Be careful when attaching/removing the au Nano IC Card 04.**

Instruction

May injure your hand or finger.

### ■ Use near Medical Instruments and Inside Medical Facilities



**WARNING**



Instruction

**If you have electronic medical equipment such as an implanted cardiac pacemaker or an implanted cardioverter-defibrillator, always carry or use your product at least 15 cm away from your implant.**

Electromagnetic signals may have harmful effects on the operation of the electronic medical equipment.



Instruction

**Patients receiving medical treatment away from a medical facility (e.g. home treatment) who are using electronic medical equipment other than implanted cardiac pacemakers or implanted cardioverter-defibrillators should consult the respective manufacturers etc. for information regarding the effects of signals on the equipment.**

Electromagnetic signals may have harmful effects on the operation of the electronic medical equipment.



Instruction

**If there is any chance that the distance between the product and a person closest to you may get shorter than 15 cm such as when you cannot freely move around, set the product not to emit radio wave in advance (by setting Airplane mode, turning the power off, etc.).**

Somebody nearby may be equipped with electronic medical equipment such as an implanted cardiac pacemaker or an implanted cardioverter-defibrillator. Electromagnetic signals may have harmful effects on the operation of the electronic medical equipment.



**Follow the instructions given by the respective medical facilities regarding the use of the product on their premises.**

Instruction

May have harmful effects on the operation of the electronic medical equipment.

## Material List

### Main unit (SHF33)

Part	Material/Surface treatment
Outer case	<p><b>Outer case (operation key sheet)</b> PET resin, UV hardened resin</p> <p><b>Outer case (lower key circumference)</b> PA resin/Coating, Hard coating</p> <p><b>Outer case (lower back)</b> PC+ABS resin/Coating, Hard coating</p> <p><b>Outer case (main display frame)</b> PA resin/Coating, Hard coating</p> <p><b>Outer case (main display back)</b> Acrylic resin/Hard coating</p> <p><b>Outer case (main display side/hinge side/tip)</b> PA resin/Coating, Hard coating</p>
Main display	Acrylic resin/Hard coating
Sub-display	Acrylic resin/Imprinting, Hard coating
Hinge stopper	POM resin
Hinge cover	PC resin+ABS resin/Coating, Hard coating
Hinge panel	Acrylic resin/Imprinting, Hard coating
Camera lens	Acrylic resin/Hard coating
Camera lens fringe	Aluminum/Anodizing
Mobile light lens	PC resin

Part	Material/Surface treatment
Infrared port cover	Acrylic resin
Center key	UV hardened resin
Cursor key	UV hardened resin
Key cosmetic (Cursor key, Address book key, etc.)	UV hardened resin
Address book key Camera key Mail key Browser/Apps key	UV hardened resin
Call key Clear key Power/End call key Number keys	UV hardened resin
Recent Apps key Tethering key	UV hardened resin
Volume UP/DOWN key	PC resin/Coating, Hard coating
Shutter/Manner key	PC resin/Coating, Hard coating
Charger terminal	SUS/Gold plating
Back cover	PC resin+Silicon rubber/Coating, Hard coating
Contacts	Copper alloy/Gold plating
Cushion pads	Silicon
au Nano IC Card 04 tray	POM resin
Magnetic sheet	Ferrite (mainly iron oxide)/PET film (polyethylene terephthalate)
External connection jack (resin portion)	PA resin
External connection jack (metal portion)	SUS+Copper alloy/Tin plating, Gold plating
Screw	SUS

Part	Material/Surface treatment
Rubber seal	Silicon rubber
Back cover cushion	Urethane foam

### ■ Battery Pack

Part	Material/Surface treatment
Outer	PC resin+PET
Connection jack	Copper alloy/Gold plating

## Handling Precautions

These precautions are provided to prevent product faults and to ensure that performance can be fully demonstrated.

Thoroughly read these precautions to ensure correct use.

### ■ Precautions common to the main unit, battery pack, back cover, charger, au Nano IC Card 04, peripheral devices

- Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heavy object on the product in a bag. Sitting on the product in your pocket might damage the display or internal circuit board resulting in a malfunction.  
Keeping an external device connected to the external connection jack might damage the connector resulting in a malfunction. Such damage and malfunction are not covered by the warranty, even if there is no external damage.
- To ensure waterproof/dustproof property (equivalent to IPX5, IPX7 and IP5X) of the product, use the product with a specified back cover tightly closed.  
Note that the waterproof/dustproof property is not guaranteed in every usage condition. Do not allow foreign matter (liquid, dust, etc.) to get inside the product or on the battery pack, charger, or optional accessories. Do not open/close the back cover in the rain or with any water on the surface of the product. Doing so might cause water intrusion resulting in internal corrosion.  
Malfunctions determined to be caused by such water intrusion are not covered by the warranty.
- Do not use the product in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%.)
  - Charger
  - Peripheral devices

- Do not use the product in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%.)
  - SHF33
  - Battery pack (installed in SHF33)
  - au Nano IC Card 04 (inserted into the SHF33)
- Do not use in places subject to lots of dust or vibration. Doing so might cause a fault.
- Clean the connection terminals with a dry cotton swab, etc. periodically. Soiled terminals may cause a poor connection. Do not push forcefully and bend terminals while cleaning.
- Clean the product with a soft dry cloth (such as the type used for eyeglasses). Forceful rubbing with a dry cloth may scratch the display. The display may be stained if splash or smear is left attached to the surface. Wiping the product using alcohol, thinner, benzene, detergent, glass cleaner, etc. might erase the printing on the outer casing or cause a fault.
- Use as far away as possible from fixed-line phones, TVs and radios. Use nearby might affect them.
- The product may become warm while charging or during other operations, depending on the situation, but this is not abnormal.
- Turn off the power of the product before removing the battery pack. If you remove the battery pack with the power on, saved data might be altered or lost.
- Do not place near corrosive chemicals or in places where corrosive gas is generated. Doing so might cause a fault.
- Do not use outside when you can hear thunder. Doing so might risk lightning strikes and electric shock.
- Be sure to use only the specified peripheral devices. Use of other peripheral devices might cause a fault.
- Do not put the product in a cooking apparatus such as microwave oven or a pressure vessel. Doing so might cause a fault.
- The customer is not allowed to disassemble, modify or repair the product. Doing so might cause a fault. Also, modification of the product is in violation of the Radio Law and/or the Telecommunications Business Law.
- To prevent short-circuiting of the charger terminal and external connection jack, do not allow your fingers or any other part of your body or conductive materials (metal, pencil lead, etc.) to come in contact with or enter these areas. Doing so might cause a fault.
- If equipment becomes wet during charging, immediately disconnect the power plug of the AC adapter.
- Do not use product while driving a car or riding a motorbike or bicycle or while walking. Doing so might cause a traffic accident. Use of a cell phone while driving a car or riding a motorbike is prohibited by law. Use of a cell phone while riding a bicycle may be punishable by some regulations.
- Do not use or charge the product in the bag or with it covered by bedding etc. Doing so might cause a fault.
- When using a charger or external device, insert/remove the connector straight to/from the jack. Inserting/removing in an incorrect orientation might cause a fault.
- Do not expose the camera lens to direct sunlight for an extended period. Doing so might cause a fault.
- Do not use, store or leave the product in places subject to direct sunlight (e.g. in automobiles), places that get hot, places that get extremely cold, and in humid or dusty places. Doing so might cause a fault.
- Do not place the product on top of a wobbly table, sloped surface, or other unstable location. Be careful especially when the product is charging or set to vibrate. Doing so may allow the product to fall and cause injury etc.
- When charging the product, do not exceed the ratings given for outlets and wiring by multiple connections etc.
- When the product becomes warm during use, the screen brightness or part of its functions may be restricted.

## ■ Main unit

- Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so might cause scratching or damage.
- Do not forcefully press sharp objects or hard objects against keys or display surface. Doing so might cause scratching or damage.
- The product's keypad (touch area) can be operated with your fingers as a touchpad (Touch Cruiser EX). However, in the following cases, the touch area may not respond to touch operation. These may also result in malfunction.
  - with gloves on
  - with fingernails
  - with another object placed on the operation area
  - with a sticker adhered
  - with any water or condensation on the touch area
  - with wet or sweaty fingers
  - under water
- Do not remove the sticker printed with the IMEI number in the battery compartment visible when the battery pack is removed. This sticker bears a "Technical Conformity Mark" certifying that the product and the communication module you are using comply with the Radio Law and Telecommunications Business Law.
- Never use a modified product. Use of a modified device violates the Radio Law and the Telecommunications Business Law. The product has acquired the certification of conformity with technical regulations for a specified radio station based on the Radio Law and well has been deemed to conform with technical regulations for a device based on the Telecommunications Business Law, and the "Technical Conformity Mark" can be confirmed on the product nameplate sticker. If the screws of the product are removed and modifications are made to the internal components, the certification of conformity with technical regulations will become invalid. Never use the product without the valid certification. Doing so violates the Radio Law and/or the Telecommunications Business Law.

- Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product, as it might cause malfunction. Putting strong magnetism close to the product might cause false operation.
- Do not bring the product close to magnetic cards such as cash cards, credit cards, and prepaid cards. Doing so might result in loss of recorded information.
- When you put the product in your pocket or bag, take care so that the display does not come in contact with metal objects or other hard objects, as it might cause scratching or damage. Straps with metal or other hard parts that may come in contact with the display may cause scratching or breakage.
- When suddenly brought into a warm place from a cold place, or when in a humid location, or when used where temperature suddenly changes (e.g. near the air discharge port of an air conditioner), water drops (i.e. condensation) sometimes are formed inside the product. Note that when used under conditions such as this, humidity might cause corrosion or a fault.
- Do not exert excessive force when attaching/removing a microSD memory card. Doing so might injure your hands or fingers.
- While writing/reading data to/from a microSD memory card, do not subject the product to vibration or impact, remove the battery pack, or turn off the power. Doing so might cause loss of data or a fault.
- Do not remove the black sheet on the inside of the back cover. Doing so may prevent Osaifu-Keitai® from reading/writing properly.
- Covering earpiece (receiver), mouthpiece (microphone), speaker, or air vent with stickers or fingers may hinder product performance.
- If the display gets damaged, immediately stop use and contact an au shop or Keitai Guarantee Service Center. Keeping using it may cause injury.
- Putting a sticker, etc. on the main display or a key may cause malfunction or shortened usage time. Also, doing so may damage the product.

- Be careful not to pinch your fingers when opening/closing the product.
- If you put magnetized objects, metal straps, etc. close to the product, the speaker section sometimes emits sounds. This is not a fault.
- Bright places such as under the direct sunlight sometimes make it hard to see the display. This is not a fault.
- Do not use with the back cover removed. Do not leave or store in that manner. Doing so may allow dust or other foreign matter to enter and cause a fault.
- Do not allow liquids, metal objects, and other foreign matter to get inside the au Nano IC Card 04 tray slot or microSD memory card slot of the product. Doing so might cause a fault.
- Do not subject to strong impact to the product such as dropping, throwing or stepping it. Doing so might cause a fault.
- Do not put the product directly on sand at a beach, etc. Sand or other small particles might get inside the earpiece, mouthpiece, speaker, etc. causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.

#### ■ OEL display

- The product uses an OEL display in its sub-display. While OEL displays may experience lowered partial brightness if same images are displayed for a long time or if used for an extremely long time, this is due to the characteristics of the OEL display and is not a malfunction.
- OEL displays are manufactured with high-precision technology, and may experience very limited instances of pixels not lighting or being always on. Brightness may also appear unevenly in bands depending on the angle. This is due the structure of the OEL display, and is not a malfunction.
- Leaving an OEL display under direct sunlight might cause malfunction. Use caution when placing near a window or outdoors.

#### ■ Battery pack



#### (The battery pack of the product is a lithium-ion battery.)

The battery pack is not fully charged at the time of purchase. Charge the battery before using the product. Also charge the battery after long periods of disuse before using the product.

- Use in very hot or cold environments, for example, when left in an automobile with the windows closed in summer, will cause the battery capacity to drop and shorten the available battery usage time. This will also shorten the battery pack's service life. Try to use the battery pack as much as possible at room temperature.
- When the battery pack is not to be used for a long time, remove the battery pack from the main unit, and store it away from hot and humid places.
- The battery pack is a consumable item. If the performance of a battery pack does not recover (e.g. the usable time after each charge has become extremely short), the battery pack is at the end of service life, so stop use and buy a new one of the specified type. Note that the length of service life varies depending on the usage condition, etc.
- Battery packs sometimes swell up as they approach the end of their service life depending on the usage condition. This is due to the properties of lithium-ion batteries, and is not a problem in terms of safety.
- Do not use a damaged or leaking battery pack. Doing so might cause a malfunction.

- Do not expose the battery pack to water, etc. Doing so might cause a malfunction. If you accidentally drop the product in water or other liquid, immediately turn the power off, remove the battery pack, and contact an au shop or the Keitai Guarantee Service Center. Do not recharge a wet battery pack.

#### ■ Charger

- Do not wrap the power cord of the specified charger (sold separately) around the charger. Also, do not forcibly bend the charger's plug or the connection between the connector and power cord. Do not apply excessive force to cord of the charger (sold separately) such as placing a heavy object on it or pulling it. Doing so might cause a fault.
- When unplugging the power plug of the specified charger (sold separately) from an outlet or cigarette lighter socket, hold the power plug to do so. If you pull the cord, it might be damaged.

#### ■ au Nano IC Card 04

- Do not forcibly remove or insert the au Nano IC Card 04. Be careful not to exert excessive force when inserting the card into your au cell phone.
- You are responsible for any damage caused by inserting your au Nano IC Card 04 into some other IC card reader/writer, etc.
- Do not put stickers, etc. on the au Nano IC Card 04.
- Do not subject the au Nano IC Card 04 to actions that can damage it (use in high-temperature conditions, throwing in a fire, allowing metal contacts to come in contact with foreign objects, subjecting to shock, bending or pressing, wetting, etc.). Doing so might erase data or cause a fault.

#### ■ Camera

- If the camera lens breaks, immediately discontinue use, and contact an au shop or Keitai Guarantee Service Center. Continued use may cause injury.
- When photographing important occasions etc., take a trial shot and check the shot image to make sure it is correctly shot in advance.
- Do not shoot in areas where shooting is prohibited.

#### ■ Copyrights and rights of portrait

- If the data you shot or recorded using the product or the data you downloaded from the Internet etc. is in part or in whole protected by the third party's copyright, you are not allowed to copy, distribute, publicly send, modify the data without consent of the copyright holder, except for personal use, under the copyright law. In addition, do not use or modify portraits or names of other individuals without their consent, as it may infringe on rights of portrait.  
Note that shooting and recording might be restricted at some live performances, shows and exhibitions even for personal use.
- Be careful about the copyright and portrait right when posting still pictures you shot, etc. on Internet homepages.

#### ■ Back up content on the product

- Please back up important content recorded or downloaded to the product to an outside source. Content recorded to memory on the product sometimes disappears or is altered by unexpected factors, such as static electricity or a fault, or by repair, mishandling, etc.

## Available Security Codes

### Security Codes

The product has various security codes that you can use. The available security codes are as follows. Do not forget the various security codes that are set as they are necessary for various operations and contracts. Be sure to change the initial values to your own numbers you have chosen.

#### ■ Security code

Example of usage	① To do remote operation of voice mail and call forwarding services from a landline phone ② To use Customer Service Center and to do various inquiries, applications, and modifications on the au homepage
Initial value	A four digit number chosen by the customer and noted on the application form

#### ■ Security key (Passcode/Password)

Example of usage	To set/cancel voice calling restrictions, etc. or lock Osaifu-Keitai®
Initial value	1234

Be sure to change the initial values to your own numbers you have chosen.

#### ■ PIN code

Example of usage	To prevent unauthorized use of the au Nano IC Card 04 by third parties
Initial value	1234

Be sure to change the initial values to your own numbers you have chosen.

## PIN

### ■ PIN Code

To prevent unauthorized use of the au Nano IC Card 04 by a third party, you can set the product to require PIN code entry every time the power is turned on. You also need to enter PIN code when setting whether PIN code entry is required.

If PIN code is incorrectly entered three times consecutively, the PIN code will be locked. You can unlock the PIN code using PUK code.

- At the time of purchase, the PIN code is "1234", and entry requirement is "not required". You can change the PIN code to any 4- to 8-digit number and the entry requirement to "required" if necessary.

To use the product with a PIN code "required", be sure to change the PIN code to your own number you have chosen.

### ■ PUK Code

In case PIN code is locked, you can unlock it by entering PUK code.

- PUK code is an eight-digit number given at the time of purchase, which is printed on the back side of the plastic card on which your au Nano IC Card 04 is attached.
- After entering PUK code, you need to set a new PIN code.
- If PUK code is incorrectly entered ten times consecutively, contact an au shop, PiPit or Customer Service Center.
- "PIN code" is not reset by initializing the product.

ⓘ When the PIN code is locked, the product may restart for the security reasons.

## Notes on Waterproof/Dustproof/ Shockproof Properties

Before using the product, thoroughly read the contents of "Notes on Waterproof/Dustproof/Shockproof Properties" to ensure correct use. Failure to follow the contents described in these sections may cause liquid or dust to get inside, resulting in overheating, ignition, electric shock, injury or fault.

Proper operations of the product are not guaranteed in every possible condition. Faults determined, after an inspection, to be caused by mishandling by the customer such as by using the product without following the contents written on "Notes on Waterproof/Dustproof/Shockproof Properties" are not covered by the warranty.

### Waterproof/Dustproof/Shockproof Properties of the Product

The product has a protection rating (JIS C 0920) for waterproof property equivalent to IPX5<sup>\*1</sup> and IPX7<sup>\*2</sup> and dustproof property equivalent to IP5X<sup>\*3</sup> on the condition that the back cover is securely closed (based on testing by the Company).

The product also achieves a shockproof property compliant with MIL standards<sup>\*4</sup> (based on testing by the Company).

<sup>\*1</sup> IPX5 means that the cell phone continues to function as a phone after being subjected to a water jet (approximately 12.5 liters/min) discharged from a water pouring nozzle (inner diameter: 6.3 mm), from all directions and approximately 3 meters away from the cell phone for at least 3 minutes.

<sup>\*2</sup> IPX7 means that the cell phone continues to function as a phone after being gently lowered into a tank filled with still tap water (at room temperature) to the depth of 1 meter, immersed at the bottom for approximately 30 minutes and then taken out of the tank.

<sup>\*3</sup> IP5X means that the cell phone continues to function and safely maintain functioning as a phone after being placed in a test device containing 75 µm-particles and agitated for 8 hours and then removed. (Intrusion of particles is not completely blocked.)

- <sup>\*4</sup> MIL standards compliance  
MIL-STD-810G Method 516.7 as per the US Department of Defense:  
According to standards complying with Shock-Procedure IV, the product is tested by being dropped from a height of 1.22 m in 26 directions onto plywood (lauan).
- \* This does not guarantee resistance against all types of shock. As this assumes shock resistance during usage in everyday situations, care should be taken as breakage may occur if thrown, forcefully dropped, or otherwise subjected to excessive shock. Droppage may cause scratches even if functionality is not affected.

### What the waterproof/dustproof properties allow you to do

- To use the product at the poolside. However, do not get it wet with water other than tap water such as water in the swimming pool or submerge it in water in the swimming pool.
- To wash the product with the low-pressure water flow of a tap water (6 liters/min or lower) at the room temperature (5°C to 35°C).

### Handling the product

- Close the back cover securely. The waterproof property is shown its ability by completely closing the cover. Even a fine obstacle (hair, sand, tiny fiber, etc.) put between contact surface may cause liquid or dust to get inside.
- If liquid such as water is splashed onto the product with the back cover opened, the liquid may seep inside and cause electric shock or malfunction. Discontinue using the product, turn off the power and then contact an au shop near you or the Keitai Guarantee Service Center.
- When the product is wet, wipe it with a dry and clean cloth.
- When your hand or the product is wet, never open/close the back cover.
- The product is resistant to fresh and tap water at room temperature (5°C to 35°C) only. If you let the product get wet with or submerged into the liquids other than fresh and tap water at room temperature, stop using it and wash it with fresh and tap water at room temperature.

- Do not use the external connection jack when the jack is wet or sand or dust is attached to it. Doing so may cause impairment of the waterproof property or cause electric shock, short circuit, etc. resulting in a fire, burns, or a fault.

### ■ Dustproof property of the product

- The dustproof property of the product only guarantees a protection rating equivalent to IP5X and does not guarantee its performance under other using conditions such as when the product is directly put on sand such as a beach.
- If dust is attached to the product, immediately wash it away with water or otherwise clear it completely before use.

### ■ Notes on Using the Product

- Do not let the product submerged into or get wet with the liquids (seawater, water from a swimming pool, hot water of hot spring, water containing soap, detergent or bath powder, alcohol, soft drink, seasoning, etc.) other than tap water. Also, do not use it in a place where it gets wet with pet urine.  
If it gets wet, immediately rinse it with tap water.
- If foreign object such as salt water, seawater, drink, seasoning, food, dirt or soil is attached on the product, immediately wash it away.  
When it gets dry and coagulated on the product, the stains get hard to get rid of and may cause scratching or fault.
- Using the product without completely washing sand or mud away may cause fault such as scratches and damages on the product.
- Do not immerse the product in a bathtub or swimming pool. Also, do not use it under water. (including key operations.)
- The product is not designed to withstand high water pressure. Do not expose the product to a strong water flow with tap water, shower, etc. (6 liters/min or more) or submerge it under water.

- The rapid changes of temperature may cause condensation, resulting in malfunction. Wait until the product reaches room temperature before you bring it from a cold place into a warm place. If condensation occurs, leave it in room temperature until the condensation is removed.
- Do not get the product wet with hot water, use it in saunas or expose it to hot air from hair dryer etc. The product is not designed to resist the heat.
- Volumes may temporarily become lower due to water entering in the earpiece, mouthpiece and speaker. Drain water and dry the product well before use.
- The product does not float on water.
- Do not use the product in heavy rain.
- Do not leave the product wet. Doing so may let the liquids freeze on the product in cold places or otherwise cause fault.
- Do not place the product directly on sand at a beach, sandbox, etc. or on mud. Grains of sand may get into the earpiece, speaker, etc., causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.
- If the back cover degrades or is damaged, the waterproof/dustproof property cannot be maintained.
- Do not use or store the product for a long time in humid places such as a bathroom and kitchen.

## ■ Maintaining the Waterproof and Dustproof Properties

### ■ Rubber seal

The rubber seal on the back cover is important in maintaining the waterproof/dustproof properties. Be sure to observe the following items.

- Do not remove or scratch it.
- When closing the back cover, do not let the rubber seal caught. Also, do not insert sharp objects into gaps around the back cover or the external connection jack section. Doing so may damage the rubber seal and allow intrusion of liquid or dust.
- It is recommended to replace the parts for maintaining the waterproof/dustproof properties (pay service) once every two years regardless of whether any abnormality is present. For information on part replacement, contact an au shop near you.

### ■ Precautions on Charging

The battery pack, desktop holder (sold separately), specified charger (sold separately), and optional accessories are not waterproof/dustproof. Be sure to check the following items before and after charging.

- Never charge the product if wet. Doing so may cause fire, burns, injuries, electric shock, etc.
- Never connect the microUSB plug when the product or charger (sold separately) is wet or has foreign matter on it. Although the product is water/dust resistant, the charger (sold separately) is not water/dust resistant. Any water or foreign matter on the product or microUSB plug when inserting the microUSB plug while the product/specified charger is wet or soiled might cause electric shock or short circuit/corrosion causing abnormal overheating, burnout, fire, burns, or malfunction.
- Do not touch the desktop holder (sold separately) or specified charger (sold separately) with wet hands. Doing so may cause electric shock.

- Use the battery pack, desktop holder (sold separately), specified charger (sold separately), and optional accessories where not exposed to water, and do not use in places where water is regularly used such as a bathroom, shower room, kitchen, or sink. Doing so may cause fire, burns, electric shock, malfunction, etc. Also do not bring into a bathroom or similar area even if not charging. Doing so may cause fire, burns, electric shock, malfunction, etc.

### ■ Washing the Product

If any stain, dust, sand, soft drink, etc. is attached to the surface of the product, gently wipe it off with a cloth and wash the product under a mild water flow (up to 6 liters/min) of tap water at room temperature (5°C to 35°C) approximately 10 cm away from the faucet or shower head.

Hold the back cover so that it does not open, and wash the product with your hands without using a brush or sponge. After washing the product, drain water off and before using the product.

- Make sure that the back cover is securely closed before washing the product.
- Do not wash the product with a washing machine or an ultrasound bath.
- The external connection jack section is especially subject to stain such as dust or sand adhesion. Wash away stain carefully so as not to keep it remaining in the sections. Also, after washing it away, make sure the sections get sufficiently dried off before using the product. Using the product with sand or water drops remaining in the jack sections may cause fault.
- When cleaning the external connection jack section, do not use tools such as a cotton swab or jam a cloth into the jack sections. Doing so may cause impairment of waterproof/dustproof properties etc., resulting in fire, burns, or a fault.
- Never put the product in a microwave oven for drying it. Doing so may cause the battery pack to leak liquid, overheat, rupture or ignite. Also, doing so may cause the product to overheat, emit smoke, ignite or cause destruction of circuit components.

- Do not expose the product to hot air from a hair dryer or leave it in a high temperature environment for drying it. Doing so may cause the product to deform, discolor, get out of order, etc.

## ■ Draining Water

 
 
 
 
 
If the product gets wet, make sure to drain water remaining in the external connection jack section, earpiece (receiver) section, mouthpiece (microphone) section, speaker section, key section, hinges (joint), air vent, etc.

### 1 Wipe off water on the surface of the product carefully with a dry and clean cloth etc.

If a strap is attached, dry it sufficiently as well.

### 2 Hold the product securely at its hinges (joint) and shake it approximately 20 times until there is no more water splashing.


Make sure of the safety around you and shake the product while holding it securely not to let it drop.

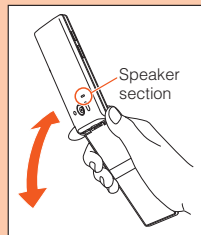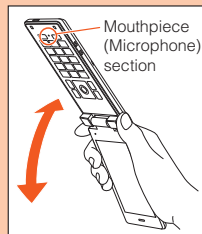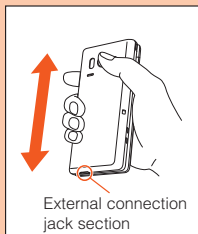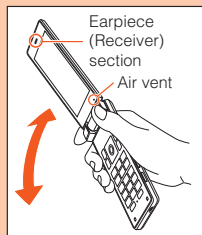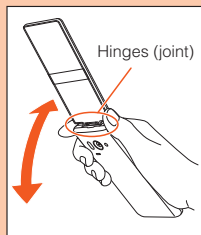

**3 Wipe off water remaining in the grooves of each section by gently putting the product against a dry and clean cloth etc.**

Since water is sometimes left in the grooves of each section, clear them of water by putting a cloth against their openings and gently patting them.

 Make sure that there is no more water or foreign objects remaining in them.

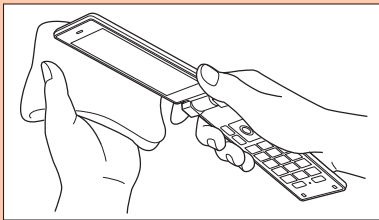

**4 Lay out a dry cloth etc. beneath and leave the product on the cloth at room temperature for approximately 2 to 3 hours to dry it.**

Water, if any, remaining in the product may ooze up after wiping off.

Do not wipe off water remaining in the grooves directly by a cotton swab etc.

**■ Precautions to be taken after water draining**

Do not use the product with water drops still left on it.

- Doing so may cause call disruption or cause clothes or bags to get wet.
- Doing so may cause the external connection jack, etc. to short-circuit, causing fire or malfunction.
- Doing so in a cold region may cause a fault due to water drops freezing.

## Notes on Using Bluetooth®/Wireless LAN (Wi-Fi®) Functions

### Precautions about Bluetooth®

- The Bluetooth® function of the product conforms to the domestic standards of Japan and FCC standards and EC directives, and has been certified.
- The 2.4 GHz band used by wireless LAN (Wi-Fi®) and Bluetooth® devices is shared by various other devices. For this reason, Bluetooth® devices use technologies for minimizing effects from other devices using the same radio frequency band. In some cases, however, the communication speed and connectable range may be decreased, or disconnection may occur, due to interference by other devices.
- The communication speed and connectable range vary depending on the distance between communication devices, obstacles and the connected devices used.

### Precautions about Wireless LAN (Wi-Fi®)

- The wireless LAN (Wi-Fi®) function of the product conforms to the domestic standards of Japan, FCC standards and EC directives, and has been certified.
- Do not use the product in places where electromagnetic waves are generated or near electric products, AV and OA equipment, or other magnetized devices.
- Subjecting the product to magnetic or electrical noise might increase noise and prevent it from performing communications. (The product is particularly susceptible to noise when it is used near a microwave oven.)
- Using the product near a TV, radio or similar appliance might cause reception interference and disrupt TV images.

- Searching might not be successful if there are multiple wireless LAN (Wi-Fi®) access points near the product and the same channel is being used.
- The communication speed and connectable range vary depending on the distance between communication devices, obstacles and the connected devices used.

### Frequency Band

Bluetooth® and wireless LAN (Wi-Fi®) functions (2.4 GHz band) of the product use frequencies in the 2.4 GHz band ranging from 2.402 GHz to 2.480 GHz.

The frequency bands used by this product's Bluetooth® and wireless LAN (Wi-Fi®) functions are given on the sticker located in the battery compartment.

- Bluetooth® function: 2.4FH1/XX4



2.4FH1/XX4

The product uses the 2.4 GHz band.

FH1 uses FH-SS as the modulation scheme. The interference distance is about 10 m or less.

XX4 uses other schemes. The interference distance is about 40 m or less.

Bands of mobile unit identification devices cannot be avoided.

- Wireless LAN (Wi-Fi®) function: 2.4DS/OF4



2.4DS/OF4

The product uses the 2.4 GHz band.

DS-SS and OFDM are used as the modulation schemes. The interference distance is about 40 m or less.

Bands of mobile unit identification devices can be avoided.

Channels available with the 2.4 GHz band wireless LAN (Wi-Fi®) of the product are between 1 to 13.

Available channels differ depending on the country.  
For use in airplane, check with the airline company in advance.

### ■ Bluetooth® function precautions

The frequencies used by the Bluetooth® function of the product are in the 2.4 GHz band. In this frequency band, in addition to home electrical appliances such as microwave ovens and industrial, scientific and medical devices, other similar wireless stations, in-plant wireless stations for mobile unit identification that require a license for use such as factory production lines, specific small power wireless stations that do not require licenses, and amateur wireless stations (collectively called "other wireless stations" from here on) are operated.

1. Before using the product, make sure that "other wireless stations" are not in operation nearby.
2. In the event that instances of radio wave interference have occurred between the product and "other wireless stations", immediately either relocate the product or stop operation of the device (stop emission of radio waves).
3. If you are unclear on any points or are troubled by anything, contact an au shop or Customer Service Center.

### ■ 2.4 GHz band wireless LAN (Wi-Fi®) precautions

The frequencies used by the wireless LAN (Wi-Fi®) function of the product is in the 2.4 GHz band. In the 2.4 GHz frequency band, in addition to home electrical appliances such as microwave ovens and industrial, scientific and medical devices, other similar wireless stations, in-plant wireless stations for mobile unit identification that require a license for use such as factory production lines, specific small power wireless stations that do not require licenses, and amateur wireless stations (collectively called "other wireless stations" from here on) are operated.

1. Before using the product, make sure that "other wireless stations" are not in operation nearby.

2. In the event that instances of radio wave interference have occurred between the product and "other wireless stations", immediately either relocate the product or stop operation of the device (stop emission of radio waves).
3. If you are unclear on any points or are troubled by anything, contact an au shop or Customer Service Center.

- Connections between the product and all other Bluetooth® and wireless LAN (Wi-Fi®) devices have not been confirmed. Therefore, connections with all Bluetooth® and wireless LAN (Wi-Fi®) devices are not guaranteed.
- The product supports security features for wireless communications that are compliant with the Bluetooth® and wireless LAN (Wi-Fi®) standard specifications, but the security may not be sufficient depending on the usage environment and configuration. Be careful when making data communication using Bluetooth® or wireless LAN (Wi-Fi®) function.
- Wireless LAN (Wi-Fi®) has the advantage that it can be freely connected anywhere within the radio wave range, as it uses radio waves for exchanging information. At the same time, there is a risk that a malicious third party may obtain unauthorized access if security settings have not been configured. You are recommended to configure security settings before using wireless LAN (Wi-Fi®) at your decision and responsibility.
- The Company assumes no responsibility for leakage of data or information that may occur during Bluetooth®/wireless LAN (Wi-Fi®) communication.
- Since Bluetooth® and wireless LAN (Wi-Fi®) functions use the same frequency band, using the both functions at the same time may cause radio wave interference resulting in decreased communication speed or disconnection from the network. If connection fails, stop using either of the Bluetooth® and wireless LAN (Wi-Fi®) functions.

## Voluntary Control of Radio Wave Interference

This product conforms to technical standards based on rules for implementing VCCI voluntary control measures.

The mark of conformity is given on the nameplate sticker in the bottom of the battery compartment.

## Notes on Packet Communication Charge

- Since constant Internet connection is possible with the product, packet communication may be performed automatically by some applications, resulting in high packet communication charges. Therefore, subscription to the flat-rate/discount service for packet communication charges is recommended.
- To browse homepages, download applications, communicate using applications, send/receive e-mails and configure various settings, connection to the Internet is required, to which packet communication charge applies.
  - \* Packet communication charge does not apply to wireless LAN (Wi-Fi®).

 
## Notes on Applications

- To download applications, first set an au ID and access au スマートパス(au Smart Pass). For details on setting an au ID, refer to the "Setting Guide".

This product does not permit use of Google Play™ or EZweb.
- Be sure to check the security of the application, then install it at your own risk. Some applications might cause virus infection, damage various data, and send out your location information, usage history or personal information stored in your cell phone via the Internet.
- The Company assumes no responsibility for any problems that might be caused by applications you have installed. In such case, you may be charged a repair fee even during the warranty period.
- The Company assumes no responsibility for any disadvantage brought to you or any third party by applications you have installed.
- Insertion of a microSD memory card is necessary to use some applications.
- Some applications keep the screen turned on while they are active, or rapidly drain the battery while running in the background.
- Operation procedures and screen appearances of the applications preinstalled in the product and those installed by you are subject to change without notice as a result of version upgrade. In addition, operation procedures described in the "Basic Manual" available on the au homepage and on the product or "Setting Guide"/"Full Instruction Manual" ("User Guide" Japanese) available on the au homepage may differ from the actual procedures.

## Names and Functions of Parts

### Front/Back

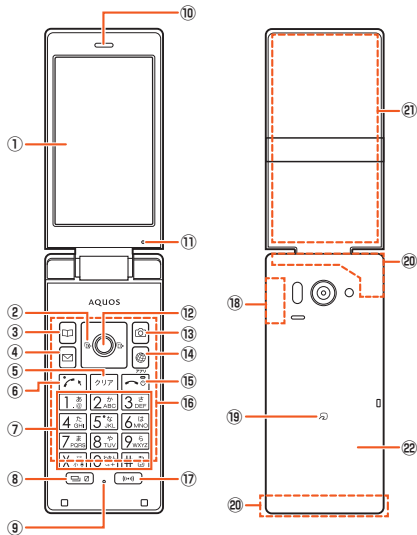

- ① Main display
- ② Cursor key
  - Left key/incoming call history
  - Right key/outgoing call history
  - Up key
  - Down key
- ③ Address book key
- ④ Mail key
- ⑤ Clear key
- ⑥ Call key
- ⑦ - , , Number keys
- ⑧ Recent Apps key  
Displays list of running applications. Hold down to set/cancel VeilView.
- ⑨ **Mouthpiece (Microphone)**  
Transmits your voice to the other party during a call. It is also used for recording sounds.
- ⑩ **Earpiece (Receiver)**  
Hear the other party during a call, Answering memo messages, etc.
- ⑪ **Air vent**  
For maintaining performance.
- ⑫ Center key
- ⑬ Camera key
- ⑭ Browser/Apps key  
Displays browser menu. Hold down to display applications list.
- ⑮ Power/End call key  
While using the product, end call or exit functions. Hold down to turn the power on, or to display a power menu for power off, reboot, or other operations.

16 **Touch area (Touch Cruiser EX)**

Use your fingers in the touch area to operate in the same way as a touchpad. (▶ P.34)

17  **Tethering key**

18 **Wi-Fi®/Bluetooth® antenna**

19  **mark**

Hold it over a reader/writer when using Osaifu-Keitai®.

20 **Internal antennas**

 
 
Used when making calls or using the Internet or 4G (LTE).

21 **TV antenna**

The product contains an antenna for viewing TV (1Seg).

22 **Back cover**

■ **Folded (Front/Back/Side)**

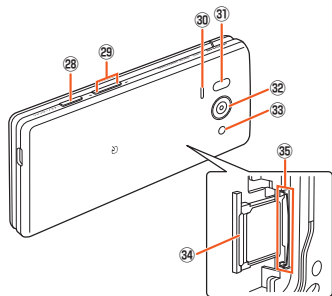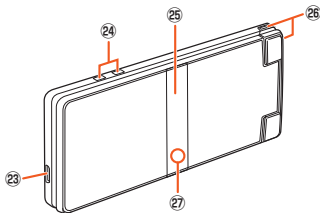

23 **External connection jack**

Use for connecting the common AC adapter 05 (sold separately), microUSB cable 01 (sold separately), or a USB cable (commercially available) for peripheral devices.

When you connect the common AC adapter 05 (sold separately), the microUSB cable 01 (sold separately), etc. to the product, some applications may not function properly since the geomagnetic sensor is affected by the magnetism of connected devices. Use the product after removing the cable.

24 **Charger terminal**

Terminal for charging with the desktop holder (sold separately).

 


25 **Sub-display**

Notifies you with information when a call is arriving, new mail is received, an alarm sounds, etc.

26 **Strap eyelet**

27 **Charging/Incoming indicator**

Lights red/green while charging depending on the battery level. Flashes for an arriving call or new mail according to settings.

- 28  **Shutter/Manner mode key**
- 29  **Volume UP/DOWN key**  
Adjust the volume.  
Hold down  when the product is folded to turn on the mobile light.
- 30 **Speaker**  
Ringtones, alarms, etc. sound from here.
- 31 **Infrared port**  
Transfer data by infrared communication.
- 32 **Camera lens**
- 33 **Mobile light**
- 34 **au Nano IC Card 04 tray/slot**
- 35 **microSD memory card slot**

#### Internal antennas, Wi-Fi®/Bluetooth® antenna and TV antenna

- ⊙ Antennas are built into the product. Do not cover with hand during calls or data communication, or place stickers over antennas. Doing so may affect call/communication quality.

#### Earpiece (receiver), mouthpiece (microphone), speaker, air vent

- ⊙ Covering earpiece (receiver), mouthpiece (microphone), speaker, or air vent with stickers, fingers, etc. may hinder product performance.

#### About IMEI




- ⊙ IMEI (international mobile station equipment identity) is a unique identifying code assigned to each device. The product's IMEI can be found on the sticker visible in the battery compartment.
- ⊙ As the IMEI is required information for requesting repairs or after-sales service, do not remove the sticker with the IMEI printed on it.

## Using Touch Cruiser EX

Use your fingers in the touch area to operate in the same way as a touchpad (Touch Cruiser EX). Activating a function/application supporting Touch Cruiser EX enables Touch Cruiser EX and allows the on-screen pointer to be operated.

 
### 1 Activate function/application supporting Touch Cruiser EX.

Touch Cruiser EX is enabled and "☞" (pointer) is displayed.

- If an operation description for Touch Cruiser EX is displayed, press . Checkmark "Don't show again" and press  to no longer display the operation description when next activating Touch Cruiser EX.
- Hold down  to toggle Touch Cruiser EX on/off. If a function/application is exited while Touch Cruiser EX is disabled, reactivating a Touch Cruiser-capable function/application does not enable Touch Cruiser EX.
- Ending a function/application supporting Touch Cruiser EX disables Touch Cruiser EX.
- Key operation is still possible even when Touch Cruiser EX is enabled (Except for some applications).

## Operation with Touch Cruiser EX

When using the browser, LINE, etc., the on-screen pointer can be operated like a mouse.

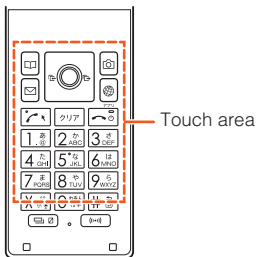

### Tap/Double-Tap

Gently tap the touch area. To double-tap, tap the same position twice.

- Select items and icons under the pointer. Double-tap a displayed still picture, etc. to zoom in or out. Zooming is carried out centered around the pointer. Zoom after placing the pointer where you want to zoom.



### Long-Touch

Keep gently touching the touch area. "☛" changes to "☛+". Tap the touch area or, after releasing your finger and several seconds of no operation, the indication returns to "☛".

- Display menus, etc.



### Slide

Long-touch the touch area to change "☛" to "☛+".

While gently touching the touch area, slide in the desired direction or to the desired position.

- Slide in the desired direction to scroll and switch pages.



### Flick

Long-touch the touch area to change "☛" to "☛+".

While touching the touch area, flick up, down, left, or right.

- Flick in the desired direction to quickly scroll the screen, switch pages, etc.




## Pinch

While touching the touch area with two fingers, widen (pinch out) or close (pinch in) your fingers.

- Zoom in or out on the browser, etc.  
Zooming is carried out centered around the pointer. Zoom after placing the pointer where you want to zoom.



## Auto scrolling

 
With “” moved to the edge of the screen, slide your finger toward off the screen to scroll. Release your finger to stop scrolling. Slide your finger in the scrolling direction to scroll faster.





- The touch area is designed to be touched gently. Avoid pressing forcefully or using sharp objects (ballpen, pin, etc.).
- The touch area might not respond to the following types of operation, and may also cause malfunction.
  - with gloves on
  - with fingernails
  - with another object placed on the operation area
  - with a sticker adhered
  - with any water or condensation on the touch area
  - with wet or sweaty fingers
  - under water

## Using the Magnifier

Enlarge a portion of the screen.

- 1 When an application screen is displayed, press  → Slide finger in the touch area to move the magnifier.

- If an operation description for the magnifier is displayed, press . Checkmark “Don't show again” and press  to no longer display the operation description when next activating the magnifier.


## Exiting the magnifier

- 1 When using the magnifier, press .

- Unavailable in the standby screen and some applications.

## Switching the Display Language to English

You can switch the display language for function names and other items to English.

- 1 When the standby screen is displayed, press  → [設定](Settings).
- 2 [その他](Other settings) → [言語(Language)を選択](Select language).
- 3 [English].

## Using the Standby Screen

Check the status of the product in the standby screen.

### ■ Viewing the Standby Screen



《Standby Screen》

① **Status Bar**

② **Calendar**

③ **Indicator icons**

Indicators for missed calls, unread e-mail/SMS, and notifications are displayed.

④ **Kantan Hasshin icon**

When displayed, you can use Kantan Hasshin (speech recognition) to make a call. (▶P.55)

⑤ **Clock**

⑥ **Steps walked**

⑦ **Shortcuts**

Applications registered as Favorites 1 to 4 are displayed as shortcuts. (▶P.37)

## Using Favorites

Register frequently used applications and bookmarks for quick access from the standby screen. Register up to 10 favorites.

**1** When the standby screen is displayed, press → **(edit)**.

Favorites are displayed.

**2** **Select a favorite** → .

The selected application launches/bookmarked webpage opens.

### ■ Registering to Favorites

**1** **Select number to register in Favorites list.**

- Select "Not registered" to register a new favorite. If a favorite is already registered, it is replaced with the new favorite.

**2** (Submenu) → **[Register]**.

**3** **Select application or bookmark to register** → .

### ■ Deleting from Favorites

**1** **Select application or bookmark to delete in Favorites list.**

**2** (Submenu) → **[Remove]** → **[Yes]**.

## Using Indicator Icons/Shortcuts in the Standby Screen

You can use applications from the indicator icons and shortcuts in the standby screen.


### 1 When the standby screen is displayed, press →

#### Select item → .

- Selecting an indicator icon displays its content in a balloon.
- You can also select and use the calendar or pedometer at the top of the standby screen with the same steps.


 
## Using Information

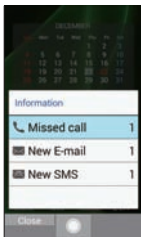Information is displayed at the bottom of the standby screen for missed calls, unread e-mail/SMS, and notifications.



### 1 Select information → .

Corresponding application launches for the information content.














- Press  (Close)// to close information.

## Using the Status Bar

### Icons

The notification icons to notify you of a missed call, a new mail message, a running operation, etc. are displayed on the left side of the status bar, while the status icons to show the status of the product are on the right side.

### Main Notification Icons

Icon	Description
	Missed call
	New e-mail message
	New SMS message
	1Seg signal strength  -  : Level display
	Making a call, talking, receiving a call
	Talking in high quality sound with a model supporting VoLTE provided by au.
	Call on hold
	Answering memo
	Available space on the internal memory being run out
	Software update available
	Icons collected

◎ Some icons are displayed with their number superimposed on them.

## Main Status Icons

Icon	Description
12:34	Time
	Battery level - : Battery level display : No battery • While charging, the battery icon is displayed with  superimposed.
	Airplane mode set
	Signal strength (Receiving electric field) - : Level display : Out of service area • The icon indicating network is displayed at the upper left. : 4G (LTE) available : Roaming • During a communication, the icon is displayed with  superimposed.
	Character type : Kanji : 1-byte alphabet : 1-byte digits : 1-byte katakana : 2-byte alphabet : 2-byte digits : 2-byte katakana : Kuten code
	Manner mode status : Standard manner mode : Drive manner mode : Silent manner mode
	During a call using hands-free
	Arriving call volume set to "Silent"
	Microphone set to "Mute" during a call
	Wi-Fi <sup>®</sup> signal strength - : Level display • During a communication, the icon is displayed with  superimposed.
	Answering memo set : No Answering memo : Answering memo (one to 29 entries) : Answering memo full (30 entries)

## Using the Notification/Status Panel

In the notification/status panel, you can check the details on notification icons and status icons or activate an application corresponding to a notification.

 
You can also set the manner mode and check Answering memo.

**1 When the standby screen is displayed, press** → **Select the status bar** →

**2 Select the notification** →

The application corresponding to the notification is activated.

## Viewing the Notification/Status Panel

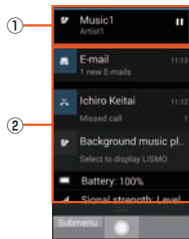

《Notification/Status Panel》

**① Music controller**

Displayed when playing music with LISMO. Only allows pausing.

**② Notification area**

Check the status of the product and contents of notifications.

## Using notifications

### 1 Select the desired notification in the notification/status panel → (Operate).

Options corresponding to the content of the notification are displayed.

### 2 Select an option → .

You can activate a corresponding application, etc.

## Deleting 1 notification

### 1 Select the notification to delete in the notification/status panel → (Submenu) → [Delete one item].

## Deleting all notifications

### 1 (Submenu) in the notification/status panel → [Delete all].

 
- You may not be able to delete a notification, such as for battery level or signal strength.

## Using the Sub-display

The sub-display shows information including manner mode, battery level, and other product status, the date and time, and caller and other information.

Press // to switch displays.

## Viewing the Sub-display

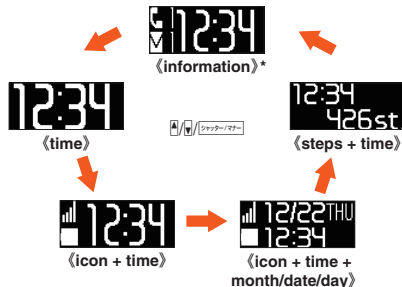

\* Displayed for notification of missed call, new mail, etc.

## Main Icons

Icon	Description
	Signal strength (Receiving electric field) Strong/ Fair/ Weak/ Faint/ Out of range * Not displayed in airplane mode.
	Battery level - : Battery level display : No battery <ul style="list-style-type: none"> <li>While charging, the battery icon is displayed with  superimposed.</li> </ul>
	Missed call <ul style="list-style-type: none"> <li>Displays number of calls.</li> </ul>
	: New mail (e-mail/SMS) <ul style="list-style-type: none"> <li>Displays number of new mails.</li> </ul>
	Answering memo set <ul style="list-style-type: none"> <li>Displays number of unread Answering memo messages.</li> </ul>
	Alarm sounding
	Airplane mode set

## Displayed Information

	Status	Display
Voice call arriving	Display caller (Registered in address book)	Registered name
	Display caller (Not registered in address book)	Phone number
	Not display caller	"Incoming call"
	Answering memo	Answering: "Playing answering memo guidance" Recording: "Recording answering memo"
In call	In call	"In call"
	Sound memo	"Recording sound memo"
	Volume change	Volume change screen
Mail arriving	Display caller (Registered in address book)	Registered name
	Display caller (Not registered in address book)	E-mail address Sender designation
	Not display caller	"Received mail"
SMS arriving	Display caller (Registered in address book)	Registered name
	Display caller (Not registered in address book)	Phone number
	Not display caller	"Received message"

Status		Display
Alarm	Alarm sounding	Alarm time, alarm name
	Snoozed	Alarm time, "Snoozing"
Emergency Rapid Mail		"Emergency mail"
Manner mode	When set: normal	"Standard manner set."
	When set: drive	"Drive manner set."
	When set: silent	"Silent manner set."
	When not set: normal	"Standard manner canceled."
	When not set: drive	"Drive manner canceled."
	When not set: silent	"Silent manner canceled."
Music playing	Volume change	Volume change screen
LINE application notification		Message from LINE application is displayed.
Empopa announcing		Keywords, etc. related to content announced by empopa are displayed.

## Using the Normal Menu

In the normal menu, applications are grouped in menus. Select a menu and then an item to activate an application.

### 1 When the standby screen is displayed, press $\odot$ .

The normal menu is displayed.

### 2 Select menu $\rightarrow \odot$ .

Menus have correspondence with the dial keys ( $\square$  to  $\square$ ,  $\square$ ,  $\square$ ). Press any key to select a menu.

### 3 Select application $\rightarrow \odot$ .

## Viewing the Normal Menu



(Normal Menu)

## Normal Menu List

Menu	Description
au Smart Pass	In addition to up-to-date news, horoscope, and train connection information, this service also has benefits such as all-you-can-download applications, bargain coupons, and presents, for enjoying using the product with security and freedom.
Security/Safety	
au customer support	Displays the au Customer Support website. You can check the subscription contents or monthly usage of your au phones etc. with this application. You can change your rate plan, apply for optional services and so on at au Customer Support website.
au disaster support application	This is an application in which you can use Disaster Message Board, Emergency Rapid Mail (Earthquake Early Warning and Disaster and evacuation Information and Tsunami Warning) and Disaster Voice Messaging Service.
Data Storage App	You can back up various data in your smartphone to "au Smart Pass" (cloud storage) or SD card. You can also migrate your data between your phones with this app.
Remort Support	Call for technical supports on the phone operations by sharing the screen that you are watching with au operators.
Safety Access	This is an application which limits the access to the inappropriate applications and web pages so that your child can use a smartphone safely.

Menu	Description
どこから電話 for au (What's Your Name for au)	When you receive phone calls from public institutions or stores, this app shows the name of the place automatically based on the information in Hello Page and other sources. This app also blocks scam and spam calls or gives you warnings when your phone receives any.
au WALLET	This is an application for a more effective use of au WALLET CARD. You can charge your au WALLET CARD and check the privilege, the card balance, the point balance, usage details of au WALLET card in a pie chart and so on conveniently.
Camera	
Photo	Shoot still images. (▶P.74)
Movie	Shoot movies. (▶P.75)
Barcode Reader	Hold camera up to barcodes to scan information.
Translation finder	Simply hold camera up to English to translate into Japanese in real time.
Data Folder	View captured still photos/videos, downloaded files, etc.
Browser	View webpages the same way as with a PC. (▶P.71)

Menu	Description
App/Service	
LISMO	Play music and look for the latest music information. Also, listen to samples and buy songs you searched for.
LISMO Store	Enjoy listening to song samples and making purchases from the large lineup of latest songs, hits, albums, and video clips with this application.
au WALLETT Market	New-style shopping service where anyone can easily buy everyday nice-to-haves. Also check purchases and change orders made at an au shop.
ウイルスバスター for au (VirusBuster for au)	Prevent installation of malicious applications and block access to inappropriate sites.
Uta Pass	More than 2,000 channels providing unlimited listening enjoyment of latest J-pops, karaoke hits, anime song titles, Western, etc. Radio-type music service where you'll always find the right music, no matter where you are or what your mood.
au助手席ナビ (au co-pilot navi)	Car navigation application displaying an optimal route to a destination based on latest VICS heavy traffic information and other traffic conditions.
au Shopping Mall	Access au official shopping sites where you can enjoy daily goods, smartphone accessories, culinary, fashion, and other shopping.
auナビウォーク (au navi walk)	Application providing optimal route navigation combining transportation and travel by foot.

Menu	Description
Mobaoku	Connect to the Mobaoku auction site.
モバイルSuica (Mobile Suica)	Mobile Suica is a service that allows you to board trains and do shopping with a mobile device.
楽天Edyアプリ (Rakuten Edy App)	Use Rakuten Edy e-money service.
SHSHOW	Download and browse contents.
Tools	
Alarm	Use alarms.
Calendar	Use a calendar.
Notepad	Use a notepad.
Calculator	Use a calculator.
Pedometer	Use a pedometer.
Infrared	Transfer data between the product and another device with an infrared communication function.
emopa-	Use emopa.
Osaifu-Keitai	Use services compatible with Osaifu-Keitai®.
TV	View digital terrestrial TV broadcast service for mobile devices. (▶ P.77)
Timer	Use a timer.
StopWatch	Use a stopwatch.
au Wi-Fi接続ツール (au Wi-Fi connection tool)	You can easily set up Wi-Fi connection with the private access points such as "HOME SPOT CUBE." You can use the all au's public Wi-Fi spots. You can also find the location/venue information to provide au Wi-Fi.
au Share Link	This application allows you to enjoy the convenience of having both a cell phone and tablet. View notifications for new calls and e-mail (@ezweb.ne.jp) to your cell phone on a tablet, as well as be able to operate your cell phone from a tablet screen.

Menu	Description
GLOBAL PASSPORT	When overseas, use this application to confirm fees applicable for your country of stay, how to make settings, the method of making international calls, etc.
World Clock	Use a world clock.
Anshin Navi	Allows you to confirm your child's location. Available once the guardian partners from their device.
mamorino Watch Navi	Connecting (pairing) with mamorino Watch via Bluetooth® allows you to dial and send SMS (messaging) from the application, make mamorino Watch settings, etc.
TOUCH CRUISER EX Guide	Display operating instructions (Japanese) for Touch Cruiser EX. (▶P.34)
Widget sheet	Add and use widgets.
OfficeSuite	This application allows viewing of Microsoft Word, Excel, PowerPoint and PDF files created on a PC or other device. Use easily whenever you want to view these types of files.
LINE	This communication app allows you to enjoy calling and texting as much as you want, any time and any place. (▶P.69)


Menu	Description
Phone/Mail	
Incoming/outgoing call history	View incoming and outgoing call histories. (▶P.53)
Address Book	Register contacts to the address book and use registered information. (▶P.60)
Call/Ans Memo	Play back call/answering memo.
Play voicemail	Playback voicemail.
Call settings	Make call settings.
Speed dial	View a speed dial list. (▶P.55)
Kantan Hasshin (Speech Recognition)	Make settings for Kantan Hasshin. (▶P.55)
Voice party	Call with up to 30 people at the same time. (▶P.56)
E-mail	Use an e-mail (@ezweb.ne.jp) address to send and receive e-mail. (▶P.65)
SMS	Send and receive SMS using a phone number as the recipient. (▶P.67)
Profile	Check and edit your profile. (▶P.59)
Settings	Specify and manage settings in the settings menu. (▶P.79)

\* Additionally downloaded applications are displayed in "アプリ取り放題" (App All-you-can-download) (▶P.46).

- When activating applications and using their functions, communication charges may result for some functions.
- After upgrading an application version or in similar instances, the design of applications, icons, etc. on the product may differ from this manual.
- Initializing the product does not delete preinstalled applications.

## About Applications

"Application" allows you to use applications pre-installed at time of purchase as well as additionally downloaded applications.

- 1 When the standby screen is displayed, press  → [App/Service].

The app/service list is displayed.

### Switching tabs

- 1 When the application list is displayed, press .

The "PRESET"/"アプリ取り放題" (App All-you-can-download) tabs switch.


### Searching for applications

- 1 When the application list is displayed, press  (AppSearch).

The auスマートパス (au Smart Pass) site is displayed. Follow the on-screen instructions to search for and download applications.

## Using the Simple Menu

Use a menu of frequently used functions such as phone, mail, and camera.


- 1 When the normal menu is displayed, press  (Simple) → [Yes] → [Yes].

The screen changes to the simple menu. The size of text changes to "Huge".

- 2 Select the menu item → .

- 3 Select the application → .

### To Return to the Normal Menu

- 1 When the simple menu is displayed, press  (Normal) → [Yes] → [Yes].

The screen changes to the normal menu. The size of text changes to "Normal".

### Viewing the Simple Menu



《Simple Menu》

## Learn Common Operations

### Learn Basic Key Operations

#### Using Functions that Appear at the Bottom of the Screen

Press the key corresponding to a function that appears at the bottom of the screen.



- ① For "Done", press
- ② For "Submenu", press
- ③ For "A1", press
- ④ For "Emoji/Sym", press
- ⑤ For "Select area", press

#### To Select Items

To select a displayed item, select the item using or and press . If to , , , etc. are displayed in the menu, you can also press a corresponding dial key.

- You can also sometimes press .

#### To Return to Previous Screen

You can press to go back one screen.

- You can also sometimes press , , or to return to the previous screen.

#### To Return to the Standby Screen

To return to the standby screen from any function, press .

- After a certain period of no key operation, the product may return to the standby screen automatically.
- If activating a function while in a call, the call may be interrupted.
- The function or application being used is ended.

#### To Enter Numbers

You can press to to enter numbers.

If "▲" and "▼" are displayed above and below the number entry field, you can press to increase or decrease the number.

#### To Move to Previous or Next Data

While displaying mail, etc., you can press to move to the next data or to move to the previous data.

#### To Scroll the Page

When browsing a webpage or displaying a mail list, message, data list, etc., you can press to scroll up or to scroll down.

## Using Checkboxes

If a checkbox is displayed next to a setting item, you can select the item or the checkbox to enable or disable the item.

When performing operations on data such as "Move selected", "Save selected", or "Delete selected", you can select checkboxes to select or deselect items.

Icon example	Description
<input checked="" type="checkbox"/>	Setting is enabled or item is selected.
<input type="checkbox"/>	Setting is disabled or item is not selected.

# Learn How to Enter Characters

## ■ Key Assignments for Character Entry

Character type	Kanji	Alphabet (2-byte)	Digits (2-byte/1-byte)
[1]	▶ あいうえおあいうえお	▶ .@/_-:~1	1
	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ アイウエオアイウエオ	▶ @/_-:1	1
[2]	▶ かきくけこ	▶ a b c A B C 2	2
	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ カキクケコ	▶ abcABC2	2
[3]	▶ さしすせそ	▶ d e f D E F 3	3
	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ サシスセソ	▶ defDEF3	3
[4]	▶ たちつとと	▶ g h i G H I 4	4
	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ タチツテト	▶ ghiGHI4	4





Character type	Kanji	Alphabet (2-byte)	Digits (2-byte/1-byte)
[5]	▶ なにぬねの	▶ j k l J K L 5	5
	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ ナニヌネノ	▶ jklJKL5	5
[6]	▶ はひふへほ	▶ m n o M N O 6	6
	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ ハヒフヘホ	▶ mnoMNO6	6
[7]	▶ まみむめも	▶ p q r s P Q R S 7	7
	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ マミムメモ	▶ pqrsPQRS7	7
[8]	▶ やゆよやゆよ	▶ t u v T U V 8	8
	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ ヤユヨヤユヨ	▶ tuvTUV8	8
[9]	▶ りりるれろ	▶ w x y z W X Y Z 9	9
	Kana (2-byte/1-byte)	Alphabet (1-byte)	Dial entry
	▶ ラリルレロ	▶ wxyzWXYZ9	9




Character type	Kanji	Alphabet (2-byte)	Digits (2-byte/1-byte)
O			0
	Kana (2-byte/1-byte) <b>2-byte</b>  <b>1-byte</b> 	Alphabet (1-byte) 	Dial entry  0

\* When entering at the start of a line, a capital letter is displayed first.

Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
✖	Short-press.... toggle large/small (where characters allow) Add ~ (ten-ten) or * (maru) (where characters allow) 		Short-press.... toggle large/small (where characters allow) <b>2-byte</b>  <b>1-byte</b> 	Short-press.... ....(decimal point)	✖
	Long-press....Paste recently-copied/cut text				
#	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
	When entering characters, display 1 character before (back function) When not entering characters, linebreak			Linebreak	#

Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
☑	From submenu, display function quote, useful phrases, etc. Switch 2-byte/1-byte symbol lists Display facemark edit screen (when category other than history is displayed in facemark list) During normal conversion, shorten the selected text range (when character type is "kanji" and entering characters) Cancel selected range				-
	Display list for Emoji (Pict) → D-Emoji → Symbol (Full size: 2-byte)/(Half size: 1-byte) → Facemark (D-Emoji displayed only when entering e-mail text) Switch prediction conversion candidates and normal conversion candidates (when word prediction is "ON", character type is "kanji" and entering characters) During normal conversion, expand the selected text range (when character type is "kanji" and entering characters) Select entire selected range (when range is selected)				
☑	Switch character types Kana/alphabet/number conversion (when character type is "kanji" and entering characters) Change character type to "kanji" (when character type is type other than "kanji", "alphabet (1-byte)", or "digits (1-byte)") Switch pages/categories (when emoji, symbols, facemarks, or conversion candidates are selected)				-
	Switch character types Kana/alphabet/number conversion (when character type is "kanji" and entering characters) Change character type to "kanji" (when character type is type other than "kanji", "alphabet (1-byte)", or "digits (1-byte)") Switch pages/categories (when emoji, symbols, facemarks, or conversion candidates are selected)				

Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
	Start range select Switch pages/categories (when emoji, symbols, facemarks, or conversion candidates are selected)				—
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
	Finalize characters and return to preceding state Restore deleted characters (up to 5 times in a row) Delete learned conversion candidates / search for conversion candidates in browser / search for and quote conversion candidates in other application (when character type is "kanji" or "alphabet (large/small, 1-byte)" and conversion candidates selected)				—
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
	Move cursor left Select conversion candidate During prediction conversion, shorten the selected text range Delete 1 "*" character when entering ** (wild card)				—
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
	Move cursor right Select conversion candidate During prediction conversion, enlarge the selected text range Enter 1 "*" character when entering ** (wild card) when unfinalized characters are entered (when character type is "kanji" or "alphabet (large/small, 1-byte)" and word prediction is "ON") When cursor is at end of text string, enter 1-byte space				—

Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
	Move cursor up Select conversion candidate				—
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
	Move cursor down Select conversion candidate When cursor is at end of text string, linebreak				—
Character type	Kanji	Kana (2-byte/1-byte)	Alphabet (large/small, 2-byte/1-byte)	Digits (2-byte/1-byte)	Dial entry
	Short-press...Delete 1 character to right of cursor If no characters are to right of cursor, delete 1 character to left of cursor Stop conversion (return to character entry screen)				Short-press ...Delete 1 place
	Long-press...Delete all characters to right of cursor When cursor is at start or end of text string, delete all characters				Long-press ...Delete all


◎ When entering characters, in the standby screen, navigate ◎ → [Settings] → [Other settings] → [Soft keyboard] and check that "S-Shoin" is selected in "Keyboard & input methods". The Android keyboard (AOSP) does not support Japanese entry and it may not be possible to enter characters.

## Making Calls

### Entering a Phone Number and Making a Call


#### 1 When the standby screen is displayed, enter phone number.

The dial screen is displayed and the number is entered.

- You can press  in the standby screen to display the dial screen with no number entered.

: Move cursor position

: Delete digit to left of cursor

 (Hold down): Delete all digits

 (Addr. book): Display address book (▶P.60)


: Redial previous number\*

\* Available when no number is entered.


#### 2 → Talk.

 (Speaker/OFF): Hands-free call on/off

 (Mute/Unmute): Mute on/off

 (Address): Display address book (▶P.60)

 (Profile): Display profile (▶P.59)

: Adjust call volume (volume of other party's voice)


 (Hold): Place call on hold\*

\* Press  (Unhold) to return to a call on hold.

#### 3 .

You can select "Register to address book" to register a number in the address book that a call was made to.

- You can also fold the product to end a call.

- ⊙ In functions including "Calc (Calculator)", "Timer", "Schedule (Calendar)", and "Alarm", you can also quote numbers entered in the dial screen. Follow the on-screen display after entering the number. Usable functions depend on the number that was entered.
- ⊙ Even when "In Call" is displayed, the other party may not have taken the call. Start talking after making sure that the other party has taken the call.
- ⊙ Note that even if you cover the mouthpiece (microphone), the sound can be conveyed to the other party.
- ⊙ Even if "Airplane mode" is set, you can call to the emergency number (110, 119, 118) and Customer Service Center (157).
- ⊙ You can press the dial keys during a call to send push signals for the entered number.
- ⊙ To return to the call screen after activating an application during a call, press  to end the application.

### Emergency Call Location Notification

The product supports "Emergency call location notification" so that if you make an emergency call to Police, Fire and Ambulance or Regional Coast Guard Headquarters, your current location (GPS information) will be transmitted to the agency receiving the emergency call.


- ⊙ In this section, Police (110), Fire and Ambulance (119) and Regional Coast Guard Headquarters (118) are collectively referred to as the emergency call receiving agency.
- ⊙ This feature may not yet be available at some emergency call receiving agencies.
- ⊙ If you add "184" before the Japan emergency call number 110/119/118, the emergency call responding agency will not be notified of your location and phone number.

- Ⓞ VoLTE (LTE network) by au is used when connecting with emergency responding organizations within Japan. You cannot connect using 3G (circuit-switched network).
- Ⓞ In places where signal reception from GPS satellites or a base station is relatively poor, such as in an underground mall, inside a building or behind a tall building, the emergency call receiving agency may be notified of some other place different from your actual location.
- Ⓞ When GPS cannot be used to notify of your location, base station signal is used instead.
- Ⓞ When making an emergency call to Police, Fire and Ambulance or Regional Coast Guard Headquarters, always confirm where you are, and tell them your exact location on the phone. Note that depending on the area where you are calling, your call may not be connected to the agency having jurisdiction over that area.
- Ⓞ If the emergency call receiving agency determines that human lives and health are in danger, they will be able to acquire the caller's location information during the call or within a certain period of time after the call.

### ■ Using P (Pause) Dialing and Making a Call

Enter the push signals to send beforehand and then select "Yes" during the call to send the push signals. This is a convenient feature when using information services and automatic reservation services.


**Example: To dial "03-0001-XXXX (bank phone number)" and send the branch "22X" and the account "123XX"**

- 1 Enter bank phone number "030001XXXX".**
- 2  (Call etc) → [Add Prefix] → [Add P] → Enter the branch "22X".**



- 3  (Call etc) → [Add Prefix] → [Add P] → Enter the account "123XX".**

You can enter P (pause) between numbers to enter several push signals at the same time.

- 4  → [Yes] → [Yes].**

After the destination answers the call, a confirmation screen is displayed. A push signal is sent each time you select "Yes" and press .

 
### ■ Using Call Histories and Making a Call

- 1 When the standby screen is displayed, press  (Outgoing)/  (Incoming).**


Press  to toggle the outgoing and incoming call histories.

- 2 Select contact to call from history → .**

The outgoing/incoming call history details screen is displayed.


- When a history with the number of outgoing/incoming calls displayed is selected and  (Switch) is pressed, collected outgoing/incoming call history information is displayed.

- 3 .**


You can also dial by selecting the contact in the outgoing/incoming call history list and pressing .

- Ⓞ Up to 100 calls can be saved in the outgoing/incoming call histories. Once more than 100 calls are made/received, calls are deleted starting with the oldest. The number of calls that can be saved may be fewer depending on available memory.

## ■ Viewing the Outgoing/Incoming Call History Lists

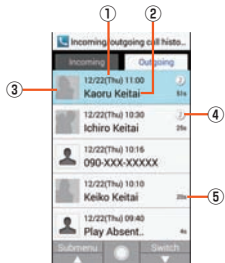 

《Outgoing Call History List》

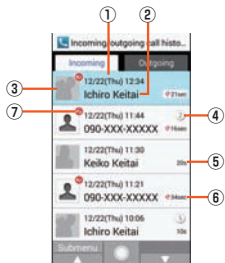 

《Incoming Call History List》

- 1 Call date and time
- 2 Name, number, reason for withheld number, network service information

- 3 Face image registered in address book

- 4 Number of calls

The number of calls are displayed for a same contact in the incoming/outgoing call histories.

- 5 Call time

- 6 Ring time

\* Missed calls of less than 3 seconds may be calls to get the customer to call back and connect them to a malicious pay-for program (one-ring phone scam calls). Use caution.




- 7 Incoming call status icon

- ☑: Missed call
- ☒: Call rejected






## Using Speed Dial and Making a Call

You can make calls quickly to contacts registered to speed dial.

### Registering to Speed Dial



- 1 When the standby screen is displayed, press  → [Phone/Mail] → [Speed dial].
- 2 Select <Not registered> for the number to register →  (Register).
  - If a number is selected with a destination already registered, operations such as dialing are available.
- 3 Select the destination to register → .

### Dialing with Speed Dial

- 1 When the standby screen is displayed, enter the speed dial number (0 to 99).
  - 2 .
-  Entering an unregistered speed dial number and pressing  displays the speed dial list. From the list, you can dial or register a new speed dial.
-  If an e-mail address is registered to a destination registered in speed dial, you can enter the speed dial number and press  (Mail) to create e-mail.

## Using Kantan Hasshin (Speech Recognition) and Making a Call


You can use Kantan Hasshin (speech recognition) to make a call by voice command to a speed dial contact without using the dial keys.

- For details on registering contacts to speed dial, refer to "Registering to Speed Dial" (▶ P.55).
- 1 Open the product/In the standby screen,  (hold down).
    -  (音声で発信 (Dial by voice)) is displayed in the main display.
  - 2 Say the information for the contact into the product.  
Say the name of the contact to call.
  - 3 Confirm the contact as displayed → [Yes].

## Making a Call with Voice party


Voice party is a voice service that allows up to 30 people including the caller to call at the same time, regardless of the type of device the other parties may have.

**1** When the standby screen is displayed, press  →

 (Submenu) → [Voice party].

If a confirmation screen is displayed, confirm the content and follow the on-screen instructions.


**2**  (Create).


Outgoing history →  (Call) to make a call from the history.

**3**  (Submenu).

<b>4</b> Use address book	Select phone number in address book to add to members.
Use history	Select phone number in outgoing/incoming call history to add to members.
Direct entry	Directly enter phone number to add to members.
Delete one member	Delete one member.
Delete all	Delete all members.

**5**  (Call) → Talk.

Select member who has not answered yet/you are talking with →  → [Yes] to end call.

Select a non-present member →  to place a call/delete the member.

**6** .


- ⊙ Voice party requires a subscription.
- ⊙ Call charges to the caller are according to the number of callees (number of people).
- ⊙ Calls with this feature cannot be made to emergency responders (110, 119, 118) or time information (117) and other special numbers.
- ⊙ When placing a call with Voice party, your phone number is sent regardless of the "Send caller ID" setting.
- ⊙ After the call is initiated, Voice party will end if there is no answer from any of the callees within 20 seconds.
- ⊙ The caller and callees cannot make a three-party call with Voice party at the same time.
- ⊙ The caller and callees cannot use call waiting during Voice party.
- ⊙ The caller and callees cannot send push-tones during Voice party.
- ⊙ Callees using call answering or call forwarding cannot participate in Voice party.
- ⊙ A device supporting au VoLTE and receiving a Voice party call cannot answer with Answering memo.
- ⊙ Callees can only see the name and phone number of the caller, and cannot see those of other members.

## Calling Overseas from au Phones (au International Call Service)

You can make international calls without any special procedure from the product.

**Example: To call "212-123-XXXX" in the USA from the product**

### 1 Enter the international access code "010"

Entering  (hold down) in the dial screen enters a "+" and adds "010" when the number is dialed.



### 2 Enter the country code of the USA "1"

### 3 Enter the area code "212"

If the area code starts with "0", dial it without including the "0"  
(There are some exceptions such as fixed-line phones in some countries or regions including Italy and Moscow).

### 4 Enter the phone number of the other party

"123XXXX" → .

- ◎ You can also press  (Submenu) → [Add Prefix] → [International call] to enter the country code when entering a phone number.
- ◎ The monthly limit fee is set for the au International Call Service. The au International Call Service is unavailable from when the limit fee is confirmed to be exceeded until the end of the same month.
- ◎ Even if you cannot use the service by exceeding the limit fee, you can use from the first day of the next month. Also, you can use the domestic call as usual while the service is stopped.
- ◎ International call charges are billed together with monthly local call charges.
- ◎ If you do not wish to use the service, you can set not to use the au International Call Service.  
For au International Call Service:  
From au phones **157** (area code not required) (toll free)  
From fixed-line phones  **0077-7-111** (toll free)  
Open 9:00 to 20:00 (everyday)

## Receiving Calls

### Answering a Call

At the time of purchase, the following information is displayed.

- If a caller's number is sent, it is displayed in the main display. If it is registered in the address book, their name is displayed.
- If a caller's number is not sent, the reason is displayed in the main display.

"ID Unsent" "Pay Phone" "Not Support"

\* When caller calls from phone unable to send number.

#### 1 When a call is arriving, / (Answer).

Press  (Silent) to stop the ringtone.

You can press , , or  to change the volume of the ringtone.

#### 2 Talk.

Press  to end the call.

- If you are not subscribed to LTE NET or LTE NET for DATA, disable "Data transmission" for "Mobile networks" and set "Network Mode" to "Japan(4G)" before using the product.
- If a call arrives while using the address book, e-mail, etc., the call is given priority and the function can be used again once the call ends.

### Rejecting an Incoming Call

Once the call is rejected, it is disconnected. The other party will hear voice guidance.

#### 1 When a call is arriving, (Reject).

## Rejecting a Call and Sending a Message (SMS)

Once the Quick reply is sent, the incoming call is disconnected. The other party will hear voice guidance.


#### 1 When a call is arriving, (Submenu) → [Quick reply].

#### 2 Select a message to send → .




- You can select "Write your own..." with the message to create and send an SMS.
- You can edit the message to send beforehand with "Quick responses" in "Call settings".
- If the other party's phone number is not notified, Quick reply is not available. Also, Quick reply may not be available depending on the communication condition.
- A ring call is audible to the caller until a message to send is selected. Answering memo may answer the call before the SMS is sent.

## Checking Your Phone Number

### Checking Your Profile

- 1 When the standby screen is displayed, press  → [Profile].

### Editing Your Profile

- 1 When the standby screen is displayed, press  → [Profile] →  (Edit).  
The profile edit screen is displayed.
- 2 Enter required items.
- 3  (Save).

◎ Items to note when editing your profile are the same as for editing the address book. For details, refer to "Registering to the Address Book" (▶ P.60).

## Registering to the Address Book


You can register contact information including phone number and e-mail address. You can also set ringtone, vibration, etc. individually for contacts.

### 1 When the standby screen is displayed, press (hold down).

The address book registration screen is displayed.

### 2 Set required items.

### 3 (Save).

- You can also press  (Add contact) in the contacts list (▶P.60) to add a new entry.
- If the number is a landline number, enter the area code first.
- If the name includes 1-byte letters and numbers, it may be displayed in the order of given name, family name.
- To register GPS information, "Location" must be set to "ON" beforehand.
- If a caller's number is withheld, "Ring Set" does not operate.
- Numbers and names registered in the address book can become erased due to accident or malfunction. Keeping a separate copy of numbers and other important information is recommended. The Company is not liable for any damages or lost profits whatsoever due to alteration or loss of contact information resulting from accident or malfunction.

 
## Using the Contacts List

### Displaying the Contacts List

#### 1 When the standby screen is displayed, press .


When the contacts list is in "Group" view, a list of groups is displayed. Selecting a group displays a contacts list for that group.

#### Viewing the Contacts List

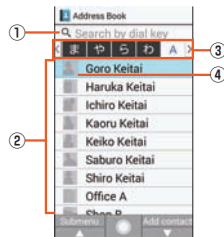

《Contacts List (Name Order)》

#### 1 Search by dial keys

You can search for contacts by pressing the dial keys in the contacts list and entering yomigana readings. Pressing the  key deletes yomigana and ends search.


#### 2 Contacts

Contacts are displayed for the selected tab.

#### 3 Tabs

#### 4 Face image

A face image is displayed if registered.

① Press  to switch tabs.

## Using Information Registered for Contacts


- 1 When the standby screen is displayed, press  → Select the contact → .



### ■ Viewing Address Book Details



《Address Book Details》

- ① Name
- ② Registered information
- ③ Face image
- ④ Main phone number/main e-mail address

① You can make calls, create e-mail, etc. by selecting registered information and pressing .

- ① When several phone numbers or e-mail addresses are set, you can select a phone number/e-mail address and press  → [Set main phone number]/[Set main mail address] to set as the main phone number/e-mail address.
- ① You can press  (Edit) to edit registered information.

## Checking E-Mail

Received e-mail is saved in the "Inbox". Sent e-mail is saved in the "Outbox". Received and sent e-mail that meets filtering criteria is saved in a designated folder.


E-mail that was saved without being sent and send-failed e-mail is saved in the "Unsent" box.

### 1 When the standby screen is displayed, press .

The folder list is displayed.



### 2 [Inbox]/[Outbox]/[Unsent]/Select folder → .

The e-mail list is displayed.

-  (2Line/3Line): Switch mail list views.

### 3 Select e-mail → .




The e-mail message is displayed.

 
-  (Prev): View previous e-mail
-  (Next): View next e-mail

- Once the capacity of the "Inbox" is exceeded, oldest read e-mail is automatically deleted. E-mail that is unread, protected, or for which the text body is unreceived is not deleted.
- New e-mail cannot be received if the "Inbox" is full and it contains all unread e-mail.
- Once the capacities of the "Outbox" and "Unsent" box are exceeded, oldest sent e-mail is automatically deleted. If there is no sent e-mail that can be deleted, send-failed e-mail is deleted, followed by unsent e-mail. Protected e-mail is not deleted.

## Viewing the Folder List

In the folder list, the "Inbox", "Outbox", folders, etc. are displayed. Folders created by selecting "Create new folder" are displayed.

-  (red, number of e-mail) is displayed for new e-mail in the "Inbox". After checking new mail in the received e-mail list, the icon turns  (blue, number of unread e-mail). The icon is not displayed if there is no unread e-mail.
-  (blue, number of unread e-mail) is displayed for e-mail in the "Unsent" box. The icon is red if there is send-failed e-mail.

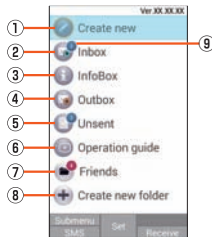


(Folder List)

- 1 Create new
- 2 Inbox
- 3 InfoBox  
View InfoBox mail.
- 4 Outbox
- 5 Unsent
- 6 Operation guide
- 7 Folder
- 8 Create new folder
- 9 Number of unread/unsent e-mail

## ■ Viewing the E-mail List



 《Received E-mail List》

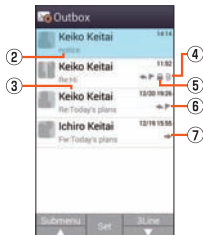

《Sent E-mail List》



《Unsent E-mail List》



《E-mail List (Folders)》

① ●: Unread e-mail

○: E-mail with unreceived text body

② Subject

③ Recipient's/sender's name or e-mail address

The registered image/name is displayed if the e-mail address is registered in the contacts. If the e-mail address is unregistered, the e-mail address is displayed.

If a sender designation is set for the received e-mail, the set name is displayed.

- If the e-mail address is registered in the contacts, the registered name takes priority.
- If there are several recipients, their registered images are displayed. Images are not displayed for 5th and later recipients.

④ Electronic file attached

⑤ Protected mail

⑥ Flagged e-mail

⑦ ←: Replied-to e-mail/reply e-mail

➡: E-mail that has been forwarded/Received forwarded e-mail

↔: Replied-to e-mail/e-mail that has been forwarded


⑧ E-mail waiting to be automatically resent

⑨ E-mail text unreceivable due to no mail on server/Send failure mail

⑩ Received/sent slider

Switch between received and sent e-mail lists in a folder.

## ■ Viewing an E-mail Message

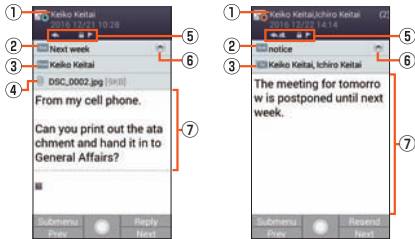 

《Received E-mail Message》

《Sent E-mail Message》

① Recipient's/sender's name or e-mail address

② Subject

③ **From:** Sender's name or e-mail address

**To / CC / BCC:** Recipient's name or e-mail address

④ : Saved electronic file

: Save-failed electronic file

: Saved inline electronic file

: Unreceived electronic file

: Receive-failed electronic file

⑤ : Replied-to e-mail/reply e-mail

: E-mail that has been forwarded/Received forwarded e-mail

: Replied-to e-mail/e-mail that has been forwarded

: Multiple recipients

**BCC:** E-mail received with BCC recipients

: E-mail waiting to be automatically resent

: Send-failed e-mail

: Protected mail

: Flagged e-mail

⑥ : Address/electronic file

Select and press to display e-mail address and attached data list.

⑦ Mail text



## ■ Adding/Deleting Recipients

### ■ Adding a recipient


#### 1 E-mail create screen → Select “.

A menu for selecting a recipient entry method is displayed. Refer to step 3 of “Sending E-mail”.

You can also add recipients by entering them directly in the address entry field.

### ■ Deleting a recipient



#### 1 E-mail create screen → Select “ → [Delete].

○ You can change the recipient type by selecting “. You cannot change the recipient type for the topmost recipient.

## Receiving E-mail

### 1 Receive E-mail.

Once an e-mail is received, you are notified of the new mail in the following ways.



-  is displayed in the status bar, and the ringtone sounds.
- The e-mail address, name, and subject are displayed in the status bar. If a sender designation is set for the received e-mail, the set name is displayed. If the e-mail address is registered in the contacts, the registered name takes priority.
- The charging/incoming indicator flashes blue.
- If the product is folded, the e-mail address, or name if registered in the address book, is displayed in the sub-display. A  mark is also displayed.

### 2 When the standby screen is displayed, press → [Inbox].

The e-mail list is displayed.

### 3 Select a received e-mail → .



The e-mail message is displayed.

- E-mail is received in the background even while using e-mail or other functions.  is displayed in the status bar and a ringtone sounds. However, e-mail is not received in the background if “Auto-receive” is disabled.
- If “Auto-receive” is disabled or there is a receive failure, a ringtone sounds and  is displayed. Use the procedure at “Inquiring for and Receiving New Mail” (▶ P. 67) to receive the e-mail.
- Packet fees may be incurred even if mail is not properly received due to reception conditions or the data being received.

- The maximum size of mail text that can be received is 1 MB per e-mail. If a mail text exceeds that, a message appears at the end of the received portion indicating that it is truncated.
- Received e-mail may not be correctly displayed depending on the content of the mail.






## Inquiring for and Receiving New Mail

You can inquire for and receive new mail if "Auto-receive" is disabled or there was an e-mail receive failure.




- 1 When the standby screen is displayed, press .**  
The folder list is displayed.
- 2  (Receive).**  
Confirm whether there is new e-mail.



## Sending SMS

Send messages (mail text body) with kanji, hiragana, katakana, alphabet and numbers, symbols, emoji, and facemarks.

- 1 When the standby screen is displayed, press  (hold down).**  
Alternatively, to access the screen from the standby screen,  →  (SMS).  
A thread list grouped by contact is displayed.
- 2  (New Msg).**  
The SMS create screen is displayed.
  - When sending to a contact you have exchanged SMS with before, you can also select the thread to create SMS. In this instance, proceed to step **4**.
- 3 Select the recipient entry field → Enter the contact's phone number.**  
You can also select from [] → contacts.  
Before sending SMS overseas, enter "010" and the "country code" at the start of the phone number for the recipient.
 

"010" + "country code" + "phone number for recipient"



  - \* If quoting the cell phone number for the recipient from the address book, etc., select the recipient entry field again and enter "010" and the "country code".
  - \* If the cell phone number for the recipient starts with a "0", enter the number without the "0".
- 4 Select text field → Enter text →  (Done).**  
You can enter up to 70 full size/160 half size characters in the mail text.
- 5  (Send).**  
Select a sent message →  (Submenu) → [Result Delivery Report] to check the send result.

- Before step 5, you can press  to display "Draft" in the thread list and save mail without sending it.
- SMS is held (accumulated) at the SMS center for 72 hours. SMS that has accumulated for more than 72 hours is erased. Up to 300 SMS messages can be held.
- It may not be possible for the SMS center to hold SMS depending on conditions of the receiving customer's phone/service use or the sending customer's phone model.
- Accumulated SMS is delivered at the following times:
  - Delivery soon after SMS accumulation: as new SMS is accumulated at the SMS center, all SMS that had been held is delivered.
  - Delivery with the retry function: if SMS cannot be delivered as soon as it has accumulated due to the recipient being where there is an inadequate signal or their phone is switched off, the retry function repeatedly sends SMS to the recipient for up to 72 hours.
  - Delivery after ending a call: if SMS cannot be delivered as soon as it has accumulated, all SMS that had been held at the SMS center is delivered as soon as the customer ends their call.
    - \* The time that SMS is delivered may differ with international SMS.
- When sending SMS, the number of the sender is displayed for the recipient regardless of the "Send caller ID" setting.
- Emoji sent to an other-brand cell phone may sometimes be converted to the other-brand emoji or may not be displayed properly. Emoji sent to another au cell phone may sometimes be converted to an older-version au emoji.
- A  may be displayed, although rarely, for a sent message that was sent successfully but where signal was weak, etc.
- For details on international SMS, refer to the au homepage.  
<http://www.au.kddi.com/mobile/service/global/sms/>

## Receiving SMS

### 1 Receive an SMS.

Once an SMS is received, you are notified of the new mail in the following ways.

- A new SMS icon is displayed in the standby screen,  in the status bar, and a mail ringtone sounds.
- If the product is folded,  is displayed in the sub-display.
- The charging/incoming indicator flashes.

### 2 When the standby screen is displayed, press (hold down).

The SMS thread list is displayed.

 is displayed for threads with unread SMS.

### 3 Select the thread for the contact to check → .

The content of the thread that includes the received SMS is displayed.

- Receiving SMS is free.
- You can confirm the phone number of the sender with received SMS.
- Received SMS may not be correctly displayed depending on the content of the mail.
- While data is being backed up or restored with the Data Storage application, do not exit the SMS app. This may prevent data from being properly received.

## Using LINE

This communication app allows you to enjoy calling and texting as much as you want, any time and any place.

- Registration of an account is required for using LINE. For details on using LINE, visit the LINE website, or from the LINE screen → [☰] → [Settings] → [Help] and refer to the help.

### **1** When the standby screen is displayed, press → [LINE].

The LINE top page is displayed.

Terms of use, login screen, etc. appear the first time using LINE. Confirm the content and follow the on-screen instructions.

After activating LINE, Touch Cruiser EX is enabled. For details on operating Touch Cruiser EX, refer to "Using Touch Cruiser EX" (▶P.34).

- Games and some other functions cannot be used on the product.
- By changing "KeyTranslator" in "Accessibility" to OFF, the key focus in LINE is no longer displayed. Please use "Accessibility" without changing the settings.

## Accessing the Internet

You can access the Internet by packet communication or the wireless LAN (Wi-Fi®) function.

- Ⓞ Packet communication is available only with subscription to LTE NET or LTE NET for DATA.

## Using Packet Communication

This product provides easy access to the Internet for packet communication with use of "LTE NET" or "LTE NET for DATA". Settings for connecting to the Internet with LTE NET are pre-installed on the product, and activating an application that requires an Internet connection automatically connects the product to the Internet.

To access the Internet with LTE NET for DATA, in the standby screen,  
Ⓞ → [Settings] → [Communication/network] → [Network settings] → [Mobile networks] → [Access Point Names] → [LTE NET for DATA].

- Ⓞ Subscription to LTEフラット (LTE flat) or other packet communication flat-rate/discount service allows you to use an Internet connection with flat-rate charges.  
For details on LTE NET, LTE NET for DATA, and packet communication flat-rate/discount services, refer to the latest au総合カタログ (au general catalog)/the au homepage.

## Precautions when Using Packet Communication

- Using large-volume data communication, such as browsing websites containing images, downloading video and other data, and using applications that use data communication, results in high packet communication charges. Therefore, subscription to a flat-rate/discount service for packet communication charges is recommended.
- To prevent excessive burdens on the network, communication speed is sometimes reduced due to continued large-volume data transfers, busy network conditions, etc.

## How to Confirm Your Packet Communication Charges

You can confirm your packet communication charges at the following URL.

<https://cs.kddi.com/> (auお客さまサポート (au Customer Support))

- Subscription required for first-time use.

## Using the Browser

You can use the browser to view webpages the same as with a PC.

- After a webpage is displayed in the browser, Touch Cruiser EX is enabled. For details on operating Touch Cruiser EX, refer to "Using Touch Cruiser EX" (▶ P.34).
- When a webpage is displayed for the first time, a permission screen is displayed. Confirm the content and follow the on-screen instructions.

## Using the Browser Menu

 
 

- 1 When the standby screen is displayed, press .**

The browser menu is displayed.


<b>2</b>	Homepage	Connect to the Internet and view webpages.
	Bookmarks	Use and manage registered bookmarks.
	Web search	Enter a URL directly to display a site. You can also enter keywords to search for information on webpages.
	History	Display the browsing history.
	au customer support	Display the au Customer Support webpage.
	Download	Display the download history.
	Browser Settings	Change browser settings.
	Let's start with TOUCH CRUISER EX	Check how to operate Touch Cruiser EX.


## Increasing/Decreasing the Size of the Browser Screen/Text

### Increasing/Decreasing the Screen Size




- 1 When the browser is displayed, press  (Decrease)/ (Increase) → .**


Press / to toggle the screen size.


- While increasing/decreasing the screen size, you can also press  to change the size.


 May be unavailable in some webpages.

### Increasing/Decreasing the Text Size

  - 1 When the browser is displayed, press  (Decrease)/ (Increase) → .**

Press / to toggle the text size.

- While increasing/decreasing the text size, you can also press  to change the size.

 May be unavailable in some webpages.

## Operating the Browser with Touch Cruiser EX

You can use Touch Cruiser EX's features to smoothly browse webpages. For details on Touch Cruiser EX, refer to "Using Touch Cruiser EX" (▶P.34).


- After activating the browser, Touch Cruiser EX is enabled.

### 1 Use Touch Cruiser EX to operate the browser.


Tap: Select or finalize items.

Flick: Long-touch the screen to display "⊕" and then scroll up or down.

Double-tap: Zoom out or in on images.

- Ⓞ If the  key does not respond while using the browser, enabling Touch Cruiser EX sometimes enables the cursor to be operable.

## Before Using the Camera

- Fingerprints and smudges on the lens prevent capture of clear still pictures/video. Before capturing images, wipe the lens clean with a soft cloth. Rubbing forcefully may scratch the lens.
- Avoid fingers, hair, strap, etc. from covering the lens or mobile light during image capture. Hold the strap if it interferes with capture.
- If capturing images with the mobile light on, its light reflecting from fingers, a cover, etc. around the lens can cause captured still pictures/video to turn out whitish.
- When capturing video, avoid covering the microphone with fingers. Loudness of voices and surroundings during video capture may affect the sound quality of the microphone.
- When using the self-timer for image capture and the product is placed on an unstable surface, the product vibrating such as when a call arrives or other conditions may cause the product to fall.
- Even in manner mode, the focus lock beep and shutter click for still pictures and start and stop beeps for video sound. The volume cannot be adjusted.
- Exposure of the lens for extended periods to direct sunlight or other sources of strong light may discolor the internal color filter and cause discoloration in still pictures/video.
- Capturing or saving still pictures/video after the product has been left in a warm place for an extended period may affect the still pictures/video.
- The camera comprises high-precision components, and includes pixels that are always on or that do not light. Image capture in extremely dark conditions will result in blue, red, and white dots, etc.
- Release the shutter after confirming that the subject is properly displayed in the main display. Moving the camera while releasing the shutter may cause still pictures to be blurry.
- When capturing images indoors under fluorescent lighting, faint stripes may be visible on the screen from fluorescent light flickering (very faint, invisible to the human eye), but is not a malfunction.
- The color of still pictures/video captured with the product camera may differ from the actual subject. Images may appear partially darker or brighter due to the characteristics of the lens and depending on the subject and illumination when capturing. Subjects may also appear partially distorted.
- Subjecting the product to shock while capturing images may cause the camera to lose focus. If focus is lost, activate the camera again.
- Focusing may not be possible for the following types of subjects.
  - Low-contrast subjects such as plain walls
  - Subjects with strong backlighting
  - Shiny subjects that reflect light brightly
  - Subjects with a pattern that repeats horizontally such as blinds
  - Several subjects with differing distances from the camera
  - Subjects in dark conditions
  - Fast-moving subjects
- Do not shine the mobile light near eyes. Do not look directly into shining mobile light. Do not shine mobile light at other persons' eyes. Doing so may affect vision or cause other impairment.
- Faint sound may audible when using the camera such as when activating the camera. This is from the internal components and is normal.
- Directly capturing the sun, a lamp, or other strong source of light may cause still pictures/video to be dark or noise may appear.
- The screen may appear momentarily white or dark when capturing a moving subject or when moving from light to dark conditions. Noise may also momentarily appear.
- Noise may increase and result in grainy still pictures when capturing in dark conditions.
- Immediately after switching camera modes or changing camera settings, it may take time for brightness, color, etc. to be displayed optimally.
- Creating a public nuisance with use of the product camera may be punishable by law.
- If the battery level is less than  (about 10%), the camera cannot be activated.

- It may not be possible to use the camera in the following instances.
  - When the temperature of the product is high after using for an extended period
  - When using the product in extremely low temperatures such as outdoors in the winter
  - When other applications are activated

## Capturing Still Pictures/Video


You can capture still pictures and video. You can also switch camera settings to match the subject you want to capture.

After activating the camera, Touch Cruiser EX is enabled. For details on operating Touch Cruiser EX, refer to "Using Touch Cruiser EX" (▶P.34).

### ■ Capturing Still Pictures


#### 1 When the standby screen is displayed, press .


The still picture viewfinder is displayed.

: Zoom out/zoom in

: Adjust brightness

 (Settings): Display camera settings menu

 (Preview): Display captured still pictures

 (Focus): Lock focus

 
 (VideoCam): Switch to video capture

: Toggle screen icon show/hide

#### 2 (Shutter)/ .

The still picture is captured and saved.

### ■ Viewing the Still Picture Viewfinder

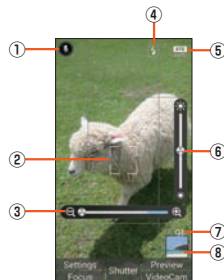

《Still Picture Viewfinder》

#### 1 Voice recognition

#### 2 Focus mark

If "Face AF" is set, faces are detected for focusing. You can specify where to focus by tapping the subject's position with the pointer.

#### 3 Zoom

#### 4 Flashlight

#### 5 Capture mode

#### 6 Adjust brightness

#### 7 Shots remaining

Displayed when 99 or fewer shots remain.

#### 8 Minipreview

Display thumbnail of preceding captured data.

- © Select an icon or minipreview with the Touch Cruiser EX pointer to activate the function corresponding to the icon or play a captured still picture.

## ■ Capturing Video


### 1 When the standby screen is displayed, press (hold down).

The video viewfinder is displayed.

: Zoom in/zoom out

: Adjust brightness

 (Settings): Display camera settings menu


 (Preview): Play back captured video

 (StillCam): Switch to still picture capture

: Toggle screen icon show/hide

### 2 (Start) .

 
Video capture begins.

- You can press  (Shutter) during recording to capture a still picture.

### 3 (Stop) .

Capture ends and the video is saved.

## ■ Viewing the Video Viewfinder

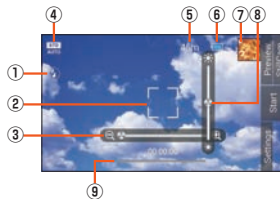

《Video Viewfinder》

- 1 **Mobile light**
- 2 **Focus mark**
- 3 **Zoom**
- 4 **Capture mode**
- 5 **Recording time remaining**
- 6 **Battery level**
- 7 **Minipreview**  
Display thumbnail of preceding captured data.
- 8 **Adjust brightness**
- 9 **Capture time**

- © Select an icon or minipreview with the Touch Cruiser EX pointer to activate the function corresponding to the icon or play a captured video.

## 1Seg

1Seg is a digital terrestrial TV broadcast service for mobile devices, and allows reception of image and audio as well as data broadcast.

For details on the "1Seg" service, refer to the below website.

The Association for Promotion of Advanced Broadcasting Services (A-PAB)

<http://www.apab.or.jp/>

### ■ Precautions when Using 1Seg

- No communication charges or packet communication charges are incurred for using 1Seg. However, packet communication charges are incurred for use of additional services associated with data broadcast that use data transmission. Regarding NHK reception fees, inquire with NHK.
- While displaying the 1Seg screen, the product may become warm and cause low-temperature burns, etc. if used in contact with the skin for an extended period.
- Listening at a volume that is loud to the ears continuously for an extended period may affect hearing.
- 1Seg is for digital terrestrial TV broadcast 1Seg in Japan only.
- Overseas, 1Seg cannot be used due to differing broadcast formats and frequencies. Also, BS and 110-degree CS digital broadcasts cannot be viewed.
- Do not use 1Seg while operating a vehicle or riding a bicycle, motorcycle, etc. or while walking. Doing so may prevent surrounding sound from being heard and may distract you, causing a traffic accident.

### ■ Signal

Signal may be weak in the following places and may affect picture/sound quality or prevent reception.

- Areas that are distant from or extremely close to the broadcast station
- In a moving train/car, underground shopping district, tunnel, indoors, etc.
- In a valley or shade of a building
- Near high-power lines, neon lighting, a radio station, railway track, highway, etc.
- Other places where interfering signals are strong or signals are blocked


To improve signal reception, try the following.

- When viewing indoors, view near a window for better reception.

### ■ TV Antenna






The product has a built-in antenna.

### ■ Operation Based on Battery Level

TV cannot be activated if the battery level is less than  (about 10%).




## Making Initial TV Settings

Set a channel list for viewing the first time activating TV. Once settings are complete, you can view TV programs.

- 1 When the standby screen is displayed, press  → [Tools] → [TV].**  
If a license screen is displayed, confirm the content and select "Agree".
- 2 [Create by selecting the area].**  
If the area cannot be determined, select "Create by searching channels" and follow the on-screen instructions.
- 3 Select the region → .**
- 4 Select the prefecture → .**
- 5 Select the area → .**  
Scanning for broadcast stations starts.
- 6 Confirm the channel list →  (Set).**




## Viewing TV Programs

### Viewing a TV Program

- 1 When the standby screen is displayed, press  → [Tools] → [TV].**
  -  (Data mode/TV mode): Switch data operation mode/TV viewing mode
  -  (Rotate): Switch screen display between vertical and horizontal

### Key Operation in TV Viewing Mode

You can switch channels and adjust volume.

<sup>\*1</sup>2/<sup>2</sup>/<sup>2</sup>: Adjust volume (volume at 15 levels or mute)

<sup>\*1</sup>: Switch channels, hold down to search channels

 to , , : Switch channels

: End

\*1 Operation depends on the screen view.


 


\*2 While connected by Bluetooth<sup>®</sup>, volume adjustment from a Bluetooth<sup>®</sup> remote control is possible.

However, may not be possible depending on the Bluetooth<sup>®</sup> device.

### Key Operation in Data Operation Mode

You can use information (data broadcast) in the information display area.

: Move cursor, scroll

 to , , : Select item as assigned by contents

: Select item

: Go back one page in data broadcast

- When activating TV or changing channels, it may take time to obtain data for data broadcast and TV image due to digital broadcasting characteristics.
- Image and sound may be disrupted or stop due to signal conditions.
- The camera is unavailable while TV is activated.
- No communication charges or packet communication charges are incurred for viewing data broadcast. However, packet communication charges are incurred for accessing related sites in information obtained from data broadcast or obtaining additional information.

## ■ Viewing the TV Screen




《TV Screen》

- ① **Program information**  
Displays the program title and station name.
- ② **Image**
- ③ **Subtitles**  
If subtitles are enabled, subtitles are displayed in the subtitle area.
- ④ **Information display area**
- ⑤ **Volume**

## Displaying the Settings Menu

Set and manage functions from the settings menu.

- 1 When the standby screen is displayed, press  → [Settings].**

Item	Description
Wallpaper/display	Set wallpaper and screen brightness, change text fonts, etc.
Sound/Vibration	Change manner mode settings, volume and sound of ringtone, etc.
au ID setting	Set an au ID.
Security	Set product lock and security feature and secret mode.
Energy saving/ battery	Set energy saving mode and check battery usage.
Wi-Fi	Set Wi-Fi® (▶P.79).
Bluetooth	Set Bluetooth®.
Communication/ network	Make settings for airplane mode, tethering, VPN or other network, etc.
Location	Make settings for location information.
Other settings	Set the date and time, select language, screensaver, etc.


## Wireless LAN (Wi-Fi®) Function

You can use a household wireless LAN (Wi-Fi®) environment or a public wireless LAN environment when outside to connect to an Internet service.

To connect to the Internet using Wi-Fi®, you must register an access point for connecting to beforehand.

## Using the Wireless LAN (Wi-Fi®) Function

### Turning the Wireless LAN (Wi-Fi®) Function On


- 1 When the standby screen is displayed, press  → [Settings] → [Wi-Fi].**

The Wi-Fi® settings screen is displayed.

- 2 [Wi-Fi settings].**

Wi-Fi® switches on.

### Connecting to a Wi-Fi® Network

- 1 When the standby screen is displayed, press  → [Settings] → [Wi-Fi].**

If Wi-Fi® is activated, connectable access points are displayed in the Wi-Fi® settings screen.



- 2 Select an access point → .**

- 3 Enter the password → [Connect].**

Enable "Show password" to show passwords during entry.

- Password entry may not be required by some access points.
- Depending on your environment, there may be drops in connection speed or unavailability.

 
## Disconnecting from an Access Point

- 1** When the standby screen is displayed, press  → [Settings] → [Wi-Fi].
- 2** Select the connected access point →  → [Disconnect].

- After disconnecting from an access point, password entry may be required to reconnect.


## Introduction of Peripheral Devices

- Battery Pack (SHF31UAA)
- au Carrying Case F Black (0105FCA) (sold separately)
- au Carrying Case G Black (0106FCA) (sold separately)
- au Carrying Case H Black (0107FCA) (sold separately)

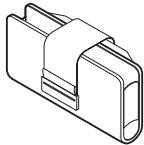

au Carrying Case F Black

 - Common AC Adapter 03 (0301PQA) (sold separately)
- Common AC Adapter 05 (0501PWA) (sold separately)
- Common AC Adapter 03 Navy (0301PBA) (sold separately)
- Common AC Adapter 03 Green (0301PGA) (sold separately)
- Common AC Adapter 03 Pink (0301PPA) (sold separately)
- Common AC Adapter 03 Blue (0301PLA) (sold separately)
- AC Adapter JUPITRIS (White) (L02P001W) (sold separately)
- AC Adapter JUPITRIS (Red) (L02P001R) (sold separately)
- AC Adapter JUPITRIS (Blue) (L02P001L) (sold separately)
- AC Adapter JUPITRIS (Pink) (L02P001P) (sold separately)
- AC Adapter JUPITRIS (Champagne) (L02P001N) (sold separately)

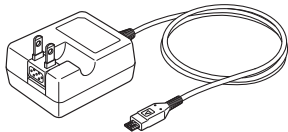

Common AC adapter 05


- Illustrations and forms may not match depending on the AC adapter you use.
- Portable charger 02 (0301PFA) (sold separately)
- Desktop holder (SHF31PUA) (sold separately)
- microUSB cable 01 (0301HVA) (sold separately)
- microUSB cable 01 Navy (0301HBA) (sold separately)
- microUSB cable 01 Green (0301HGA) (sold separately)
- microUSB cable 01 Pink (0301HPA) (sold separately)
- microUSB cable 01 Blue (0301HLA) (sold separately)
- Sharp microUSB 3.5mm conversion cable 01 (SHX11QVA) (sold separately)

- For the latest information about available peripheral devices, check the au homepage (<http://www.au.kddi.com/english/>) or contact Customer Service Center.
- The product does not support ASYNC/Fax transmission.
- The above-mentioned peripheral devices can be purchased from au Online Shop. You may not be able to purchase one depending on the stock status.  
<http://auonlineshop.kddi.com/>

## Using an Earphone Microphone with Switch/Earphone Microphone/ Earphone

 You can connect a "Sharp microUSB 3.5mm conversion cable 01 (sold separately)" to the product and use an earphone.

- 1 Insert microUSB plug of Sharp microUSB 3.5mm conversion cable 01 (sold separately) in external connection jack on product in direction shown, confirming its orientation.**

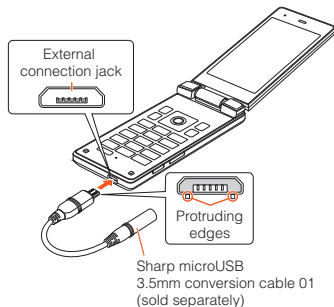

- 2 Insert earphone microphone with switch, earphone microphone, or earphone in earphone jack of Sharp microUSB 3.5mm conversion cable 01 (sold separately).**

## ■ Answering a Call with an Earphone Microphone with Switch

- 1 Press switch on earphone microphone with switch while call is arriving.**



To end the call, press the switch on the earphone microphone with switch again.



- You may not be able to use this feature depending on the type of earphone microphone with switch or earphone microphone.
- For information on operation-tested 3.5mm-plug earphone microphone with switch, (commercially available), refer to the following support page.

<http://k-tai.sharp.co.jp/support/a/shf33/>

## Troubleshooting

Before you assume that the product is malfunctioning, check the following:

Trouble	Detail
Battery usage time is short.	<ul style="list-style-type: none"> <li>Make sure you do not often use the product in places where  (out of service area) is displayed. (▶P.39)</li> <li>Is the battery charged enough?</li> </ul>
Cannot make calls.	<ul style="list-style-type: none"> <li>Is an au Nano IC Card 04 inserted? (▶P.34)</li> <li>Was the number entered correctly? (Was the area code entered?) (▶P.52)</li> <li>Is "Airplane mode" set? (▶P.39)</li> <li>Is the power turned on?</li> <li>Did you press  after entering the number? (▶P.52)</li> </ul>
Cannot receive calls.	<ul style="list-style-type: none"> <li>Is reception good enough? (▶P.39)</li> <li>Is the product within the service area? (▶P.39)</li> <li>Is "Airplane mode" set? (▶P.39)</li> <li>Is the power turned on?</li> <li>Is an au Nano IC Card 04 inserted? (▶P.34)</li> </ul>
1Seg is not displayed, image stops, audio stops, noise appears.	<ul style="list-style-type: none"> <li>Is the digital terrestrial TV broadcast signal adequate? (▶P.38)</li> <li>Is your hand covering the TV antenna area? (▶P.33)</li> </ul>
Camera does not operate.	<ul style="list-style-type: none"> <li>Is the battery low? (▶P.39)</li> <li>Check how to use the camera. (▶P.73)</li> </ul>
Cannot operate the keys panel.	<ul style="list-style-type: none"> <li>Turn off the power and then turn it on.</li> <li>Is the power turned on?</li> </ul>

Trouble	Detail
Cannot operate/The screen does not respond/ Cannot turn off the power.	<ul style="list-style-type: none"> <li>You can force the power off by holding down  for at least 8 seconds and releasing your finger after the product vibrates. Turn the product on again after a while.</li> </ul>
The power is turned off automatically.	<ul style="list-style-type: none"> <li>Make sure the battery has not run out.</li> </ul>
The power is turned off while the wake-up logo is displayed.	<ul style="list-style-type: none"> <li>Make sure the battery has not run out.</li> </ul>
 (out of service area) is displayed.	<ul style="list-style-type: none"> <li>Is reception good enough? (▶P.39)</li> <li>Is the product within the service area? (▶P.39)</li> <li>Is your hand off the area around the internal antenna? (▶P.33)</li> <li>Is the au Nano IC Card 04 inserted? (▶P.34)</li> </ul>
A message indicating that charging is necessary is displayed.	<ul style="list-style-type: none"> <li>The battery is almost empty. (▶P.39)</li> </ul>
The product answers calls when it shouldn't.	<ul style="list-style-type: none"> <li>Is Answering memo set? (▶P.39)</li> <li>Is manner mode set? (▶P.39)</li> <li>Is auto answer set?</li> </ul>


Trouble	Detail
When making a call, a beeping sound is heard from the earpiece and a connection cannot be established.	<ul style="list-style-type: none"> <li>• Is reception good enough? (▶P.39)</li> <li>• Is the product within the service area? (▶P.39)</li> <li>• The line traffic is busy or the other party is in a call. Dial again.</li> </ul>




If symptoms do not improve after checking each of the above, information is provided through au Customer Support on the au homepage below.

<http://www.au.kddi.com/english/support/>

## Updating Software

The product supports the software update.

**1** When the standby screen is displayed, press  → [Settings] → [Other settings] → [Device info] → [Software update].

<b>2</b> Software Update	<p>Check whether a software update is necessary or not.</p> <p>Press  (Exec) to start a check. When an update is necessary, you can download data for a software update.</p> <ul style="list-style-type: none"> <li>• To update immediately, press  (Exec) and follow the on-screen instructions.</li> <li>• To update later, select "Later" to end the application, and "The install confirmation message will reappear in 24 hours" is displayed. Press "OK" and  is displayed in the status bar.</li> </ul> <p>To update software, select "Software update" in the status bar and follow the on-screen instructions.</p> <ul style="list-style-type: none"> <li>• If a software update is possible, information on the software update to download is displayed.</li> </ul>
Notification	<p>Switch the notification on/off for indicating whether a software update is available.</p> <ul style="list-style-type: none"> <li>• If set to "ON", information on the software update to download is displayed.</li> </ul>

## ■ Notes on Software Update

- When software update is necessary, you will be informed on au homepage, etc. For details, contact an au shop or Customer Service Center (call toll-free 157). In addition, users of the SHF33 will receive a notice from au, when software update is necessary to improve the functionality of the SHF33.
- It is recommended to back up your data before updating software.
- If the software update is performed, the product will reboot before and after the update.
- If the software update has failed or stopped, perform the same procedures again.
- If the software update fails, it may become impossible to operate the product. If this happens, bring it to an au shop or PiPi (not accepted by some shops).
- Charge the battery sufficiently before starting update. If the battery level is insufficient or the battery runs out during the update, the software update may fail.
- Check out the signal reception status. The software update may fail if the product is in a place with bad signal reception status.
- Various data registered on the product (address books, mails, still pictures, music data, etc.) and information of settings will not be changed even after software is updated. However, note that data may not be protected depending on the state of the product (fault, damage, getting wet with water, etc.).
- After software is updated, the download of next update software may automatically start (consecutive update).
- During international roaming, the software update function can only be used with a Wi-Fi® connection. As this function cannot be used without a Wi-Fi® connection, be sure to first connect via Wi-Fi® before updating software.

## Do not conduct the following operations during the software update

- Do not move during software update.

## The following operations are not available during the software update

- Operations are not available during software update. Making a call to 110 (Police), 119 (Fire and Ambulance), 118 (Regional Coast Guard Headquarters) or 157 (Customer Service Center) is not available either. Also, the alarm etc. does not function.

## Remotely Locking the Product with Anshin Lock Service

Even if you have not set remote locking beforehand, you can call the Customer Service Center and have the screen, Osaifu-Keitai®, etc. remotely locked.

Anshin Lock Service is available at no charge.

## ■ Calling the Customer Service Center and Remotely Locking/Unlocking the Product

From a fixed-line phone,  **0077-7-113** (toll free)

From an au cell phone, **113** without area code (toll free)

Business hours: 24 hours (7 days a week)

- Follow voice guidance to complete procedure.

© For detailed descriptions, refer to the "Full Instruction Manual" ("User Guide" Japanese) available on the au homepage.

## Using Keitai Sagasete Anshin (Keitai Search) Service

You can use the Keitai Sagasete Anshin (keitai search) service to have the Customer Service Center find your au phone's approximate location if misplaced or lost.

The locating setting on the product is preset to "Allow" to allow it to be found.

- For detailed descriptions, refer to the "Full Instruction Manual" ("User Guide" Japanese) available on the au homepage.
- If the product's location was searched for by the Customer Service Center, a message is displayed on the screen.

## After-Sales Service

### ■ When Asking for Repair

For repair, contact Keitai Guarantee Service Center.

During the warranty period	Repairs will be done based on the Company's terms of services of the free-of-charge repair warranty described on the warranty card.
Outside the warranty period	We shall repair the product for a charge as requested by the customer if repair renders it usable.

- Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
- Recycled parts that meet the Company's quality standards are sometimes used for repair.
- au cell phones collected by Replacement cell phone delivery service which you used before are recycled to cell phones for replacement after repairs. Also parts replaced by au after-sales service are collected and recycled by the Company. They are not returned to customers.
- Instances where the product has been changed, modified, or analyzed (including software modification or analysis (including rooting, etc.) reverse-engineered, reverse-compiled, or reverse-assembled) or has been repaired at a location other than an authorized repair location designated by the Company may not be covered by warranty or may prevent the product from being accepted for repairs.

### ■ Performance Parts for Repair

The Company retains performance parts for repair of the SHF33 main unit and its peripheral devices for 4 years after discontinuation of production.

"Performance parts for repair" refers to parts required for maintaining the functions of the product.

### ■ Warranty Card

At the store of purchase, thoroughly check and read the name of the retailer, date of purchase and other necessary details filled in on the warranty card, and be sure to keep it in a safe place.

## ■ Keitai Guarantee Service Plus LTE

An after-sales service membership program on a monthly basis called "Keitai Guarantee Service Plus LTE" (monthly fee: 380 yen, tax excluded) is available for using your au cell phone for a long time without worries.

This service expands coverage for many troubles including malfunction, theft and loss. For details of this service, check on the au homepage or contact Keitai Guarantee Service Center.

- You can apply for membership only at the time of purchasing your au cell phone.
- Once you cancel the membership, you cannot reapply for it until you purchase an au cell phone next time.
- Note that when changing the model or purchasing an extra cell phone, this service only covers the most recently purchased au cell phone.
- When an au cell phone is handed over to you or someone else, the "Keitai Guarantee Service Plus LTE" membership is also handed over to the successor of the cell phone.
- When you get a new au cell phone by changing the model, purchasing an extra cell phone, etc., the "Keitai Guarantee Service Plus" or "Keitai Guarantee Service Plus LTE" membership for the old au cell phone is automatically canceled.
- Service contents are subject to change without notice.

## ■ au Nano IC Card 04

The au Nano IC Card 04 is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When malfunction is suspected, or in case of theft or loss, contact an au shop or PiPiT.

## ■ After-Sales Service

If you are unsure about anything regarding after-sales service, contact the following service counter.

### Customer Service Center (service cancelation procedure in case of loss or theft)

From a fixed-line phone, ☎ 0077-7-113 (toll free)  
From an au cell phone, 113 without area code (toll free)  
Business hours: 24 hours (7 days a week)

### Keitai Guarantee Service Center (for loss, theft or damage)

From a fixed-line phone/an au cell phone,  
☎ 0120-925-919 (toll free)  
Business hours 9:00 to 20:00 (7 days a week)

### Online Replacement Desk (24 hours)

\* From the product, PCs and smartphones only  
[https://cs.kddi.com/support/n\\_login.html](https://cs.kddi.com/support/n_login.html)



- Applications for servicing can be made via the Internet for "damage", "water seepage", "theft", or "loss". Naturally-occurring malfunction (power does not turn on, the screen is frozen, etc. due to causes other than damage or water seepage) require consultation by telephone.
- Applications via the Internet require that you provide your e-mail address.

## ■ au After-Sales Service Information

Service contents	Keitai Guarantee Service Plus LTE member	Non-Keitai Guarantee Service Plus LTE member
Replacement mobile phone delivery service (spontaneous failure: 1st year)	Free	N/A
Replacement mobile phone delivery service (spontaneous failure: 2nd year and later)	Refer to the following charges list of "Replacement mobile phone delivery service" (membership)	N/A
Replacement mobile phone delivery service (partial damage, water soak, irreparable damage, theft and loss)	Refer to the following charges list of "Replacement mobile phone delivery service" (membership)	N/A
Holding over and repair (spontaneous failure: 1st year)	Free	Free
Holding over and repair (spontaneous failure: 2nd year and later)	Free (three-year warranty)	Actual cost
Holding over and repair (partial damage)	Customer charge Upper limit: 5,000 yen	Actual cost
Holding over and repair (water soak and irreparable damage)	Customer charge 10,000 yen	Actual cost

Service contents	Keitai Guarantee Service Plus LTE member	Non-Keitai Guarantee Service Plus LTE member
Holding over and repair (theft and loss)	N/A	N/A (By model replacement)

\* Charge amounts are all tax excluded.

### ■ Charges list of "Replacement mobile phone delivery service" (membership)

Applied condition	First use	Second use
General	5,000 yen/Benefit for longtime au user* <sup>1</sup> 3,000 yen	8,000 yen/Benefit for longtime au user* <sup>1</sup> 6,000 yen
Both "Discount for web application"* <sup>2</sup> /"Discount for nonuse of substitute"* <sup>3</sup> are applied	4,000 yen/Benefit for longtime au user* <sup>1</sup> 2,000 yen	7,000 yen/Benefit for longtime au user* <sup>1</sup> 5,000 yen
Only "Discount for nonuse of substitute"* <sup>3</sup> is applied	4,500 yen/Benefit for longtime au user* <sup>1</sup> 2,500 yen	7,500 yen/Benefit for longtime au user* <sup>1</sup> 5,500 yen

\* Charge amounts are all tax excluded.

\*<sup>1</sup> This discount applies to customers who have used au for 3 years (25 months) or more, and all the lines within that customer's Family Discount. For customers using a data communication device or tablet, this discount applies to customers who are subscribed to a set discount (WIN Single Set Discount or Smartphone Set Discount) and have been under the contract of the line eligible for the set discount for 3 years or more.

\*<sup>2</sup> Discount for web application: If you apply for the "Replacement mobile phone delivery service" through the au homepage, you get a discount of 500 yen on the fee.

"Discount for nonuse of substitute" can be applied automatically at the same time since a substitute mobile phone is not borrowed if you apply for "Discount for web application".

- \*3 Discount for nonuse of substitute: When using the "Replacement mobile phone delivery service" and you do not borrow a substitute mobile phone, you get a discount of 500 yen on the fee.  
For details, check on the au homepage.

#### Replacement mobile phone delivery service


- ① When you have trouble with your au cell phone, you can have a cell phone for replacement (same model and color as your old one\*) delivered to any destination that you specify by calling us. Please return your old faulty au cell phone within 14 days after the cell phone for replacement is delivered to you.
  - \* If the same model in the same color is difficult to provide, a replacement cell phone of a model and a color that are specified by KDDI is provided.
- ② You can use this service up to twice within one year starting from the day when you first use this service. If you have not used this service over the past one year at the time of your application for this service, the application will be regarded as your first time. If you have, the application will be regarded as your second time.
  - \* For details, check on the au homepage.
- ③ In the event of theft or loss, an au IC card has to be reissued when using this service. In such a case, the au IC card reissue fee of 1,900 yen is separately required.

#### Holding over and repair

- ④ Damages and malfunctions intentionally caused by the customer as well as those due to modification (e.g. disassembly, change of parts, painting, etc.) by the customer are not covered by this service.
- ⑤ You cannot receive a refund for replacement of the outer casing due to stains, scratches, paint removal, etc. on the outer casing.

## SIM-Unlocking the Product

This product can be SIM-unlocked. SIM-unlocking the product allows other-carrier SIM cards to be used with it.

- Requests can be made for SIM-unlocking on the au homepage or at an au shop.
- Some services, functions, etc. may have restrictions when an other-carrier SIM card is used. The Company does not guarantee operation whatsoever.
- To make settings after SIM-unlocking the product, when the standby screen is displayed, press  → [Settings] → [Other settings] → [Device info] → [Status] → [SIM card status].
- For details, refer to the au homepage.

<https://cs.kddi.com/support/simcard/>

## Main Specifications

Main display	Approx. 3.4 inches, approx. 16.77 million colors, TFT, 960×540 (QHD)
Sub-display	Approx. 0.7 inches, 1 color, OEL display
Weight	Approx. 130 g (including the battery pack)
Size (W×H×D)	Approx. 51 mm×113 mm×16.9 mm (thickest part approx. 17.4 mm)
Memory (built-in)	ROM: Approx. 8 GB RAM: Approx. 1 GB
Continuous talk time (in Japan)	Approx. 660 min.
Continuous talk time (overseas (GSM))	Approx. 480 min.
Continuous standby time (in Japan)	Approx. 470 hours
Continuous standby time (overseas (GSM))	Approx. 560 hours
Continuous tethering time	Approx. 480 min.
Maximum Wi-Fi® tethered connections	10 devices
Charging time	Common AC adapter 05 (sold separately): Approx. 110 min.
1Seg continuous watching time*1	Approx. 6 hours and 30 min.
Camera device	CMOS image sensor
Effective pixels	Approx. 13.10 million pixels

Bluetooth® function	Communication method: Bluetooth® Standard Ver.4.0 Output: Bluetooth® Standard Power Class 1 Communication distance*2: Within 10 m with no obstacles in the range Compatible Bluetooth® profiles*3: HSP, HFP, A2DP, AVRCP, OPP, SPP, PBAP*4, HID, PAN, PAN U, SCMS-T, HOGP*5, DUN*6, Bluetooth LE GATT Frequency bands: 2.4 GHz band
Network environment	Wireless LAN (Wi-Fi®) function: IEEE802.11b/g/n (2.4 GHz) conformant
Interface	microUSB jack

\*1 1Seg continuous watching time depends on usage conditions.

\*2 It changes according to objects obstructing devices and signal reception.

\*3 This is the specification provided in Bluetooth® standards for making communication between Bluetooth® compatible devices in accordance with their intended use.

\*4 Some contents of address books data may not be properly displayed on the device of the other party.

\*5 This profile supports Bluetooth® Standard Ver.4.0.

\*6 Supported for some car navigation systems only. See the au homepage for usage.

© The continuous talk time and continuous standby time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings.

## Specific Absorption Rate (SAR) of Cell Phones

This model [SHF33] cell phone complies with Japanese technical regulations for exposure to radio waves and international guidelines on radio wave protection.

This cell phone has been designed in observance of the Japanese technical regulations regarding exposure to radio waves<sup>(\*)</sup> and limits to exposure to radio waves recommended by equivalent international guidelines.

These international guidelines were set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition. The Japanese technical regulations and international guidelines define the limits using a unit of measurement known as the Specific Absorption Rate (SAR), which represents the average amount of radio frequency energy absorbed by the human body. The SAR limit for cell phones is 2.0 W/kg. The highest SAR value for this cell phone when tested for use close to the head is 0.470 W/kg, and when worn on the body, is 0.510 W/kg<sup>(\*\*)</sup>. There may be slight differences in SAR levels among individual products, but they all satisfy the limit.

The actual SAR of this cell phone while talking on the phone can be well below that indicated above. This is due to the cell phone being designed to only output the minimum power required to communicate with a base station. Therefore in general, the closer you are to a base station, the lower the power output of the cell phone.

This cell phone can be used in positions other than close to the head. Use a carrying case or similar accessory that holds the phone at least 1.5 cm separated from the body and ensure no metal parts are located between you and the cell phone. Under these conditions, this cell phone satisfies Japanese technical regulations and international guidelines for radio wave protection.

The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use".

If you would like to know more detailed information, please refer to the WHO website.

[http://www.who.int/docstore/peh-emf/publications/facts\\_press/fact\\_english.htm](http://www.who.int/docstore/peh-emf/publications/facts_press/fact_english.htm)

Please refer to the websites listed below if you would like to know more detailed information regarding SAR.

- 
- Ministry of Internal Affairs and Communications website:  
<http://www.tele.soumu.go.jp/e/sys/ele/index.htm>
  - Association of Radio Industries and Businesses website:  
<http://www.arib-emf.org/01denpa/denpa02-02.html>
  - SHARP homepage:  
<http://k-tai.sharp.co.jp/support/sar/>
  - au homepage:  
<http://www.au.kddi.com/english/>
- 

\*1 Technical regulations are defined by the Ministerial Ordinance Related to the Radio Law (Article 14-2 of Radio Equipment Regulations).

\*\*2 These values include functions capable of simultaneous use.

## CE Declaration of Conformity

# CE0168

Hereby, Sharp Telecommunications of Europe Ltd, declares that this SHF33 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the original declaration of conformity can be found at the following Internet address:  
<http://www.sharp.co.jp/k-tai>

### ■ Mobile Light

**Do not point the illuminated light directly at someone's eyes.**

Be especially careful not to shoot small children from a very close distance.

Do not use Mobile light near people's faces. Eyesight may be temporarily affected leading to accidents.

### ■ AC Adapter

Any AC adapter used with this handset must be suitably approved with a 5Vdc SELV output which meets limited power source requirements as specified in EN/IEC 60950-1 clause 2.5.

### ■ Battery - CAUTION

**Use specified Charger only.**

Non-specified equipment use may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.

The battery is embedded inside the product. Avoid removing the embedded battery since this may cause overheating or bursting.

Do not dispose of the product with ordinary refuse. Take the product to an au Shop, or follow the local disposal regulations.

Charge battery in ambient temperatures between 5°C and 35°C; outside this range, battery may leak/overheat and performance may deteriorate.

### ■ Volume Level Caution



To prevent possible hearing damage, do not listen at high volume levels for long periods.

### ■ Headphone Signal Level

The maximum output voltage for the music player function, measured in accordance with EN 50332-2, is 127 mV.

### ■ Stand-by Mark

 This symbol means the stand-by on/off.

## ■ European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear is 0.207 W/kg\* and when worn on the body is 0.962 W/kg\*.

For body-worn operation, this mobile device has been tested and meets the RF exposure guidelines when used with an accessory containing no metal and positioning the handset a minimum of 5 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head.

---

\* The tests are carried out in accordance with international guidelines for testing.

## FCC Notice

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.
- The device is electronically labeled and the FCC ID can be displayed via the Device info & the Authentication under the Setting menu.

## ■ Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

## Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

## FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

### Highest SAR value:

Model	SHF33
FCC ID	APYHRO00236
At the Ear	0.60 W/kg
On the Body	1.45 W/kg

This device was tested for typical body-worn operations with the back of the handset kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0 cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found at <http://transition.fcc.gov/oet/ea/fccid/> under the Display Grant section after searching on the corresponding FCC ID (see table above).

Additional information on Specific Absorption Rates (SAR) can be found on the FCC website at <http://www.fcc.gov/encyclopedia/radio-frequency-safety>.

## Export Administration Regulations

The product and its accessories may be subject to the Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Law" and its related laws). In addition, U.S. Re-export Regulations (Export Administration Regulations) may apply to the product and its accessories. To export and re-export the product and its accessories, take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry or the U.S. Department of Commerce.

## Intellectual Property Rights

### Trademarks

The company names and product names appearing in this manual are trademarks or registered trademarks of their respective holders.

- The microSD logo and microSDHC logo are trademarks of SD-3C, LLC.




- The Bluetooth® word mark and logo are registered trademarks owned by the Bluetooth SIG, Inc., and SHARP CORPORATION is licensed to use these trademarks.



- Wi-Fi®, Wi-Fi CERTIFIED logo, Wi-Fi Protected Setup logo, Wi-Fi Direct®, and Miracast® are registered trademarks of Wi-Fi Alliance®.



- Wi-Fi CERTIFIED™ and Wi-Fi Protected Setup™ are trademarks of Wi-Fi Alliance®.
- The official name for Microsoft® Windows® is Microsoft® Windows® Operating System.
- Microsoft®, Windows®, Windows Vista®, Microsoft® Excel®, Microsoft® PowerPoint®, Windows Media® and Exchange® are trademarks or registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

- Microsoft® Word and Microsoft® Office are product names of Microsoft Corporation in the U.S.A.
- QR code is a registered trademark of DENSO WAVE INCORPORATED.
- FeliCa is a contactless IC card technology developed by Sony Corporation.  
FeliCa is a registered trademark of Sony Corporation.
-  is a registered trademark of FeliCa Networks, Inc.
- Google™, the Google logo, Android™, the Android logo, Google™ Search and the Google Search logo are trademarks of Google Inc.
- "LINE" is a trademark or registered trademark of LINE Corporation.
- The internal voice recognition engine uses **AmiVoice®** by Advanced Media, Inc.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.



- "NightCatch/ナイトキャッチ", "翻訳ファインダー", "AQUOS/アクオス" and the "AQUOS" logo, "AQUOS K", the "SHSHOW" logo, "フレーミングアドバイザー/FramingAdviser", "TOUCH CRUISER EX", "ベールビュー/VeilView", "エモパーク/emopa", "エモパーク/emopark", "エスジョイン/S-Shoin", "LCフォント/LCFONT" and the LC logo symbol are registered trademarks or trademarks of Sharp Corporation.



- iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language, and for phrase prediction methods for English.  
iWnn © OMRON SOFTWARE Co., Ltd. 2008-2016 All Rights Reserved.
- iWnn IME © OMRON SOFTWARE Co., Ltd. 2009-2016 All Rights Reserved.
- Portions Copyright ©2004 Intel Corporation
- The product includes pictograms that SHARP CORPORATION is licensed by NTT DOCOMO, INC.
- TRENDMICRO and VirusBuster are registered trademarks of Trend Micro Incorporated.



- "Suica" and "Mobile Suica" are registered trademarks of East Japan Railway Company.



- "Rakuten Edy" is a trademark or registered trademark of Rakuten Edy, Inc.
- "Hello Page" is a registered trademark of NTT corporation.
- "どこから電話" is a trademark of SOURCENEXT corporation.
- VoiceText of HOYA Service Corporation is used for speech synthesis. VoiceText is a registered trademark of Voiceware co.,Ltd.

## ■ Open Source Software

- The product includes software based on GNU General Public License (GPL), GNU Lesser General Public License (LGPL) and other licenses.  
For details on licenses of related software, in the standby screen, Ⓞ → [Settings] → [Other settings] → [Device info] → [Legal information] → [Open source licenses].
- Source codes of software based on GPL, LGPL and Mozilla Public License (MPL) can be referred to on the following site for free. For details, refer to the following site.  
<http://k-tai.sharp.co.jp/support/developers/oss/>

## ■ OpenSSL License

### [OpenSSL License]

Copyright © 1998-2009 The OpenSSL Project. All rights reserved.

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## [Original SSLeay License]

Copyright © 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## ■ Windows Notations

The names of operating systems (Japanese versions) used in this manual are as follows.

- Windows 8.1 is the abbreviation for Microsoft® Windows® 8.1, Microsoft® Windows® 8.1 Pro and Microsoft® Windows® 8.1 Enterprise.
- Windows 8 is the abbreviation for Microsoft® Windows® 8, Microsoft® Windows® 8 Pro and Microsoft® Windows® 8 Enterprise.
- Windows 7 is the abbreviation for Microsoft® Windows® 7 (Starter, Home Basic, Home Premium, Professional, Enterprise, Ultimate).
- Windows Vista is the abbreviation for Microsoft® Windows Vista® (Home Basic, Home Premium, Business, Enterprise, Ultimate).

## ■ More

The software installed on this product or part of it may not be altered, translated/adapted, reverse-engineered, decompiled or reverse-assembled and any such actions are prohibited.

Under the MPEG-4 Visual Patent Portfolio License, customers have licensed permission for the following use of this product to engage in non-profit personal use. Other uses are not permitted.

- Recording MPEG-4 Visual standard video (henceforth referred to as MPEG-4 Video)
- Playing back MPEG-4 Video that a customer engaged in personal and non-profit activities has recorded
- Playing back MPEG-4 Video obtained from a provider licensed by MPEG-LA

When using for promotion, in-house use, profit use, and other intended uses, contact MPEG LA, LLC.

- This product is licensed under the AVC patent portfolio license for the personal and noncommercial use of a consumer to (i) encode video in compliance with the AVC standard (henceforth referred to as AVC video) and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and noncommercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C. Visit <http://www.mpegla.com>
- This product is licensed under the VC-1 Patent Portfolio License for the personal and noncommercial use of a consumer to (i) encode video in compliance with the VC-1 standard (henceforth referred to as VC-1 video) and/or (ii) decode VC-1 video that was encoded by a consumer engaged in a personal and noncommercial activity and/or was obtained from a video provider licensed to provide VC-1 video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C. Visit <http://www.mpegla.com>

This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Video Standard ("MPEG-4 Video") and/or (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use. Additional information may be obtained from MPEG LA. See <http://www.mpegla.com>.

This product is licensed under the MPEG-4 Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard, except that an additional license and payment of royalties are necessary for encoding in connection with (i) data stored or replicated in physical media which is paid for on a title by title basis and/or (ii) data which is paid for on a title by title basis and is transmitted to an end user for permanent storage and/or use. Such additional license may be obtained from MPEG LA, LLC. See <http://www.mpegla.com> for additional details.

## **[Dear customers]**

Thank you for buying the SHF33.

We would like to apologize for errors made in the SHF33 Basic Manual, which we correct as follows.

---

- "Entering a Phone Number and Making a Call" (P.52) notes section

**Error)**      ©Call charges for calls made with "1401" added are subtracted from the registered balance on an au prepaid card that you have bought.

**Corrected)**    Description deleted.

# For inquiries, call:

## Customer Service Center

For general information, charges,  
and operation assistance (toll free)

Business hours: 9:00 to 20:00 (7 days a week)

From fixed-line phones: | From au cell phones:  
 0077-7-111 | 157 area code not required

Pressing "zero" will connect you to an operator,  
after calling "157" on your au cellphone .



---

## For service cancelation procedure in case of loss or theft (toll free)

Business hours: 24 hours (7 days a week)

From fixed-line phones: | From au cell phones:  
 0077-7-113 | 113 area code not required

In case above numbers are not available, call toll-free:


 0120-977-033 (except Okinawa)  
 0120-977-699 (Okinawa)

## Keitai Guarantee Service Center

For loss, theft or damage (toll free)


Business hours: 9:00 to 20:00 (7 days a week)

From fixed-line phones/au cell phones:

 0120-925-919



モバイル・リサイクル・ネットワーク  
携帯電話の回収・リサイクルのご案内

Cell phone and PHS operators collect and recycle  
unused telephones, batteries and battery  
chargers at stores bearing the  logo regardless  
of brand and manufacturer to protect the  
environment and reuse valuable resources.

May 2016, Edition 1.1  
Sold by: KDDI CORPORATION,  
OKINAWA CELLULAR TELEPHONE COMPANY  
Manufactured by: SHARP CORPORATION

## **[Notification regarding LINE]**

Distribution of the application LINE to this model stopped as of November 5th, 2019. New installations or updates of LINE are no longer possible.

On and after March 31st, 2020, notifications for messages and free calls that arrived while LINE was not activated cannot be received. You can receive messages and view call history after activating LINE.

©Information in this notification is current as of March 1st, 2020. Subject to change without notice.