

AQUOS SERIE

SHV34

Setting Guide

Thank you for buying the “AQUOS SERIE SHV34” (simply called the “product” from here on).

This manual describes the settings and precautions for using the product. For detailed descriptions of various functions, refer to the “Instruction Manual application” (Japanese version) that can be used on the product.

- * For illustrations and descriptions in this manual, refer to “Basic Manual” available on the au homepage and on the product.
- * The company names and product names appearing in this manual are trademarks or registered trademarks of their respective holders.
- * Phone illustrations and screen shots are for descriptive purposes only, and may differ from the actual product.

May 2016, 1st Edition
Sold by: KDDI CORPORATION
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: SHARP CORPORATION

Basic Operations

Describes names of parts and basic operations.

Initial Settings

STEP1: Language Setting

Set the language to use on the product.

STEP2: Wi-Fi® Connection/Got another device? Settings

You can connect to an Internet service via a household wireless LAN (Wi-Fi®) environment or a public wireless LAN environment when out and about. Continue your Google™ accounts, etc. from another Tap & Go-compatible device.

STEP3: Google Account Settings

Set up a Google account for using applications provided by Google Inc.

STEP4: auかんたん設定 (au Easy Setting)

Set an au ID etc. to use various services provided by au.

E-mail Settings and Changing E-mail Address

Set for using E-mail (@ezweb.ne.jp). An e-mail address is set automatically in the initial settings. You can change the e-mail address set in the initial settings.

Making/Receiving Calls

You can make/receive a call.

How to Transfer Data with the au Settings Menu

Return/Store data with the au Settings Menu.

Reducing Battery Consumption

You can switch the setting of functions using “function buttons” to reduce the battery consumption.

キケン!

水ぬれ充電

濡れた状態で充電は、異常な発熱・焼損などの原因となり大変危険です。

When using the product

- The battery is built into the product, and cannot be removed by the customer.
- To force the power off, hold down for 8 or more seconds (Release your finger after the product vibrates to turn the power off).

Basic Operations

For detailed operations, refer to the “Instruction Manual application” (Japanese version) that can be used on the product.

- On the home screen, “Apps Sheet” → [Basic Manual].
- When the display language is Japanese, on the home screen, “Apps Sheet” → [取扱説明書] (Instruction Manual). You can switch the display language for function names and other items to English.
- On the home screen, “Apps Sheet” → [設定] (Settings) → [言語と入力] (Language & input) → [言語] (Language) → [English].

1

2

3

4

5

① Display

Touch it directly with your fingers to operate.

Tap/Double tap

Tap: Gently touch the screen and then immediately release your finger.

Double tap: Tap the same position twice.

Slide/Swipe/Drag

While your finger is gently touching the screen, an item, etc., trace it to the desired direction or position.

Pinch

Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.

② (Back key): Tap it to return to the previous screen.

③ (Home key): Tap it to display the home screen.

④ (Recent Apps key): Tap it to display Recent Apps screen. Long touch it to display the status panel.

⑤ (Power key): Hold it down to turn the power on. Hold it down while the power is turned on → [Power off] to turn it off.

Unlocking the screen

Unlock the screen by sliding “” up.

● If a password, etc. is set for the screen lock, it is displayed as .

Long touch

Keep touching an item etc. with your finger.

Flick

Touch the screen and then quickly move (flick) your finger up, down, right or left.

Character Input Method

You can enter characters by flick input or tapping keys repeatedly. Tap “” to switch the input modes.

Flick input

By touching a key, the candidates that can be entered by flick input are displayed as shown on the right. By flicking the key in the direction of a desired character being displayed, the character is entered in the character entry area.

(Character entry screen (12 Key))

App Permissions Settings

When you activate applications/functions to access to the function or information of the product for the first time, the confirmation screen for requesting the permission of access authority is displayed. When the confirmation screen is displayed, check the displayed contents carefully and follow the one-screen instructions.

- The explanation screen for permissions may be displayed depending on the applications/functions. Also, multiple confirmation screens may be displayed or the displayed contents may differ. Check the displayed contents carefully and follow the on-screen instructions.
- In this manual, some description of the confirmation screens may be omitted.

Example: Activating “auかんたん設定 (au Easy Setting)” during initial settings

The confirmation screen of App permissions displayed

1

[DENY]/[ALLOW]

* If you deny the permission, the application/function may not be activated or the use of function may be restricted.

Initial Settings

The Google initial settings screen is displayed automatically when you turn the power on for the first time. Follow the on-screen instructions to set each function.

STEP1: Language Setting

● Alternatively, on the home screen, “Apps Sheet” → [Settings] → [Language & input] → [Language].

1

Select the language → [English].

STEP2: Wi-Fi® Connection/Got another device? Settings

You may skip the steps here for making Wi-Fi® connection and Got another device? settings. By using Got another device? setting, you can copy your Google accounts, data, etc. from an Android™ device compatible with Tap & Go function to the product. For detailed Wi-Fi® settings, refer to the “Instruction Manual application” (Japanese version) that can be used on the product.

● Alternatively, on the home screen, “Apps Sheet” → [Settings] → [Wi-Fi] → Tap “Off” to set “On” to set Wi-Fi® connection.

1

[SKIP].

2

[SKIP ANYWAY].

3

[No thanks] → [NEXT].

STEP3: Google Account Settings

You can use applications provided by Google Inc. such as “Play Store” and “Hangouts™” by setting up a Google account. You can use the product without a Google account set, but in such case some applications are not available. The main setting items are as follows.

<div>Username</div> <div>Register your Google account (user ID) and any characters which you want to use as a mail address. You can register any user name but you cannot set the same user name as another user's.</div>	<div>Password</div> <div>Register the password for using your Google account.</div>
---	---

- The Google account setup screen is also displayed when you activate an application for which a Google account is required for the first time.
- Depending on how you operate, screens other than those below may be displayed.

1

[Or create a new account].¹

2

Enter your “First name” and “Last name” → [NEXT].

3

Enter your “Username” → [NEXT].

4

Enter the password → [NEXT].

5

Confirm phone number for reset → [NEXT].

6

Confirm phone number → [VERIFY].

7

Confirm the contents → [I AGREE].

8

[NEXT].

9

Confirm the contents of Google services → [NEXT].

10

Select “No thanks”² → [CONTINUE].

11

Select “Not now”³ → [NEXT].

12

Disable the check box⁴ → [SKIP].

13

[SKIP ANYWAY].

14

Select “Skip”⁵ → [NEXT].

¹ If you already have a Google account, enter the e-mail address.
² To specify payment information for use with Google Play™, follow the on-screen instructions.
³ To use an e-mail address other than the e-mail address of Google account or E-mail (@ezweb.ne.jp), follow the on-screen instructions.
⁴ To set the screen lock, enable the check box and follow the on-screen instructions.
⁵ To use Google Now™, select “Yes, I’m in”.

STEP4: auかんたん設定 (au Easy Setting)

You can use various services provided by au such as au Smart Pass and “au Simple Payment Service” in which you can purchase applications displayed on Google Play by setting an au ID.

au ID	Register your au phone number or any other characters as an au ID. The same “au ID” as another user's cannot be registered.
au ID password	Register the password for using your au ID.

● Alternatively, on the home screen, “Apps Sheet” → [Settings] → [au Settings Menu] → [au Easy Setting].

1

[Next].

2

[Register “au ID”] → [Next].

3

[au IDの設定・保存] (Set/Save au ID).

4

Enter the security code → [OK].¹

5

Enter the password → [設定] (Settings).

6

[終了] (Finish).²

7

Confirm the contents and follow the on-screen instructions → [Next].

8

Confirm the contents and follow the on-screen instructions → [Agree] → [Next].

9

Confirm the contents → [Agree].

10

Confirm the contents and follow the on-screen instructions → [Next].³

11

Confirm the contents and follow the on-screen instructions → [Next].

12

Confirm the contents and follow the on-screen instructions → [Next].

13

Confirm the contents and follow the on-screen instructions → [Next].⁴

14

Select data you want to return from au Smart Pass → [次へ] (Next).⁵

15

Mark the applications to install⁶ → [次へ] (Next).⁷

16

[Finish].

¹ The default value is the four-digit security code you wrote on the application form.
² au ID registration is complete.
³ To use the “Data Storage” application and automatically store photos and address book entries to the au server, select “Turn Auto Backup on”.
⁴ Preliminary settings for Lookout for au are finished by permitting each authority.
⁵ If a confirmation screen is displayed for Wi-Fi® connection, follow the on-screen instructions.
⁶ Applications to be displayed and their number may be updated.
⁷ If a screen for recovery of an application appears, follow the on-screen instructions to recover the application.

* To use Tap & Go, select “Copy your Google Accounts, apps, and data from your other device” and follow the on-screen instructions.

E-mail Settings and Changing E-mail Address

E-mail (@ezweb.ne.jp) is a service which enables you to exchange e-mails with other cell phones which support e-mail and with PCs. An e-mail address is set automatically in the initial settings. You can change the e-mail address set in the initial settings.

■ Initial Settings

1



Home screen → [].

2



Confirm the contents
→ [接続する] (Connect).

3



Confirm the contents
→ [閉じる] (Close).

4



Confirm the contents
→ [Close].

5



Confirm the contents →
[同意する] (Agree)/[同意しない] (Disagree) → [完了] (Done).

■ Changing E-mail Address

1



Home screen → [].

2



[MENU] →
[Change Address/Setting Filter].

3



Confirm the contents
→ [接続する] (Connect).

4



[Eメールアドレスの変更へ]
(To change e-mail address).

5



Enter the security code
→ [送信] (Send).

6



Confirm the contents
→ [承諾する] (Accept).

7



Enter an e-mail address
→ [送信] (Send).

8



[OK] → [閉じる] (Close).

■ Backing Up E-mail

- If a microSD™ memory card is inserted into the product, e-mails are saved on the card. If not, they are saved on the internal memory.

1



Home screen → [].

2



[MENU] → [E-mail settings].

3



[Backup/Restore] →
[Mail Backup] → [OK].

4



Select the character code →
[OK] → Select the folder
to back up → [OK].

Making/Receiving Calls

- Screens displayed when receiving a call or during a call may differ depending on the settings of a call, screen for receiving a call, operations during an incoming call/a call etc. For details, refer to the "Instruction Manual application" (Japanese version) that can be used on the product.

■ Entering a Phone Number and Making a Call

1



Home screen → [].

2



Enter a phone number
→ [CALL].

■ Making a Call Using Incoming History/Outgoing History

1



Home screen → [].

2



[Incoming]/[Outgoing].

3



Tap " " of the other party you
want to make a call to.

■ Making a Call Using Address Book

1



Home screen → [].

2



[].

3



Select the other party you want
to make a call to.

4



[].

■ Answering a Call (When a call arrives while the backlight is off or the lock screen is displayed)

1



Slide "Answer" down while an
incoming call is arriving.

2



The call starts.

3



Tap "End call" to end the call.

■ Answering a Call (When a call arrives while the backlight is on (except when the lock screen is displayed))

1



Tap "Accept"/"Speaker" while an
incoming call is arriving.

2



The call starts.

3



Tap "End" to end the call.*

- * When you answer a call by "Speaker", operate after tapping " " / " " .

■ Putting a Current Call on Hold

While the call is on hold, guidance is played for the other party.

1



Tap "Hold" during
a call.

2



The call is put on hold and the
guidance is played for
the other party.

3



Tap "Unhold" to return to
the call.

How to Transfer Data with the au Settings Menu

You can return/store data from an old au phone to this product using a microSD™ memory card or au Smart Pass server.

- To return/store data using an au Smart Pass server, you must set an au ID.
- To return data using a microSD™ memory card, save the data from the old au phone to the microSD™ memory card beforehand.

■ Returning Data with the au Settings Menu

1



On the home screen,
"Apps Sheet" → [Settings].

2



[au Settings Menu].

3



[Data Transfer].^{*1}

4



[auスマートパスのサーバから戻す]
(Return from au Smart Pass
server)²/[SDカードから復元する]
(Restore from SD card).

5



"SDカードから復元する
(Restore from SD card)"
selected

6



"auスマートパスのサーバか
ら戻す (Return from au
Smart Pass server)" selected

7



If you selected "SDカードから復
元する (Restore from SD card)",
select your old au phone type.^{*3}

8



Checkmark the data to return,
[戻す] (Return)^{*4}^{*5}
→ [完了] (Done).

9



Checkmark the data to return,
[戻す] (Return)^{*6}
→ [完了] (Done).

- ^{*1} If a confirmation screen is displayed for terms of use/privacy policy, follow the on-screen instructions.

- ^{*2} To return data from "auスマートパスのサーバから戻す (Return from au Smart Pass server)" (data stored on an au Smart Pass server), you must set an au ID.

- ^{*3} Not displayed if you selected "auスマートパスのサーバから戻す (Return from au Smart Pass server)" at step 4.

- ^{*4} This screen is displayed when "スマートフォンからのデータを戻す (Return smartphone data)" is selected.

- ^{*5} If a confirmation screen is displayed for restoring data, follow the on-screen instructions.

- ^{*6} If a confirmation screen is displayed for Wi-Fi® connection, follow the on-screen instructions.

■ How to Save Data from au Settings Menu

To protect important data, be sure to save (back up) data periodically to a microSD™ memory card or au Smart Pass server.

When the product is kept at an au shop or another shop for repairs, the memory will be deleted. Back up data in advance.

1



On the home screen,
"Apps Sheet" → [Settings].

2



[au Settings Menu].

3



[Data Transfer].^{*1}

4



[auスマートパスのサーバに預ける]
(Store to au Smart Pass
server)²/[SDカードに保存する]
(Save to SD card).

5



"SDカードに保存する
(Save to SD card)"
selected

6



"auスマートパスのサーバに
預ける (Store to au Smart
Pass server)" selected

7



Checkmark the data to save,
[保存する] (Save)
→ [完了] (Done).

8



Checkmark the data to store,
[預ける] (Store)^{*3}^{*4}
→ [完了] (Done).

- ^{*1} If a confirmation screen is displayed for terms of use/privacy policy, follow the on-screen instructions.

- ^{*2} If you save data from "auスマートパスのサーバに預ける (Store to au Smart Pass server)" (store data to an au Smart Pass server), you must set an au ID.

- ^{*3} If a confirmation screen is displayed for saving data, follow the on-screen instructions.

- ^{*4} If a confirmation screen is displayed for Wi-Fi® connection, follow the on-screen instructions.

Automatically Storing Photos and Address Book

Use the following steps to set automatic backup of photos and address book entries to the au Smart Pass server using the "Data Storage" application. Photos can only be automatically stored with a Wi-Fi® connection.

- On the home screen, "Apps Sheet" → [Settings] → [au Settings Menu] → [Backup Setting] → Select the type of data to store automatically.

Viewing/Playing data

You can view/play data on the product by the following operations.

- On the home screen, "Apps Sheet" → [Contents Manager] → Tap the data to display.

Reducing Battery Consumption

You can access "function buttons" from the status panel to enable/disable functions and modify their settings. You can reduce the battery consumption by switching their setting frequently, such as when not using the functions. Enabled functions are displayed in white.

- You can also reduce the battery consumption using "Energy saving". For details, refer to the "Instruction Manual application" (Japanese version) that can be used on the product.

1



Slide the status bar down with
your two fingers.

2



Tap the functions whose setting
you want to switch by using
"function buttons".