au Please read this manual first

AQUOS sense

SHV40

Setting Guide

Thank you for buying the "AQUOS sense SHV40" (simply called the "product" from here on).

This manual describes the settings and precautions for using the product. For detailed descriptions of various functions, refer to the "Online Manual" (Japanese) available on the au homepage.

- For illustrations and descriptions in this manual, refer to "Basic
- Manual" available on the au homepage and on the product.
- * The company names and product names appearing in this manual are
- trademarks or registered trademarks of their respective holders. * Phone illustrations and screen shots are for descriptive purposes only,
- and may differ from the actual product.

November 2017, 1st Edition Sold by: KDDI CORPORATION OKINAWA CELLULAR TELEPHONE COMPANY Manufactured by: SHARP CORPORATION

Set for using au-mail. An au-mail address is set automatically in the initial settings. You can change the au-mail address set in the initial Making/Receiving Calls

STEP4: au Initial Setting

Basic Operation

when out and about.

Google Inc.

STEP1: Language Setting Set the language to use on the product.

Describes names of parts and basic operations.

STEP2: Data Transfer/Wi-Fi® Connection Settings

By using "Copy your data", you can transfer data from an old device

You can connect to an Internet service via a household wireless

LAN (Wi-Fi®) environment or a public wireless LAN environment

■ STEP3: Google Account Settings Set up a Google™ account for using applications provided by

Set an au ID etc. to use various services provided by au.

au-mail Settings and Changing au-mail Address

You can make/receive a call. How to Transfer Data with the au Settings Menu Return/Store data with the au Settings Menu.

Reducing Battery Consumption

reduce the battery consumption.

You can switch the setting of functions using "function buttons" to

Brighten the screen/Increase the light duration of the backlight You can change settings of the screen





濡れた状態での充電は 異常な発熱・焼損などの原因となり大変危険です。

When using the product The battery is built into the product, and cannot be removed by the customer.


• To force the power off, hold ()(4) down for 8 or more seconds (Release your finger after the product vibrates to turn the power off).

Basic Operations

For detailed operations, refer to the "Online Manual" (Japanese) available on the au homepage ● When the display language is Japanese, on the home screen → "App list screen" → [サポート] (Support) → [取扱説明書] (Instruction Manual) (Japanese)

You can switch the display language for function names and other items to English.

● On the home screen → "App list screen" → [設定] (Settings) → [言語と入力] (Languages & input) → [言語] (Languages) → [言語を追

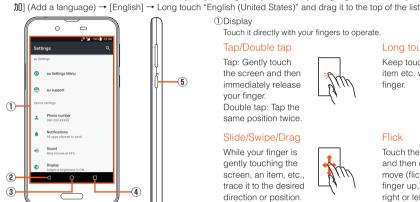

Turning the Screen On

Lift the product and keep it stationary to turn the screen on when the screen is turned off (Turn screen on by holding).

- * This function is enabled when you purchase the product.
- In the following cases etc., the screen may not be turned on.
- When you are moving with the product held (while
- walking, driving a car, etc.) • When you keep the product moving before or
- after lifting it When you lift the product vertically or horizontally

1) Display

Tap/Double tap

Touch it directly with your fingers to operate

Tap: Gently touch the screen and then immediately release your finger. Double tap: Tap the same position twice.

While your finger is

gently touching the

screen, an item, etc. trace it to the desired

direction or position.







finger up, down, right or left.





Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.



- ② ☐(Back key): Tap it to return to the previous screen ③ O (Home key): Tap it to display the home screen.
- ④ □(Recent Apps key): Tap it to display Recent Apps screen.
- ⑤ (ம்)(Power key): Hold it down to turn the power on. Hold it down while the power is turned on \rightarrow [Power off] to turn it off.

Unlocking the screen

it is displayed as "a"

Unlock the screen by swiping "⊕" up. If a password, etc. is set for the screen lock,



Character Input Method

* Following operation explanations use "Japanese S-Shoin". On the character entry screen, [<u>■</u>] → [Japanese S-Shoin]. You can enter characters by flick input or tapping keys repeatedly. Tap " あA1 " to switch

the input modes.

By touching a key, the candidates that can be entered by flick input are displayed as shown



《Character entry screen (Japanese S-Shoin)》

on the right. By flicking the key in the direction of a desired character being displayed, the character is entered in the character entry area.

Flick input

App Permissions Settings When you activate applications/functions to access to the function or information of the product for the first time, the confirmation screen for requesting the permission of access authority is displayed. When the confirmation screen is displayed, check the displayed contents carefully and follow the one-screen instructions.

• The explanation screen for permissions may be displayed depending on the applications/functions. Also, multiple confirmation screens may be displayed or the displayed contents may differ. Check the displayed contents carefully and follow the on-screen instructions. If you deny the permission, the application/function may not be activated or the use of function may be restricted.

• In this manual, some description of the confirmation screens may be omitted.

Using "Online Manual" (Japanese)



On the home screen, swipe/ flick the bottom of the screen up and display the App list screen.



(Support)



D

[取扱説明書] (Instruction Manual)

45

Initial Settings

The Google initial settings screen is displayed automatically when you turn the power on for the first time. Follow the on-screen instructions to set each function.

◆ Alternatively, on the home screen, swipe/flick bottom of screen up to display the App list screen → [Settings] → [Languages & input] →

[Languages]. 1 Welcome

STEP1: Language Setting



Select the language → [LET'S GO].

■ STEP2: Data Transfer/Wi-Fi® Connection Settings

You may skip the steps here for transferring data from another device/making Wi-Fi® Connection settings. By using "Copy your data", you can transfer data from an old device etc. For detailed Wi-Fi® settings, refer to the "Online Manual" (Japanese) available on the au homepage Alternatively, on the home screen, swipe/flick bottom of screen up to display the App list screen → [Settings] → [Wi-Fi] → Tap "Off" to

set "On" to set Wi-Fi® connection. 4



* To transfer data from another device, select "Copy your data" and follow the on-screen instructions.

■ STEP3: Google Account Settings

product without a Google account set, but in such case some applications are not available. The main setting items are as follows

You can use applications provided by Google Inc. such as "Play Store" and "Calendar" by setting up a Google account. You can use the

Register your Google account (user ID) and any characters which you want to use as a mail address. You can register any user name but you cannot set the same user name as another user's.

Register the password for using your Google account. Password The Google account setup screen is also displayed when you activate an application for which a Google account is required for the first

• Depending on how you operate, screens other than those below may be displayed 4 Basic information Sign in Sign in Create a Google Accoun





[NEXT].



[Skip].*2

[SKIP ANYWAY].

→ [Next]



*1 If you already have a Google account, enter the e-mail address *2 To set the fingerprint, select "ADD FINGERPRINT" and follow the on-screen instructions.
*3 To use each items, select it and follow the on-screen instructions.

STEP4: au Initial Setting

Confirm the contents and

follow the on-screen

13


You can use various services provided by au such as au Smart Pass and "au Simple Payment Service" in which you can purchase applications displayed on Google Play by setting an au ID.

Register your au phone number or any other characters as an au ID. Register the password for using your au ID

 Alternatively, on the home screen, swipe/flick bottom of screen up to display the App list screen → [Settings] → [au Settings Menu] → [au Initial Setting]





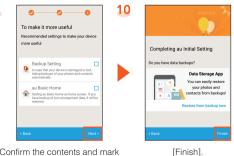

Confirm the contents and mark the applications to set → [Next].* *1 To update an application in the product, mark "Update"

- *2 The security code is the four-digit security code you wrote on the application form *3 An entry screen is displayed only the first time you register an au ID.
- *4 A confirmation screen is displayed for permission several times. Continue by following the on-screen instructions
- *5 To use the "Data Storage" application and automatically store photos and address book entries to the au server, mark "Backup Setting".

au-mail Settings and Changing au-mail Address


au-mail is a service which enables you to exchange e-mails with other cell phones which support e-mail and with PCs. An au-mail address is set automatically in the initial settings. You can change the au-mail address set in the initial settings


● You cannot make the initial settings via Wi-Fi® communication.

Initial Settings



Changing au-mail Address

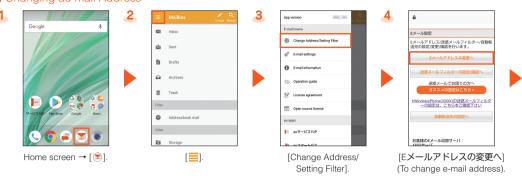


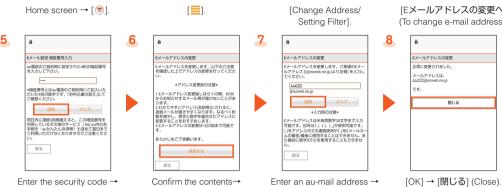

[承諾する] (Accept).

Confirming an au-mail Address

[送信] (Send).

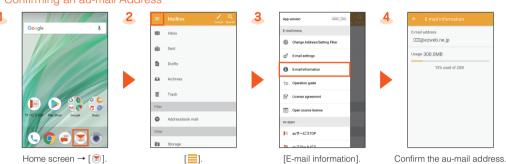

[送信] (Send).

Making/Receiving Calls

 Screens displayed when receiving a call or during a call may differ depending on the settings of a call, screen for receiving a call, operations during an incoming call/a call etc. For details, refer to the "Online Manual" (Japanese) available on the au homepage.

■ Entering a Phone Number and Making a Call




■ Making a Call Using Incoming History/Outgoing History



Tap " u of the other party you want to make a call to.

■ Making a Call Using Address Book

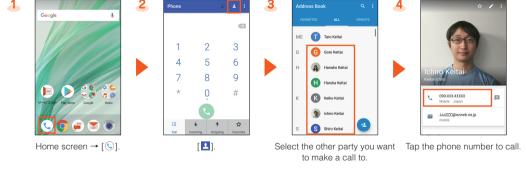

Answering a Call





■ Putting a Current Call on Hold

displayed.

ルアドレスは、 100@ezweb.ne.jp




How to Transfer Data with the au Settings Menu

You can return/store data from an old au phone to this product using a microSD™ memory card or au server. To protect important data, be sure to save (back up) data periodically to a microSD™ memory card or au server.

• To return data using an au server, store data from the old au phone to the au server beforehand. To use the au server, you must set an au ID. (If the old au phone does not have au Settings Menu, use au Cloud application).

guidance is played for the other party.

● To return data using a microSD™ memory card, save the data from the old au phone to the microSD™ memory card beforehand. (If the old au phone does not have au Settings Menu, use the au backup application.)

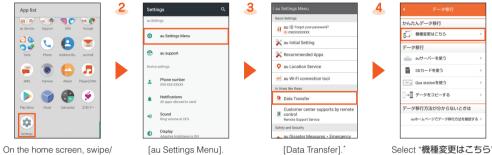

[Settings] * If a confirmation screen is displayed for terms of use/privacy policy, follow the on-screen guidances.

Automatically Storing Photos, Address Book etc.

Use the following steps to set automatic backup of photos, address book entries etc. to the au server using the "Data Storage" application. Photos can only be automatically stored with a Wi-Fi® connection.

On the home screen, swipe/flick bottom of screen up to display the App list screen → [Settings] → [au Settings Menu] → [Backup Setting] → Select the type of data to store automatically.

Viewing/Playing data

flick bottom of screen up to

display the App list screen →

You can view/play data on the product by the following operations.

● On the home screen, swipe/flick bottom of screen up to display the App list screen → [Settings] → [Storage] → select the save destination (Internal shared storage/SD card/USB memory name)* → select the category and folder → select the data to display.

If the microSD™ memory card or USB memory is not inserted to the product, contents of the Internal shared storage are displayed.

Reducing Battery Consumption

You can access "function buttons" from the status panel to enable/disable functions and modify their settings. You can reduce the battery

consumption by switching their setting frequently, such as when not using the functions. Enabled functions are displayed in white. You can also reduce the battery consumption using "Energy saving". For details, refer to the "Online Manual" (Japanese) available on the au homepage.



Slide the status bar down with Tap the functions whose setting your two fingers. you want to switch by using

* Flick the function buttons field to the left or right to switch pages

Brighten the screen/Increase the light duration of the backlight

When the screen is dark/the backlight is quickly turned off, change the setting.





 


On the home screen, swipe/ [Display]. $[\mathsf{Brightness}\;\mathsf{level}] \to \mathsf{Slide}\;\mathsf{the}$ flick bottom of screen up to bar to the left or right and set the brightness* \rightarrow [OK]. display the App list screen → [Settings]

Increase the light duration of the backlight

(If you have changed a model) and transfer data by following

on-screen guidances.



[Sleep] → Select time.

* You can set whether to automatically adjust the screen brightness according to the ambient brightness by switching "Automatic brightness" to be