

Setting Guide

Introduction

Thank you for buying "Xperia™ Z2 Tablet" (simply called the "product" from here on).
In this guide, settings and precautions for using the product are described.

- **Basic operation**
Describes the basic operations.
- **Initial settings**
Make initial settings when you turn the power on for the first time.
- **E-mail setting**
Make initial settings for @ezweb.ne.jp etc.
- **Importing/exporting/sending contacts**
Describes to import/export contacts using microSD memory card etc. or send to another device.
- **Backing up to microSD memory card**
Use a file management application to back up data.
- **Saving battery power**
Save battery power using widget.

Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies.
The TM, © marks may be omitted in this manual.
Screen illustrations shown in this manual may look different from the actual screens.
In some cases, upper or lower part of a screen may be omitted.

June 2014, 1st Edition
Sold by: KDDI CORPORATION • OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: Sony Mobile Communications Inc.

1285-4438.1

Basic operation

For detailed descriptions of operations, refer to the "Instruction Manual" (Japanese) application installed on the product or "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage.

Status bar
Current status and notification icons are displayed.

Application key
The Applications screen appears.

Display (Touch panel)
Operate directly touching with your finger.

Power key
Power ON
Press and hold for over a second.
Screen Lock
Press while the screen displayed, then the backlight turns off and screen lock is activated (avoiding the keys or touch screen from false operations).
Unlocking Screen Lock
The lock screen appears when turning the power on or the backlight on by pressing . Swipe (flick) the screen up or down to cancel the screen lock.

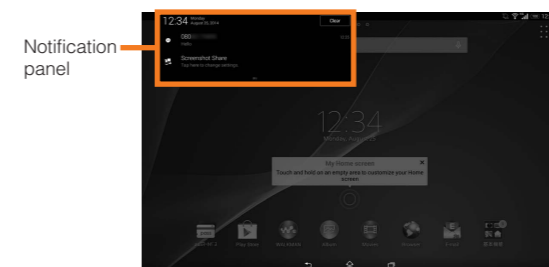 
Recently used applications
Display a list of recently used applications by a thumbnail or small apps. Tap [Close all] to end all applications and delete all list items in the thumbnail.

Home key
Display the Home screen.

Back key
Return to the previous screen.

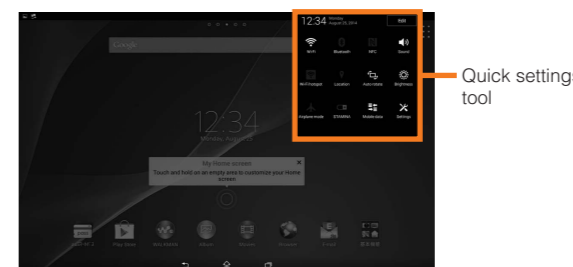 
Opening Notification panel

If any notification icons are displayed on the left side of the status bar, slide down the left side of the status bar to open the Notification panel. You can check details of notification icons or start corresponding applications.



Opening Quick settings tool

Slide the right side of the status bar downward to open Quick settings tool so that you can set to ON/OFF of the function etc.



Character entry

Use software keyboard to enter characters.

The software keyboard appears when you tap the entry field for registering a contact, composing a mail, etc.

Software keyboard

With "International keyboard", you can use QWERTY keyboard to enter characters, Numeric keypad to enter numbers and symbols, and Symbol keypad for more symbols.

- Tap to display Numeric keypad. For Symbol keypad, tap on the Numeric keypad.
- Tap to enter facemarks etc. from the displayed list.



《QWERTY keyboard》



《Numeric keypad》



《Symbol keypad》

Initial settings

When you turn on the product for the first time, follow the onscreen instructions to set the language, functions, services, etc.

STEP START: Setting language

Select "English (United States)" and tap "Done".

- Alternatively, after the initial setting is complete, from the Home screen, tap → [設定 (Settings)] → [言語と入力 (Language & input)] → [地域/言語 (Language)] to set the language.

STEP 1: Starting basic settings

When "Welcome" appears, tap .

STEP 2: Setting Wi-Fi® connection

Use home wireless LAN (Wi-Fi®) or public wireless LAN to connect Internet service. Operate in a place where signal of Wi-Fi® network can be received. Tap "Search for networks" to set Wi-Fi® connection.

- Wi-Fi® network with is open network.
- Wi-Fi® network with is protected by security. To connect, enter password (security key).
- To detect Wi-Fi® network manually or make Wi-Fi® advanced settings, after the initial setting is complete, tap → [Settings] → [Wi-Fi] → → [Scan]/[Advanced].

Using Wi-Fi Easy Settings

Tap → [Wi-Fi Easy Settings] and follow the onscreen instructions.

Using auto-setting (WPS)

WPS is a function enabling simple wireless LAN (Wi-Fi®) connection for advanced security settings. You can use the WPS function of the product to connect to the Wi-Fi® network through a WPS compatible wireless LAN (Wi-Fi®) device as an access point. Make the WPS compatible device settings as required.

Tap → [Automatic setup (WPS)] and follow the onscreen instructions.

Using Wi-Fi® network selection settings

Select from detected Wi-Fi® network to set.
To select a protected Wi-Fi® network, you need to enter a security key.

- Select Wi-Fi® network
* To set manually, tap "Other network..." and set "Network SSID" and "Security".
- Input a password (security key) → [Connect]
- Connect Wi-Fi® network → [Done] →

STEP 3: Setting Sony World

Sony Entertainment Network provides you with online services such as online music store "Music Unlimited" or online video store "Video Unlimited", and you can use these services with a single account.

Tap "Get started" to create and save a user account when using Sony Entertainment Network.

Tap to go to STEP 4.

STEP 4: Accounts & sync

Set an account for online service such as Google so that you can synchronize with contacts or calendar, etc. of Gmail or online service.

- To set online service, make sure that data communication is enabled. Check that / appears on the status bar or the product is connected to a Wi-Fi® network.
- Check that "Sync automatically" is turned on (ON).

Setting up a Google account

If you set up a Google account, you can use Google applications such as "Gmail", "Google Play", "Hangouts" or "Google+". And, Gmail's mail address "(user name) @ gmail.com" is automatically created from the user name set with a Google account.

- To create an account, you are required to register "First" name and "Last" name.

- [Google] → [No]
* If you have Google account, tap "Yes" and follow the onscreen instructions.
- Enter "First" name, "Last" name →

- Enter a user name →
* Checking registration of user name starts. If the entered user name is unavailable, an entry screen for prompting another user name appears.
- Enter a security password →
- [Set up recovery options] → Enter a phone number and a mail address →
* Registered mail address will be used to contact from Google in case you forget your password etc. If you have no another mail, remain as blank.
- Confirm the Google services settings →
- Confirm contents → [I accept] → Enter displayed texts →
- [Not now]
* If you select "Get started", follow the onscreen instructions.
- Set purchase settings for Google Play as required →

STEP 5: Setting location service

Follow the onscreen instructions to set location service.

* When Google account is set, the setting screen for the location service does not appear. Go to STEP 6.

STEP 6: Completion of setup





When the setup completion screen appears, tap "Finish".


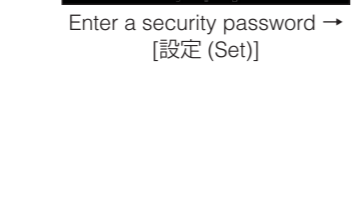
- Alternatively, after the initial setting is complete, from the Home screen, tap → [Settings] → [Setup guide], you can set each function and service.


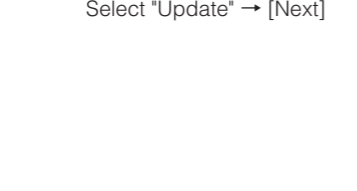
au Easy Setting


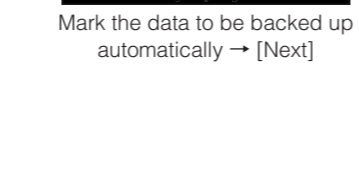
Set au convenient functions or services.

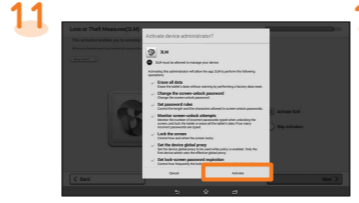
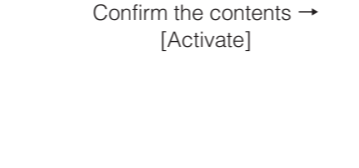
- By setting au ID, you can use various services provided by au such as au スマートパス (au Smart Pass) or "au Kantan Kessai", which allows you to purchase applications from Google Play.
- * au ID which is already used by another user cannot be set.
- Alternatively, after the initial setting is complete, from the Home screen, tap [☰] → [お客さまサポート (Customer support)] → [au Easy Setting], you can set au service.

-  [Next]
-  Select "Register au ID" → [Next]
-  [au IDの設定・保存 (Set/save au ID)]
-  Enter a password number → [OK]
* Default value is four-digit number set at subscription.

-  Enter a security password → [設定 (Set)]
-  [au ID設定メニューへ (Go to au ID settings menu)] → [パスワードを忘れた時のために (In case you forget password)] → Enter necessary information → [入力完了 (Done)] → [変更 (Change)] → [終了 (Exit)]

-  Select "Update" → [Next]
-  Confirm contents → Select "Agree" → [Next] → [Agree] on the confirmation screen
* If there is data to be recovered, a recovery screen for data appears. Follow the onscreen instructions.
* If you select "Disagree" → [Next] → [OK] on the caution, go to the step 12.


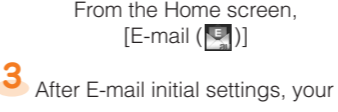
-  Mark the data to be backed up automatically → [Next]
-  Select "Activate 3LM" or "Skip Activation" → [Next]
* If you select "Activate 3LM", you can set support service in case of loss, theft or malfunction of the product.
* If you select "Skip Activation", go to the step 12.

-  Confirm the contents → [Activate]
-  Mark applications to install on the recommended apps screen → [Next] → [Finish]
* If there are applications to be recovered, a recovery screen for applications appears. Follow the onscreen instructions.

E-mail setting

To use E-mail (@ezweb.ne.jp), subscription to LTE NET is required. If you did not subscribe it when you purchased the product, contact an au shop or Customer Service Center. This is a service with which you can send/receive mails using E-mail (@ezweb.ne.jp). Your E-mail address is determined automatically when initial settings are done. You can change the E-mail address later.
* For model change from au phone, E-mail address used on the previous model can be used continuously after initial settings.

Initial settings

-  From the Home screen, [E-mail (✉)]
-  Check the contents → [接続する (Connect)]
- After E-mail initial settings, your E-mail address appears.

Checking E-mail address

- From the Home screen, [E-mail (✉)] → [☰] → [E-mail settings]
- [E-mail information] → Check your E-mail address

Changing E-mail address

- From the Home screen, [E-mail (✉)] → [☰] → [E-mail settings]
- [Other settings] → Confirm the content → [接続する (Connect)]
- [Eメールアドレスの変更へ (To change E-mail address)]
- Enter the security code → [送信 (Send)] → Check the contents → [承諾する (I agree)]
- Enter E-mail address → [送信 (Send)] → [OK]

Backing up Email

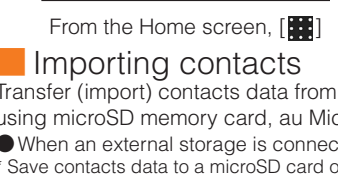
- From the Home screen, [E-mail (✉)] → [☰] → [E-mail settings]
- [Backup/Restore] → [Mail Backup] → [OK]
- Select character code for backup data → [OK]
* For character code, tap [Help] to check.
- Mark to back up mails → [OK]
● Mail data is saved in the internal storage (/storage/emulated/0/private/au/email/BU).
If a microSD memory card is attached, data is saved in the microSD card (/storage/sdcard1/private/au/email/BU).
● To back up mail data or mail settings (notification settings, filtering settings etc.) all at once, back up from "Whole Backup".

PC-mail

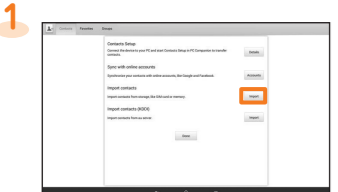
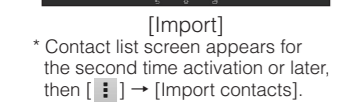
You can use mail addresses except for E-mail (@ezweb.ne.jp). You need to set up a PC-mail account to use PC-mail. For the first time use, make settings as follows.
From the Home screen, tap [☰] → [Email (✉)] → Enter Email address and password → [Next] → [Next] → Enter account name and display name → [Next]
* For details, refer to the "Instruction Manual" (Japanese) application installed on the product or "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage.

Importing/exporting/sending contacts

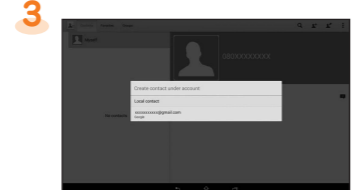
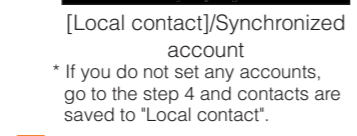
Activating contacts application

-  From the Home screen, [☰]
-  [Contacts]


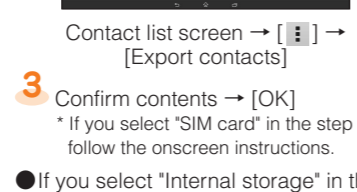
Importing contacts
Transfer (import) contacts data from your previous au phone to this product using microSD memory card, au Micro IC Card (LTE), etc.
● When an external storage is connected, you can import from "USB storage".
* Save contacts data to a microSD card or au Micro IC Card (LTE) in advance.

-  [Import]
-  Select data location

* Contact list screen appears for the second time activation or later, then [☰] → [Import contacts].

-  [Local contact]/Synchronized account
* If you do not set any accounts, go to the step 4 and contacts are saved to "Local contact".
-  Select a vCard file → [OK]
* If you select "SIM card" in the step 2 and select contacts, import starts.

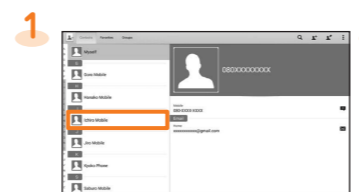
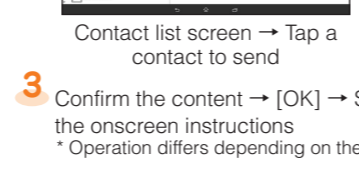
Exporting contacts
Save (export) contacts etc. regularly to microSD memory card etc. to secure your data.

-  Contact list screen → [☰] → [Export contacts]
-  Select a location to export
- Confirm contents → [OK]
* If you select "SIM card" in the step 2, select contacts and tap "Export" and then follow the onscreen instructions.
● If you select "Internal storage" in the step 2, data is saved in "/storage/emulated/0/System/PIM/", if you select "SD card", data is saved in "/storage/sdcard1/System/PIM/".

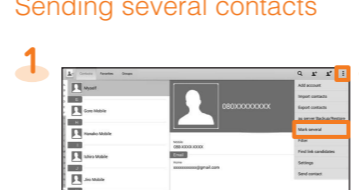
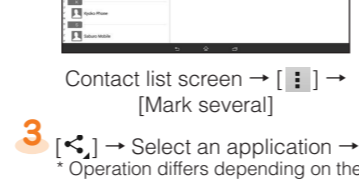
Sending contacts

You can send contacts to another device.

Sending one contact

-  Contact list screen → Tap a contact to send
-  [☰] → [Send contact]
- Confirm the content → [OK] → Select how to send a contact → Follow the onscreen instructions
* Operation differs depending on the application you selected.

Sending several contacts

-  Contact list screen → [☰] → [Mark several]
-  Mark contacts to send
- [☰] → Select an application → Follow the onscreen instructions
* Operation differs depending on the application you selected.

Backing up to microSD memory card

Use the "File Commander" application to back up data saved in the product to a microSD memory card.

-  From the Home screen, [☰]
-  [File Commander]
* If a screen appears to register a mail address etc., follow the onscreen instructions.
-  Mark files → [☰] → [Mark]
-  [SD card] from the item list
-  [☰] → [Paste] on the desired location
* You can create a new folder by tapping [☰] → [Folder].

● When recovering backed up data, files in the microSD memory card are copied to original locations. To recover email, use an email application to restore backup.

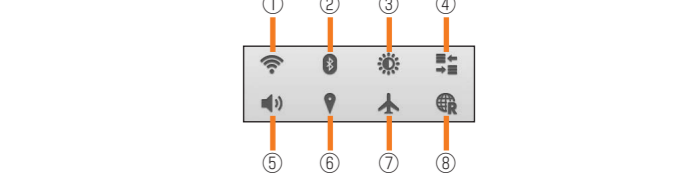
Saving battery power

Use Quick settings widget to set Wi-Fi® function, Bluetooth® function, backlight, mobile data communication, etc. Switching the settings frequently can reduce the battery power consumption.

Adding Quick settings widget

-  Long-touch an area of the Home screen where no icons are displayed → [Widgets]
-  [Tools] → [Quick settings]

Quick settings widget



- Wi-Fi: Wi-Fi® function On/Off
- Bluetooth: Bluetooth® function On/Off
- Backlight: Switch backlight brightness
- Data communication: Mobile data communication On/Off
- Sound: Silent mode (Vibrate/Mute) On/Off
- Location: Location On/Off
- Airplane mode: Airplane mode On/Off
- Roaming: Data roaming On/Off