

When using the product

- Before you start using the product, make sure to read the "Safety Precautions" to ensure correct use.
- Before you assume that the product is malfunctioning, check for possible remedies in the following au Customer Support site of au homepage: <http://www.au.kddi.com/support/mobile/trouble/repair>
- During communication, please keep the device farther than 1.5 cm away from your body without including any metals
- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in poor reception areas. Communication is sometimes interrupted if you move into a poor reception areas during communication.
- Since this product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated (Though LTE/WMAX 2+ /GSMUMTS system has highly secure confidential communication features).
- This product is compatible with the international roaming service. Each network service described in the manual varies depending on the area and service content. For details, refer to the "Instruction Manual" (Japanese) app installed on the product or "取扱説明書" (詳細版) (Full Instruction Manual) (Japanese) available on the au homepage.
- Since this product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.
- The IMEI information of the product is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of the product.
- Before you start using the product overseas, check the relevant laws and regulations of the country/region you visit.
- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional or mistaken misoperation by the customer, or use under other unusual conditions outside the responsibility of the Company.
- The Company is not liable for any incidental damages (change/disappearance of described content, loss of business income, disruption of business, etc.) arising from use of or inability to use the product.

- Company names and product names referred to in this manual are generally trademarks or registered trademarks of respective companies. The TM, ® marks may be omitted in this manual.
- In this manual, "Setting Guide", "Basic Manual", "取扱説明書" (詳細版) (Full Instruction Manual) (Japanese), "Cautions on using Xperia™ Z4 Tablet" are collectively referred to as "Instruction Manual".
- In this manual, "microSD™ memory card", "microSDHC™ memory card" and "microSDXC™ memory card" are abbreviated as "microSD memory card" or "microSD".
- In this manual, "Xperia™ Z4 Tablet" is usually referred to as "the product".

June 2015, 1st Edition 1295-7644.1

Be sure to read this manual before use

XPERIA Z4 Tablet SOT31

Cautions on using Xperia™ Z4 Tablet

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

- The Company is not liable for any damages arising from failure to observe the described content of the "Instruction Manual".
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.
- It is recommended you keep a copy of important data on your PC's hard disk, etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.
- Contents saved in the product, such as contacts and Album data might be altered or lost in an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that the Company assume no responsibility for any damages or lost profits resulting from altered or lost contents.
- Note that contents data (both charged or free content) saved with the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.
- This product uses liquid crystal for its display. The display response speed may become slow when the ambient temperature is low, which is due to the property of liquid crystal and not a malfunction. The display response speed will return to normal at room temperature.
- Although the display used on the product is made using high-precision technology, some pixels (dots) might be lit or out at all times. This is not a malfunction.
- You are recommended to store copies of individual data such as photos you took, videos and music on your PC by sending each file as mail attachment, etc. Note, however, that you may not be able to make copies of any copyrighted data even by the above-mentioned means.
- Do not discard the product together with regular trash. Please cooperate in the collection of the product when it is no longer needed to protect the environment and effectively use resources. Old products are collected at au shops and other places.
- Be careful of sound leakage from earphones in trains or other places with many people around you.
- Ask permission if you take photos with a camera of mobile device.
- There may be a person with a cardiac pacemaker nearby at a place filled with people such as in a crowded train. Set "Airplane mode" or turn off beforehand.

Mobile device Etiquette

- Use of the product is not allowed in the following places!
 - Do not listen to music or watch videos, TV, etc. while driving a car or motorbike, or riding a bicycle. Use of mobile devices while driving a car or motorbike is prohibited by law. (Use of mobile devices while riding a bicycle you even when walking. Surrounding sounds may not be heard clearly, and gazing at the screen might distract your attention causing a traffic accident. Be especially careful at railroad crossings, station platform and pedestrian crossings.
- Use of mobile devices on board is restricted. Follow the instructions of each airline.
- Consider people around you
 - To prevent notification sound from bothering other people, power off or use Silent mode at a movie theater, theater, museum, library, etc.
 - In a city area, use in a place where you do not bother people walking.
 - It is extremely dangerous to walk while looking at the screen of the mobile device. Do not operate a mobile device while walking or by stopping suddenly.
 - Move to a place where you do not disturb others while you are in shinkansen, a hotel lobby, etc.
 - Be careful of sound leakage from earphones in trains or other places with many people around you.
 - Ask permission if you take photos with a camera of mobile device.
 - There may be a person with a cardiac pacemaker nearby at a place filled with people such as in a crowded train. Set "Airplane mode" or turn off beforehand.

Caution Be sure to read the following cautions before use.

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

Main unit

Danger Be sure to read the following hazards before use.

- Do not puncture the product with a nail, hit with a hammer or step on the product. Doing so might cause fire or damage.
- Do not disassemble, modify or directly solder the product. Doing so might cause spilling of the battery liquid resulting in an accident such as loss of eyesight if it gets into eyes, or cause overheating, fire, rupture or injury.
- Be careful not to have the product bitten by your pet. It might cause leakage of the internal battery, overheating, rupture, ignition, fire or injury.

Warning Be sure to read the following warnings before use.

- Turn off the product or put it in Airplane mode before boarding an airplane. Use of mobile devices on board is restricted. Follow the instructions of each airline. Failure to do so may adversely affect on-board electronic equipment. Prohibited acts related to mobile device usage on an airplane may be punished by law.
- Follow the instructions of each medical facility for the use of mobile devices on their premises. Power off the product in a place where the use is prohibited. Failure to do so may affect electronic equipment and electronic medical equipment.
- Sometimes, very rarely some people demonstrate symptoms such as temporary muscle spasms, loss of consciousness, etc. by watching repeatedly flickering screens. Those with a past history of this should consult with a physician beforehand.

Handling precautions

These precautions are provided to prevent the product from damage and ensure that performance can be fully demonstrated. Thoroughly read these precautions to ensure correct use.

Precautions common to the main unit, internal battery, charging equipment, au Nano IC Card 04 LE, peripheral devices

- Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heavy object on the product in a bag. It might damage the display or internal circuit board resulting in a malfunction. Keeping an external device connected to the headset connection terminal or microSD connection terminal might damage the connector resulting in a malfunction. Such damage and malfunction are not covered by the warranty, even if there is no external damage.
- To ensure waterproof property (equivalent to IPX5 and IPX8) of this product, use the product with the microSD memory card slot cover/au Nano IC Card 04 LE slot cover tightly closed. Note that the waterproof property is not guaranteed in every usage condition. Do not allow water to get inside the product or splash water on charging equipment or optional accessories. Do not attach/remove the microSD memory card or au Nano IC Card 04 LE in the rain or with waterdrops on the surface of the product. Doing so might cause water intrusion resulting in internal corrosion. Malfunctions determined to be caused by water are not covered by the warranty.
- Do not use the product in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%)
 - Charging equipment
 - Peripheral devices

- When a medical institution has laid down designated areas where use of the product is prohibited or is not allowed to be brought in, abide by the instructions of that medical institution.

Safety Precautions (Observe Strictly)

- Before using this product, thoroughly read these safety precautions for proper use. After reading, store the precautions in a safe place.
- These "Safety Precautions" describe instructions that should be observed to prevent damage to property or injury to the customer or others using the product.
- When the product is used by a child, parents or guardians should thoroughly read the "Basic Manual" and "Cautions on using Xperia™ Z4 Tablet" (this manual) and teach the child how to use it.
- These instructions are divided into the following categories.

Explanation of indications used in this manual

	Danger	This symbol indicates the potential and imminent danger of death or serious injury ¹ to a person from improper use.
	Warning	This symbol indicates the possibility of death or serious injury ¹ to a person from improper use.
	Caution	This symbol indicates the possibility of minor injury ² to a person or physical damage ³ from improper use.

- ¹ Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long-term hospital attendance as an outpatient.
- ² Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.
- ³ Physical damage: This refers to extended damage to buildings, furniture, livestock, or pets.

- Do not allow liquids, metal objects, burnable items, and other foreign matter to get inside the headset connection terminal, microUSB connection terminal/microSD memory card/au Nano IC Card 04 LE slot. Doing so might cause fire, electric shock, a fault or injury.

- Do not swing the product around by holding a TV antenna, the hand strap, etc. Doing so might cause an accident or damage.

- Use the product with the covers of the microSD memory card slot or au Nano IC Card 04 LE slot cover etc. closed. If the covers are open, dirt or water may get inside causing a fault.

- Slow the TV antenna except when watching TV. If you use the product with the TV antenna pulled out, the TV antenna might hit your face etc. causing injuries.

- If you have a weak heart, be careful when setting the vibration and notification sound volume to prevent adverse effects on your heart.

- Pay attention to items becoming stuck to the main unit. The microphone and speaker use magnets, and so thumbtacks and pins, craft knife blades, staples, and other metal objects sometimes become stuck to the main unit, and cause unexpected injury. Before using the product, be sure to check that there are no foreign objects on the microphone or speaker

- Do not put the product directly on the sand at a beach, etc. Sand or other small particles might get inside the microphone or speaker etc. causing the volume to drop. If sand gets inside the the product's main unit, it might cause overheating or a fault.

- When the still image shooting screen is displayed continuously for a long time, video shooting screen or TV is operated for a long time continuously, part of the main unit may get warm. Do not touch the part for a long time. Doing might cause low-temperature burns.

Internal battery

(The internal battery of this product is a lithium-ion battery)
The internal battery is not fully charged at the time of purchase. Charge the battery before using the product. Charge the battery if you have not used the product for a long time.

- Do not forcefully press your fingernails or hard objects against keys or display surface. Doing so might cause scratching or damage. The touch panel is designed to be lightly touched by fingers. Do not apply strong pressure with your fingers or sharp-pointed objects (such as fingernails, ballpoint pens and pins) on the touch panel. Touching the panel may not work in the following cases. Note that it may cause malfunction.
 - Operation with fingernails
 - Operation with foreign object on the screen
 - Operation with protective sheet or seal on the screen
 - Operates when the display is wet or fogged
 - Operation with wet or sweaty fingers
 - Operation under water
- Do not remove the stickers printed with the IMEI on the nameplate.
- Never use modified au devices. Use of a modified device violates the Radio Law.

This product has acquired the certification of conformity with technical regulations for the specified radio station based on the Radio Law, and the "Technical Conformity Mark" is checkable on au devices as a certificate. Checking procedure: From the Home screen, (☰) → [Settings] → [About tablet] → [Legal information] → [Certificates]. If the screws of the product are removed and modifications are made to the internal components, the certification of conformity with technical regulations will become invalid. Never use the product without the valid certification. Doing so violates the Radio Law.

- Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product, as it might cause malfunction. Putting a strong magnetism close to the product might cause false operation.
- When you put the product in a bag, take care so that the display does not come in contact with metal objects or other hard objects, as it might cause scratching or damage.

Explanation of graphic symbols used in this manual

	Indicates an action that is not allowed.		Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.
	Indicates that handling with wet hands is not allowed.		Indicates an action that must be done.
	Indicates that disassembly is not allowed.		Indicates that the power plug must be disconnected from the power outlet.

Precautions common to the main unit, internal battery, charging equipment, au Nano IC Card 04 LE, peripheral devices

Danger Be sure to read the following hazards before use.

- Be sure to use only the specified peripheral devices. Use of other peripheral devices might cause overheating, fire, rupture, fault, or leakage of liquid.
- Do not use, store or leave the product in hot places (e.g. by the fire, near a heater, under a kotatsu, in direct sunlight, in car in the hot sun). Doing so might cause ignition, rupture, fault, fire or injury.
- Do not put the product in a cooking apparatus such as microwave oven or a pressure vessel. Doing so might cause ignition, rupture, fault, fire or injury.
- Do not throw the product into a fire or heat it. Doing so might cause ignition, rupture or fire.
- The customer is not allowed to disassemble, modify or repair the product. Doing so might cause a fault, ignition, electric shock, or injury. The Company is not liable even in the event of any nonconformities arising on the product or peripheral devices as a result of modification, etc. Modification of the product is in violation of the Wireless Telegraphy Act.

Danger Be sure to read the following hazards before use.

- If the leaked liquid gets on your skin or clothes, immediately rinse it off with water to avoid injury. If the liquid gets into your eyes, do not rub but after wash your eyes with water, and immediately consult a doctor to avoid the risk of losing your eyesight. If the liquid gets on a device, wipe it off without touching it.
- The internal battery is a consumable item. If the performance of a battery does not recover (e.g. the usable time after each charge has become extremely short), the battery is at the end of service life, so stop use. Failure to do so might cause overheating, fire, rupture or leakage. Battery is built into the product. For repair, the product must be collected to au shop etc. and charges will be incurred. And you may not use the product during certain period of time. Please be forewarned. Note that the length of service life varies depending on the usage condition, etc.

Charging equipment

Warning Be sure to read the following warnings before use.

- Do not use at other voltages than the specified power supply voltage. Doing so might cause ignition, fire, overheating, electric shock or injury.
- AC adapter (sold separately): 100 VAC to 240 VAC (Connect to the AC outlet for internal household use) When charging the product overseas, use AC Adapter for global use (sold separately).
- Firmly insert the plug of the specified charging equipment (sold separately) into the power outlet down to the base of its pins. Incomplete insertion of the power plug might result in fire or injury caused by electric shock, overheating or ignition. Do not use damaged adapters or loose power outlets.

- Since the battery is built into the product, you cannot replace it yourself. For replacing the battery, contact an au shop or Customer Service Center.

Warning Be sure to read the following warnings before use.

- Before entering an area where flammable gas is generated such as a gas station, be sure to turn off the product. Do not charge the battery. Failure to do so might cause the gas to catch fire.
- When using a metal accessory, etc., take sure not to allow the metal part come in contact with the headset connection terminal, microUSB connection terminal, or power outlet. Doing so might cause electric shock, ignition, injury or a fault.
- Do not drop or subject to strong impact, such as throwing. Doing so might cause rupture, overheating, fire, leakage or a fault.
- Do not use outside when you can hear thunder. Doing so might risk lightning strikes and electric shock.
- Do not allow a part of the body such as finger or conductive foreign objects (metal fragments, pencil leads, etc.) to come into contact with or get inside the headset connection terminal or microUSB connection terminal. Doing so might cause overheating, fire, fault, electric shock, or burns.
- If the product is damaged because it is dropped or something, and its display is cracked or internal parts are exposed, do not touch the cracked display or exposed parts with your hands. Doing so might cause electric shock or injury from damaged parts.
- Never connect the microUSB plug to the product or charging equipment when it is wet. Although this product model has the waterproof property, inserting microUSB plug to the product when it is wet might cause electric shock or short circuit due to the moisture or foreign substance on the product or microUSB plug, or might cause abnormal overheating, fire damage, fire, burns, or a fault if corrosion occurs.

- Do not damage, modify, twist, pull or place a heavy object on the cable of the specified charging equipment (sold separately). Do not use a damaged cable. Doing so might cause an electric shock, short circuit, fire or injury.

- If you hear thunder, do not touch the specified charging equipment (sold separately). Doing so might cause an electric shock etc. as a result of a lightning strike.

- Before cleaning the specified charging equipment (sold separately), unplug its power plug from the outlet. If the plug remains plugged in when you clean the equipment, it might cause an electric shock or short circuit.

- Wipe off dust on the power plug. Failure to do so might cause fire, burns or electric shock.

- Remove the power plug of the specified AC adapter (sold separately) from the outlet or cigarette lighter socket when not using the adapter for an extended period. Failure to do so might cause fire or a fault.

- Charging equipment is not waterproof. Do not use in places subject to direct splashing with water, pet urine or other liquids. Doing so might result in faults or injury resulting from overheating, fire, electric shock, or short-circuit, e.g. electronic circuits. In the event that the product is splashed with liquid, immediately disconnect the power plug of the specified AC adapter (sold separately).

- When not using the specified charging equipment (sold separately), do not remain the plug connected to the power outlet. Also, do not wrap the cord of the specified charging equipment (sold separately) around the adapter itself. Failure to do so might cause electric shock, overheating, fire, fault or injury.

- Do not forcibly bend the charging equipment's plug or the connection between the connector and power cord. Failure to do so might cause electric shock, overheating, fire, fault or injury.

- Do not use the product while driving a car, etc. Doing so might cause a traffic accident and is prohibited by law.
- Inserting a metal earphone jack accessory into the headset connection terminal might cause the nonconformities.

Display (Touch Panel)

- Use your finger to operate the touch panel. Do not use ballpoint pens, pencils or other sharp-pointed objects. Using such objects does not only hinder correct operation of the touch panel, but also might cause scratching or damage to the display.
- Putting stickers or sheets (e.g. commercially available protective films, peep prevention sheets) on the display might hinder correct operation of the touch panel.
- If the display surface is dirty or wet with sweat or water, it may not function correctly. In such case, wipe the display surface with a dry, soft cloth.
- Note that pressing the touch panel forcefully may cause malfunction or damage.
- When carrying the product in a bag, take care not to put the touch panel close to metals or other conductive materials, as it might cause false operation of the touch panel.

Internal battery

- Use in very hot or cold environments, for example, when left in an automobile with the windows closed in summer, will cause the battery capacity to drop and shorten the available battery usage time. This will also shorten the internal battery's service life. Try to use the product as far as possible at room temperature.
- The internal battery gradually discharges after charging even if the product is not used. The internal battery may discharge completely after long time no use. Charge before using.
- Do not store the product under the following conditions. They might cause degradation of performance or service life of the internal battery.
 - Fully charged (soon after completion of charging)
 - Empty (the product does not turn on)
 - In high-temperature and humidity

