
# **Setting Guide**

Introduction

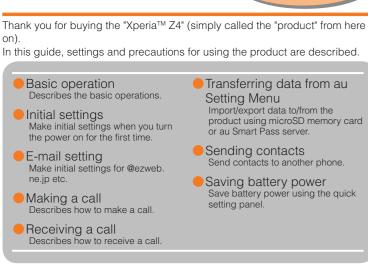

Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies.

The TM, ® marks may be omitted in this manual

Screen illustrations shown in this manual may look different from the actual screens. In some cases, upper or lower part of a screen may be omitted.

> May 2015, 1st Edition Sold by: KDDI CORPORATION, OKINAWA CELLULAR **TELEPHONE COMPANY** Manufactured by: Sony Mobile Communications Inc.

> > $\rightarrow$  [SKIP]  $\rightarrow$  [ $\Longrightarrow$ ]

1295-7191.1

#### Screen Lock Press (b) while the screen displayed. The Touch panel operations

 
#### backlight turns off and screen lock is activated (avoiding the keys or touch screen from false Tap: Gently touch operations). a screen and then Unlocking Screen Lock

immediately release your finger. Double tap: Touch the same position twice.

Slide While your finger is gently touching the screen, trace it to the desired direction to move over.

#### Pinch Touch the screen with two fingers and widen

(pinch-out) or narrow (pinch-in) the fingers' distance



There are two types for displaying the screen menu; tapping "1" and longtouching an input field or item.

# setting panel. You can set on/off of the functions.

# ap/Double-tap

Opening Notification panel

If any notification icons are displayed on the left

side of the status bar, slide down the status bar to

of notification icons or start corresponding apps.

Slide the status bar down with two fingers or slide

the Notification panel down to display the quick

open the Notification panel. You can check details

### Long-touch Keep touching an item with your finger.



Notification

panel

#### Flick (swipe)

Drag

Operate the screen by quickly moving (flicking) your finger up/down or right/left.

desired direction to



Keep touching an item or icon, trace it to the



**(Symbol keyboard)** 

# **Initial settings**

When you turn on the product for the first time, follow the onscreen instructions to set the language, functions, services, etc.

#### STEP START: Setting language

- Select "English (United States)" and tap "DONE"
- Alternatively, after the initial setting is complete, from the Home input)] → [地域/言語 (Language)] to set the language.
- STEP 1: Starting basic settings

#### When "Welcome" appears, tap "

### STEP 2: Setting Wi-Fi® connection

Use home wireless LAN (Wi-Fi®) or public wireless LAN to connect Internet service. Operate in a place where signal of Wi-Fi® network can

#### Tap "SEARCH FOR NETWORKS".

- ■Wi-Fi® network with \$\bigsir\$ is open network.
- ■Wi-Fi® network with is protected by security. To connect, enter password (security key).
- To detect Wi-Fi® network manually or make Wi-Fi® advanced settings, after the initial setting is complete, tap [■] → [Settings] → [Wi-Fi] → [ ] → [Refresh]/[Advanced].

Jsing Wi-Fi® network selection settings Select from detected Wi-Fi® network to set.

To select a protected Wi-Fi® network, you need to enter a security key.



(security key) →

[CONNECT]

#### Setting Wi-Fi® network manually

Add Wi-Fi® network manually.

network

Check network SSID, authentication type, etc. in advance. If security is set, you need to enter a security key



### STEP 3: Setting up an Google account

Operate directly touching with your finger.

**Basic operation** 

Status bar

Current status and

O SONY O

B N 1/100

**9** ::: **6** 

Display (Touch panel)

notification icons

are displayed.

For detailed descriptions of operations, refer to the "Basic Manual"

Instruction Manual)" (Japanese) available on the au homepage.

(Japanese) app installed on the product or "取扱説明書(詳細版) (Full

App key

☐ Home key

■ Back key

Tap to display the apps screen

☐ Recently used apps

the list. You can use small apps, too.

Tap to display the Home screen

Tap to return to the previous screen

Tap to display recently-used apps in the thumbnail list and activate or end them from

© Power key / Power Lock key

The lock screen appears when turning the


power on or the backlight on by pressing (6).

Swipe (flick) the screen up to cancel the screer

Press and hold for over 1 second.

Set an account for online service such as Google so that you can synchronize with contacts or calendar, etc. of Gmail or online service.

● To set online service, make sure that data communication is enabled. Check that imappears on the status bar or the product is connected to a Wi-Fi® network. • If you set up a Google account, you can use Google apps such as "Gmail", "Google Play", "Hangouts" or "Google+". And, Gmail's mail address "(user name) @gmail.com" is automatically created from the user name set with a Google account. To create an account, you are required to register "First" name and "Last" name

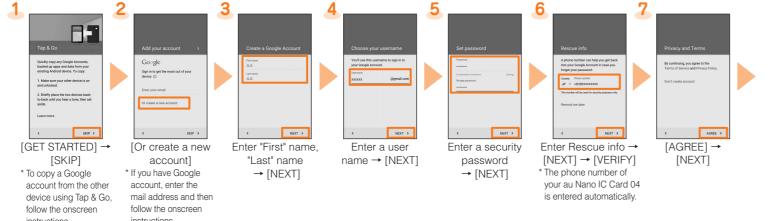

After step 4

If the entered user

an entry screen for

When you enter

another phone

number in step 6

enter the notified

then tap "NEXT".

security code and



[NEXT]

Play as required

→ [NEXT]

## STEP 4: Join the world of Sony

checking registration Tap "GET STARTED" to create an account of Sony Entertainment Network to of username starts. register and then tap "->".

#### name is unavailable, STEP 5: Accounts

Make other account settings as required and then tap ">" user name appears. OCheck that "Sync automatically" is turned on (

## STEP 6: Completion of setup

When the setup completion screen appears, tap "FINISH".

• Alternatively, after the initial setting is complete, from the Home screen, tap [⊕] → [Settings] → [Setup guide], you can set each function and service.

## au Easy Setting

Character entry

Software keyboard

Numeric keypad.

a contact, composing a mail, etc.

keypad for more symbols.

Use software keyboard to enter characters.

■Tap "■" to display the keyboard setting menu.

The software keyboard appears when you tap the entry field for registering

characters, Numeric keypad to enter numbers and symbols, and Symbol

● Tap "□ to display Numeric keypad. For Symbol keypad, tap "□ on the

qwertyuiop

a s d f g h j k

û z x c v b n m ✓

《QWERTY keyboard》

1 2 3 4 5 6 7 8 9 0


@:;\_-#()/

+=\$ . , ? ! '

With "International keyboard", you can use QWERTY keyboard to enter

Set au convenient functions or services.

- ●By setting au ID, you can use various services provided by au such as auスマートパス (au Smart Pass) or "au Kantan Kessai", which allows you to purchase apps from Google Play. au ID which is already used by another user cannot be set
- Alternatively, after the initial setting is complete, from the Home screen, tap [⊕] → [Settings] → [au Settings Menu] → [au Easy Setting], you can set au service.

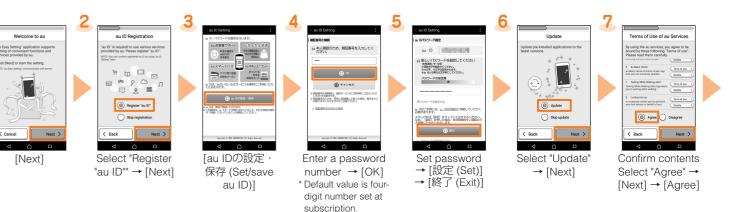



off"  $\rightarrow$  [Next]





● ビデオバス 「ピアオバス」は、月間560円(株成) (東京園 ブラン) で報道・ドラマ・アニメが東京園!



Select "Activate" or "Skip activation" "Skip activation" → [Next]



→ [Next]

Texting While Walking Ale







restored →

「次へ (Next)]

データを戻す



recovered, a recovery screen for applications appears before the step 10. Follow the onscreen instructions. Select "Agree" in step 7 to

The screens of the step 8

and from 10 to 12 appear

only if "Agree" is selected in

complete pre-configuration of Lookout for au

