

2 Widgets & Apps		Add shortcuts of widgets or apps.
Wallpapers	Album	Select an image from albums to set as a wallpaper. <ul style="list-style-type: none"> To set image range, adjust cropping area by dragging, etc.
	Live Wallpapers	Select a content from albums to set as a wallpaper.
	Photos	Select an image from photos to set as a wallpaper.
	(Xperia™'s Wallpaper)	Select an image to set as a wallpaper. <ul style="list-style-type: none"> Images displayed to the right of "Photos"/"Live Wallpapers" are "Xperia™'s Wallpaper".
Themes		Set the wallpapers etc. for the Home screen or the lock screen.
Home Settings		Set size of icons on the Home screen or app screen.

■ Adding a folder

1 From the Home screen, long-touch an icon

2 Drag the icon onto another icon

21

Support

Introduction of related accessories

- For details, refer to the instruction manual for each device.
- Sony Mobile TV antenna cable 02 (02SOHSA)**
- Sony Mobile Desktop Holder 01 (01SOPUA) (sold separately)**
- Common AC Adapter 05 (0501PWA) (sold separately)**
- Common DC Adapter 03 (0301PEA) (sold separately)**
- microUSB cable 01 (0301HVA) (sold separately)**
- microUSB cable 01 Navy (0301HBA) (sold separately)**
- microUSB cable 01 Green (0301HGA) (sold separately)**
- microUSB cable 01 Pink (0301HPA) (sold separately)**
- microUSB cable 01 Blue (0301HLA) (sold separately)**
- au Carrying Case G Black (0106FCA) (sold separately)**

❖Information

- For the latest information on accessories, visit the au homepage (<http://www.au.kddi.com/>) or contact the Customer Service Center.
 - Accessories described above can be purchased from the au Online Shop. Some accessories may not be purchased due to the availability.
- <http://auonlineshop.kddi.com/>

28

For inquiries, call: Customer Service Center

For general information, charges and operation information (toll free)

Business hours 9:00–20:00 (7 days a week)

From fixed-line phones: From au cell phones:

 **0077-7-111** **157** without area code

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR

AFTER CALLING 157 ON YOUR au CELLPHONE.

For loss or theft (toll free)


Business hours : 24 hours live support

From fixed-line phones: From au cell phones:

 **0077-7-113** **113** without area code

In case above numbers are not available (toll free)

 **0120-977-033** (except Okinawa)

 **0120-977-699** (Okinawa)

 
 
Keitai Guarantee Service Center

For loss, theft, damage (toll free)

Business hours 9:00–21:00 (7 days a week)

From fixed-line phones/au cell phones,

 **0120-925-919**



SONY®

Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: Sony Mobile Communications Inc.

October 2015, 1st Edition
1299-0021.1

■ Deleting shortcuts/widgets/folders

1 From the Home screen, long-touch an icon or a folder you want to delete

2 Drag the icon or the folder to "Remove from Home screen"

- To delete a folder, then tap "DELETE". It also deletes shortcuts etc. in the folder.

❖Information

- Long-touch a shortcut, widget, or folder icon to move.

Using the Apps screen

You can call up functions from the Apps screen. App icons installed to the product are also displayed.

- You may incur communication charges depending on the function.

■ Starting an app











1 From the Home screen, 

Slide or flick left or right to switch the Apps screen.

2 Tap an app to use

Some apps are stored in a folder.

■ Main apps

	Phone, Contacts		Play Store
	E-mail, SMS		Camera, Album
	Chrome		Maps
	Settings		Google, Voice Search
	Calendar		Basic Manual

■ Downloading and installing apps

You can download and install apps or games, etc. by using Google Play.

- To use Google Play, you need to set a Google account. For details, refer to "Setting Guide".

■ Deleting (uninstalling) apps

Before deleting installed apps, back up contents related to the app that you want to save including data saved in the app.

- Some apps may not be deleted.






Knowing the status of the product




■ Status bar

The status bar is located at the top of the product screen. On the left of the status bar, notification icons appear to inform missed calls, new mails, operations in progress, etc., and on the right, status icons appear to indicate the status of the product.










■ Examples of notification icon

	New Gmail message
	New PC mail message
	New E-mail (@ezweb.ne.jp) message
	New SMS/Receiving notification service message, New Receiving notification
	Talking ^{*1} /Calling ^{*1}

	Missed call
	USB connecting
	Wi-Fi® open network available

^{*1} Appears when switched to another screen such as the Home screen.

■ Main status icons

	Signal level (Level 4, Out of service area)
	4G (LTE/WiMAX 2+) data communication status ^{*1} (Available, data transferring or downloading)
	Battery level (100%, Charging)
	Silent mode (Vibrate) is set
	Silent mode (Mute) is set
	Airplane mode is activated
	Wi-Fi® connected, Wi-Fi® communicating

^{*1} Two types of network, "LTE" and "WiMAX 2+" can be used. "4G" appears on the screen for both networks.

The company determines which network is less busy depending on the condition of the line to connect.

■ Notification panel

If any notification icons are displayed, slide down the status bar to open the Notification panel. You can check details of notification icons or start corresponding apps.

❖Information

- To delete a notification, flick the notification left or right.
- Some notifications may not be deleted depending on the content.

24

- Alternatively, you can check notifications by swiping (flicking) down on the lock screen. Or set to hide or keep showing notifications on the lock screen.

 
■ Notification LED

Notification LED informs charging prompt, battery level while charging, missed calls, new mails, etc. by turning on or flashing.

Status	Description
Red	The battery is charging when the remaining battery level is 14% or lower.
Orange	The battery is charging when the remaining battery level is 15% - 89%.
Green	The battery is charging when the remaining battery level is 90% or higher.
Flashing red	The remaining battery level is 14% or lower.
Flashing white	Indicates missed call, new Gmail message, new SMS message. ^{*1}

^{*1} Notification LED flashes while backlight is turned off.

❖Information

- Flashing of Notification LED three times in red when pressing  with the power off indicates that the remaining battery is not sufficient.
- When you start charging with the product powered off, the notification LED turns in red. When the status of battery appears on the display, however, the notification LED lights in color that indicates the battery level.

25

■ Downloading and updating software

Update files can be downloaded from the Internet web site into the product directly.

- Note that when Wi-Fi® communication becomes unstable, packet communication takes the place automatically, which may apply communication fees.

1 From the Home screen,  ►[Settings]►[About phone]►[Software update]

2  ►[Refresh]

After-sales service

■ When asking for repair

For repair, contact Keitai Guarantee Service Center.

During the warranty period	Repairs will be done based on the terms of services of the free-of-charge repair warranty described on the warranty card.
Outside the warranty period	We shall repair the product for a charge as requested by the customer if repair renders it usable.

❖Information

- Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
- Recycled parts that meet the Company's quality standards are sometimes used for repair.

SIM unlock

The product supports SIM unlock. By unlocking SIM lock, you can use non-au SIM cards.

- The SIM unlock service is provided at the au homepage and au shops.

- Some services, functions, etc. may be unavailable when using non-au SIM card. The Company is not liable for any operations.
 - For settings after SIM unlock, operate from the Home screen,  ►[Settings]►[About phone]►[Status]►[SIM status]►[SIM card status].
 - For details, refer to the au homepage.
- <https://cs.kddi.com/support/simcard/>

Main specifications

Display	Approx. 5.2 inches TRILUMINOS® Display for mobile Approx. 16.77 million colors 1,080 x 1,920 dots
Weight	Approx. 154 g (with internal battery)
Dimension (W x H x T)	Approx. 72 mm x 146 mm x 7.3 mm
Internal memory	ROM: Approx. 32GB RAM: Approx. 3GB

36

^{*} Charge amounts are all tax excluded

 
■ Setting Airplane mode

1 From the Home screen,  ►[Settings]

2 [About phone]►[Status]►[SIM status]

The phone number of the product is shown under "My phone number".



❖Information

- Alternatively, from the Home screen,  ►[Contacts]►[Myself] to check your phone number.

■ Setting the silent mode (Vibrate)

1 Press the volume up key or down key

2 

The icon for the volume adjusting bar changes to . Tap  to adjust volume of ringtone, media sound or alarm.

■ Setting the silent mode (Mute)

1 Press the volume up key or down key

2  ►

The icon on the volume adjusting bar turns to .

❖Information

- When the "silent mode" is set, sounds for shutter, shooting start/end sound when shooting videos, alarm, playback of video, or music, etc. are not muted.
- Raising the volume by pressing the volume up key in the silent mode, or adjusting volume of "Ring volume" of "Sound & notification" in the silent mode (Vibrate) cancels the silent mode.

26

❖Information

- You can apply for membership only at the time of purchasing your au cell phone.
- Once you cancel the membership, you cannot reapply for it until you purchase an au cell phone next time.
- Note that when changing the model or purchasing an extra cell phone, this service only covers the most recently purchased au cell phone.
- When an au cell phone is handed over to you or someone else, the Keitai Guarantee Service Plus LTE membership is also handed over to the successor of the cell phone.
- When you get a new au cell phone by changing the model or purchasing an extra cell phone, the "Keitai Guarantee Service Plus"/"Keitai Guarantee Service Plus LTE" membership for the old au cell phone is automatically canceled.
- Service contents are subject to change without notice.

■ au Nano IC Card 04

The au Nano IC Card 04 is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When a malfunction is suspected, or in case of theft or loss, contact an au shop or PiPiI.

■ After-sales service

If you are unsure about anything regarding after-sales service, contact the following service center.

Customer Service Center (for service canceling procedure in case of loss or theft)

From a land-line phone,  **0077-7-113** (toll free)

From an au mobile phone, **113** without area code (toll free)

Business hours : 24 hours live support

Bluetooth®	Communication type	Compliant with Bluetooth® standard Ver.4.1
	Output	Compliant with Bluetooth® standard Power Class 1
	Communication coverage distance^{*1}	Within 10 m with good visibility
	Supported Bluetooth® profile^{*2}	HSP, HFP, PBAP ^{*3} , A2DP, AVRCP, SPP, OPP, HID, ^{*4} PAN, HOGP, MAP, DUN ^{*4}
	Radio frequency band	2.4 GHz band (2,400 MHz - 2,483.5 MHz)

^{*1} Varies by obstruction between communication devices or radio wave reception status.

^{*2} It is a specification according to purpose of use of Bluetooth® device and is defined by Bluetooth® standard.

^{*3} Some contacts data may not be displayed correctly on the other party's device.

^{*4} Only supported to a part of car navigation systems. For use, refer to the au homepage.

❖Information

- The continuous call time, continuous stand-by time, continuous Full Seg watching time, continuous 1Seg viewing time and continuous tethering time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings.

40