

Be sure to read this manual before use

XPERIA X Performance SOV33

Cautions on using Xperia™ X Performance

Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. In context, TM and © mark may be omitted.

May 2016, 1st Edition 1303-0474.1

Explanation of graphic symbols

Table with 2 columns: Symbol (no flame, no open flame, no disassembly, no wet areas) and Description (Indicates an action that is not allowed, etc.)

Precautions common to the main unit, internal battery, charging equipment, au Nano IC Card 04, Sony Mobile TV antenna cable 02, peripheral devices

- 1. Danger: Be sure to read the following hazards before use. Do not use, store or leave the equipment in locations subject to high temperatures or accumulation of heat...

When using the product

- Before you start using the product, make sure to read the "Safety Precautions" to ensure correct use. • Before you assume that the product is malfunctioning, check for possible remedies in the following au Customer Support site of au homepage: http://www.au.kddi.com/support/mobile/trouble/repair

1

- Do not charge the battery when the product is wet with liquids such as water (drinking water, sweat, seawater, urine of pet animals, etc.). Do not use, store or leave the equipment in locations subject to high temperatures or accumulation of heat (e.g. by the fire, near a heater, under a kotatsu or bedding, in direct sunlight, in a car in the hot sun).

8

- Watch the display in an adequately bright place taking a certain distance from it. Watching in a dark place or closely might reduce visual acuity etc. Sony Mobile TV antenna cable 02

Warning: Be sure to read the following warnings before use.

- Do not touch the specified charging equipment (sold separately) if it is damaged. Do not touch the specified charging equipment (sold separately) in a humid place such as bathroom.

14

- Before you start using the product overseas, check as contents and Alburm data might be altered or lost in an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. • Note that contents data (both charged or free content) saved with the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.

2

- Do not cover or wrap the equipment with a cloth or bedding in use or while charging. Do not use, store or leave the equipment in locations subject to high temperatures. If charging does not finish after specified time, stop charging.

9

- Do not short-circuit the charging terminal while it is connected to an outlet or cigarette lighter socket. Do not touch the charging terminal with your hands, fingers, or any part of your body. Do not place heavy objects on a cord of specified charging equipment (sold separately), or do not apply unreasonable force to the cord such as pulling.

Caution: Be sure to read the following cautions before use.

- Do not throw the product into fire or apply heat. Do not place the product on an unstable or inclined platform. Be careful especially when vibrator is set.

15

- Do not use or keep in a place that is very humid, dusty, or subject to high temperature. Do not use damaged product or peripheral devices. Do not use the product on an unstable or inclined platform. Be careful especially when vibrator is set.

3

- Do not use or keep in a place that is very humid, dusty, or subject to high temperature. Do not use damaged product or peripheral devices. Do not use the product on an unstable or inclined platform. Be careful especially when vibrator is set.

10

- Use the adapter only on the specified power supply and voltage. When charging the battery overseas, use AC adapter for global use. Always remove the power plug of the specified charging equipment (sold separately) from an outlet or cigarette lighter when not using it.

Caution: Be sure to read the following cautions before use.

- Do not touch the specified charging equipment (sold separately) for a long time when it is connected to an outlet or cigarette lighter socket. Do not touch the power plug from an outlet or cigarette lighter socket, do not apply excessive force to it such as pulling the cord of the specified charging equipment (sold separately).

17

"The Company" as appears in the manual refers to the following companies: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by: Sony Mobile Communications Inc.

Notice: Reproduction of the content of "Instruction Manual" in part or in whole is prohibited. Every effort has been made in the preparation of "Instruction Manual".

Mobile Phone Etiquette

- Use of the product is not allowed in the following places! Do not listen to music or watch videos, TV, etc. while driving a car or motorbike, or riding a bicycle. Use of mobile phones while driving a car or motorbike is prohibited by law.

4

- Do not use or keep in a place that is very humid, dusty, or subject to high temperature. Do not use damaged product or peripheral devices. Do not use the product on an unstable or inclined platform. Be careful especially when vibrator is set.

11

- If the charging terminal is deformed such as being bent etc., stop using immediately. Do not use it with the deformation restored. Do not touch the specified charging equipment (sold separately) for a long time when it is connected to an outlet or cigarette lighter socket.

Caution: Be sure to read the following cautions before use.

- Do not touch the specified charging equipment (sold separately) for a long time when it is connected to an outlet or cigarette lighter socket. Do not touch the power plug from an outlet or cigarette lighter socket, do not apply excessive force to it such as pulling the cord of the specified charging equipment (sold separately).

18

Consider people around you: To prevent ringtone from bothering other people, not only refrain from making a call but also power off or use Silent mode at a movie theater, theater, museum, library, etc.

- In a city area, use in a place where you do not bother people walking. • It is extremely dangerous to walk while looking at the screen of the mobile phone. Do not make calls or operate a mobile phone while walking or by stopping suddenly. • Move to a place where you do not disturb others while you are in shinkansen, a hotel lobby, etc.

5

- Do not use or keep in a place that is very humid, dusty, or subject to high temperature. Do not use damaged product or peripheral devices. Do not use the product on an unstable or inclined platform. Be careful especially when vibrator is set.

12

- Using near medical equipment or in healthcare facilities: If you have electronic medical equipment such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator, carry or use the product 15 cm or more away from the implant at all times.

Caution: Be sure to read the following warnings before use.

- If there is any chance that the distance between the product and a person closest to you might get shorter than 15 cm such as when you cannot freely move around, set it not to emit radio wave in advance (Airplane mode, turning the power off, etc.).

13

Safety Precautions (Observe Strictly)

Before using this product, thoroughly read these safety precautions for proper use. After reading, keep this manual in a safe place for future reference. These "Safety Precautions" describe instructions that should be observed to prevent damage to property or injury to the customer or others using the product.

Table with 2 columns: Symbol (Danger, Warning, Caution) and Description (This symbol indicates that "death or serious injury" may directly and immediately result from improper use).

*1 Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long-term hospital attendance as an outpatient.

6

- Do not use or keep in a place that is very humid, dusty, or subject to high temperature. Do not use damaged product or peripheral devices. Do not use the product on an unstable or inclined platform. Be careful especially when vibrator is set.

Material list

Table with 3 columns: Part, Material, Surface treatment. Lists parts like Exterior case, Transparent plate, Power key, etc.

Sony Mobile TV antenna cable 02

Table with 3 columns: Part, Material, Surface treatment. Lists parts like Sony Mobile TV antenna cable 02, Speaker, etc.

16

