

Notes on Usage

**Exemptions**

- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional or mistaken misoperation by the customer, or use under other unusual conditions outside the responsibility of the Company.
- The Company is not liable for any incidental damages (change/ disappearance of described content, loss of business income, disruption of business, etc.) arising from use or inability to use the product.
- The Company is not liable for any damages arising from failure to observe the described content of this manual.
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.
- It is recommended you keep a copy of important data on your PC's hard disk, etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.
- \* The Company, as appears in this manual refers to the following companies: Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY Manufactured by: KYOCERA Corporation

- Note**
- Reproduction of the content of this manual in part or in whole is prohibited.
  - The content of this manual is subject to change without notice.
  - Every effort has been made in the preparation of this manual. Should you notice any unclear points, omissions, etc., feel free to contact us.
  - Wrong page order or missing pages will be replaced.

Be sure to read these notes on usage before use

**Safety Precautions (Observe Strictly)**

**Before using this product, thoroughly read these safety precautions for proper use. After reading, store the precautions in a safe place.**

- These "Safety Precautions" describe instructions that should be observed to prevent damage to property or injury to the customer or others using the product.
- These instructions are divided into the following categories.

**Explanation of indications used in this manual**

	<b>DANGER</b>	This symbol indicates the potential and imminent danger of death or serious injury <sup>(1)</sup> to a person.
	<b>WARNING</b>	This symbol indicates the possibility of death or serious injury <sup>(1)</sup> to a person.
	<b>CAUTION</b>	This symbol indicates the possibility of personal minor injury <sup>(2)</sup> to a person or physical damage <sup>(3)</sup> .

- <sup>1</sup> Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long term hospital attendance as an outpatient.
- <sup>2</sup> Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.
- <sup>3</sup> Physical damage: This refers to extended damage to buildings, furniture, livestock, or pets.

**Explanation of graphic symbols used in this manual**

	Indicates an action that is not allowed.		Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.
--	--	--	---

	Indicates that handling with wet hands is not allowed.		Indicates an action that must be done.
	Indicates that disassembly is not allowed.		Indicates that the power plug must be disconnected from the power outlet.

**Precautions common to the main unit, internal battery, charging equipment, au Nano IC Card (LTE), peripheral devices**

**DANGER** Be sure to read the following hazards before use.

Be sure to use only the specified peripheral devices. Use of other devices might cause overheating, ignition, rupture, fault, or leakage of liquid.

Do not use, store or leave the product in hot places (e.g. by the fire, near a heater, under a kotatsu, in direct sunlight, in a car in the hot sun), Doing so might cause ignition, rupture, fault, fire or injury.

Before entering an area where flammable gas is generated such as a gas station, be sure to turn off the product. Do not charge the battery. Failure to observe these precautions might cause the gas to catch fire. In addition, when using Osaifu-Keitai® at a gas station, be sure to turn off the power in advance. (If Osaifu-Keitai® lock has been set, cancel the lock before turning off the power.)

Do not put the product in a cooking apparatus such as microwave oven or a pressure vessel. Doing so might cause ignition, rupture, fault, fire or injury.

Do not throw the product into a fire or heat it. Doing so might cause fire, rupture or fire.

Do not short-circuit the connection terminal, earphone microphone terminal, etc. Do not allow conductive foreign objects (metal fragments, pencil leads, etc.) to come into contact with or get inside the connection terminal, earphone microphone terminal, etc. Doing so might cause a fire, burns, a fault due to heat generation.

When using a metal accessory etc., make sure not to allow the metal part come in contact with the connection terminal, earphone microphone terminal or power outlet. Doing so might cause electric shock, ignition, injury or a fault.

Do not expose the camera lens to direct sunlight for an extended period. Doing so might cause ignition, rupture or fire by the light-collecting mechanism of the lens.

The customer is not allowed to disassemble, modify or repair the product. Doing so might cause a fault, ignition, electric shock, or injury. The Company is not liable even in the event of any nonconformities arising on the product or peripheral devices as a result of modification, etc. Modification of the product is in violation of the Wireless Telegraphy Act.

**WARNING** Be sure to read the following warnings before use.

Do not drop or subject to strong impact, such as throwing. Doing so might cause rupture, overheating, ignition, or a fault.

Do not use outside when you can hear thunder. Doing so might risk lightning strikes and electric shock.

Do not let your hands, fingers and other parts of the body touch the connection terminals. Doing so might cause electric shock, injury or a fault.

Part	Material	Surface treatment
Outer case (display-side top), outer case (display-side bottom), volume up/down key, direct button (circumference), speaker panel, camera lens ring, camera light ring, cosmetic screws (rear)	PC resin	Acrylic UV hard coating
Outer case (rear), earphone microphone terminal cover, card slot cover	PC resin/urethane resin	Acrylic UV hard coating
Direct button (inside), camera lens, camera light lens	PMMA resin	Hard coating
Display	Chemical hardened glass	Antifouling treatment
Back key/Home key/Recent apps key, external connection terminal cover	PC resin/urethane resin	—
Power key, speakerphone key, camera key	Urethane resin	—
Cosmetic screws (display side)	SWCH	Trivalent black plating

Do not bring the product close to magnetized objects such as cash cards, floppy disks, credit cards, and prepaid cards. Doing so might result in loss of recorded information.

Do not allow liquids, metal objects, burnable items, and other foreign matter to get inside the earphone microphone terminal, the external connection terminal, the microSD memory card slot or the au Nano IC Card (LTE) slot. Failure to do so might cause fire, electric shock, injure or a fault.

Do not swing the product around by holding the earphone or the hand strap, etc. Doing so might cause an accident or damage.

If the product is damaged because it is dropped or something, and its display is cracked or internal parts are exposed, do not touch the cracked display or exposed parts with your hands. Doing so might cause electric shock or injury from damaged parts. Contact an au shop or Keitai Guarantee Service Center.

If the wet product is charged, electric shock, short circuit, or corrosion may occur and overheating may cause fire, malfunction or burns.

Although this product model has waterproof property, stop use if liquid such as water gets inside the product from the external connection terminal cover, card slot cover, earphone microphone terminal cover, etc. Continued use of the product in this state might cause overheating, fire or a fault.

Do not operate the product while driving an automobile or motorized bicycle, riding a bicycle or walking. Doing so may compromise traffic safety and cause an accident.

If charging is not completed after the specified charging time, stop charging. Failure to do so might cause leakage of liquid, overheating, rupture or ignition.

Do not leave in places within the reach of small children. Small children might swallow small parts, etc. by mistake and choke on them, or might drop them by mistake and cause accidents or injury.

**CAUTION** Be sure to read the following cautions before use.

Do not store the product in places subject to direct sunlight (e.g. in automobiles), places that get hot, places that get extremely cold, and in humid or dusty places. Doing so might cause overheating, fire, deformation or a fault.

Use the product with the external connection terminal cover, the card slot cover, earphone microphone terminal cover, etc. closed. If the covers are open, dirt or water may get inside causing a fault.

If you have a weak heart, be careful when setting the incoming vibration and ringtone volume to prevent adverse effects on your heart.

Do not place the product directly on sand at a beach, etc. Sand or other small particles might get inside the microphone, speaker, noise canceller microphone, etc. causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.

When using the product for calling or data communication, be careful not to keep the product in direct contact with your skin for a prolonged period, or not to cover the product with paper, cloth, bedding, etc. The main unit might get hot, causing fire, injury, burns or a fault.

**Internal battery**

**Li-ion 00** (The internal battery of this product is a lithium-ion battery) The internal battery is not fully charged at the time of purchase. Charge the battery before using the product.

**DANGER** Be sure to read the following hazards before use.

If the leaked liquid gets on your skin or clothes, immediately rinse it off with water to avoid injury. If the liquid gets into your eyes, do not rub, but after wash your eyes with water, and immediately consult a doctor to avoid the risk of losing your eyesight. If the liquid gets on a device, wipe it off without touching it.

- Do not use in places subject to lots of dust or vibration.
- Clean the connection terminals and earphone microphone terminal with dry cotton swabs, etc. every now and then. Soiled terminals might cause poor connection. Do not exert a strong force to clean the connection terminals or earphone microphone terminal to prevent deformation.
- Clean the product with a dry soft cloth (such as the type used for eyeglasses). Do not rub it roughly with a dry cloth. The display may be damaged. Drops of water or dirt left on the display may cause stains. Wiping the product using alcohol, thinner, benzine, detergent, etc. might erase the printing on the outer casing or cause discoloration.
- Use as far away as possible from land-line phones, TVs and radios. Use nearby might affect them.
- The product may become warm while charging or during other operations, depending on the situation, but this is not abnormal.
- When the product is used by a child, parents or guardians should thoroughly read the "Basic Manual" and teach the child how to use it.
- Do not put stickers on the product. Sound may not be emitted or voice output may not be delivered to the party.

**Main unit**

- Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so might cause scratching or damage.
- Do not forcefully press your fingernails, sharp objects or hard objects against keys or display surface. Doing so might cause scratching or damage.
- The touch panel is designed to be lightly touched by fingers. Do not apply strong pressure with your fingers or sharp-pointed objects (such as fingernails, ballpoint pens and pins) on the touch panel. Touching the panel may not work in the following cases. Note that it may cause malfunction.
  - Operation with fingernails
  - Operation with foreign object on the screen
  - Operation with protective sheet or seal on the screen
  - Operation under water
- The sticker appearing after opening the card slot cover and imprinted with the IMEI is certification that the product and communication module you are using comply with the Radio Law and Telecommunications Business Law.

Do not leave on unstable places such as rocky stands or tilting surfaces. Dropping the product may cause injury or damage. Pay careful attention while vibrator is set. Also, pay sufficient attention to impact, etc.

Do not cover or wrap the product with bedding, etc. while using or charging the product. Doing so might cause fire, fault or injury.

Do not touch the product or specified charger for a long time while power is being supplied from an external source. Doing so might cause low-temperature burns.

The product may become hot by prolonged use especially in high-temperature environment. Be careful when using the product touching your skin for a long time, as it might cause low-temperature burns.

Do not use power outlets or wiring apparatus beyond its rating. Also, exceeding rating, for example, by connecting multiple devices to a single power strip might cause overheating and fire.

Do not place near corrosive chemicals or in places where corrosive gas is generated. Doing so might cause a fault or loss of internal data.

Do not use if there is smoke, abnormal odor or noise, excessive overheating, or other abnormalities. If an abnormality occurs, disconnect the specified charger from the power outlet or socket if you are charging the battery, make sure that the product is not overheating before turning the power off, and contact an au shop or Keitai Guarantee Service Center. Also, if you have dropped or damaged the product, do not continue to use it in that state, and contact an au shop or Keitai Guarantee Service Center.

The internal battery is a consumable item. If the performance of the internal battery does not recover (e.g. the usable time after each charge has become extremely short), the battery is at the end of service life, so stop use. Failure to do so might cause overheating, fire, rupture or leakage. Since the battery is built into the product, we keep your product and replace the battery for a fee. You may not use the product for a certain period. The life time of the internal battery depends on the usage etc.

**Charging equipment**

**WARNING** Be sure to read the following warnings before use.

- Do not use at other voltages than the specified power supply voltage. Doing so might cause ignition, fire, overheating, electric shock or injury.
  - AC adapter (sold separately) that can be charged overseas: 100 VAC to 240 VAC
  - Common DC Adapter 03 (sold separately): 12/24 VDC (for negative grounded vehicles only)

Firmly insert a power plug of specified charger into the power outlet or cigarette lighter socket down to the base of its pins. Incomplete insertion of the power plug might result in electric shock, overheating, ignition, fire or injury. Do not use when a specified charger is damaged, or a power outlet or a cigarette lighter socket is loose.

If the fuse in the common DC Adapter 03 (sold separately) blows, replace it with a fuse of the specified type (250 V, 1 A). Replacing with a different type of fuse might cause overheating or ignition. (For information about fuse replacement, carefully read the manual for the common DC Adapter 03 (sold separately).)

**Handling Precautions**

These precautions are provided to ensure that performance can be fully demonstrated. Thoroughly read these precautions to ensure correct use.

**Precautions common to the main unit, internal battery, charging equipment, au Nano IC Card (LTE), peripheral devices**

- Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heavy object on the product in a bag. Sitting on the product in your pocket might damage the display or internal circuit board resulting in a malfunction.
- Keeping an external device connected to the external connection terminal or earphone microphone terminal might damage the connector resulting in a malfunction. Such damage and malfunction are not covered by the warranty, even if there is no external damage.
- To ensure waterproo property (equivalent to IPX5 and IPX8) of this product, use the product with the external connection terminal cover, card slot cover, and earphone microphone terminal cover securely for use. Note that the waterproof property is not guaranteed in every usage condition. Do not allow water to get inside the product or splash water on the charging equipment or optional accessories. Do not open/close the external connection terminal cover, card slot cover, or earphone microphone terminal cover in the rain or with waterdrops on the surface of the product. Doing so might cause water intrusion resulting in internal corrosion. Malfunctions determined to be caused by water intrusion are not covered by the warranty.
- Do not use the product in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%.)
  - Charging equipment
  - Peripheral devices
- Do not use the product in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 90%. Temporary use at -21°C to 50°C is allowed.)
  - Main unit
  - au Nano IC Card (LTE) (attached to the main unit)

**au Nano IC Card (LTE)**

**WARNING** Be sure to read the following warnings before use.

Do not put the au Nano IC Card (LTE) in a cooking apparatus such as a microwave oven or a pressure vessel. Doing so might cause melting, overheating, fuming, loss of data or a fault.

**CAUTION** Be sure to read the following cautions before use.

Be careful when attaching/removing the au Nano IC Card (LTE). Doing so might injure your hands or fingers.

Use only the devices specified by the Company to insert the au Nano IC Card (LTE) in. Using a device not specified by the Company might cause loss of data or a fault. For the specified devices, contact an au shop or Customer Service Center.

Do not disassemble or modify the au Nano IC Card (LTE). Doing so might cause loss of data or a fault.

Do not use or leave the au Nano IC Card (LTE) in hot places such as by the fire or a heater. Doing so might cause melting, overheating, fuming, loss of data or a fault.

Do not throw the au Nano IC Card (LTE) into a fire or heat it. Doing so might cause melting, overheating, fuming, loss of data or a fault.

Do not touch the IC (metal) part of the au Nano IC Card (LTE) or short-circuit it. Doing so might cause loss of data or a fault.

Do not drop the au Nano IC Card (LTE) or subject it to strong impact. Doing so might cause a fault.

Do not fold, bend or place a heavy object on the au Nano IC Card (LTE). Doing so might cause a fault.

Do not wet the au Nano IC Card (LTE). Doing so might cause a fault.

Do not scratch the IC (metal) part of the au Nano IC Card (LTE). Doing so might cause a fault.

Do not store the au Nano IC Card (LTE) in dusty places. Doing so might cause a fault.

Do not store the au Nano IC Card (LTE) in places exposed to direct sunlight or hot and humid places. Doing so might cause a fault.

Store the au Nano IC Card (LTE) out of reach of small children. Failure to do so might cause injury, etc. if they accidentally swallow and choke on it.

Do not damage, modify, twist, pull or place a heavy object on the cable of the specified charger. Do not use a damaged cable. Doing so might cause an electric shock, short circuit, fire or injury.

Do not let your hands, fingers and other parts of the body touch the connection terminals or the earphone microphone terminal. Doing so might cause electric shock, injury or a fault.

If you hear thunder, do not touch the power plug. Doing so might cause an electric shock as a result of a lightning strike.

Before cleaning the charging equipment, unplug its power plug of the specified charger from the outlet or cigarette lighter socket. If the plug remains plugged in when you clean the equipment, it might cause a short circuit. Also, wipe off the dust on the charging equipment's power plug. If the plug is left covered with dust, it might cause a fire.

Wipe off dust on the power plug. Failure to do so might cause fire, burns or electric shock.

Install and position in-car devices where they do not hinder driving or safety equipment such as airbags. It might cause a traffic accident. Install in-car devices following the instructions of their manuals.

When the AC adapter is not to be used for a long time, disconnect the specified charger's power plug from the power outlet. Doing so might cause fire or a fault.

Do not use in places subject to direct splashing with water, pet urine or other liquids. Doing so might result in faults and injury resulting from overheating, fire, electric shock, or short-circuiting of electronic circuits. In the event that the product is splashed with liquid, immediately disconnect the specified charger's power plug.

Do not place anything metal (straps, clips, etc. containing metal) between a wireless charger product (sold separately) and the back of the product. Doing so might cause ignition, fire or injury.

Do not adhere anything metal (stickers, etc. containing metal) on a wireless charger product (sold separately) or the product. Doing so might cause overheating, resulting in ignition, a fault, burns or injury.

**CAUTION** Be sure to read the following cautions before use.

Do not use in humid places such as bath areas, or connect/disconnect the specified charger with wet hands. Doing so might cause electric shock, injure or a fault.

Charge the battery in a stable place. If placed on an inclined surface or wobbly stand, the product might fall causing injury or damage. Pay careful attention while vibrator is set. In addition, do not cover or wrap the product with a cloth or bedding. Doing so might cause a fire, injure or a fault.

When unplugging the specified charging equipment's power plug from the outlet or cigarette lighter socket, hold and pull the power plug. If you pull the cable, the cable might be damaged.

Do not use the common DC Adapter 03 (sold separately) with the car engine stopped. Doing so might result in draining of the car battery.

If you feel any abnormality with your skin, immediately consult a dermatologist. Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition.

Do not place anything metal (straps, clips, etc. containing metal) between a wireless charger product (sold separately) and the back of the product. Doing so might cause ignition, fire or injury.

Do not adhere anything metal (stickers, etc. containing metal) on a wireless charger product (sold separately) or the product. Doing so might cause overheating, resulting in ignition, a fault, burns or injury.

**CAUTION** Be sure to read the following cautions before use.

Do not use in humid places such as bath areas, or connect/disconnect the specified charger with wet hands. Doing so might cause electric shock, injure or a fault.

Charge the battery in a stable place. If placed on an inclined surface or wobbly stand, the product might fall causing injury or damage. Pay careful attention while vibrator is set. In addition, do not cover or wrap the product with a cloth or bedding. Doing so might cause a fire, injure or a fault.

When unplugging the specified charging equipment's power plug from the outlet or cigarette lighter socket, hold and pull the power plug. If you pull the cable, the cable might be damaged.

Do not use the common DC Adapter 03 (sold separately) with the car engine stopped. Doing so might result in draining of the car battery.

If you feel any abnormality with your skin, immediately consult a dermatologist. Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition.

Do not drop the au Nano IC Card (LTE) or subject it to strong impact. Doing so might cause a fault.

Do not fold, bend or place a heavy object on the au Nano IC Card (LTE). Doing so might cause a fault.

Do not wet the au Nano IC Card (LTE). Doing so might cause a fault.

Do not scratch the IC (metal) part of the au Nano IC Card (LTE). Doing so might cause a fault.

Do not store the au Nano IC Card (LTE) in dusty places. Doing so might cause a fault.

Do not store the au Nano IC Card (LTE) in places exposed to direct sunlight or hot and humid places. Doing so might cause a fault.

Store the au Nano IC Card (LTE) out of reach of small children. Failure to do so might cause injury, etc. if they accidentally swallow and choke on it.

**Handling Precautions**

These precautions are provided to ensure that performance can be fully demonstrated. Thoroughly read these precautions to ensure correct use.

**Precautions common to the main unit, internal battery, charging equipment, au Nano IC Card (LTE), peripheral devices**

- Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heavy object on the product in a bag. Sitting on the product in your pocket might damage the display or internal circuit board resulting in a malfunction.
- Keeping an external device connected to the external connection terminal or earphone microphone terminal might damage the connector resulting in a malfunction. Such damage and malfunction are not covered by the warranty, even if there is no external damage.
- To ensure waterproo property (equivalent to IPX5 and IPX8) of this product, use the product with the external connection terminal cover, card slot cover, and earphone microphone terminal cover securely for use. Note that the waterproof property is not guaranteed in every usage condition. Do not allow water to get inside the product or splash water on the charging equipment or optional accessories. Do not open/close the external connection terminal cover, card slot cover, or earphone microphone terminal cover in the rain or with waterdrops on the surface of the product. Doing so might cause water intrusion resulting in internal corrosion. Malfunctions determined to be caused by water intrusion are not covered by the warranty.
- Do not use the product in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%.)
  - Charging equipment
  - Peripheral devices
- Do not use the product in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 90%. Temporary use at -21°C to 50°C is allowed.)
  - Main unit
  - au Nano IC Card (LTE) (attached to the main unit)

## Available Security Codes

The product has various security codes that you can use.

The available security codes are as follows. Do not forget the various security codes that are set as they are necessary for various operations and contracts.

Example of usage	① To do remote operation of voice mail and call forwarding services from a landline phone <p>② To use Customer Service Center and to do various inquiries, applications, and modifications on the homepage</p>
Initial value	A four digit number chosen by the customer and noted on the application form

### Setting the security type for the start screen

Example of usage	To set and release the security
Initial value	Slide

### PIN code

Example of usage	To prevent unauthorized use of the au Nano IC Card (LTE) by third parties
Initial value	1234

### Lock No ("NFC/Osaifu-Keitai lock setting")

Example of usage	To use the "NFC/Osaifu-Keitai lock setting"
Initial value	1234

### Music and videos

- Do not listen to music or watch videos while driving a car or motorbike, or riding a bicycle. Use of cell phones while driving a car or motorbike is prohibited by law. (Use of cell phones while riding a bicycle may also be punishable by law.) In addition, stay alert to the traffic around you even when walking. Surrounding sounds may not be heard clearly, and gazing at the screen might distract your attention causing a traffic accident. Be especially careful at railroad crossings, on a platform, and at pedestrian crossings.
- Take care not to listen at ear-splitting volume for a long time, as it might affect hearing.
- Be careful of sound leakage from earphones in trains or other places with many people around you.

### Copyrights and rights of portrait

- You are not allowed to copy, distribute, publish, modify or edit the data you shot, recorded or downloaded using this product without the consent of the copyright holder, except for personal use, under the copyright law. In addition, do not use or modify portraits or names of other individuals without their consent, as it might infringe on rights of portrait. Note that shooting and recording may be restricted at some live performances, shows and exhibitions even for personal use.
- Be careful about the copyright and portrait right when posting photos you shot, etc. on Internet homepages.

### Backup content on the product

- Please back up important content registered to the product or downloaded for the product from an outside source. Content recorded to memory on the product sometimes disappears or is altered by unexpected factors, such as static electricity or a fault, repair, mishandling, etc.
  - How to make backups: Store important data such as contacts data, music, shot photos and videos on microSD memory cards. You can also send files as mail attachment or transfer to your PC. Note, however, that there are some data that cannot be copied by using these means.

- Battery may deplete if the phone is left powered for a long period even after completing charging.

### au Nano IC Card (LTE)

- The au Nano IC Card (LTE) is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When a malfunction is suspected, or in case of theft or loss, contact an au shop or PiPiT.
- Do not forcibly remove or insert the au Nano IC Card (LTE). Be careful not to exert excessive force when inserting the card into your au cell phone.
- You are responsible for any damage caused by inserting your au Nano IC Card (LTE) into some other IC card reader, etc.
- Keep the IC (metal) part of your au Nano IC Card (LTE) clean. Wipe the card with a dry, soft cloth (such as for cleaning eyeglasses) for cleaning.
- Do not put stickers, etc. on the au Nano IC Card (LTE).

### Camera

- When using the camera, follow common rules of etiquette regarding camera use.
- Image data might be altered or lost due to malfunction, repair or mishandling of this product. The Company takes no responsibility for recovery of altered or lost data, damages resulting from altered or lost data, and lost profits.
- When photographing important occasions (such as a wedding), take a trial shot and check the shot image to make sure it is correctly shot.
- Do not use the camera for recording commercially available books or information of which photographing is not allowed.
- Do not leave the camera lens exposed to direct sunlight. Imaging elements might be discolored or burnt.

- Do not immerse the product in water with soap, detergent or bath salts in it.
- Do not immerse the product in seawater, a swimming pool or hot spring.
- Do not immerse the product in any liquid (alcohol, etc.) other than water.
- Do not place the product directly on the sand at a beach, etc. Sand or other small particles might get inside the microphone, speaker, noise canceller microphone, etc. causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.
- Do not use the product underwater.
- The product does not float.
- Do not leave the product in a humid place such as a bathroom or kitchen for an extended period of time.

### Do not immerse the product in water with soap, detergent or bath salts in it.

- Do not immerse the product in seawater, a swimming pool or hot spring.
- Do not immerse the product in any liquid (alcohol, etc.) other than water.
- Do not place the product directly on the sand at a beach, etc. Sand or other small particles might get inside the microphone, speaker, noise canceller microphone, etc. causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.
- Do not use the product underwater.
- The product does not float.
- Do not leave the product in a humid place such as a bathroom or kitchen for an extended period of time.



Soap/detergent/ bath salts



Seawater



Swimming pool



Hot spring



Sand/trud

## Tips for Comfortable Use

- Once the product gets wet, water may remain in gaps on the product. Shake the product well to drain water. Especially make sure to drain water remaining in the microphone, speaker, and noise canceller microphone.
- Even after the water is drained, the inner parts might be still wet. Although you can use the product, do not place it near things that must not get wet. Take care not to wet your clothes, bag or contents of the bag.
- Drain water if it becomes temporarily hard to hear the sound due to water remaining in the microphone.

## Notes on various usage scenes

### <In the rain>

- You can make calls holding the product with wet hands in the rain without an umbrella (101.6 mm per hour, wind speed 17.8 m/s, for 30 minutes).
- Never open/close the external connection terminal cover, card slot cover, or earphone microphone terminal cover if the product is exposed to rain, or your hands are wet.

### Do not immerse the product in water with soap, detergent or bath salts in it.

- Do not immerse the product in seawater, a swimming pool or hot spring.
- Do not immerse the product in any liquid (alcohol, etc.) other than water.
- Do not place the product directly on the sand at a beach, etc. Sand or other small particles might get inside the microphone, speaker, noise canceller microphone, etc. causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.
- Do not use the product underwater.
- The product does not float.
- Do not leave the product in a humid place such as a bathroom or kitchen for an extended period of time.

- Before using the product, make sure that "other wireless stations" are not in operation nearby.
- In the event that instances of radio wave interference have occurred between the product and "other wireless stations", immediately either relocate the product or stop operation of the device (stop the emission of radio waves).
- If you are unclear on any points or are troubled by anything, contact an au shop or Customer Service Center.

- The connections between this product and all other Bluetooth® and Wireless LAN (Wi-Fi®) devices have not been confirmed. Therefore, connections with all Bluetooth® and Wireless LAN (Wi-Fi®) devices are not guaranteed.
- This product supports security features for wireless communications that are compliant with the Bluetooth® and Wireless LAN (Wi-Fi®) standard specifications, but the security may not be sufficient depending on the usage environment and configuration. Be careful when making data communication using Bluetooth® or Wireless LAN function (Wi-Fi®).
- Wireless LAN (Wi-Fi®) has the advantage that it can be freely connected anywhere within the radio wave range, as it uses radio waves for exchanging information. At the same time, there is a risk that a malicious third party may obtain unauthorized access if security settings have not been configured. You are recommended to configure security settings before use at your decision and responsibility.
- The Company assumes no responsibility for leakage of data or information that may occur during Bluetooth®/Wireless LAN (Wi-Fi®) communication.

### Wireless charging

- The information light on a wireless charging pad remains on after charging completes, but this is not abnormal.
- Charging may stop just before phone is completely charged.
- If charging stops just before phone is completely charged, charging may not immediately resume.
- Some Qi-specification products may experience repeated starting/stopping of charging. Charge with a specified au product.
- Above a certain temperature, the charging function may stop or charging may take a long time, but this is not abnormal. Wait for the temperature to cool.
- Place a wireless charging pad on a flat, stable surface before charging.
- Turn the phone's vibration function off before wireless charging. Vibrating of the phone may cause it to move, preventing charging from completing or causing it to fall.
- Before charging, remove any case, cover, film, stickers, etc. attached to the product.
- Make sure that the charging pad and phone are not wet.
- Do not wirelessly charge with a separately-sold AC adapter or microUSB cable connected to the phone.
- Keep any other wireless chargeable device other than the au product you are charging at least 30 cm away. The product you are charging may not be detected and prevent charging.
- If a TV, radio, etc. experience noise, charge as far away from the TV, radio, etc. as possible.
- Depending on the Qi-specification product, calls may not be received during charging. Charge with an au-specified product.
- Some Qi-specification products may experience interference with the Osaifu-Keitai® function, preventing charging from starting. Charge with an au-specified product.
- Activating of apps, etc. during wireless charging may prevent charging from completing.
- Phone may become warm while on a wireless charging pad, but this is not abnormal.
- Reception (quality of data communication, etc.) may be affected while charging on a wireless charging pad.
- Do not move a wireless charging pad or the phone while charging.

### Charging equipment

- When the charging equipment is not to be used, unplug the power plug of the specified charger from the outlet or cigarette lighter socket.
- Do not wrap the power cord of specified charger around the adapter unit. Doing so might cause electric shock, fault, injury, overheating or fire.
- Do not forcibly bend the charging equipment's plug or the connection between the connector and power cord. Doing so might cause electric shock, fault, injury, overheating or fire.

Temperature	Operating durability conditions: -21 to 50°C (Continuously for 3 hours each) <p>Storage conditions: -30 to 60°C (Continuously for 4 hours each)</p>
Low-pressure capability	Tested at low pressure for 2 hours continuously (57.11 kPa: approx. 4.572 m)
Salt-fog test	Tested at 5% salt fog for 24 hours continuously, then dried for 24 hours

Water resistance	Water resistance in falling rain and to water intrusion continuously for 30 minutes, and IPX5/IPX8 water resistance
Dust resistance	Tested in dust conditions for 6 hours continuously (8.9±1.3 mJ/sec, 10.6±7 g/m <sup>3</sup> )
Shock resistance	Tested by dropping from a height of approximately 1.22 m onto plywood (lauan) in 26 directions
Vibration resistance	Tested with vibration for 1 hour continuously (3 directions 1 hour each/20 to 2,000 Hz)
Sunlight resistance	Tested in sunlight for 24 hours continuously (totaling 1,120 W/m <sup>2</sup> )
Humidity resistance	Tested at high humidity for 10 consecutive days (for 16 hours at 45% and for 8 hours at 95% per day)

Testing has also been carried out that conforms to procurement standards (MIL-STD-810G) of the US Dept. of Defense, which carries out rigid testing (according to our testing method).

Before using the product, thoroughly read "Important Items to Remember before Use" and "Tips for Comfortable Use" to ensure correct use. Failure to follow the contents described in these sections may cause the intrusion of water, sand or other foreign material, resulting in overheating, ignition, electric shock, injury or a fault.

Since operation of the product on each usage scene was confirmed based on the above assumption, proper operation of the product in every possible condition during actual use is not guaranteed. Malfunctions determined to be caused by mishandling by the customer are not covered by the warranty.

Temperature	Operating durability conditions: -21 to 50°C (Continuously for 3 hours each) <p>Storage conditions: -30 to 60°C (Continuously for 4 hours each)</p>
Low-pressure capability	Tested at low pressure for 2 hours continuously (57.11 kPa: approx. 4.572 m)
Salt-fog test	Tested at 5% salt fog for 24 hours continuously, then dried for 24 hours

Before using the product, thoroughly read "Important Items to Remember before Use" and "Tips for Comfortable Use" to ensure correct use. Failure to follow the contents described in these sections may cause the intrusion of water, sand or other foreign material, resulting in overheating, ignition, electric shock, injury or a fault.

Since operation of the product on each usage scene was confirmed based on the above assumption, proper operation of the product in every possible condition during actual use is not guaranteed. Malfunctions determined to be caused by mishandling by the customer are not covered by the warranty.

Water resistance	Water resistance in falling rain and to water intrusion continuously for 30 minutes, and IPX5/IPX8 water resistance
Dust resistance	Tested in dust conditions for 6 hours continuously (8.9±1.3 mJ/sec, 10.6±7 g/m <sup>3</sup> )
Shock resistance	Tested by dropping from a height of approximately 1.22 m onto plywood (lauan) in 26 directions
Vibration resistance	Tested with vibration for 1 hour continuously (3 directions 1 hour each/20 to 2,000 Hz)
Sunlight resistance	Tested in sunlight for 24 hours continuously (totaling 1,120 W/m <sup>2</sup> )
Humidity resistance	Tested at high humidity for 10 consecutive days (for 16 hours at 45% and for 8 hours at 95% per day)

### Do not immerse the product in water with soap, detergent or bath salts in it.

### Do not immerse the product in seawater, a swimming pool or hot spring.

- Do not immerse the product in any liquid (alcohol, etc.) other than water.
- Do not place the product directly on the sand at a beach, etc. Sand or other small particles might get inside the microphone, speaker, noise canceller microphone, etc. causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.
- Do not use the product underwater.
- The product does not float.
- Do not leave the product in a humid place such as a bathroom or kitchen for an extended period of time.

Before using the product, thoroughly read "Important Items to Remember before Use" and "Tips for Comfortable Use" to ensure correct use. Failure to follow the contents described in these sections may cause the intrusion of water, sand or other foreign material, resulting in overheating, ignition, electric shock, injury or a fault.

- Do not immerse the product in any liquid (alcohol, etc.) other than water.
- Do not place the product directly on the sand at a beach, etc. Sand or other small particles might get inside the microphone, speaker, noise canceller microphone, etc. causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.
- Do not use the product underwater.
- The product does not float.
- Do not leave the product in a humid place such as a bathroom or kitchen for an extended period of time.

Before using the product, thoroughly read "Important Items to Remember before Use" and "Tips for Comfortable Use" to ensure correct use. Failure to follow the contents described in these sections may cause the intrusion of water, sand or other foreign material, resulting in overheating, ignition, electric shock, injury or a fault.

## Precautions on charging

The optional accessories are not waterproof/dustproof. Be sure to check the following points before and after charging.

- Never charge the battery if the product is wet. Doing so might cause electric shock or short circuit resulting in a fire, burns or a fault.
- Check that the main unit is not wet. If you are charging the battery just after the product gets wet, drain water well and wipe the remaining water off with a clean dry cloth before opening the external connection terminal cover.
- If you charge the battery with the external connection terminal cover open, be sure to tightly close the cover when charging is finished. We recommend using the Wireless Charging Pad O1 (sold separately) to charge the battery to prevent water from entering from the external connection terminal.
- Do not touch the specified charging equipment with wet hands. Doing so might cause electric shock.
- Do not splash water over the specified charging equipment. Do not use it near water, such as in a bathroom, shower room, kitchen or washroom. Doing so might cause fire, electric shock, injure or a fault. Do not bring it into a bathroom, etc. even when you are not charging with them. Doing so might cause fire, electric shock, injure or a fault.

- When using hands-free kit, note that the speaker may emit loud sound. Take care to keep the speaker at a safe distance from your ears.
- Do not to cover the sensor with your finger or put a sticker on it. Doing so may hinder the sensor for detecting the ambient light level and functioning correctly.
- Do not put a sticker, etc. on the proximity sensor. Doing so may cause the sensor to malfunction and make the display always turned off while receiving a call or during a call.

### Touch Panel

- Use your finger to operate the touch panel. Do not use ballpoint pens, pencils or other sharp-pointed objects. Using such objects does not only hinder correct operation of the touch panel, but also might cause scratching or damage to the display.
- Do not put stickers or sheets (e.g. commercially available protective films, peep prevention sheets) on the display. Doing so might hinder correct operation of the touch panel.
- Do not operate the touch panel with fingernails. Doing so might result in split nails or jammed fingers.
- If the display surface is dirty, it may not function correctly. In such case, wipe the display surface with a dry, soft cloth.
- When carrying the product in your pocket or bag, take care not to put the touch panel close to metals or other conductive materials, as it might cause false operation of the touch panel.
- Gloves may be worn while operating the touch panel, however, operation may not be optimal depending on the thickness/material of the gloves.
  - If water on the gloves prevents operation of the touch panel, wipe the water off.
  - If touch operation with gloves is not possible immediately after operating with no gloves, first place the phone in and wake it from sleep mode.
  - If touch operation is not possible with gloves that are not snug on the fingertips, use the pads of your fingers.

- Note that applying unnecessary force with the external connection terminal or the earphone microphone terminal connected to the external device might cause damage.
- Do not discard the product together with regular trash. Please cooperate in the collection of the product when it is no longer needed to protect the environment and effectively use resources. Old product is collected at au shops and other places.
- Insert only a microSD memory card into the memory card slot on the product.
- Do not exert excessive force when attaching/removing a microSD memory card. Doing so might injure your hands or fingers.
- While writing/reading data to/from a microSD memory card, do not subject the product to vibration or impact, or turn off the power. Doing so might cause loss of data or a fault.
- Take care not to cover the microphone with your fingers during a call. The other party may not be able to hear your voice clearly.

### Do not immerse the product in water with soap, detergent or bath salts in it.

### Do not immerse the product in seawater, a swimming pool or hot spring.

- Do not immerse the product in any liquid (alcohol, etc.) other than water.
- Do not place the product directly on the sand at a beach, etc. Sand or other small particles might get inside the microphone, speaker, noise canceller microphone, etc. causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.
- Do not use the product underwater.
- The product does not float.
- Do not leave the product in a humid place such as a bathroom or kitchen for an extended period of time.

This product has a waterproof property equivalent to IPX5\*1 and IPX8\*2, as well as a dustproof property equivalent to IP6X\*3 on the condition that the external connection terminal cover, card slot cover, and earphone microphone terminal cover are securely attached.

\*1 IPX5 equivalent means that the product will maintain its operability as a phone even if it is sprayed with water from a 6.3 mm diameter nozzle at a distance of about 3 meters for more than 3 minutes at a rate of about 12.5 liters per minute from any direction.

\*2 IPX8 equivalent means that the product will maintain its operability as a phone with no water getting inside the main unit even if it is gently submerged in a tank of still tap water at room temperature to a depth of 1.5 meter for about 30 minutes.

\*3 IP6X equivalent means that the product will not have permitted intrusion of grit or dust even after it has been placed in an apparatus with grit and dust of diameters of 75 μm or less and shaken for 8 hours.

Testing has also been carried out that conforms to procurement standards (MIL-STD-810G) of the US Dept. of Defense, which carries out rigid testing (according to our testing method).

Water resistance	Water resistance in falling rain and to water intrusion continuously for 30 minutes, and IPX5/IPX8 water resistance
Dust resistance	Tested in dust conditions for 6 hours continuously (8.9±1.3 mJ/sec, 10.6±7 g/m <sup>3</sup> )
Shock resistance	Tested by dropping from a height of approximately 1.22 m onto plywood (lauan) in 26 directions
Vibration resistance	Tested with vibration for 1 hour continuously (3 directions 1 hour each/20 to 2,000 Hz)
Sunlight resistance	Tested in sunlight for 24 hours continuously (totaling 1,120 W/m <sup>2</sup> )
Humidity resistance	Tested at high humidity for 10 consecutive days (for 16 hours at 45% and for 8 hours at 95% per day)

### Do not immerse the product in water with soap, detergent or bath salts in it.

### Do not immerse the product in seawater, a swimming pool or hot spring.

- Do not immerse the product in any liquid (alcohol, etc.) other than water.
- Do not place the product directly on the sand at a beach, etc. Sand or other small particles might get inside the microphone, speaker, noise canceller microphone, etc. causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.
- Do not use the product underwater.
- The product does not float.
- Do not leave the product in a humid place such as a bathroom or kitchen for an extended period of time.

### Draining water after wetting the product

As some parts of this product are not watertight, if you use the product after it gets wet, water remaining in those parts might wet your clothes or bag, or the sound might become hard to hear.

Follow the steps below to drain water.

- Wipe water thoroughly on the surface of the product with a clean dry cloth without waste textiles**

The rubber seal around the external connection terminal cover, card slot cover, and earphone microphone terminal cover is important to maintain waterproof property. Do not damage or remove the rubber seals. When closing the external connection terminal cover, card slot cover, or earphone microphone terminal cover, take care not to get the rubber seals caught. Forcibly closing the cover with the rubber seals caught may damage them resulting in loss of waterproof property. Just a small particle (a hair, a grain of sand, etc.) on the seals can cause water leak.

If any liquid other than plain water (e.g. alcohol) gets on the rubber seals, it may cause deterioration in durability.

Do not insert sharp objects into gaps around the external connection terminal cover, card slot cover, or earphone microphone terminal cover. Doing so might damage or deform the product or damage the rubber seals, causing water leak.

It is recommended to replace the parts for maintaining waterproof property once every two years regardless of whether any abnormality is present. For information on part replacement, contact an au shop near you or Keitai Guarantee Service Center.

### Subjecting product to shock

The product might break if it is subjected intentionally to extreme impact such as being thrown or dropped forcibly. Note also that the product gets scratches, etc. by falling impact even though its functionality of the main unit remains intact.

Do not use cotton swabs or anything pointed in the microphone, speaker, etc. Doing so may damage/deform the product or allow intrusion of water.

## PIN Code

### PIN code

To prevent unauthorized use of the au Nano IC Card (LTE) by a third party, you can set the product to require PIN code entry every time the power is turned on. You also need to enter PIN code when setting whether the PIN code entry is required.

If the PIN code is incorrectly entered three times consecutively, the PIN code will be locked. You can unlock the PIN code using PUK code.

- PIN code is "1234" and PIN code entry was set to not be required at the time of purchase. You can change PIN code to any four- to eight-digit number, and set the PIN code entry to be required as necessary.

## PUK code

In case the PIN code is locked, you can unlock it by entering the PUK code.

- PUK code is an eight-digit number given at the time of purchase, which is printed on the back side of the plastic card on which your au Nano IC Card (LTE) is attached.

- After entering the PUK code, you need to set a new PIN code.
- If the PUK code is incorrectly entered ten times consecutively, contact an au shop, PiPiT or Customer Service Center.
- PIN code is not reset by initializing the product.

### After the product gets wet

After the product gets wet, drain water, and wipe the main unit with a clean dry cloth. Do not use the product near hot air (e.g. hairdryer).

In cold climates, water on the product may turn to frost. Using the product with frost may cause a fault. Do not leave the product without wiping off the water. (No special measures against condensation have been implemented in this product.)

### Rubber seals

The rubber seal around the external connection terminal cover, card slot cover, and earphone microphone terminal cover is important to maintain waterproof property. Do not damage or remove the rubber seals.

When closing the external connection terminal cover, card slot cover, or earphone microphone terminal cover, take care not to get the rubber seals caught. Forcibly closing the cover with the rubber seals caught may damage them resulting in loss of waterproof property. Just a small particle (a hair, a grain of sand, etc.) on the seals can cause water leak.

If any liquid other than plain water (e.g. alcohol) gets on the rubber seals, it may cause deterioration in durability.

Do not insert sharp objects into gaps around the external connection terminal cover, card slot cover, or earphone microphone terminal cover. Doing so might damage or deform the product or damage the rubber seals, causing water leak.

It is recommended to replace the parts for maintaining waterproof property once every two years regardless of whether any abnormality is present. For information on part replacement, contact an au shop near you or Keitai Guarantee Service Center.

### Subjecting product to shock

The product might break if it is subjected intentionally to extreme impact such as being thrown or dropped forcibly. Note also that the product gets scratches, etc. by falling impact even though its functionality of the main unit remains intact.

Do not use cotton swabs or anything pointed in the microphone, speaker, etc. Doing so may damage/deform the product or allow intrusion of water.

### <In a kitchen>

You can use the product in the kitchen and other places where water is used.

- Do not splash the product with or immerse it in soap water, detergent water, seasonings, juices, etc. other than tap water.
- Do not immerse the product in or splash it with boiling water.
- Do not place the product where it gets extremely hot or cold such as near a stove or in a refrigerator.

## Common precautions

### External connection terminal cover, card slot cover, and earphone microphone terminal cover

Make sure that the external connection terminal cover, card slot cover, and earphone microphone terminal cover are firmly closed. Just a small particle (a hair, a grain of sand, etc.) on the seals can cause water leak.

Do not open/close the external connection terminal cover, card slot cover, or earphone microphone terminal cover with gloved hands. Just a small particle (a hair, a grain of sand, etc.) on the seals can cause water leak. Wipe off any minuscule droplets of water or dirt with a clean dry cloth before closing the covers.

## Notes on Applications

- Be sure to check the security of the app, then install it at your own risk. Some apps might cause virus infection, damage various data, and send out your location information, usage history or personal information stored in your cell phone via the Internet.
- The Company assumes no responsibility for any failures that might be caused by apps you have installed. Repair costs in this case may be charged even during the warranty period.
- The Company assumes no responsibility for any disadvantage brought to you or any third party by the apps you have installed.
- Insertion of a microSD memory card is necessary to use some apps.
- Some apps prohibit the product from entering sleep mode while they are active, or rapidly drain the battery while running in the background.
- Operational procedures and screen appearances of the apps preinstalled in this product and those installed by you are subject to change without notice as a result of version upgrade. In addition, operating procedures described in this manual may differ from the actual procedures.

## Specific Absorption Rate of This Mobile Phone

This model TORQUE mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio waves. This mobile phone has been designed in observance of the Japanese technical regulations regarding exposure to radio waves\* and limits to exposure to radio waves recommended by equivalent international guidelines. These international guidelines were set out by the International Commission on Non-ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition. The Japanese technical regulations and international guidelines define the limits using a unit of measurement known as the Specific Absorption Rate (SAR), which represents the average amount of radio frequency energy absorbed by the human. The SAR limit for

- 42 -

Warning! Read this information before using your phone. In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

### Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.39 inches (1.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.39 inches (1.0 cm) must be maintained between the user's body and the back of the phone, including the antenna. All beltclips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

**Turn off your phone before flying**  
You should turn off your phone when boarding any aircraft. To prevent possible interference with aircraft systems, U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

- 49 -

mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use at the ear is 0.433 W/kg. The highest SAR value for this mobile phone when tested for use on the body is 0.542 W/kg. The actual SAR of this mobile phone while talking on the phone can be well below that indicated above. This is due to automatic changes in the power level of the mobile phone to ensure it only outputs the minimum power required to communicate with a base station. Therefore in general, the closer you are to a base station, the lower the power output of the mobile phone. This mobile phone can be used in positions other than against your ear. Use an accessory such as a carrying case, etc. so that you can hold the product at least 1.5 cm away from your body and also do not contain metal parts between the product and your body. By doing this, this mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio waves. The World Health Organization has stated that present scientific information does not indicate the use of mobile devices has any harmful effects on the human body. They recommend that if you are still worried about your exposure then you can limit your talk time or use a handsfree kit to keep the mobile phone away from your head and body. If you would like to know more detailed information, please refer to the WHO website.
**http://www.who.int/docstore/peh-emf/publications/facts\_press\_fact\_english.htm**  
Please refer to the websites listed below if you would like to know more detailed information regarding SAR.

- Ministry of Internal Affairs and Communications website **http://www.tele.soumu.go.jp/tele/index.htm**
- Association of Radio Industries and Businesses website **http://www.arib-emf.org/index02.html (in Japanese only)**
- au homepage **http://www.au.kddi.com/**

\* Technical regulations are defined by the Ministerial Ordinance Related to Radio Law (Article 14-2 of Radio Equipment Regulations).

- 43 -

- 44 -

### European RF Exposure Information

Your mobile device is both a radio transmitter and receiver, and is designed not to exceed limits for exposure to radio waves recommended by international guidelines. These guidelines were produced by independent scientific organization, ICNIRP, and include safety margins designed to protect all persons, regardless of age and condition of health.

The guidelines apply a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit for mobile devices is 2 W/kg, and the highest SAR value for this device was 0.427 W/kg\*.

As testing measures SAR at the highest transmitting power of a device, actual SAR tends to be lower during ordinary operation. Lower SAR levels are typical during ordinary operation as automatic changes are made within the device to ensure the network can be reached with minimal power. The World Health Organization (WHO) has stated that present scientific information does not indicate the need for any special precautions to be adopted when using mobile devices. WHO also notes that those wishing to reduce exposure may do so by limiting call length and by using a 'hands-free' device to distance the phone from the head and body. For further information, please see the WHO website: http://www.who.int/peh-emf/en/
\* Note that tests are also carried out in accordance with international testing guidelines.

- 45 -

- 50 -

## Intellectual Property Rights

### Trademarks

Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies.



Google and Google logo, Android and Android logo, Google Play and Google Play logo, Play Music, Play Music logo, Play Movies, Play Movies logo, Gmail and Gmail logo, Google Maps and Google Maps logo, Hangouts and Hangouts logo, Google Maps Navigation and Google Maps Navigation logo, Google Chrome, Google Chrome logo, Google Voice Search and Google Voice Search logo, and YouTube and YouTube logo are trademarks or registered trademarks of Google, Inc.

Microsoft®, Windows® and Windows Vista®/Windows®7/Windows®8 are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

The official name for Microsoft® Windows® is Microsoft® Windows® Operating System.

Microsoft®, Microsoft® Excel®, Microsoft® PowerPoint®, Windows Media®, and Exchange® are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

Microsoft® Word and Microsoft® Office are product name of Microsoft Corporation in the United States.

QR code is a trademark of DENSO WAVE INCORPORATED.

microSD, microSDHC and microSDXC logos are trademarks of SD-3C, LLC.

Bluetooth® and logo are registered trademarks owned by the Bluetooth SIG, Inc., and KYOCERA Corporation is licensed to use those trademarks.

- 46 -

### Declaration of Conformity

Product is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1 (a), 3.1 (b) and 3.2. The Declaration of Conformity can be found on http://www.kyocera.co.jp/prdct/telecom/consumer/ (Japanese only).

-Note-  
Below frequency bands are restricted for indoor use only.  
5150 - 5250 MHz (802.11a/n/ac) in US  
5150 - 5350 MHz (802.11a/n/ac) in EU

Safety Information
To prevent possible hearing damage, do not listen at high volume levels for long periods.



- 47 -

- 51 -

Wi-Fi®, WPA®, Wi-Fi CERTIFIED logo and Wi-Fi Protected Setup logo are registered trademarks of Wi-Fi Alliance. Wi-Fi CERTIFIED™ and Wi-Fi Protected Setup are trademarks of Wi-Fi Alliance.

\*Qi (chi) and the qi symbol are trademarks of the Wireless Power Consortium (WPC).

FeliCa is a contactless IC card technology developed by Sony Corporation. FeliCa is a registered trademark of Sony Corporation.

㊄ is a registered trademark of FeliCa Networks, Inc.

\*jibe® is a trademark of Jibe Mobile K.K.

Facebook and Facebook logo are trademarks or registered trademarks of Facebook, Inc.

Twitter and Twitter logo are trademarks of Twitter, Inc., and are used under license.

GREE and the GREE logo are registered trademarks of GREE, Inc. in Japan. All other trademarks are the property of their respective owners.

TRENDMICRO, VirusBuster are trademarks of Trend Micro Inc.

Copyright © 2010- Three Laws of Mobility. All Rights Reserved.

iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language, and for phrase prediction methods for English. iWnn IME@OMRON SOFTWARE Co., Ltd. 2009-2012 All Rights Reserved.

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM.

- 48 -

(b) Illegally importing the software or a part of it is prohibited.

(c) This Software is provided without implied warranties of merchantability, fitness for a particular purpose and noninfringement of third party rights.

Note that the existing license agreement takes priority for usage of GNU General Public License (GPL), GNU Library/Lesser General Public License (LGPL) included in software, software based on other open source software license and software that KYOCERA Corporation is licensed.

For information on the Open source software, refer to "Open source software" as follows;

The product includes pictograms licensed by NTT DOCOMO, INC.

\*PhotoSolid®, the function to avoid blurring still images, is a product of Morpho, Inc. \*PhotoSolid® is a registered trade mark of Morpho, Inc.

\*MovieSolid®, the function to avoid blurring videos, is a product of Morpho, Inc. \*MovieSolid® is a registered trade mark of Morpho, Inc.

\*Morpho Defocus® is the technology to create background blur image. \*Morpho Defocus® is a trade mark of Morpho, Inc.

\*Morpho Effect Library®, the image effect technology, is a product of Morpho, Inc. \*Morpho Effect Library® is a trade mark of Morpho, Inc.

\*Morpho HDR® is adopted for HDR (High Dynamic Range) technology. \*Morpho HDR® is a trade mark of Morpho, Inc.

\*QuickPanorama®, the technology for generating panoramic images, is a product of Morpho, Inc. \*QuickPanorama® is a registered trade mark of Morpho, Inc.

\*TrackSolid®, the technology for auto-tracking a subject, is a product of Morpho, Inc. \*TrackSolid® is a registered trade mark of Morpho, Inc.

GoPro® is a trademark or registered trademark of GoPro, Inc. in the United States and other countries.

All other company names and product names are trademarks or registered trademarks of respective companies referred to in this manual.

Users of the product are authorized to use software installed into the mobile phone described in this instruction manual. Pay attention to the following points when using the software.

(a) The software installed on this product or part of it may not be altered, delivered, modified, analyzed, reverse-engineered, derived, and any such actions are prohibited.

- 46 -

(b) Illegally importing the software or a part of it is prohibited.

(c) This Software is provided without implied warranties of merchantability, fitness for a particular purpose and noninfringement of third party rights. Note that the existing license agreement takes priority for usage of GNU General Public License (GPL), GNU Library/Lesser General Public License (LGPL) included in software, software based on other open source software license and software that KYOCERA Corporation is licensed. For information on the Open source software, refer to "Open source software" as follows;

### Export Administration Regulations

This product and its accessories may be subject to the Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Law" and its related laws).

In addition, U.S. Re-export Regulations (Export Administration Regulations and the related laws and regulations), regulations in other countries may apply to this product and its accessories. To export and re-export this product and its accessories, directly or indirectly, take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry, the U.S. Department of Commerce, or authority concerned.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

**Warning**  
The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

- 47 -

## FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

**Warning**  
The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**FCC RF EXPOSURE INFORMATION**  
Warning! Read this information before using your phone.

- 48 -

- 49 -

- 50 -

- 51 -

- 52 -

- 53 -

- 54 -

- 55 -

- 56 -

- 57 -

- 58 -

- 59 -

- 60 -

- 61 -

- 62 -

- 63 -

- 64 -

- 65 -

- 66 -

- 67 -

- 68 -

- 69 -

- 70 -

- 71 -

- 72 -

- 73 -

- 74 -

- 75 -

- 76 -

- 77 -

- 78 -

- 79 -

- 80 -

- 81 -

- 82 -

- 83 -

- 84 -

- 85 -

- 86 -

- 87 -

- 88 -

- 89 -

- 90 -

- 91 -

- 92 -

- 93 -

- 94 -

- 95 -

- 96 -

- 97 -

- 98 -

- 99 -

- 100 -

- 101 -

- 102 -

- 103 -

- 104 -

- 105 -

- 106 -

- 107 -

- 108 -

- 109 -

- 110 -

- 111 -

- 112 -

- 113 -

- 114 -

- 115 -

- 116 -

- 117 -

- 118 -

- 119 -

- 120 -

- 121 -

- 122 -

- 123 -

- 124 -

- 125 -

- 126 -

- 127 -

- 128 -

- 129 -

- 130 -

- 131 -

- 132 -

- 133 -

- 134 -

- 135 -

- 136 -

- 137 -

- 138 -

- 139 -

- 140 -

- 141 -

- 142 -

- 143 -

- 144 -

- 145 -

- 146 -

- 147 -

- 148 -

- 149 -

- 150 -

- 151 -

- 152 -

- 153 -

- 154 -

- 155 -

- 156 -

- 157 -

- 158 -

- 159 -

- 160 -

- 161 -

- 162 -

- 163 -

- 164 -

- 165 -

- 166 -

- 167 -

- 168 -

- 169 -

- 170 -

- 171 -

- 172 -

- 173 -

- 174 -

- 175 -

- 176 -

- 177 -

- 178 -

- 179 -