TORQUE® GO3 Setting Guide

Introduction

Thank you for buying the "TORQUE G03" (simply called the "product" from here on). In this guide, settings and precautions for using the product are described. For explanations of basic functions, refer to "Basic Manual".

- Basic Operation
- Describes the basic operations
- Initial Settings Make initial settings when you turn the power on for the first time
- au Easy Setting
- Set au ID F-mail
- Make initial settings for E-mail (@
- Basic Manual App Describes how to download/use "Basic Manual app".
- Describes how to receive a call Setting Display Describes how to set brightness level

Describes how to make a call

Making a Call

Receiving a Call

and backlight time.

- Setting Wi-Fi® Describes how to connect Wi-Fi® net-
- Viewing/Playing Data Describes how to view/play still images or video data.

Transferring data from au Settings Menu

Describes how to restore/back up data from/to your previously used phone to/ from this product using microSD card or the au server

Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies The TM, ® marks may be omitted in this manual

Illustrations and screens shown in this manual may look different from the actual

In some cases, minor details or a part of a screen may be omitted.

July 2017, 1st Edition Sold by: KDDI CORPORATION
OKINAWA CELLULAR TELEPHONE COMPANY Manufactured by: KYOCERA Corporation

Basic Operation

For explanations of basic functions, refer to "Basic Manual".

《Home Screen (Standard Home)》



Dower button / fingerprint sensor

Turning the Power On

Press and hold 😃 (Power button) until the charging light turns on.

Displaying Home screen From the Start screen, tap "@" and slide/flick toward "START" to display the Home screen Slide/flick toward "CAMERA"/"PHONE" to activate camera/phone



《Start screen》



Navigation bar

■ (BACK): Return to the previous screen. When *▼ appears in the character entry screen, tap this button to hide the keyboard or menu O (HOME): Display the Home screen. Long-touching this button activates Google (Google

Now).

Show recently-used applications. Long-touching this button activates the multiwindow during apps activation. When the multi-window activates, this button is changed to "\equiv Long-touching this button deactivates the multi-window. (RECENTS):

Display

Touch directly with your finger to operate

Lightly touch a screen and then immediately release your finger. Tapping a screen twice in the same position is called double-tap

Touch the screen and flick up/ down/left/right.



Keep touching a screen.

Zoom in/Zoom out



While lightly touching the screen, trace to the desired direction.



With two fingers on the screen widen your fingers (zoom in) or close them (zoom out).



Drag To move an item, icon, etc. lightly touch the screen and slide it to the desired position.



Character entry

For character entry, there are flick input and input by tapping a key repeatedly.

Tap a key to display characters like the right screen that can be input by flick input. Flick to the direction of the character to enter



mode switch key Tap to switch character type

(10-key))

《Character entry screen

Setting Silent mode

- Press and hold ► (volume down button) on the left side of the product for at least one second to set the Silent mode to ON/OFF.
 To change the Silent mode type, while in the Silent mode, press ► (volume up button) / ► (volume down button) → Tap [Vibrate] /
- [Mute] / [Drive]. Alternatively, tap Apps → [Settings] → [Sound] → [Silent mode] → [Silent mode type] to change the type

Setting App permissions

When you first activate app/function that access the functions or information of the product, a confirmation screen for requesting access permission appears. When the screen for confirmation is displayed, confirm the content and tap "DENY"/"ALLOW"

- If you do not permit, app/function may not be activated or use of function may be restricted.
- For some apps/functions, an explanation screen for the permission appears. A confirmation screen may appear in several times and its content may vary. Confirm the content and follow the on-screen instructions.
- In this manual, description of such confirmation screen may be omitted.

Initial Settings

When you turn on the product for the first time after purchasing the product, follow the on-screen instructions to set language, functions and

Setting up Google account

Set up Google account to use Google applications such as "Gmail", "Play Store", "Duo". Setting items are as below (besides the items below, register "First" name and "Last" name)

User name Password

Register your Google account (user ID) and a character string for mail address. You can register a desired name. but a name already registered by another user cannot be set Register password for the Google account.

ようこそ



Tap " 日本語(日本) to select "English" → Select the language region

Tap [LET'S GO].



[Set up as new] * If you restore a backup or copy from a device select [Copy your data] and follow the on-screen instructions.



Set up the Wi-Fi® network to connect as required

* If you do not set up, tap [Use cellular network for setup1 →

[CONTINUE].
Tap [Don't use any network for setup1 → [CONTINUE] Continue by following the onscreen instructions.



[Create account] account, enter a mail



Enter "First name"

and "Last name"

→ [NEXT] → Enter

the date of birth and

gender → [NEXT].







Enter a password and reenter the

password for

Confirm the Google

service settings, then

[NEXT]

[ADD FINGERPRINT] Check the contents. then [NEXT] → Tap the type of

to set security and notification * If you do not set up,

security → Follow on-

screen instructions





Check the contents and settings as required mark the check box, If you do not set up, tap

*1 Text message for Google verification code will be sent to the set phone number.

au Easy Setting

By setting au ID, you can use various services provided by au such as "au Kantan Kessai" which allows you to purchase applications from the au スマートパス (au Smart Pass) or Google Play. Main setting items are as follows.

Register your au phone number or a character string for au ID (user ID) au ID* au ID password Register password for using au ID.

"au ID" which is already used by another user cannot be set.

• If you skip the operation of *au Easy Setting* at that time, you can set au ID later. In that case, operate from Apps menu → [ツール (Tools)] → [au ID Setting].



Welcome to au screen [Next]

[Update] / [Skip update]

[Activate] / [Skip

activation] → [Next]



[Next]

Check the terms and

conditions (reading

[Next]

8

[Next]*1

requires), [Agree]



[Agree]

restored → [次へ



* Default value is a four digit number written at subscription



[Turn Auto Backup on] / [Turn Auto Backup off] → [Next]



Check the contents then [Activate] / [Skip

password → [設定 (Settings)] → [終了

(Exit)]

activation] → [Next] In "Basic Manual" of the product, the operations "Standard Home" is provided as examples Tap [Skip activation]



戻す (Restore data) install → [次へ (Next)] screen is displayed, mark data type to be

(Next)] *1 To complete the initial setting of Lookout for au, permit the access permission on each request screen.



Check the contents then [I AGREE]

Feach the Assistant to ecognize your voice

[GET STARTED] →

Follow on-screen

instructions to set

voice recognition

Confirm/Change

the country name

and phone number

 \rightarrow [NEXT]*¹ \rightarrow

[VERIFY]

* If you do not set up,

[CONTINUE] → Check

Google app permissions,

then [YES I'M IN]

If you do not enable, tap "NO THANKS".

tap "SKIP"

E-mail

To use E-mail (@ezweb.ne.jp), subscription to LTE NET is required.

If you did not subscribe it when you purchased the product, contact an au shop or Customer Service Center. Your E-mail address is determined automatically after initial setting. You can change the E-mail address later.

Initial settings * You cannot make initial settings in Wi-Fi® communication



[閉じる (Close)]

*1 If a description screen for the E-mail function is displayed, follow the on-screen instructions

Checking your E-mail address





「閉じる (Close)]

→ [完了 (Done)]'



Download "Basic Manual app"



ポート (Support)] → [Basic Manual]

Making a Call

Use "Basic Manual app"



Apps menu → [サポー ト (Support)] → [Basic Manual]

* If a instruction screen (how to use this application) is displayed, follow the on-screen instructions

 
The front cover of Basic Manual is displayed.

TORQUE on

Adding new contact and making a call



[OK]



Making a call from the call history



Checking your own phone number (Profile)

Operate as follow to check your own phone number.

Apps menu → [Settings] → [Profile] → Profile screen appears.

Receiving a Call

You can receive a call in the following steps.

Calling



Receiving the screen in sleep mode or while the start screen is displayed



[] right.

Follow the on-screen instructions. * To answer the call, slide "S" right.

Answering with Auto answering

Answer by the answering memo message and record a message of the party when you cannot answer calls.



Answering with SMS

the operation panel

Reject an incoming call and answer with SMS. Operate as follow to answer with SMS.

 $\mathsf{Receiving} \ \mathsf{screen} \to \mathsf{Tap} \ \mathsf{the} \ \mathsf{operation} \ \mathsf{panel} \to [\mathsf{Message}] \to \mathsf{Select} \ \mathsf{a} \ \mathsf{message} \to [\mathsf{SEND}] \to \mathsf{SMS} \ \mathsf{message} \ \mathsf{is} \ \mathsf{sent}.$

Forwarding an incoming call without answering

Forward an incoming call to the forwarding phone number or remote operation of voice mail service. Forward the incoming call in the following steps.

Receiving screen \rightarrow Tap the operation panel \rightarrow [Call forward] \rightarrow [FORWARD] \rightarrow The incoming call is forwarded.

Setting Display

Describes how to set brightness level and backlight time

Adjusting the screen brightness level



Apps menu → [Settings] → [Display]

Slide the indicator of "Brightness level" left/right.
* To make brighter, slide the indicator right. To make darker, slide the indicator left.

Increasing the backlight time of the screen

the guidance.



Apps menu → [Settings] → [Display]

[Sleep] → Select the lighting time

Setting Wi-Fi

Use your home Wireless LAN (Wi-Fi®) or public wireless LAN to connect to the Internet. Main settings are as follows.

Select Wi-Fi® network for connection

Search for and connect to an available Wi-Fi® network.

WPS system Use for registration of access point compatible with Wi-Fi Protected Setup™ with WPS mark.

* If you turn on wireless LAN (Wi-Fi®) function, battery consumption increases. You are recommended to turn wireless LAN (Wi-Fi®) function to OFF when not using wireless LAN (Wi-Fi®) function. Selecting and Connecting



[OFF] * Indication changes to "ON".

Available Wi-Fi® networks and their SSIDs appear in the Wi-Fi® networks.



Enter displayed PIN code for

access point, then registration

to a Wi-Fi® Network

*1 If the Wi-Fi® network you want to connect to cannot be detected, tap "Add network" and add the network manually, *2 To connect to a protected Wi-Fi® network, enter the password (security key) and tap "CONNECT". The password (security key)

Using a WPS System Access Point



Press the Wi-Fi Protected Setup button* on the Wi-Fi router to set the access point to WPS mode, and the product automatically searches for and registers an access point. May be indicated as "WPS" or as a symbol such as

0.

[I] → [Advanced] → [WPS Push Button]

6

WPS Pin Entry

[Advanced] → [WPS Pin Entry]

Viewing/Playing Data

By transferring data from the previously used au phone to au a microSD™ memory card, you can insert the microSD memory card into this product and view/play still image or movie data using "File Commander" in the product. When you activate for the first time, the Terms and




* Copyrighted data on the previously used au phone cannot be transferred to the product. However, some Chaku Uta Full®, Video Clip, Chaku Uta Full Plus® may be able to be transferred and played on the product with the same phone number by backing up with LISMO Port Ver 4.2 or later.

transfer data.

Apps menu→ [データ (Data)] → displayed → Tap a file → [File Commander] →
[CONTINUE] →
[CONTINUE WITH ADS] Tap data Data is viewed/played.

Transferring data from au Settings Menu

- Restore/back up data from/to your previously used au phone to/from this product using microSD card or the au server.
- To return data using an au server, store the data from the old au phone to the au server beforehand. Setting au ID is required for using the au server (If the old au phone does not have an au Settings Menu, use the Friends Note app or au Cloud app).
 For restoring data using microSD memory card, save the data to the microSD memory card using your previously used au phone in
- advance. (If the old au phone has not au Settings Menu, use au backup app).

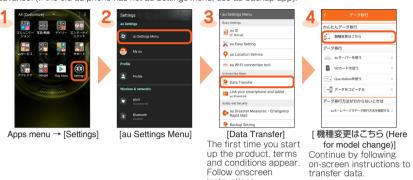

Using "Data Storage App"

To use "Data Storage App" to back up photos, contacts, etc. to au server automatically, set as follows.

 $\mathsf{Apps}\;\mathsf{menu} \to [\mathsf{Settings}] \to [\mathsf{au}\;\mathsf{Settings}\;\mathsf{Menu}] \to [\mathsf{Backup}\;\mathsf{Setting}] \to \mathsf{Tap}\;\mathsf{to}\;\mathsf{select}\;\mathsf{a}\;\mathsf{data}\;\mathsf{type}\;\mathsf{to}\;\mathsf{back}\;\mathsf{up}$ automatically

instructions.