









Turning Power On and Off

- ▼ **Turning Power On**
Hold down  for at least one second.
- ▼ **Turning Power Off**
Hold down  for at least two seconds.

Checking Your Own Phone Number and E-mail Address

On the stand-by screen: Press . ▶ Press .

Making and Answering a Call

- ▼ **Making a Call**
On the stand-by screen: Enter the phone number you want to call. ▶ Press .
 - To adjust the earpiece volume: Use .
 - To end a call: Press .
- ▼ **Answering a Call**
When the phone starts ringing, press .
 - To adjust the earpiece volume: Use .
 - To end a call: Press .

Storing and Recalling a Memory Dial Data

▼ Storing Data


On the stand-by screen: Hold down  for at least one second. ▶ Use  to select the Memory Dial record you want to edit and press . ▶ Enter the data.
▶ Press  when finished.

▼ Recalling Data

On the stand-by screen: Press . ▶ Use  to select the Memory Dial record you want to recall. ▶ Press .

Using the Camera

▼ Taking a Snapshot

On the stand-by screen: Press . ▶ Use  to select フォト and press . ▶ Press  or  to take a snapshot. ▶ Press  to store the photo.
• To switch from Photo mode to Movie mode: Press .

 
▼ Recording a Movie

On the stand-by screen: Press . ▶ Use  to select △-ムービー and press . ▶ Press  or  to start recording. ▶ Press  or  to stop recording. ▶ Press  to store the movie.
• To pause recording: Press .

• To switch from Movie mode to Photo mode: Press .

Making an International Call

Ex. To Call 212-123-△△△△ in the USA




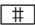
English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.



On the stand-by screen: Press . ▶ Press . ▶ Press . ▶ Press . ▶ Press  .

Other Features

▼ Manner Mode


On the stand-by screen: Hold down  for at least one second.
• To disable Manner Mode: After the above operation, hold down  for at least one second.

▼ Easy Voice Recording

On the stand-by screen: Hold down  for at least one second.
• To disable Easy Voice Recording: After the above operation, hold down  for at least one second.

For inquiries please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone:  0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)