




W54S

English Simple Manual



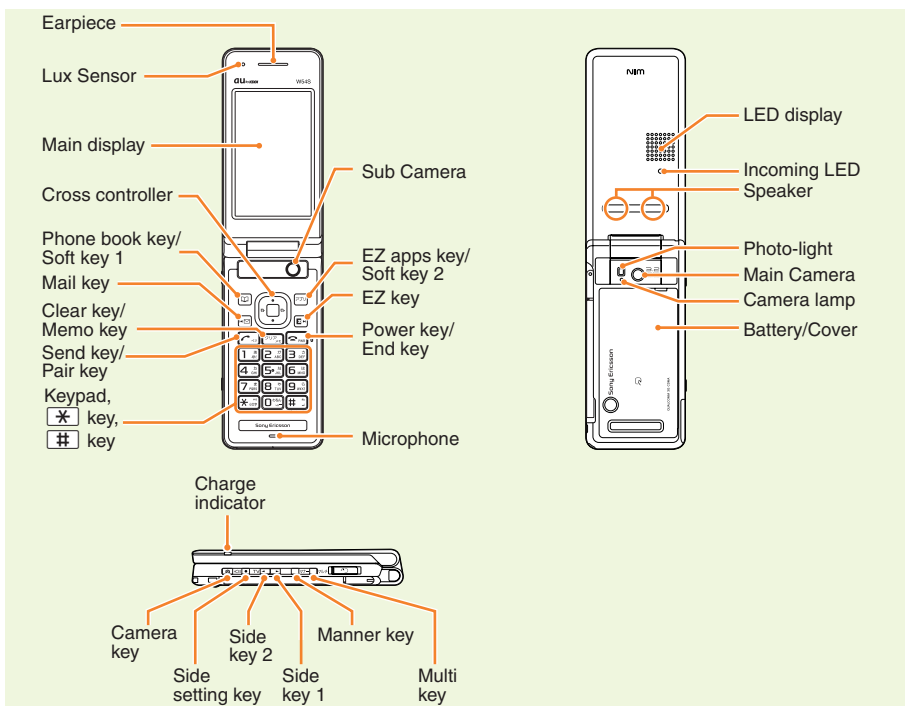

 


Turning the Power On and Off

- Turning the Power On
Press and hold  for more than one second.
- Turning the Power Off
From the stand-by screen: press and hold  for more than one second.

Checking Your Own Phone Number and E-mail Address

From the stand-by screen: press  ➔ press .

Making/Answering a Call

- Making a Call
From the stand-by screen: enter the phone number ➔ press .
To end the call: press .
- Answering a Call
Press  while the phone is ringing.
To adjust the earpiece volume during a call: press  ➔ press  [OK].

Storing/Recalling an Entry in the Phone Book

● Storing an Entry

From the stand-by screen: press and hold for more than one second ➔ press to select the item ➔ press [選択](Select) to enter the data ➔ press [登録](Add).

● Recalling an Entry

From the stand-by screen: press to display the Name Search screen ➔ press to select the name ➔ press [詳細](Detail) to display the entry's details screen.

Using the Camera (Movie Clips/Photos)

● Recording a Movie Clip

From the stand-by screen: press and hold for more than one second ➔ press (⇄) ➔ press [録画](Rec) to start recording ➔ press [保存](Save) to save the movie.

To stop recording: press [停止](Stop) during recording.

● Taking a Photo

From the stand-by screen: press and hold for more than one second ➔ press [撮影](Shot) to take a photo ➔ press [保存](Save) to save the photo.

Making an International Call

Ex: To call 212-123-△△△△ in the USA

➔ ➔ ➔ ➔ ➔ Press .

↑
International
access code

↑ ↑
Country code (USA)
Area code

↑
Phone number

English Announcement Function

You can play Voice Mail Service operation instructions and answering messages in English.

From the stand-by screen: press ➔ press ➔ press ➔ press ➔ press .

Other Handy Features

● Setting the Manner Mode

From the stand-by screen: press and hold for more than one second.

To cancel Manner mode: press and hold for more than one second from the stand-by screen.

● Setting the Voice Memo

From the stand-by screen: press and hold for more than one second.

To cancel the Voice Memo: press and hold for more than one second from the stand-by screen.

For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone: ☎ 0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)