


# W54T

## English Simple Manual

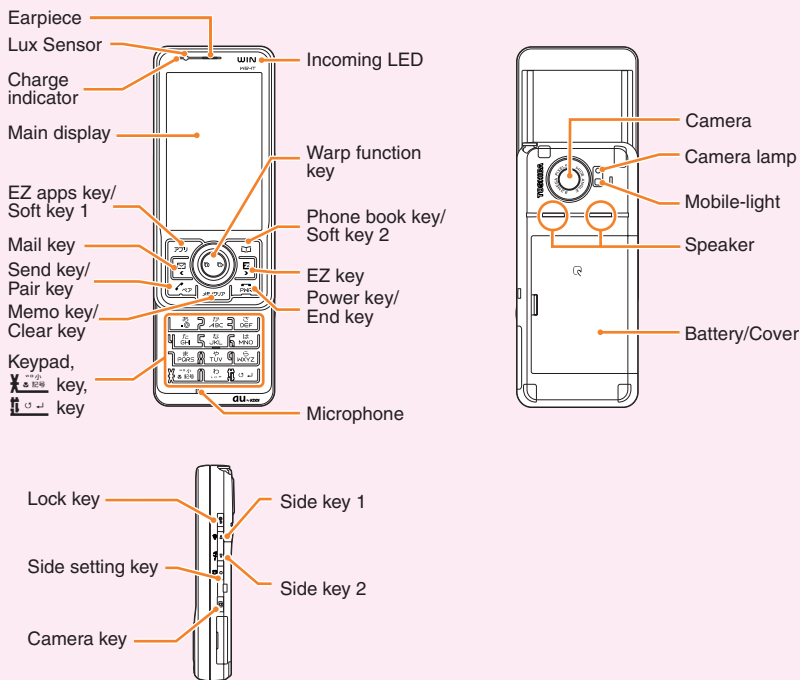

### Turning the Power On and Off

- Turning the Power On  
Press and hold  $\text{PWR}$  for more than one second.
- Turning the Power Off  
Press and hold  $\text{PWR}$  for more than one second.

### Checking Your Own Phone Number and E-mail Address

From the stand-by screen: press  $\text{OK}$   $\rightarrow$  press  $\text{P}$ .

### Making/Answering a Call

- Making a Call  
From the stand-by screen: enter the phone number  $\rightarrow$  press  $\text{CALL}$ .  
To end the call: press  $\text{PWR}$ .
- Answering a Call  
Press  $\text{CALL}$  while the phone is ringing.  
To adjust the earpiece volume during a call: press  $\text{VOL}$   $\rightarrow$  press  $\text{OK}$ .

## Storing/Recalling an Entry in the Phone Book

### ● Storing an Entry

From the stand-by screen: press and hold for more than one second → press to select the item → press [選択] (Select) to enter the data → press [登録] (Add).

### ● Recalling an Entry

From the stand-by screen: press to display the Name Search screen → press to select the name → press [選択] (Select) to display the entry's details screen.

## Using the Camera (Movie Clips/Photos)

### ● Recording a Movie Clip

 
From the stand-by screen: press and hold for more than one second → press ( ) → press [録画] (Rec) to start recording → press [保存] (Save) to save the movie.  
To stop recording: press [停止] (Stop) during recording.

### ● Taking a Photo

From the stand-by screen: press and hold for more than one second → press [撮影] (Shot) to take a photo → press [保存] (Save) to save the photo.

## Making an International Call

Ex: To call 212-123-△△△△ in the USA



## English Announcement Function

You can play Voice Mail Service operation instructions and answering messages in English.

From the stand-by screen: press → press → press → press → press [発信] (Call).

## Other Handy Features

### ● Setting the Manner Mode

From the stand-by screen: press and hold for more than one second.  
To cancel Manner mode: press and hold for more than one second from the stand-by screen.

### ● Setting the Voice Memo

From the stand-by screen: press and hold for more than one second.  
To cancel the Voice Memo: press and hold for more than one second from the stand-by screen.

### For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: ☎ 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)