


W61K



English Simple Manual (簡易英語版)

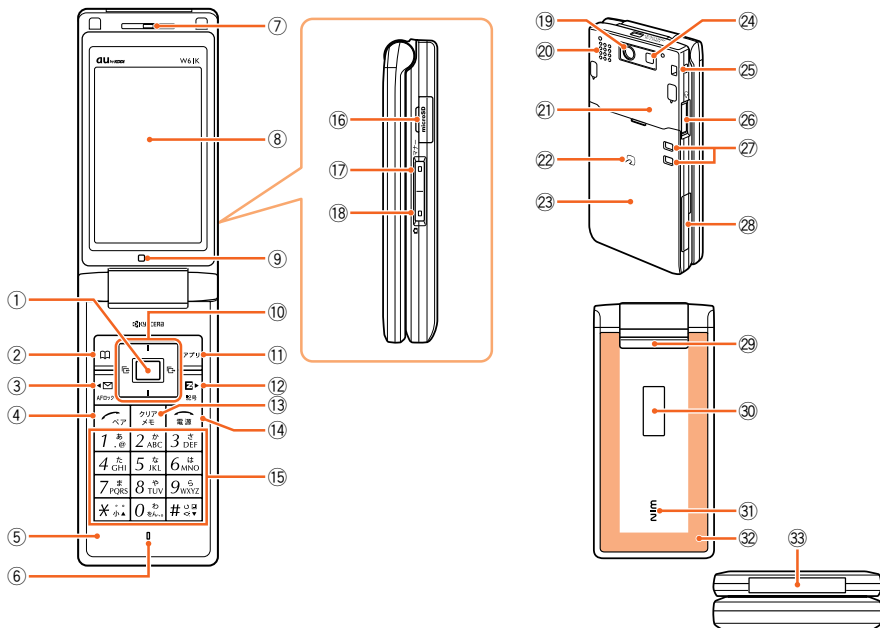

Nomenclature

- | | | |
|----------------------|---|---------------------------------|
| ① Center key | ⑬ Clear/Memo key | ⑳ Shooting light/Simple light |
| ② Address key | ⑭ Power/End key | ㉑ Strap mount |
| ③ Mail key | ⑮ Number keypad | ㉒ Earphone jack |
| ④ Send key | ⑯ microSD card slot | ㉓ Charging terminals |
| ⑤ Antenna (built-in) | ⑰ Up/Manner key | ㉔ External connection jack |
| ⑥ Microphone | ⑱ Down/Camera key | ㉕ Information key |
| ⑦ Earphone | ⑲ Camera (lens) | ㉖ Sub-display |
| ⑧ Main display | ⑳ Speaker | ㉗ Incoming (Outgoing) indicator |
| ⑨ Optical sensor | ㉑ au IC card (internal) | ㉘ Carving illumination |
| ⑩ Jog key | ㉒ FeliCa mark | ㉙ Infrared port |
| ⑪ Application key | ㉓ Battery pack cover (battery pack compartment) | |
| ⑫ EZ key | | |

Turning the Power On and Off

- Turning the power on
Hold down  for at least one second.
- Turning the power off
Hold down  for at least two seconds.

Applying the EZweb Default Settings






To send and receive e-mail or use EZweb, you must first subscribe to EZweb. You should also apply the default settings before sending and receiving e-mail or using EZweb. Applying the default settings automatically sets your e-mail address.

From the stand-by screen: Press . → Press  [OK] (to begin applying the default settings). → Press  [OK] .










Checking Your Own Phone Number/E-mail Address

From the stand-by screen: Press . → Press  (displays your own phone number and e-mail address in the profile).







Making and Answering a Call

- Making a call
From the stand-by screen: Enter the phone number you want to call. → Press .
To end the call: Press .
- Answering a call
When the phone rings, press .
To end the call: Press .
To adjust the earpiece volume: Press .







Storing and Recalling Address Book Entries

- Storing an entry
From the stand-by screen: Press . → Press  [メニュー] (Menu), select 「新規登録」 (Add new) and press  [選択] (Select). → Select the item to be stored and press  [編集] (Edit). → Enter the data and press  [OK] . → Check the details and press  [完了] (End).
- Recalling an entry
From the stand-by screen: Press . → Press  to select the desired name. → Press .

Sending and Receiving (Reading) E-mails

 
- Sending an e-mail
From the stand-by screen: Press . → Select 「新規作成」(New) and press  [選択] (Select). → Enter the recipient's e-mail address, the subject and the message by following the on-screen instructions. → Press  [送信] (Send).
- Receiving (reading) e-mail
When you receive e-mail, the phone emits the incoming e-mail tone and displays the new e-mail message 「新着Eメール△件」 (You have △ new e-mails) on the stand-by screen.
Select 「新着Eメール」 (New) and press  [確認] (Check). → Select the folder and press  [選択] (Select). → Select the e-mail you want to read and press  [表示] (Display).

Using the Camera (Photos)

From the stand-by screen: Press . → Select 「ツール」 (Tool) and press  [選択] (Select). → Select 「カメラ」 (Camera) and press  [選択] (Select). → Select 「フォト (壁紙モード)」 (Photo (Wallpaper)) or 「フォト (デジカメモード)」 (Photo (Camera)) and press  [選択] (Select). → Press  [撮影] (Shoot). → Press  [保存] (Store).

Making an International Call

E.g.: To call 212-123-△△△△ in the USA



Other Handy Features

● Manner Mode

From the stand-by screen: Hold down  (Up/Manner key) for at least one second.

To disable Manner mode, repeat the above step.

● Take a Message

• Setup

From the stand-by screen: Hold down  for at least one second.

To disable Take a Message, repeat the above step.

• Playback

From the stand-by screen: Press , → Select 「簡易留守メモ」 (Answer Phone) and press

 【選択】 (Select). → Select 「メモ再生」 (Play message) and press  【選択】 (Select). →

Select the message you want to listen to and press  【再生】 (Play).

For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone: ☎ 0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)