









Turning Power On and Off

- ▼ **Turning Power On**
Hold down  for at least one second.
- ▼ **Turning Power Off**
Hold down  for at least two seconds.

Checking Your Own Phone Number and E-mail Address

On the stand-by screen: Press . ▶ Press .

Making and Answering a Call

- ▼ **Making a Call**
On the stand-by screen: Enter the phone number you want to call. ▶ Press .
 - To adjust the earpiece volume: Use .
 - To end a call: Press .
- ▼ **Answering a Call**
When the phone starts ringing, press .
 - To adjust the earpiece volume: Use .
 - To end a call: Press .

Storing and Recalling a Memory Dial Data

▼ Storing Data

On the stand-by screen: Hold down for at least one second. ▶ Use to select the Memory Dial record you want to edit and press . ▶ Enter the data.
▶ Press when finished.

▼ Recalling Data

On the stand-by screen: Press . ▶ Use to select the Memory Dial record you want to recall. ▶ Press .

Using the Camera

▼ Taking a Snapshot

On the stand-by screen: Press . ▶ Use to select フォト and press . ▶ Press or to take a snapshot. ▶ Press to store the photo.
• To switch from Photo mode to Movie mode: Press .

▼ Recording a Movie

On the stand-by screen: Press . ▶ Use to select ムービー and press . ▶ Press or to start recording. ▶ Press or to stop recording. ▶ Press to store the movie.
• To pause recording: Press .
• To switch from Movie mode to Photo mode: Press .

Making an International Call

Ex. To Call 212-123-△△△△ in the USA

International access code Country code (USA) Number you want to call

English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.

On the stand-by screen: Press . ▶ Press . ▶ Press . ▶ Press . ▶ Press .

Other Features

▼ Silent Mode

On the stand-by screen: Hold down for at least one second.
• To disable Silent Mode: After the above operation, hold down for at least one second.

▼ Easy Voice Recording

On the stand-by screen: Hold down for at least one second.
• To disable Easy Voice Recording: After the above operation, hold down for at least one second.

For inquiries please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)