 


W64K



English Simple Manual (簡易英語版)

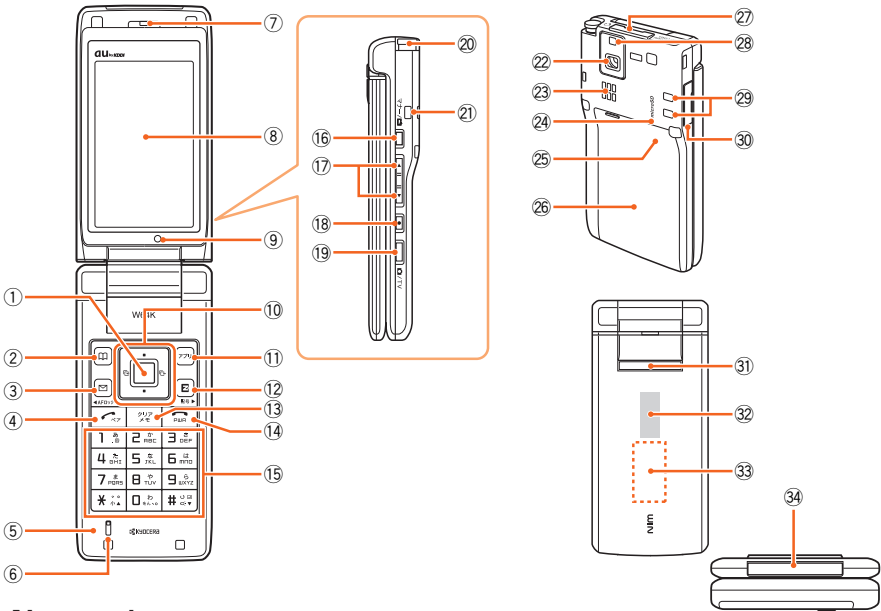

Nomenclature

- | | | |
|----------------------|--------------------------------|-------------------------------------------------|
| ① Center key | ⑬ Clear/Memo key | ⑵ au IC card (internal) |
| ② Address key | ⑭ Power/End key | ⑶ Battery pack cover (battery pack compartment) |
| ③ Mail key | ⑮ Number keypad | ⑷ Earphone jack |
| ④ Send key | ⑯ Manner/Clear key | ⑸ Shooting light/Simple light |
| ⑤ Antenna (built-in) | ⑰ Up/Down key | ⑹ Charging terminals |
| ⑥ Microphone | ⑱ Confirm key | ⑺ External connection jack |
| ⑦ Earphone | ⑲ Shutter key | ⑻ Information key |
| ⑧ Main display | ⑳ TV antenna | ⑿ Sub-display |
| ⑨ Optical sensor | ㉑ Strap mount | ⑿ Incoming indicator |
| ⑩ Jog key | ㉒ Camera (lens) | ⓫ Infrared port |
| ⑪ Application key | ㉓ Speaker | |
| ⑫ EZ key | ㉔ microSD card slot (internal) | |

Turning the Power On and Off

- Turning the power on
Hold down  for at least one second.
- Turning the power off
Hold down  for at least two seconds.

Applying the EZweb Default Settings






To send and receive e-mail or use EZweb, you must first subscribe to EZweb. You should also apply the default settings before sending and receiving e-mail or using EZweb. Applying the default settings automatically sets your e-mail address.

From the stand-by screen: Press . → Press  [OK] (to begin applying the default settings). → Press  [OK] .










Checking Your Own Phone Number/E-mail Address

From the stand-by screen: Press . → Press  (displays your own phone number and e-mail address in the profile).



 



Making and Answering a Call

- Making a call
From the stand-by screen: Enter the phone number you want to call. → Press .
To end the call: Press .
- Answering a call
When the phone rings, press .
To end the call: Press .
To adjust the earpiece volume: Press .




Storing and Recalling Address Book Entries

- Storing an entry
From the stand-by screen: Press . → Press  [メニュー] (Menu), select 「新規登録」 (Store New) and press  [選択] (Select). → Select the item to be stored and press  [編集] (Edit). → Enter the data and press  [OK] . → Check the details and press  [完了] (Comp).
- Recalling an entry
From the stand-by screen: Press . → Press  to select the desired name. → Press .

Sending and Receiving (Reading) E-mails

 
- Sending an e-mail
From the stand-by screen: Press . → Select 「新規作成」(Create New E-mail) and press  [選択] (Select). → Enter the recipient's e-mail address, the subject and the message by following the on-screen instructions. → Press  [送信] (Send).
- Receiving (reading) e-mail
When you receive e-mail, the phone emits the incoming e-mail tone and displays the new e-mail message 「新着Eメール△件」 (New E-mail : △) on the stand-by screen.
Select 「新着Eメール」 (New E-mail) and press  [確認] (Check). → Select the folder and press  [選択] (Select). → Select the e-mail you want to read and press  [表示] (Display).

Using the Camera (Photos)

From the stand-by screen: Press . → Select 「カメラ」 (Camera) and press  [選択] (Select). → Select 「フォト (壁紙モード)」 (Photo (W.paper)) or 「フォト (デジカメモード)」 (Photo (DSC)) and press  [選択] (Select). → Press  [撮影] (Shoot). → Press  [保存] (Save).


Making an International Call

E.g.: To call 212-123-△△△△ in the USA



Other Handy Features

● Manner Mode

From the stand-by screen: Hold down  (Manner/Clear key) for at least one second.
To disable Manner mode, repeat the above step.





● Take a Message

· Setup

From the stand-by screen: Hold down  for at least one second.

To disable Take a Message, repeat the above step.

· Playback

From the stand-by screen: Press , → Select 「簡易留守メモ」 (Answer Memo) and press  【選択】 (Select). → Select 「メモ再生」 (Play Memo) and press  【選択】 (Select). → Select the message you want to listen to and press  【再生】 (Play).

For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: ☎0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)