


Turning Power On and Off

● Turning Power On




Press  for a few seconds.

● Turning Power Off



- ▶ Press and hold  for a few seconds.
- ▶ Tap **Yes** when a message prompts you to choose whether or not to turn off the device completely.

Making and Answering a Call

● Making a Call

- ▶ Press .
- ▶ Tap the keys on the keypad to enter the phone number.
- ▶ Press  to place the call.
- ▶ Press  to end the call.

● Answering a Call

- ▶ Tap **Answer**, or press  to answer the call.
- ▶ Tap **Ignore**, or press  to reject the call.

Storing and Recalling Address Book Entries

● Storing an Entry




- ▶ From the Today screen, tap **Contacts**.
- ▶ Tap **New Contact**.
- ▶ Enter the data for the new contact.
- ▶ Tap **OK** to save the contact.

● Recalling an Entry




- ▶ From the Today screen, tap **Contacts**.
- ▶ Scroll up or down the contact list to find the desired contact. Tap the contact name to display contact details.

Using the Camera (Movie and Snapshot)

● Recording a Movie Clip

 
- ▶ From the Today screen, tap **Start > Programs > Camera**.
- ▶ Press NAVIGATION right or left to select Video mode .
- ▶ Touch ENTER to activate auto-focus and then press ENTER to begin recording video.
- ▶ Press ENTER to stop recording video.
- ▶ Tap  to view the captured video or tap  to discard the video.

● Taking a Snapshot

- ▶ From the Today screen, tap **Start > Programs > Camera**.
- ▶ NAVIGATION right or left to select Photo mode .
- ▶ Touch ENTER to activate auto-focus and then press ENTER to take the shot.
- ▶ Tap  to view the captured image or tap  to discard the image.


Making an International Call

Ex: To call 212-123-△△△△ in the USA



Other Handy Features

● Locking the Device


Press and hold  to lock the touchscreen and device buttons (except for the POWER button) against accidental presses. Tap unlock on the touchscreen and then tap unlock again to unlock the device.

● Hardware Volume Control

Press the volume control buttons on the left side of the device to raise or lower the earpiece volume during a call. When not in a call, use the volume control buttons to raise or lower the device system and ring tone speaker volume.

For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone:  0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)