

Turning Power On and Off


● Turning Power On

Hold down  for at least a few seconds.

● Turning Power Off

Hold down  for at least a few seconds. ▶ Tap “電源OFF” (Power Off).

Checking Your Own Phone Number


Tap  ▶ Tap “設定” (Settings). ▶ Tap “個人” (Personal).
▶ Tap “自局番号” (My Number).

Making and Answering a Call

● Making a Call

From the home screen: Enter the phone number you want to call.

▶ Press .

To end a call: Press .

● Answering a Call

When the phone starts ringing, press .

To adjust the earpiece volume during a call: Use / .

Storing and Recalling Address Book Entries

● Storing an Entry

From the home screen: Press . ▶ Tap .

▶ Tap “Outlook連絡先” (Outlook Contact). ▶ Enter the data. ▶ Tap .

● Recalling an Entry

From the home screen: Press to display the Address Book screen

▶ Tap the entry you want to view the detail.

Using the Camera (Snapshot)

● Taking a Snapshot

Tap . ▶ Tap “カメラ” (Camera).

▶ Tap the capture mode icon and use to switch to (single photo mode).

▶ Tap to take a snapshot.

▶ Tap to store the photo.

Making an International Call

Ex: To call 212-123-△△△△ in the USA

International access code Area code
 Country code (USA)

▶
 Number you want to call

Other Handy Features

● Setting the Manner Mode

Hold down for at least one second.

Repeat the above operation to disable the Manner Mode.

● Setting the Answer Memo (Voice Recording)

From the home screen: Hold down for at least one second.

▶ Tap “簡易留守メモ設定” (Answer Memo Setting).

Repeat the above operation to disable the Answer Memo.

For inquiries, please contact

au Customer Service Center (General Information)

● If you are calling from a landline phone: 0077-7-111 (toll free)

● If you are calling from an au mobile phone: 157 (toll free)