

# arrows We

## FCG01

### Cautions on using the product

**When using the product**

Before you start using the product, make sure to read the "Safety Precautions" to ensure correct use.

Before you assume that the product is malfunctioning, refer to "故障とお考えになる前に" (Check here first)" in "取扱説明書 詳細版 (Full Instruction Manual) (Japanese)".

- Communication is not possible even inside of the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in poor signal reception areas. Communication is sometimes interrupted if you move into poor signal reception area during communication.
- Since the product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated. (Though 5G/LTE/WiMAX 2+/GSM/UMTS system has highly secure confidential communication features.)
- For connecting to the emergency call acceptance organization, VoLTE (LTE network) is used. 3G (Line exchange network) connection is not available.
- Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law. The IMEI information of your mobile phone is automatically sent to your carrier for maintenance and monitoring operational status of your mobile phone.
- Before you start using the product overseas, check the relevant laws and regulations of the country/region you visit.
- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional, mistaken, or incorrect use by the customer, or use under other unusual conditions outside the responsibility of the Company.
- The Company is not liable for any incidental damages (change/disappearance of described content, loss of business income, disruption of business, etc.) arising from use of the product or inability to use the product.
- The Company is not liable for any damages arising from failure to observe the described content of the "Instruction Manual".
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.

• In this manual, "arrows We" is usually referred to as "the product" or "main unit".

• In this manual, "Quick Start Guide", "Cautions on using the product" (this manual) and "取扱説明書 詳細版 (Full instruction manual) (Japanese) are collectively referred to as "Instruction Manual".

• Descriptions in this manual are based on Android™ 11.

• In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card".

• Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM and © marks may be omitted in this manual.

### 1

**Follow the instructions of a gas station or other such location before using the product there.**

Do not charge the product at a gas station, etc.

Take care not to drop the product at a gas station, etc.; in particular, do not use the product while filling.

Ignition of flammable gas might cause explosion, fire, etc.

**If you notice anything unusual about the equipment such as an unusual odor, abnormal noise, smoke generation, overheating, discoloration or deformation during operation, charging or storage, perform the following measures carefully.**

- Remove the power plug from an outlet
- Turn off the power of the product

Failure to do so might cause fire, burns, injury, electric shock, etc.

### Caution Be sure to read the following cautions before use.

**Do not use damaged product or peripheral devices.**

Doing so might cause fire, burns, injury, etc.

**Do not place the product on an unstable or inclined platform. Be careful especially when vibrator is set.**

The product might fall and cause injury etc.

**Do not use or keep in a place that is very humid, dusty, or subject to high temperature.**

Doing so might cause fire, burns, electric shock, etc.

For waterproofness/dustproofness, refer to "Notes on waterproof, dustproof, and shock resistance properties" (▶P.26).

**If children use the product, parents or guardians should give them proper instructions and do not allow them to use the product in the wrong way.**

Use of the product in the wrong way might cause accidental ingestion, injury, electric shock, etc.

### 7

**Clean dust from the power plug.**

Using it with dust adhered might cause fire, burns, electric shock, etc.

**Firmly insert the specified charging equipment (sold separately) into an outlet.**

Insecure inserting might cause fire, burns, electric shock, etc.

**When you disconnect a power plug of the specified charging equipment (sold separately) from an outlet, do not apply excessive force to it such as pulling the cable. Instead, hold the adapter main unit to disconnect.**

Pulling the cable of the specified charging equipment (sold separately) might damage the cable causing fire, burns, electric shock, etc.

**When plugging/unplugging the specified charging equipment (sold separately) into/from the product, plug/unplug it straight toward the product without applying excessive force such as pulling the cable.**

Incorrect plugging/unplugging might cause fire, burns, injury, electric shock, etc.

**If the charging terminal is deformed such as being bent, stop using immediately. Do not use it with the deformation restored.**

Doing so might cause fire, burns, injury, etc. due to short-circuit of the charging terminal.

**Always remove the power plug from an outlet when not using it.**

Keeping it plugged in might cause fire, burns, electric shock, etc.

**Immediately remove the power plug from an outlet if liquids such as water (drinking water, sweat, seawater, urine of pet animals, etc.) get adhered.**

Failure to do so might cause fire, burns, electric shock, etc. due to short-circuit by adhered object etc.

**Before cleaning, remove the power plug from an outlet.**

Failure to do so might cause fire, burns, electric shock, etc.

### 14

**When using the product**

Before you start using the product, make sure to read the "Safety Precautions" to ensure correct use.

Before you assume that the product is malfunctioning, refer to "故障とお考えになる前に" (Check here first)" in "取扱説明書 詳細版 (Full Instruction Manual) (Japanese)".

- Communication is not possible even inside of the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in poor signal reception areas. Communication is sometimes interrupted if you move into poor signal reception area during communication.
- Since the product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated. (Though 5G/LTE/WiMAX 2+/GSM/UMTS system has highly secure confidential communication features.)
- For connecting to the emergency call acceptance organization, VoLTE (LTE network) is used. 3G (Line exchange network) connection is not available.
- Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law. The IMEI information of your mobile phone is automatically sent to your carrier for maintenance and monitoring operational status of your mobile phone.
- Before you start using the product overseas, check the relevant laws and regulations of the country/region you visit.
- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional, mistaken, or incorrect use by the customer, or use under other unusual conditions outside the responsibility of the Company.
- The Company is not liable for any incidental damages (change/disappearance of described content, loss of business income, disruption of business, etc.) arising from use of the product or inability to use the product.
- The Company is not liable for any damages arising from failure to observe the described content of the "Instruction Manual".
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.

• In this manual, "arrows We" is usually referred to as "the product" or "main unit".

• In this manual, "Quick Start Guide", "Cautions on using the product" (this manual) and "取扱説明書 詳細版 (Full instruction manual) (Japanese) are collectively referred to as "Instruction Manual".

• Descriptions in this manual are based on Android™ 11.

• In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card".

• Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM and © marks may be omitted in this manual.

### 2

**Keep the equipment out of the reach of babies and infants. In particular, be careful where small parts are stored, such as the microSD memory card/SIM card tray.**

Failure to do so might cause accidental ingestion, injury, electric shock, etc.

**Be careful about the temperature when using the product continuously or while charging because it might become warm. Also, be careful not to keep touching it unintentionally in a pocket of clothes, when you fall asleep, etc.**

The product or the specified charging equipment (sold separately) might become warm when using an app, a call, data communication, watching video etc. continuously or while charging. If you are directly in contact with warmed part continuously, it might cause a redness of skin, itch, rash, low-temperature burn, etc. depending on your physical condition.

### Main unit

**Danger Be sure to read the following hazards before use.**

**Do not throw the product into fire or apply heat.**

Doing so might cause fire, burns, injury, etc.

**Do not put excessive force such as sticking with a sharp object (nail etc.), hitting with a hard object (hammer etc.), or stepping on it.**

Doing so might cause fire, burns, injury, etc.

**If the internal substance of the product contacts your eyes or mouth, immediately rinse the eyes or mouth with clean water and then see a doctor right away.**

The effects of the internal substance of the product might cause blindness, medical problem, etc.

### 8

**Clean dust from the power plug.**

Using it with dust adhered might cause fire, burns, electric shock, etc.

**Firmly insert the specified charging equipment (sold separately) into an outlet.**

Insecure inserting might cause fire, burns, electric shock, etc.

**When you disconnect a power plug of the specified charging equipment (sold separately) from an outlet, do not apply excessive force to it such as pulling the cable. Instead, hold the adapter main unit to disconnect.**

Pulling the cable of the specified charging equipment (sold separately) might damage the cable causing fire, burns, electric shock, etc.

**When plugging/unplugging the specified charging equipment (sold separately) into/from the product, plug/unplug it straight toward the product without applying excessive force such as pulling the cable.**

Incorrect plugging/unplugging might cause fire, burns, injury, electric shock, etc.

**If the charging terminal is deformed such as being bent, stop using immediately. Do not use it with the deformation restored.**

Doing so might cause fire, burns, injury, etc. due to short-circuit of the charging terminal.

**Always remove the power plug from an outlet when not using it.**

Keeping it plugged in might cause fire, burns, electric shock, etc.

**Immediately remove the power plug from an outlet if liquids such as water (drinking water, sweat, seawater, urine of pet animals, etc.) get adhered.**

Failure to do so might cause fire, burns, electric shock, etc. due to short-circuit by adhered object etc.

**Before cleaning, remove the power plug from an outlet.**

Failure to do so might cause fire, burns, electric shock, etc.

**Follow the instructions of a medical facility for the use of mobile phones on their premises.**

The radio waves from the product might affect electronic medical equipment and electronic medical equipment.

**Always keep the product away from your ear when you call handsfree, while sounding the ringtone loudly, or during stand-by. Also, when you play game, play back videos, music, etc. connecting the earphone/microphone, etc. to the product, adjust the volume adequately.**

Loud sound is emitted from the product when calling with hands-free set. Even in standby mode, a ringtone or an alarm sound may sound suddenly.

Listening to loud sound for long hours continuously may cause a disability of ears such as deafness.

Moreover, too loud sound makes you barely hear the surrounding sounds and may cause an accident.

### 15

**Safety Precautions (Observe Strictly)**

• It is recommended you keep a copy of important data on your PC/hard disk etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.

• Data saved in the product, such as images/videos, might be altered or lost by an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that the Company assumes no responsibility for any damages or lost profits resulting from altered or lost contents.

• Note that contents data (both charged or free content) saved to the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.

• The product uses liquid crystal for its display. The display response speed may become slow when the ambient temperature is low, which is due to the characteristics of liquid crystal and is not a malfunction. The display response speed will return to normal at room temperature.

• Although the display used for the product is made using high-precision technology, some pixels (dots) might be lit or out at all times. This is not a malfunction.

• You are recommended to store copies of individual data such as photos you took, videos and music on your PC by sending each file as mail attachment etc. Note, however, that you may not be able to make copies of any copyrighted data even by the above-mentioned means.

• Do not discard the product together with regular trash. Please cooperate in the collection of the product (including optional accessories) when it is no longer needed to protect the environment and effectively use resources.

• The Company<sup>1)</sup> as appears in the manual refers to your carrier and the manufacturer (FCNT LIMITED).

### 1

**Danger** This symbol indicates that "death or serious injury"<sup>1)</sup> may directly and immediately result from improper use<sup>2)</sup>.

**Warning** This symbol indicates that "death or serious injury"<sup>1)</sup> may result from improper use<sup>2)</sup>.

**Caution** This symbol indicates that "minor injury"<sup>2)</sup> and/or property damage<sup>3)</sup> may result from improper use<sup>2)</sup>.

### 2

**Caution** Be sure to read the following cautions before use.

**Do not turn on the flash/light with the lighting luminescence part close to the other's eyes. Keep enough distance away especially from babies.**

Doing so might cause blurred vision etc. Also an accident such as injury might occur if he or she is dazzled or frightened.

**Do not turn on or flash the flash/light toward a driver of a car etc.**

Doing so might disturb driving and cause an accident etc.

**Do not look at a repeatedly-blinking screen for a long time.**

Doing so might cause cramp, loss of consciousness, etc.

**Do not allow liquids such as water (drinking water, sweat, seawater, urine of pet animals, etc.), metal parts, or flammable objects to enter to the microSD memory card/SIM card slot of the product.**

Doing so might cause fire, burns, injury, electric shock, etc.

**Do not set a microSD memory card or SIM card in wrong insertion, or insert it in wrong orientation.**

Doing so might cause fire, burns, injury, electric shock, etc.

**Do not expose the camera lens to direct sunlight for a long time.**

Doing so might cause fire, burns, injury, etc. due to light-collecting mechanism of lens.

**Do not sound the buzzer close to the ear.**

Doing so may affect your ears such as difficulty in hearing.

**Power off the product or put it in Airplane mode before boarding an airplane.**

Use of mobile phones on board is restricted. Follow the instructions of each airline.

The radio waves from the product might adversely affect on-board electronic equipment.

Prohibited acts related to mobile phone usage on an airplane might be punished by law.

**If there is any chance that the distance between the product and a person closest to you might get shorter than 15 cm such as when you cannot freely move around, set the product not to emit radio wave in advance (Airplane mode, power off, etc.).**

A person in close proximity to you might wear electronic medical equipment such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator. The radio waves from the product might have harmful effects on the operation of the electronic medical equipment.

**Follow the instructions given by the respective medical facility regarding use of the product on their premises.**

The radio waves from the product might have harmful effects on the operation of the electronic medical equipment.

**Follow the instructions of a medical facility for the use of mobile phones on their premises.**

The radio waves from the product might affect electronic medical equipment and electronic medical equipment.

### 3

**Be careful about the temperature when using the product continuously or while charging because it might become warm. Also, be careful not to keep touching it unintentionally in a pocket of clothes, when you fall asleep, etc.**

The product or the specified charging equipment (sold separately) might become warm when using an app, a call, data communication, watching video etc. continuously or while charging. If you are directly in contact with warmed part continuously, it might cause a redness of skin, itch, rash, low-temperature burn, etc. depending on your physical condition.

**If the internal substance of the product contacts your eyes or mouth, immediately rinse the eyes or mouth with clean water and then see a doctor right away.**

The effects of the internal substance of the product might cause blindness, medical problem, etc.

**Do not throw the product into fire or apply heat.**

Doing so might cause fire, burns, injury, etc.

**Do not put excessive force such as sticking with a sharp object (nail etc.), hitting with a hard object (hammer etc.), or stepping on it.**

Doing so might cause fire, burns, injury, etc.

**If the internal substance of the product contacts your eyes or mouth, immediately rinse the eyes or mouth with clean water and then see a doctor right away.**

The effects of the internal substance of the product might cause blindness, medical problem, etc.

**Do not throw the product into fire or apply heat.**

Doing so might cause fire, burns, injury, etc.

**Do not put excessive force such as sticking with a sharp object (nail etc.), hitting with a hard object (hammer etc.), or stepping on it.**

Doing so might cause fire, burns, injury, etc.

**If the internal substance of the product contacts your eyes or mouth, immediately rinse the eyes or mouth with clean water and then see a doctor right away.**

The effects of the internal substance of the product might cause blindness, medical problem, etc.

**Do not throw the product into fire or apply heat.**

Doing so might cause fire, burns, injury, etc.

### 4

**Explanation of graphic symbols**

	Indicates an action that is not allowed.		Indicates that handling with wet hands is not allowed.
	Indicates that disassembly is not allowed.		Indicates compulsory actions in accordance with instructions.
	Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.		Indicates that the power plug must be disconnected from an outlet.

**Precautions common to the main unit, internal battery, charging equipment, SIM card, peripheral devices**

**Danger Be sure to read the following hazards before use.**

**Do not use, store or leave the equipment in a location where it is subject to high temperature or accumulation of heat (e.g. by the fire, near a heater, under a kotatsu or bedding, in direct sunlight, in a car in the hot sun).**

Doing so might cause fire, burns, injury, electric shock, etc.

**Do not put the equipment in cooking appliances such as microwave ovens, IH cooking heaters, or high pressure containers such as pressure cookers. Do not place the equipment near such cooking appliances.**

Doing so might cause fire, burns, injury, electric shock, etc.

**Do not splash sand, soil or mud, or do not directly place the equipment on it. Also, do not touch the equipment with hands with sand etc. adhered.**

Doing so might cause fire, burns, injury, electric shock, etc.

For waterproofness/dustproofness, refer to "Notes on waterproof, dustproof, and shock resistance properties" (▶P.26).

**Be careful about broken parts or exposed internal part of the product when the display or the camera lens is broken.**

Touching damaged or exposed part might cause burns, injury, electric shock, etc.

**If the internal battery leaks or gives off a strange smell, immediately stop using and remove it from the vicinity of open flames.**

The leaking liquid might ignite, catch fire, explode, etc.

**Be careful not to allow a pet etc. to bite the product.**

Doing so might cause fire, burns, injury, etc. because of ignition, burst, heat or leaking of the internal battery.

**Caution Be sure to read the following cautions before use.**

**When using the motion sensor, check the safety around you, hold the product firmly, and do not shake it unnecessarily.**

Failure to do so might cause an accident such as injury.

**If the display is damaged and when the internal substance etc. leaks out, do not allow it to contact your skin such as face and hands, clothes, etc.**

Doing so might cause injury etc. on your eyes or skin.

If the internal substance gets into your eyes, mouth, etc. or contacts your skin or clothes, immediately rinse with clean water.

In the case of getting into your eyes, mouth, etc., immediately consult a doctor after rinsing.

**Do not discard the product together with other garbage.**

Doing so might cause fire, burns, injury, etc. Also, it might cause environmental destruction. When the product is no longer used, dispose of it according to a recycling program of your local municipality.

**Be careful about broken parts or exposed internal part of the product when the display or the camera lens is broken.**

Touching damaged or exposed part might cause burns, injury, electric shock, etc.

**If the internal battery leaks or gives off a strange smell, immediately stop using and remove it from the vicinity of open flames.**

The leaking liquid might ignite, catch fire, explode, etc.

**Be careful not to allow a pet etc. to bite the product.**

Doing so might cause fire, burns, injury, etc. because of ignition, burst, heat or leaking of the internal battery.

**Caution Be sure to read the following cautions before use.**

**When using the motion sensor, check the safety around you, hold the product firmly, and do not shake it unnecessarily.**

Failure to do so might cause an accident such as injury.

**If the display is damaged and when the internal substance etc. leaks out, do not allow it to contact your skin such as face and hands, clothes, etc.**

Doing so might cause injury etc. on your eyes or skin.

If the internal substance gets into your eyes, mouth, etc. or contacts your skin or clothes, immediately rinse with clean water.

In the case of getting into your eyes, mouth, etc., immediately consult a doctor after rinsing.

**Do not discard the product together with other garbage.**

Doing so might cause fire, burns, injury, etc. Also, it might cause environmental destruction. When the product is no longer used, dispose of it according to a recycling program of your local municipality.

**Be careful about broken parts or exposed internal part of the product when the display or the camera lens is broken.**

Touching damaged or exposed part might cause burns, injury, electric shock, etc.

**If the internal battery leaks or gives off a strange smell, immediately stop using and remove it from the vicinity of open flames.**

The leaking liquid might ignite, catch fire, explode, etc.

**Be careful not to allow a pet etc. to bite the product.**

Doing so might cause fire, burns, injury, etc. because of ignition, burst, heat or leaking of the internal battery.

**Caution Be sure to read the following cautions before use.**

**When using the motion sensor, check the safety around you, hold the product firmly, and do not shake it unnecessarily.**

Failure to do so might cause an accident such as injury.

**If the display is damaged and when the internal substance etc. leaks out, do not allow it to contact your skin such as face and hands, clothes, etc.**

Doing so might cause injury etc. on your eyes or skin.

If the internal substance gets into your eyes, mouth, etc. or contacts your skin or clothes, immediately rinse with clean water.

In the case of getting into your eyes, mouth, etc., immediately consult a doctor after rinsing.

**Do not discard the product together with other garbage.**

Doing so might cause fire, burns, injury, etc. Also, it might cause environmental destruction. When the product is no longer used, dispose of it according to a recycling program of your local municipality.

**Be careful about broken parts or exposed internal part of the product when the display or the camera lens is broken.**

Touching damaged or exposed part might cause burns, injury, electric shock, etc.

**If the internal battery leaks or gives off a strange smell, immediately stop using and remove it from the vicinity of open flames.**

The leaking liquid might ignite, catch fire, explode, etc.

**Be careful not to allow a pet etc. to bite the product.**

Doing so might cause fire, burns, injury, etc. because of ignition, burst, heat or leaking of the internal battery.

**Caution Be sure to read the following cautions before use.**

### 5

**Explanation of graphic symbols**

	Indicates an action that is not allowed.		Indicates that handling with wet hands is not allowed.
	Indicates that disassembly is not allowed.		Indicates compulsory actions in accordance with instructions.
	Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.		Indicates that the power plug must be disconnected from an outlet.

**Precautions common to the main unit, internal battery, charging equipment, SIM card, peripheral devices**

**Danger Be sure to read the following hazards before use.**

**Do not use, store or leave the equipment in a location where it is subject to high temperature or accumulation of heat (e.g. by the fire, near a heater, under a kotatsu or bedding, in direct sunlight, in a car in the hot sun).**

Doing so might cause fire, burns, injury, electric shock, etc.

**Do not put the equipment in cooking appliances such as microwave ovens, IH cooking heaters, or high pressure containers such as pressure cookers. Do not place the equipment near such cooking appliances.**

Doing so might cause fire, burns, injury, electric shock, etc.

**Do not splash sand, soil or mud, or do not directly place the equipment on it. Also, do not touch the equipment with hands with sand etc. adhered.**

Doing so might cause fire, burns, injury, electric shock, etc.

For waterproofness/dustproofness, refer to "Notes on waterproof, dustproof, and shock resistance properties" (▶P.26).

**Be careful about broken parts or exposed internal part of the product when the display or the camera lens is broken.**

Touching damaged or exposed part might cause burns, injury, electric shock, etc.

**If the internal battery leaks or gives off a strange smell, immediately stop using and remove it from the vicinity of open flames.**

The leaking liquid might ignite, catch fire, explode, etc.

**Be careful not to allow a pet etc. to bite the product.**

Doing so might cause fire, burns, injury, etc. because of ignition, burst, heat or leaking of the internal battery.

**Caution Be sure to read the following cautions before use.**

**When using the motion sensor, check the safety around you, hold the product firmly, and do not shake it unnecessarily.**

Failure to do so might cause an accident such as injury.

**If the display is damaged and when the internal substance etc. leaks out, do not allow it to contact your skin such as face and hands, clothes, etc.**

Doing so might cause injury etc. on your eyes or skin.

If the internal substance gets into your eyes, mouth, etc. or contacts your skin or clothes, immediately rinse with clean water.

In the case of getting into your eyes, mouth, etc., immediately consult a doctor after rinsing.

**Do not discard the product together with other garbage.**

Doing so might cause fire, burns, injury, etc. Also, it might cause environmental destruction. When the product is no longer used, dispose of it according to a recycling program of your local municipality.

**Be careful about broken parts or exposed internal part of the product when the display or the camera lens is broken.**

Touching damaged or exposed part might cause burns, injury, electric shock, etc.

**If the internal battery leaks or gives off a strange smell, immediately stop using and remove it from the vicinity of open flames.**

The leaking liquid might ignite, catch fire, explode, etc.

**Be careful not to allow a pet etc. to bite the product.**

Doing so might cause fire, burns, injury, etc. because of ignition, burst, heat or leaking of the internal battery.

**Caution Be sure to read the following cautions before use.**

**When using the motion sensor, check the safety around you, hold the product firmly, and do not shake it unnecessarily.**

Failure to do so might cause an accident such as injury.

**If the display is damaged and when the internal substance etc. leaks out, do not allow it to contact your skin such as face and hands, clothes, etc.**

Doing so might cause injury etc. on your eyes or skin.

If the internal substance gets into your eyes, mouth, etc. or contacts your skin or clothes, immediately rinse with clean water.

In the case of getting into your eyes, mouth, etc., immediately consult a doctor after rinsing.

**Do not discard the product together with other garbage.**

Doing so might cause fire, burns, injury, etc. Also, it might cause environmental destruction. When the product is no longer used, dispose of it according to a recycling program of your local municipality.

**Be careful about broken parts or exposed internal part of the product when the display or the camera lens is broken.**

Touching damaged or exposed part might cause burns, injury, electric shock, etc.

**If the internal battery leaks or gives off a strange smell, immediately**

- Do not connect the outlet or wiring device when charging the product, for example, by starburst connection etc.

## Main unit

- Since the battery is built into the product, you cannot replace it yourself. For replacing the battery, contact お問い合わせ先 (For inquiries) on 取扱説明書 詳細版 (Full Instruction Manual) (Japanese).

- Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so might cause scratching or damage.

- Do not forcefully press the keys or display surface with your fingernails or hard objects. Doing so might cause scratching or damage of the keys or display.

- Do not use a remodeled product. Use of a modified device violates the Radio Law and Telecommunications Business Act. The product is compliant with rules on the technical standard conformance of specified wireless equipment based on the Radio Law/ Telecommunications Business Act, and as a proof of it, the Technical Compliance Mark ㉿ can be checked with the product.

**Checking procedure: In the Home screen, slide the screen up → [Settings] → [About phone] → [Regulatory label]**  
If modifications of the internal components of the product are made, the certification of conformity with the technical standard conformance etc. becomes invalid. Do not use the product with the certification invalid, as it is a violation of the Radio Law and Telecommunications Business Act.

- Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product, as it might cause a malfunction. Putting a strong magnetism close to the product might cause a false operation.

- Do not bring magnetic cards such as cash cards, credit cards and prepaid cards closer to the product. It might cause loss of the recorded data.

- When you put the product in your pocket or bag, take care that the display does not come in contact with metal objects or other hard objects, as it might cause a scratch or damage.

## 21

- You can use the product in a bathroom.
- After using in a bathroom, drain water in the specified steps (▶P.34).
- Do not immerse the product into a bathtub. Also, do not use the product in hot water. May cause malfunction. If you should fall the product into the bathtub, immediately pick it up to drain water in specified procedure (▶P.34).

- Never put the product in hot spring water or water containing soap, detergent or bath powder which is other than those specified (▶P.30). In case the product gets wet with water other than tap water, wash it in the procedure previously mentioned (▶P.30).
- In a bathroom, use the product under the condition of the temperature 5℃ ~45℃ and the humidity 45% - 99% (however, temperature of more than 36℃ or humidity of more than 86% is limited to temporary use). Note that the Company does not guarantee the successive operations of every function.
- Do not put hot water from a faucet or shower.
- If you bring the product from a cold place to a warm place, dew may be condensed on the display or surface of the case due to sudden changes of temperature. When you are hard to watch the display or make touch operations due to dew condensation, wait for a while until the temperature of the product become normal.

### Slot cap of microSD memory card/SIM card slot

- Make sure that the slot cap of microSD memory card/SIM card slot is firmly closed. Just a small particle (a hair etc.) between contact surfaces can cause water intrusion or dust penetration.

- Do not open or close the slot cap of microSD memory card/SIM card slot with gloved hands. Just a small particle (a hair etc.) between the contact surfaces can cause water intrusion or dust penetration. Wipe off any minuscule droplets of water or dirt with a clean dry cloth before closing the slot cap.
- If the slot cap of microSD memory card/SIM card slot is deteriorated or damaged, the waterproof/dustproof property becomes ineffective.

## 22

- When suddenly brought into a warm place from a cold place, or when used in a humid location or in a place where temperature suddenly changes (e.g. near the air discharge port of an air conditioner), water droplets (i.e. condensation) may be formed inside of the product. Note that when used under such conditions, the humidity might cause corrosion or a malfunction.

- While writing or reading data to or from a microSD memory card, do not subject the product to vibration or impact, or turn off the power. Doing so might cause loss of data or a malfunction.

- Do not cover the light/proximity sensor with your finger or put a sticker on it. Doing so might hinder the light/proximity sensor from detecting the ambient brightness and functioning correctly.

- Do not put a sticker, etc. on the light/proximity sensor. Doing so might cause a malfunction on the sensor and make the display always turned off while receiving a call or during a call.

- Usually use the product with the slot cap of microSD memory card/SIM card slot firmly closed. If the slot cap is open, dirt or water might get inside and cause a malfunction.

- Do not allow liquids, metal and other foreign objects to get inside the USB Type-C port, stereo earphones port, microSD memory card/SIM card slot, earpiece, mic/recorder mic, speaker, second-mic, etc. Doing so might cause a malfunction.

- Do not give strong impact on the product such as dropping, throwing, stomping. Doing so might cause a malfunction.

- Do not put the product directly on sand at a beach etc. Sand or other small particles might get inside the earpiece, mic/recorder mic, speaker, or second-mic causing the volume to drop. If sand gets inside the product, it might cause a malfunction.

- Depending on your operations or usage environment, the product may become warm. In this case, charging may stop or the screen brightness may be adjusted for safety. In addition, if the product is left warm, a warning display may appear and the product may turn off.

- When using the camera, a warning display appears and the camera terminates automatically if you keep using the camera with the product left unused.

### Display (Touch Panel)

- The touch panel is designed to be lightly touched by fingers. Do not apply strong pressure with your fingers or sharp-pointed objects (such as fingernails, ballpoint pens and pins) to the touch panel.
- In the following cases, the touch panel might not respond. Also, it may cause malfunction.
  - Operation with gloves
  - Operation with fingernails
  - Operation with foreign object on the touch panel
  - Operation with protective sheet or seal on the touch panel
  - Operates when the display is wet with water droplet or fogged
  - Operation with wet or sweaty fingers
  - Operation under water

- Putting stickers or sheets (e.g. commercially available protective films, peep prevention sheets) on the display might hinder correct operation of the touch panel.

- When carrying the product in your pocket or bag, take care not to put the touch panel close to metals or other conductive materials, as it might cause false operation of the touch panel.

### Internal battery

- Internal battery of the product is a lithium-ion battery**
  - The internal battery is not fully charged at the time of purchase. Charge the internal battery before using the product. Charge the internal battery if you have not used the product for a long time.
- Use in very hot or cold environments, for example, when left in an automobile with the windows closed in summer, will cause the internal battery capacity to drop and shorten the available usage time. This will also shorten the internal battery's service life. Try to use the product as far as possible at room temperature.



Li-Ion 00

## 23

- Rubber seals**
  - The rubber seal on the inner edges of the slot cap of microSD memory card/ SIM card slot is important to maintain waterproof/dustproof property. Do not damage or remove the rubber seals.
  - When closing the slot cap of microSD memory card/SIM card slot, take care not to get the rubber seal caught. Forcibly closing the cover with the rubber seals caught might damage them resulting in loss of waterproof/dustproof property. Just a small particle (a hair etc.) between contact surfaces can cause water intrusion or dust penetration.

- If any liquid other than plain water (e.g. seawater, detergent, alcohol, juices) is adhered to the product, immediately rinse it with plain water.
- You can wash the product under a mild flow (6 liters per minute or less) of tap water at room temperature (5℃ to 35℃) at a distance of about 10 cm from the faucet or shower head.
- If the product gets dirty, wash it with your hands holding the slot cap of microSD memory card/SIM card slot so that they do not open. Do not use a brush.

- Replacing parts**
  - It is recommended to replace the parts for maintaining waterproof/dustproof property once every two years regardless of whether any abnormality is present. For information on part replacement, contact お問い合わせ先 (For inquiries) on 取扱説明書 詳細版 (Full Instruction Manual) (Japanese).

- Heat resistance**
  - Do not sink the product into boiling hot water or do not splash with boiling hot water to the product. Also, do not use the product in saunas or do not expose the product to fire winds from hair dryer etc. the product is not resistant to high temperatures.

### Shock

- The product shock resistance assumes usage in daily situations, including such as an artificial nail. Doing so may scratch the main unit or the product, which might cause deterioration in durability.
- Do not insert sharp objects into grooves around the slot cap of microSD memory card/SIM card slot. Doing so might damage or deform the product, damage the rubber seals, etc. causing water intrusion or dust penetration.

### Precautions on charging

- The optional accessories are not waterproof/dustproof. Check the following before and after charging.
- Never charge the battery if the product is wet. Doing so might cause fire, burns, injury, electric shock, etc.
  - Check that the product is not wet. If you are charging the battery just after the product gets wet, drain water well and wipe the remaining water off with a clean dry cloth.

## 24

- Using the product near a TV, radio or similar appliance may cause reception interference and disrupt TV images.

- The searching might not be successful if there are multiple wireless LAN (Wi-Fi®) access points near to the product or the same channel is being used.
- Use of mobile phones on board is restricted. Follow the instructions of each airline.
- The communication speed and connectable range vary depending on the distance between communication devices, obstacles and the devices used.

### 2.4 GHz frequency band precautions

The frequencies used by the Bluetooth® and/or wireless LAN (Wi-Fi®) function of the product are in the 2.4 GHz band. In this frequency band, other similar wireless stations, in-plant wireless stations for mobile unit identification that require a license to use, such as factory production lines, specific small power wireless stations that do not require licenses, amateur wireless stations (collectively called "other wireless stations" from here on) are operated in addition to home electrical appliances such as microwave ovens, devices for industrial, scientific and medical devices.

- Before using the product, make sure that "other wireless stations" are not in operation nearby.
- In the event that instances of radio wave interference have occurred between the product and "other wireless stations", immediately either relocate the product or stop operation of the device (stop the emission of radio waves).
- If you are unclear on any points or are troubled by anything, contact お問い合わせ先 (For inquiries) on 取扱説明書 詳細版 (Full Instruction Manual) (Japanese).

- The connections between the product and all other Bluetooth® and wireless LAN (Wi-Fi®) devices have not been confirmed. Therefore, connections with all Bluetooth® and wireless LAN (Wi-Fi®) devices are not guaranteed.
- This product supports security features for wireless communications that are compliant with the Bluetooth® and wireless LAN (Wi-Fi®) standard specifications, but the security may not be sufficient depending on the usage environment and configuration. Be careful when making data communication using Bluetooth® or wireless LAN (Wi-Fi®) function.

### Bluetooth® function:

- ㊦ ㊧ ㊨ ㊩ ㊪ ㊫ ㊬ ㊭ ㊮ ㊯ ㊰ ㊱ ㊲ ㊳ ㊴ ㊵ ㊶ ㊷ ㊸ ㊹ ㊺ ㊻ ㊼ ㊽ ㊾ ㊿ 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3