

Be sure to read this manual before use

TORQUE® 5G

Notes on Usage

- In this manual, "TORQUE® 5G" is usually referred to as "the product" or "main unit".
- In this manual, "Quick Start Guide", "Notes on Usage" (this manual) and "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) are collectively referred to as "Instruction Manual".
- Descriptions in this manual are based on Android™ 11.
- In this manual, "au Nano IC Card 04" is abbreviated as "au IC card".
- In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card" or "microSD".
- Company names and product names referred to in this manual are trademarks or registered trademarks of the respective companies. TM or ® may be omitted in this manual.

April 2021, 1st Edition

Sales: KDDI CORPORATION
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: KYOCERA Corporation

- Do not subject the product to strong pressure or break the product. Especially when bringing the product putting in a pocket of clothes, do not let the product hit against surroundings or being put between the objects. Doing so may cause fire, burns, or injury due to battery damage.
 - Examples to avoid
 - Sitting or squatting with the product put in a pocket of trousers or skirt
 - Putting the product in a pocket of outer wear and catching it in a door or a door of car
 - Stepping on the product on a soft object such as a sofa, bed, or bedding, or on a floor
 - Putting the product into a seat of train or bus

- Do not disassemble or modify. Doing so may cause fire, burns, injuries, or electric shock.

- Do not let the product get wet with water (drinking water, perspiration, seawater, urine of pet animals, etc.). Doing so may cause fire, burns, injuries, or electric shock. For details on water resistance, refer to the following.
 - P.40 "Notes on Water, Dust, Seawater, Shock Resistance, and Washing the Product"

- Do not put water (drinking water, perspiration, seawater, urine of pet animals, etc.) into the charging terminal or the external connection terminal. Doing so may cause fire, burns, injuries, or electric shock. For details on water resistance, refer to the following.
 - P.40 "Notes on Water, Dust, Seawater, Shock Resistance, and Washing the Product"

- Use the optional products specified by au. Not doing so may cause fire, burns, injuries, or electric shock.

- 7 -

- When using the handsfree call, ringtone is ringing loudly, or in the standby mode, be sure to keep the product off of the ears. Also, when playing games, video, or music with an earphone microphone connected to the product, adjust the volume to the proper level. When using the handsfree call, note that the speaker may emit loud sound. Ringtone or alarm sound can be heard even in the standby mode. Turning the sound on with the volume set too loud or using the product continuously for a long time may adversely affect your ears. Doing so may prevent surrounding sound from being heard, causing an accident.

- If you have a weak heart, be careful when setting the ringtone vibration and incoming volume. Sudden ringtone vibration and ringtone surprise you, and it may cause harmful effect on heart.

- To use electronic medical equipment, check with electronic medical equipment manufacturer or vendor to determine how devices are affected by radio waves before using. Radio waves may affect the performance of electronic medical equipment.

- When the display or camera lens is accidentally broken, be careful of broken parts or exposed internal parts of the product. Not doing so may cause burns, injuries, or electric shock with damaged parts or exposed parts.

- Prevent a pet from biting the product. Not doing so may cause fire, burns, or injuries due to battery ignition, rupture, overheat, or leak.

- 14 -

- When you disconnect the power plug from an outlet, do not pull the cord of the specified charger (sold separately) with excessive force. Instead, grasp the adapter to disconnect. Pulling the cord of the specified charger (sold separately) may damage the cord and cause fires, burns, electric shock, etc.

- If wearing an implanted cardiac pacemaker, implanted defibrillator, or other medical electrical device, consult carefully with a doctor before using a wireless charger product (commercially available). Radio waves may affect the performance of electronic medical equipment.

- When plugging/unplugging the specified charger (sold separately) into/from the product, do not pull the cord with excessive force. Instead, plug/unplug it straightly toward the jack to connect. Not doing so may cause fire, burns, injuries, or electric shock.

- Stop using the charger immediately if you notice deformation of the charging terminal. Also, stop using the charger after recovering the original form of the terminal. Short-circuiting of the charging terminal may cause fire, burns, injuries, or electric shock.

- When the charger is not to be used for a long time, disconnect the power plug from the outlet. Leaving it plugged in may cause fires, burns, or electric shock, etc.

- Immediately remove the power plug from the outlet if water or other fluids (drinking water, perspiration, seawater, urine of pet animals, etc.) get on the adapter. Short-circuiting due to the fluid may cause fire, burns, or electric shock.

- 21 -

When Using the Product

- Before you start using the product, be sure to read "Safety Precautions" in this manual to ensure correct use.
- See also "Online Manual" (Japanese) or "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage. <https://www.au.com/online-manual/ky01/> (Japanese) <https://www.au.com/support/service/mobile/guide/manual/> (Japanese)
- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication may not be possible in poor reception areas. Communication may be interrupted if you move into poor reception areas during communications.
- Since this product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated (through the 5G/LTE/WiMAX 2+/GSM/UMTS system has highly secure confidential communication features).
- VoLTE (LTE network) by au is used when connecting with emergency call receiving agencies within Japan. You cannot connect using 3G (circuit-switched network).
- The product is compatible with au World Service. Each network service described in this manual varies depending on the area and service content.
- Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.
- The IMEI information of your cell phone is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of your cell phone.
- If you are using the product overseas, check the relevant laws and regulations of the country/region you visit beforehand.
- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional or mistaken operation by the customer, or use under other unusual conditions outside the responsibility of the Company.

- 1 -

WARNING

- Do not drop, trample, or throw the product or give a strong force or vibration to it. Doing so may cause fire, burns, injuries, or electric shock.
- Do not allow conductive materials (metal pieces, pencil lead, etc.) to come in contact with the charging terminal or the external connection terminal, and do not allow dust to get inside. Doing so may cause fire, burns, injuries, or electric shock.
- Do not cover or wrap the product with bedding, etc. while using or charging the product. Doing so may cause fire or burns.
- Do not adhere anything metal (stickers, etc. containing metal) between a wireless charger product (commercially available) and the back of the product or the back cover. Doing so may cause fire, burns, or injuries.
- Do not place anything metal (straps, clips, etc. containing metal) between a wireless charger product (commercially available) and the back of the product. Doing so may cause fire, burns, or injuries.
- Before charging with a wireless charger product (commercially available), first remove any commercially available cover, etc. attached to the product. The material and thickness of the cover or any foreign matter such as dirt caught between the product and the cover may prevent normal charging and cause fire, burns, or injuries.

- 8 -

CAUTION

- Do not swing the product around by holding a strap, etc. Doing so may cause an accident.
- Before calibrating the Compass, check for safety around you, hold the product firmly, and do not wave the product more than necessary. Doing so may cause an accident.
- If the display breaks and the fluid, etc. leaks out from inside, do not let the fluid contact with the skin on your face or hands or clothes. Doing so may cause eye or skin problems. If the internal matter comes into contact with your eyes, mouth, skin or clothes, immediately rinse the contacted area with clean water. If the fluid enters your eyes, mouth etc., immediately see a doctor after rinsing.
- Do not forcibly remove the back cover. This can damage the back cover and may cause injuries.
- Be careful not to get your finger or a part of your body caught when installing the back cover. Doing so may cause injuries.
- Do not use the product without the back cover. Doing so may cause burns, injuries, or electric shock.
- To remove the back cover, always use the LOCK Rotating Tool (sample) to unlock the cover before removing it.

- 15 -

- Always remove the power plug from an outlet when cleaning the equipment. Not doing so may cause fire, burns, or electric shock.

CAUTION

- Do not keep touching continuously the specified charger (sold separately) when it is connected to an outlet. Doing so may cause burns.

■ au IC Card (SIM Card)

CAUTION

- Be careful of the cut surface when handling the au IC card as it may damage a part of your body such as fingers, etc. The cut surface may cause injuries with adhered metal pieces.

■ LOCK Rotating Tool (Sample), Hexagon Wrench (Sample)

WARNING

- The hexagon wrench (sample) has a sharp point. Do not use pointed at yourself or others. Doing so may allow it to strike yourself or others, causing injuries or blindness.

- The Company is not liable for any incidental damages (change/disappearance of saved content, loss of business income, disruption of business, etc.) arising from use of or inability to use the product.
- The Company is not liable for any damages arising from failure to observe the described content of this manual.
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.
- It is recommended you keep a copy of important data on your PC's hard disk, etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.
- Contents saved in the product, such as contacts, mails and favorites might be altered or lost by an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that the Company assumes no responsibility for any damages or lost profits resulting from altered or lost contents.
- Note that content data (both charged or free of charge) saved on the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.
- The product uses liquid crystal for its display. The display response speed may become slow when the ambient temperature is low, which is due to the characteristics of liquid crystal and is not a malfunction. The display response speed will return to normal at room temperature.
- Although the display used on the product is made using high-precision technology, some pixels (dots) might be lit or out at all times. This is not a malfunction.
- You are recommended to store copies of individual data such as photos/movies you took and music in your PC by sending each file as mail attachment, etc. Note, however, that you may not be able to make copies of some copyrighted data even by the above-mentioned means.

- 2 -

- Turn the product off near precision control and faint-signal electronic devices. Radio waves may cause malfunctioning or otherwise affect the electronic devices.
 - Examples of electronic devices to be careful of hearing aids, implanted cardiac pacemakers and implanted defibrillators, other medical electrical devices, other automatic control devices, etc. Those who use an implanted cardiac pacemaker, implanted defibrillator, or other medical electrical device should check with the manufacturer of the medical electrical device or where they purchased the device with regard to how it may be affected by radio waves.

- If charging is not completed after the specified charging time, stop charging. Overcharging may cause fire, burns, or injuries.

- Make sure to turn off or stop charging the product before you get close to places where a flammable gas or dust can be generated. Using the product in places where a flammable gas can be generated may cause an explosion or fire.

- Follow the instructions given by the respective institution regarding the use of the product in a gas station.

- Do not charge the product in a gas station. Be careful not to drop the product in a place like a gas station, especially when you put gas into a vehicle. Using the product in places where a flammable gas can be generated may cause an explosion or fire.

- To use the product in a car, check with automobile manufacturer or dealer to determine how vehicle devices are affected by radio waves before using. In rare cases, using the phone in some vehicle models can cause the vehicles electronic equipment to malfunction. In that case, stop using the product immediately.

- 9 -

- If you develop skin problems, stop using the product immediately, and see a doctor. Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition. For material of each part ▶P.24 "Material List"

- Make sure that there are no adhered metal pieces (cutter blade, staples, etc.) as the speaker or camera part of this product generates magnetism. Not doing so may cause injuries with adhered metal pieces.

- Use the product in a well-lighted area and put some distance between you and the display when watching the display. Using the product in dark places or near eyes may affect your vision.

- Do not forcibly remove the back cover. This can damage the back cover and may cause injuries.

- Be careful not to get your finger or a part of your body caught when installing the back cover. Doing so may cause injuries.

- Do not use the product without the back cover. Doing so may cause burns, injuries, or electric shock.

- To remove the back cover, always use the LOCK Rotating Tool (sample) to unlock the cover before removing it. Doing so may cause fire, burns, or injuries.

- 16 -

CAUTION

- If using the LOCK Rotating Tool (sample) or hexagon wrench (sample) causes any skin abnormality, immediately discontinue use and see a doctor. Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition. For material of each part ▶P.24 "Material List"

- Store out of reach of infants and young children. They may accidentally swallow it, causing choking or injury.

■ Use near Medical Instruments and Inside Medical Facilities

WARNING

- Wearers of medical equipment such as implanted pacemakers or defibrillators must carry and use the product at least 15 cm away from the implanted device. Radio waves may affect the performance of electronic medical equipment.

- When using electronic medical devices as home medical treatment other than an implanted pacemaker and an implanted cardioverter-defibrillator outside medical facilities, check individually with the manufacturer of the electronic medical equipment regarding the influence of radio waves. Radio waves may affect the performance of electronic medical equipment.

- 23 -

- Do not discard the old product together with regular trash. Please cooperate in the collection of the product (including optional parts) when it is no longer needed to protect the environment and effectively use resources. Old products are collected at au shop/au Style and other places.
- "The Company" as appears in this manual refers to the following companies: Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY Manufactured by: KYOCERA Corporation

memo	
	Reproduction of the content of this manual in part or in whole is prohibited.
	The content of this manual is subject to change without notice.
	Due to the specification changes of the operating system or termination of the services, some features become unavailable.
	Every effort has been made in the preparation of this manual. Should you notice any unclear points, omissions, etc., feel free to contact us.

Safety Precautions (Observe Strictly)

- Before using the product, thoroughly read this "Safety Precautions" for proper use. Please keep this manual carefully after reading it.

- 3 -

- Perform the following operations with care while using, charging, or keeping the product if there are odors, noise, smoke, overheating, discoloring, deformation, or other abnormalities.
 - Remove the power plug from the wall outlet.
 - Turn the product off.
 - Remove the battery pack from the product. Not doing so may cause fires, burns, bodily injury, or electric shock, etc.

CAUTION

- Do not use the damaged product. Doing so may cause fire, burns, or injuries.
- Do not leave the product on unstable or sloping surfaces. Be careful especially when the product is set to vibrate. The product may fall and cause injuries.
- Do not use or store the product in humid or dusty places, or places that get hot. Doing so may cause fire, burns, or electric shock. For details on water/dust resistance, refer to the following.
 - P.40 "Notes on Water, Dust, Seawater, Shock Resistance, and Washing the Product"
- When children use the product, do not let them use incorrectly without instruction by an adult for proper use. Doing so may cause accidental swallow, injuries, or electric shock.

- 10 -

- Do not forcibly install the battery pack when attaching the battery pack. Do not forcibly remove the battery pack when removing the battery pack. Doing so may cause fire, burns, or injuries. For details on installing/removing the battery pack, refer to "取扱説明書 (Full Instruction Manual)" (Japanese).

- Do not throw the main unit into fire or apply heat. Doing so may cause fire, burns, or injuries.

- Do not apply excessive force such as sticking a sharp-edged tool (nail, etc.) into the product, hitting it with a hard tool (hammer, etc.), or stepping on it. Doing so may cause fire, burns, or injuries.

- Check the orientation of the battery pack when installing the battery pack into the product. Not doing so may cause fire, burns, or injuries due to battery pack ignition, rupture, overheat, or leak. For details on installing the battery pack, refer to "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese).

- If the substance inside the battery pack comes into contact with your eyes or mouth, immediately rinse the area with clean water, and then see a doctor right away. Not doing so may cause loss of sight or poor physical condition due to the influence of the substance, etc. inside the battery pack.

WARNING

- Do not use the product if there are odors, noise, smoke, overheating, discoloring, deformation, or other abnormalities. Doing so may cause fire, burns, or injuries.

- 17 -

- Make sure that the product will not emit any signals (turn off power, put it in Airplane mode, etc.) if within 15 cm of those around you, such as when crowded and you cannot move freely. There may be people with an implanted pacemaker or an implanted cardioverter-defibrillator nearby. Radio waves may affect the performance of electronic medical equipment.
- When using the product in medical facilities, be sure to observe the regulations of the facility. Radio waves may affect the performance of electronic medical equipment.

Material List

■ TORQUE 5G main unit		
Part	Material	Surface Treatment
Exterior case (display side)	PA resin	UV-cured acrylic coating
Front cover	PC resin	UV-cured acrylic coating
Exterior case (top/bottom panel, side), back cover, USB cover	PC resin	UV-cured acrylic coating
Volume up/down button, Direct button	PC resin/TPU	—
Power button	Epoxy resin	Acrylic thermal cure coating
Exterior case (top/bottom bump protectors)	TPU	—
Display	Chemically strengthened glass	—

- 24 -

- These precautions describe instructions that should be observed to prevent injury to the customer and others, or damage to property using the product.

- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

	DANGER This sign denotes that "death or serious injury" may directly result from improper use.
	WARNING This sign denotes that "death or serious injury" may result from improper use.
	CAUTION This sign denotes that "minor injury" or damage to property" may result from improper use.

- 1 Serious injury.This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long-term hospital attendance as an outpatient.

- 2 Minor injury.This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.

- 3 Physical damage.This refers to extended damage to buildings, furniture, livestock or pets.

- 4 -

- Do not store the product within the reach of small children. Be careful especially when you store the small parts such as a LOCK Rotating Tool (sample) or a hexagon wrench (sample). Not doing so may cause accidental swallow, injuries, or electric shock.

- Be careful when using the product continuously or charging as it gets hot. Also, avoid touching the product continuously while putting the product in a pocket of clothes or falling asleep unintentionally. The product or specified charger (sold separately) may become hot when using applications, calling, doing data communication, watching videos continuously, or while charging. Depending on your physical predisposition and physical condition, contacting with a high temperature part continuously may cause skin redness, itching, rash, or low-temperature burns.

■ Main Unit

DANGER

- Do not throw the main unit into fire or apply heat. Doing so may cause fire, burns, or injuries.
- Do not apply excessive force such as sticking a sharp-edged tool (nail, etc.) into the product, hitting it with a hard tool (hammer, etc.), or stepping on it. Doing so may cause fire, burns, or injuries.

- Do not touch the battery pack with wet hands. Doing so may cause burns or electric shock.

- Stop using the product immediately and move the battery pack away from fire if you notice unusual odor or leakage of fluids inside the battery pack. The battery fluid is flammable and could ignite, causing a fire, explosion, etc.

- Prevent a pet from biting the battery pack. Not doing so may cause fire, burns, or injuries due to battery pack ignition, rupture, overheat, or leak.

CAUTION

- If fluid, etc. leaks out from the battery pack, do not let the fluid contact with the skin on your face or hands or clothes. Doing so may cause eye or skin problems. If the internal matter comes into contact with your eyes, mouth, skin or clothes, immediately rinse the contacted area with clean water. If the fluid enters your eyes, mouth etc., immediately see a doctor after rinsing.
- Do not discard the old battery pack together with regular trash. Doing so may cause fire, burns, or injuries. May damage the environment. After insulating the battery pack no longer needed with tapes, etc. on the connection terminal of the battery pack, and bring the battery pack to a sales outlet such as au shop/au Style. Alternatively, if your local municipality has a battery recycling program, dispose of it as provided for.

- Do not touch the battery pack with wet hands. Doing so may cause burns or electric shock.
- Stop using the product immediately and move the battery pack away from fire if you notice unusual odor or leakage of fluids inside the battery pack. The battery fluid is flammable and could ignite, causing a fire, explosion, etc.
- Prevent a pet from biting the battery pack. Not doing so may cause fire, burns, or injuries due to battery pack ignition, rupture, overheat, or leak.

- If fluid, etc. leaks out from the battery pack, do not let the fluid contact with the skin on your face or hands or clothes. Doing so may cause eye or skin problems. If the internal matter comes into contact with your eyes, mouth, skin or clothes, immediately rinse the contacted area with clean water. If the fluid enters your eyes, mouth etc., immediately see a doctor after rinsing.

Part	Material	Surface Treatment
Wide-angle camera lens, out-camera lens	Chemically strengthened glass	Antifouling
Mobile light lens	PMMA resin	—
Exterior panel (side of out-camera/wide-angle camera)	PC resin	UV-cured acrylic coating
Camera button	Aluminum	Anodizing
Case screws	SWCH	Baking finish
Lock knob	SUS	Ni-plated coating
au IC card/microSD memory card tray	POM resin	—

■ Battery pack

Part	Material	Surface Treatment
Exterior	PC resin	—
Seal	PET	—
Terminal	Copper	Gold-plated (Ni-plated undercoating)

■ LOCK Rotating Tool (sample)

Part	Material	Surface Treatment
Exterior	PA resin	—

■ Hexagon wrench (sample)

Part	Material	Surface Treatment
Exterior	Palladium steel	Electroless Ni plating

- 25 -

■ Explanation of Graphic Symbols Used in This Manual

	Indicates an action that is not allowed.		Indicates that handling with wet hands is not allowed.
	Indicates that disassembly is not allowed.		Indicates an action based on instructions that must be done.
	Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.		Indicates that the power plug must be disconnected from the power outlet.

■ Precautions Common to the Main Unit, Battery Pack, Charger, au IC card (SIM Card), LOCK Rotating Tool (Sample), Hexagon Wrench (Sample), Peripheral Devices

DANGER

- Do not use, store or leave the product in hot places (e.g. by the fire, near a heater, under a katushi or futon, in direct sunlight, in a car in the hot sun). Doing so may cause fire, burns, injuries, or electric shock.

- 5 -

- If the substance inside the main unit comes into contact with your eyes or

- Modification of the product with a soft dry cloth (such as the type used for eyeglasses). Forceful rubbing with a dry cloth may scratch the display. The display may be stained if splash or smear is left attached to the surface. Wiping the product using thinner, benzine, detergent, glass cleaner, etc. might erase the printing on the outer cover or cause malfunction.
- You can use isopropyl alcohol, ethanol, or sodium hypochlorite to wipe the product with a soft cloth.
 - For details on cleaning the product, refer to “取扱説明書（詳細版）（Full Instruction Manual）（Japanese）.
- Use as far away as possible from fixed-line phones, TVs and radios. Use nearby might affect them.
- The product may become warm while charging, depending on the situation, but this is not abnormal.
- Remove the battery pack after turning off the product. Data stored in the product may sometimes be altered or lost by removing the battery pack before turning off the product.
- Do not place near corrosive chemicals or in places where corrosive gas is generated. Doing so may cause malfunction.
- Do not use outside when you can hear thunder. Doing so might risk lightning strikes and electric shock.
- Be sure to use only the specified peripheral devices. Use of other peripheral devices might cause malfunction.
- Do not put the product in a cooking apparatus such as microwave oven or a pressure vessel. Doing so may cause malfunction.
- The customer is not allowed to disassemble, modify or repair the product. Doing so may cause malfunction.

- 28 -

- When the battery pack is not to be used for a long time, remove the battery pack from the main unit, and store it away from hot and humid places.
- The battery pack is a consumable item. If the performance of a battery pack does not recover (e.g. the usable time after each charge has become extremely short), the battery is at the end of service life, so stop use and buy a new one of the specified type. Note that the length of service life varies depending on the usage condition, etc.
- Battery packs sometimes swell up as they approach the end of their service life depending on the usage condition. This is due to the properties of lithium-ion batteries, and is not a problem in terms of safety.
- Do not use a battery pack that has been damaged or that is leaking battery fluid. Doing so may cause malfunction.
- Do not wet the battery pack with water, etc. A wet battery pack may cause malfunction. If you drop the product into water by mistake, immediately turn off the power, remove the battery pack, and contact an au shop/au Style or Repair and Delivery Support Center. Never charge a wet battery pack.

Charger

- Do not wrap power cords of the specified charger (sold separately) around the charger. Do not forcibly bend the specified charger’s (sold separately) plug or the connection between the connector and power cord. Do not place heavy objects on the cord of the specified charger (sold separately) or USB connection cable, or do not pull the cord with excessive force. Doing so may cause malfunction.

- 35 -

- Do not let the product submerged into or get wet with the liquids (alcohol, hot water of hot spring, water containing soap, detergent, bath powder, alcohol drink, soft drink, seasoning, etc.) other than tap water. Do not use it in a place where it gets wet with pet urine either.
- If the product gets splashed, immediately rinse it off with tap water.
- You can use isopropyl alcohol, ethanol, or sodium hypochlorite to wipe the product with a soft cloth.
 - For details on cleaning the product, refer to “取扱説明書（詳細版）（Full Instruction Manual）（Japanese）.
- Do not place the product directly on sand at a beach, etc. If stickers or other small particles get inside the mouthpiece (microphone), receiver, or speaker, etc., it may cause overheating or a fault.
- Do not use or leave the product in a humid place such as a bathroom or kitchen for an extended period of time. The product is tested to ensure its proper operability when the product is exposed to hot water of the temperature as hot as bath shower water (43°C or less).
- Moisture may still remain after draining. While this will not affect use, you should not leave the product next to items you do not want to get wet. The product may wet clothing, include of carry bag, etc.
- Drain any water in the mouthpiece (microphone), receiver, or speaker that may be affecting audibility.
- The product is not designed to resist water pressure. Avoid exposing to high water pressure or submersing in water for a long period.
- Do not wash the product in a washing machine or ultrasonic bath.
- Do not immerse the product into a bathtub. The product is not designed to be heat resistant.
- The rapid changes of temperature may cause condensation, resulting in malfunction. Wait until the product reaches room temperature before you bring the product from a cold place into a warm bathroom.

- 42 -

Bluetooth® and wireless LAN (Wi-Fi®) functions of the product use frequencies in the 2.4 GHz band.

- Bluetooth® function: 2.4FH1/XX4

<div>2.4FH1/XX4</div>

This product uses the 2.4 GHz band. FH-SS is used as the modulation scheme. The interference distance is about 10 m or less.

The band of mobile unit identification devices cannot be avoided.

- Wireless LAN (Wi-Fi®) Function: 2.4DS4/0F4

<div>2.4DS4/0F4</div>

This product uses the 2.4 GHz band. DS-SS and OFDM are used as the modulation schemes. The interference distance is about 40 m or less.

This means that all bandwidths are used, and that band of mobile unit identification devices can be avoided.

Available channels vary depending on countries.

For use in an airplane, check with the airline company in advance.

Cautions on Using 5 GHz Band

Outdoor use of 5.2 GHz/5.3 GHz band (W52/W53) is prohibited under the Radio Law, except communications with a base station or a land mobile relay station for 5.2 GHz band high output power data communication system.

The used channels of the product are as follows.

- W52 (5.2 GHz band / 35_40_44_48ch)
- W53 (5.3 GHz band / 52_56_60_64ch)
- W56 (5.6 GHz band / 100_104_108_112_116_120_124_128_132_136_140_144ch)

- 49 -

Modification of the product is in violation of the Radio Law and Telecommunications Business Law.

- To prevent short-circuiting of the connection terminal, do not allow your fingers or any other part of your body or conductive materials (metal, pencil lead, etc.) to come in contact with or enter these areas. Doing so may cause malfunction.
- In the event that the product gets wet while charging, immediately disconnect the power plug of the specified charger (sold separately).
- Do not use the product while driving a car or riding a motorbike or bicycle or while walking. Use of a mobile device while driving a car or motorbike is prohibited by law. Use of a cell phone while riding a bicycle may be punishable by some regulations.
- Using or charging the product in a bag or while it is covered with bedding might cause malfunction.
- When using a specified charger (sold separately) or external device, insert/remove the connector straight to/from the terminal. Improper connection may cause a fault.
- Do not expose the camera lens to direct sunlight for an extended period. Doing so may cause malfunction.
- Do not store the product in places subject to direct sunlight (e.g. in a car), places that get hot, places that get extremely cold, and in humid or dusty places. Doing so may cause malfunction.
- Do not leave the product on unstable or sloping surfaces. Be careful especially when the product is charging or set to vibrate. The product may fall and cause malfunction.

- 29 -

- When unplugging the power plug of the specified charger (sold separately) from the power outlet, hold and pull the power plug. If you pull the cable, it might be damaged.

Wireless Charging

- Do not adhere anything metal (stickers, etc. containing metal) on Wireless Charging Pad (commercially available) or the back of the product. Doing so may cause malfunction.
- The indicator LEDs on the Wireless Charging Pad (commercially available) remain on after charging completes, but this is not abnormal.
- Charging may stop just before phone is completely charged.
- If charging stops just before phone is completely charged, charging may not immediately resume.
- Some Qi-specification products may experience repeated starting/stopping of charging.
- Above a certain temperature, the charging function may stop or charging may take a long time, but this is not abnormal. Wait for the temperature to cool.
- Charging is controlled at a reduced rate during wireless charging to prolong the life of the battery pack.
- Place the Wireless Charging Pad (commercially available) on a flat, stable surface before charging.
- Turn the phone’s vibration function off before wireless charging. Vibrating of the phone may cause it to move, preventing charging from completing or causing it to fall.
- Before charging, remove any case, cover, stickers or sheets (commercially available protective film or privacy protector) attached to the product.

- 36 -

- The product does not float on water.
- Back cover/USB cover**
 - Close firmly the USB cover of the product, and make sure the back cover is completely attached. Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage.
 - Do not wear gloves while opening/closing the USB cover or attaching/removing the back cover. Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage. Before closing the cover, wipe any water, soiling, etc. with a dry, clean cloth, no matter how small.
 - Any deterioration or damage with the back cover or USB cover will affect water resistance.
- If any liquid other than water gets on the product**
 - If anything other than water (seawater, washing detergent, soft drink, alcohol drink, etc.) gets on the product, immediately rinse with water.
 - You can use isopropyl alcohol, ethanol, or sodium hypochlorite to wipe the product with a soft cloth.
 - For details on cleaning the product, refer to “取扱説明書（詳細版）（Full Instruction Manual）（Japanese）.
 - You can wash the product under a mild flow (up to 6 liters per minute) of tap water at room temperature (5°C to 35°C) at a distance of about 10 cm from the faucet or showerhead.
 - If soiled, wash by hand without using a brush, etc., holding the product so that the back cover and USB cover do not open.
- After the product gets wet**
 - After becoming wet, drain water, and then without removing the back cover, wipe both the product and back cover with a dry, clean cloth.
 - In cold regions, any water on the product may freeze. Using the product with frozen water may cause malfunction. Do not leave any water drops on the product.

- 43 -

Security Code/PIN Code

Security Code

The product has various security codes that you can use. The available security codes are as follows. Do not forget the various security codes that are set as they are necessary for various operations and contracts.

Be sure to change initial codes to your own codes before using the product.

Security code	
Example of usage	① To do remote operation of voice mail and call forwarding services from a fixed-line phone <p>② To use Customer Center and to do various inquiries, applications, and modifications on the au homepage</p>
Initial value	A four-digit number chosen by the customer and noted on the application form

PIN Code

- PIN Code**
 - To prevent unauthorized use of the au IC card by a third party, you can set the product to require PIN code entry every time the power is turned on. You also need to enter PIN code when setting whether PIN code entry is required.
 - If PIN code is incorrectly entered three times consecutively, the PIN code will be locked. You can unlock the PIN code using PUK code.
 - At the time of purchase, the PIN code is ‘1234’, and entry is not required. You can change the PIN code to any 4- to 8-digit number and the product to require entry if necessary.
 - To use the product with a PIN code required, be sure to change the PIN code to your own number you have chosen.

- For charging the product, do not exceed the rating of an outlet or wiring device by overloading an electrical circuit, etc.

Main Unit

- Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so may cause scratching or damage.
- The display surface of this product is protected by the hybrid shield. Do not use the hybrid shield without the sheet on its surface of the front screen because it may affect the functionality of the product.
- Do not forcefully press your fingernails, sharp objects, or hard objects against buttons or display surface. Doing so may cause scratching or damage.
- Never use the modified product. Use of a modified device violates the Radio Law and Telecommunications Business Law. The product has acquired such certification as conformity with technical regulations for a specified radio station based on the Radio Law and conformity with technical regulations for a terminal device based on the Telecommunications Business Law, and the “Technical Conformity Mark ®” can be confirmed internally in the product. Swipe up the Home screen→[Settings]→[About phone]→[Compliance information] If modifications are made to the internal components, the certifications of conformity with technical regulations will become invalid. Never use the product without these certifications valid. Doing so violates the Radio Law and Telecommunications Business Law.

- 30 -

- Make sure that the Wireless Charging Pad (commercially available) and the main unit are not wet.
- Do not wirelessly charge while a separately-sold AC adapter or USB Type-C cable is connected to the main unit.
- Keep any other wireless chargeable device other than the product you are charging away from the product. The au product you are charging may not be detected and prevent charging.
- If a TV, radio, etc. experience noise, charge as far away from the TV, radio, etc. as possible.
- Depending on the Qi-specification product, calls may not be received during charging.
- Some Qi-specification products may experience interference with the Osaifu-Keitai® function, preventing charging from starting.
- Activating of apps, etc. during wireless charging may prevent charging from completing.
- The main unit may become warm while in Wireless Charging Pad (commercially available), but this is not abnormal.
- Reception (quality of data communication, etc.) may be affected while charging on Wireless Charging Pad (commercially available).
- Do not move the Wireless Charging Pad (commercially available) or the main unit while charging.
- Battery may deplete if the main unit is left unused for a long period even after completing charging.
- Do not let a credit card, contactless IC card, etc. between the product and the Wireless Charging Pad (commercially available) when charging wirelessly. Doing so may prevent charging, or heat during charging resulting in the product or card malfunctioning or being damaged.

- 37 -

- Rubber seal**
 - The rubber seal around the USB cover and back cover is important in maintaining water resistance. Do not scratch or remove it.
 - Be careful not to pinch the rubber seal when closing the USB cover and back cover. Trying to close the cover with a seal pinched can scratch the seal and affect water resistance. Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage.
 - Any liquid other than water on the product can affect product durability.
 - Do not insert pointed objects in the USB cover or back cover. Doing so may damage/deform the product or scratch the rubber seal, allowing water seepage.
 - Parts used for maintaining water resistance should be replaced every 2 years regardless of their appearance. Contact your nearest au shop/au Style for replacement.
- Heat resistance**
 - Do not submerge the product in hot water or get it wet with hot water. Do not use the product in saunas or expose it to hot air from hair dryer, etc. The product is not designed to be heat resistant.
- Shock**
 - The product shock resistance assumes usage in daily situations; subjecting the product to excessive shock such as by throwing or causing/tipping the product fall forcefully may break the product.
- seawater/Underwater**
 - Check the following before using in seawater.
 - Close the USB cover and back cover securely. Water resistance is effective when completely sealed.
 - Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage.
 - Make sure the back cover is locked.
 - Check the following during and after use in seawater.
 - Never open/close the USB cover or back cover when the product or your hands are wet.

- 44 -

PUK Code

In case PIN code is locked, you can unlock it by entering PUK code.

- PUK code is an 8-digit number given at the time of purchase, which is printed on the back side of the plastic card on which your au IC card is attached.
- After entering PUK code, you need to set a new PIN code.
- If PUK code is incorrectly entered ten times consecutively, contact an au shop/au Style, Toyota store dealing in au, or Customer Center.
- PIN code is not reset by initializing the product.

- 45 -

Notes on Applications

- Be sure to check the security of the application, then install it at your own risk. Some applications may affect the operation of other applications or the whole operation of the product. Some applications might cause virus infection, damage various data, and send out your location information, usage history or personal information stored in your cell phone via the Internet.
- The Company assumes no responsibility for any problems that might be caused by applications you have installed. In such case, you may be charged a repair fee even during the warranty period.
- The Company assumes no responsibility for any disadvantage brought to you or any third party by applications you have installed.
- Some applications require that a microSD memory card be inserted.
- Some applications prevent the screen from entering sleep mode while they are active, or rapidly drain the battery while running in the background.
- Changes to method of operation or to screen display may occur without notice due to version upgrades of applications installed on the product. Note that there may be differences with descriptions in this manual.

Notes on Data Communication Charges

- Since constant Internet connection is possible with the product, data communication may be performed automatically by some applications, resulting in high data communication charges. Therefore, subscription to a data flat-rate service/data communication charge discount service is recommended.
- Connection for browsing homepages, downloading applications, communication using applications, sending/receiving e-mails and configuring various settings is by the Internet, and data communication charge applies.
 - Data communication charge does not apply to wireless LAN (Wi-Fi®) connection.

Notes on Call Charges

When you end a call, make sure to disconnect the call. If you forget to disconnect, the call charges may be higher.

- Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product, as it might cause malfunction of the product.
- Putting strong magnetism close to the product might cause false operation.
- Do not bring magnetized cards such as cash cards, credit cards and prepaid cards closer to the product. Doing so may result in loss of recorded information.
- When you put the product in your pocket or bag, take care so that the display does not come in contact with metal objects or other hard objects. Not doing so may cause scratching or damage. Be aware that any metal or other hard cell phone strap that comes into contact with the display may scratch or damage it.
- When suddenly brought into a warm place from a cold place, or when in a humid location, or when used where temperature suddenly changes (e.g. near the air discharge port of an air conditioner), water drops (i.e. condensation) sometimes are formed inside the product. Note that when used under conditions such as these, humidity might cause corrosion or a fault.
- Camera lens or inside of the display may mist over (dew formation) because of usage environment such as temperature or humidity. This is not malfunctioning or abnormal.
- In the following cases, such as large temperature change or high humidity, camera lens or inside of the display mist over (dew formation) because of usage environment.
 - Bring the product from a high temperature land into a low temperature water.

- 31 -

au IC Card

- Do not forcibly remove or insert the au IC card. Be careful not to exert excessive force when inserting the card into your au cell phone.
- You are responsible for any damage caused by inserting your au IC card into some other IC card reader/writer, etc.
- Do not put stickers, etc. on the au IC card.
- Do not insert your au IC card with a conversion adapter attached. Doing so may cause malfunction.
- Do not damage the card (use in a hot place, throw into fire, contact the metal part with foreign object, give an impact, bend, apply a load, moisten, etc.). Doing so may cause data loss or malfunction.

- LOCK Rotating Tool (Sample), Hexagon Wrench (Sample)**
 - Do not apply excessive force to the LOCK Rotating Tool (sample) or hexagon wrench (sample). Doing so may cause malfunction or damage.
 - The LOCK Rotating Tool (sample) and hexagon wrench (sample) are not covered by the free-of-charge repair warranty.

Camera

- When photographing important occasions, take a trial shot and check the shot image to make sure it is correctly shot.
- Do not shoot in areas where shooting is prohibited.

Copyrights and Rights of Portrait

- You are not allowed to copy, distribute, publish, modify or edit the data you shot, recorded or downloaded using the product without consent of the copyright holder, except for personal use, under the copyright law.

- 38 -

- When opening the back cover, open gently so as not to allow water to enter inside. If water contacts the inner surface of the back cover, always wipe away before using the product.
- Do not use the product in the water at approximately 20kPa (maximum depth of 2.0 m) or deeper. Do not use in the water continuously for more than 60 minutes.
- The product sinks; use a strap, etc. and be careful not to drop in the water.
- Close the USB cover and back cover securely before using underwater.
- After using in seawater, open the USB cover and front cover, and wash the product using fresh water. At this time, never open the back cover.
- Never open the back cover while it is wet.
- Do not subject the product to shock in the water. Do not dive in water while holding the product, and do not subject to harsh water pressure of rapids, a waterfall, etc. Do not use the product in a way that subjects it directly to high-pressure water.
- For details on cleaning the product or draining water when it gets wet, refer to “取扱説明書（詳細版）（Full Instruction Manual）（Japanese）.
- Always wash the product after using or immersing in seawater, and completely dry before charging.
- Sunscreen or sun oil splashing on the product may discolor the surface of the product or cause a fault. If on the product, immediately rinse.
- Touch panel cannot be operated underwater.

Precautions on Charging

Accessories and optional accessories are not water/dust resistant. Note the following before and after charging.

- Never charge the battery if the product is wet. Doing so may cause fire, burns, injuries, or electric shock.
- Make sure the product is not wet. If charging after the product has gotten wet, first drain water well and wipe with a dry, clean cloth, etc., before opening the USB cover, etc.

- 45 -

- Bring the product from a cold place into a warm place as well as an indoor.
- Open/Close the USB cover of the product in a high humidity environment.
- How to clear the condensation
 - Do not use the product in places that get hot and humid, and sandy or dusty places. Leave the product with USB cover opened for a while until the condensation is cleared when the ambient temperature is held constant.
 - While writing/reading data to/from a microSD memory card, do not subject the product to vibration or impact, remove the battery pack, or turn off the power. Doing so may cause data loss or malfunction.
 - Do not remove the wireless charging antenna on the back side of the back cover. Removing the wireless charging antenna will prevent wireless charging.
 - Do not cover the light sensor with your finger or put a sticker on it. May hinder the sensor from detecting the ambient light level and functioning correctly.
 - Do not put a sticker, etc. on the proximity sensor. May cause the sensor to malfunction and make the display always turned off while receiving a call or during a call.
 - Any soiling on the proximity sensor may cause misoperation. Wipe the sensor with a soft, dry cloth.
 - Do not use the product with the back cover or front cover removed. Do not leave or store the product in this condition. Doing so may allow dust or other foreign matter to enter product and cause malfunction.
 - Keep the USB cover, etc. closed when using the product. Using the product with the covers opened can allow dust, water, etc. to enter and cause malfunction.

- 32 -

- In addition, do not use or modify portraits or names of other individuals without their consent, as it may infringe on rights of portrait. Note that shooting and recording might be restricted at some live performances, shows and exhibitions even for personal use.
- Be careful about the copyright and portrait right when posting images you shot, etc. on Internet/website.

Backup Content On the Product

- Please back up important content registered to the product or downloaded to the product from an outside source. Content recorded to memory on the product sometimes disappears or is altered by unexpected factors, such as static electricity or a fault, repair, mishandling, etc.

FCC Certification Information

- This product is certified by the Federal Communications Commission (FCC). The product’s FCC ID is JOYEB1065. You can view this certification in the following way. How to confirm: Swipe up the Home screen→[Settings]→[About phone]→[Compliance information]

- If the USB cover was opened to charge, close the cover firmly after charging.
- Do not touch the specified charger (sold separately) with wet hands. Doing so may cause electric shock.
- Do not expose the specified charger (sold separately) to water. Do not use it near water, such as in a bathroom, shower room, kitchen, or washroom. Doing so may cause fire, burns, electric shock, or malfunction. Do not bring it into a bathroom, etc. even when you are not charging with it. Doing so may cause fire, burns, electric shock, or malfunction.

- 39 -

- Subjecting this product to magnetic or electrical noise might increase noise and prevent it from performing communications. (This product is particularly susceptible to noise when used near a microwave oven.)
- Using this product near a TV, radio or similar appliance might cause reception interference and disrupt TV images.
- Searching might not be successful if there are multiple wireless LAN (Wi-Fi®) access points near the product or the same channel is being used.
- Since using the product on airplanes is restricted, follow the instructions given by the respective airlines.
- The communication speed and connectable range vary depending on the distance between communication devices, obstacles and the devices used.

Notes on Using Bluetooth® / Wireless LAN (Wi-Fi®) Function

- The Bluetooth® function of the product conforms to domestic standards of Japan, FCC standards, and have been certified.
- In some countries/regions, the use of the Bluetooth® function may be restricted. If you are using the product overseas, check the relevant laws and regulations of the country/region you visit.
- The wireless LAN (Wi-Fi®) function of the product conforms to domestic standards of Japan, FCC standards, and have been certified.
- In some countries/regions, the use of the wireless LAN (Wi-Fi®) function may be restricted. If you are using the product overseas, check the relevant laws and regulations of the country/region you visit.
- The 2.4 GHz band used by wireless LAN (Wi-Fi®) and Bluetooth® devices is operated by various other devices. For this reason, the communication speed and connectable range may be decreased, or disconnection may occur, due to interference from other devices.
- Do not use this product in places where electromagnetic waves are generated or near electric products, AV and OA equipment, or other magnetized devices.

- 46 -

Cell Phone Etiquette

Use of Cell Phones is Not Allowed in the Following Places!

- Do not listen to music, watch videos while driving a car or motorbike, or riding a bicycle. Use of cell phones while driving a car or motorbike is prohibited by law. (Use of cell phones while riding a bicycle may also be punishable by law.) In addition, stay alert to the traffic around you even when walking. Surrounding sounds might not be heard clearly, and gazing at the screen may distract your attention causing a traffic accident. Be especially careful at railroad crossings, station platforms and pedestrian crossings.
- Since using the product on airplanes is restricted, follow the instructions given by the respective airlines.

Be Considerate of People Around You

- Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode so as not to disturb others around you with your ringtones.
- In a city area, use in a place where you do not bother people walking.
- It is extremely dangerous to walk while looking at the screen of the cell phone. Do not suddenly stop to talk on/operate the cell phone or do so while walking.
- Move to a place where you do not disturb others while you are in shinkansen, a hotel lobby, etc.
- Be careful not to loud while talking.
- Be careful of sound leakage from earphones in trains or other places with many people around you.
- Ask permission if you take photos with your cell phone camera.
- When using the camera, follow common rules of etiquette regarding camera use.
- There may be a person with a cardiac pacemaker nearby at a place filled with people such as in a crowded train. Turn on “Airplane mode” or turn the cell phone off in such places.

- 52 -

- Do not allow liquids, metal objects, or other foreign objects to get inside of the au IC card or microSD memory card slot. Doing so may cause malfunction.
- Product speaker uses magnetic parts; be careful not to allow anything metal (cutter blades, staples, etc.) to adhere to the product when the front cover is removed. Attaching the front cover with anything adhering can cause malfunction.
- Do not give strong impact on the product such as dropping, throwing, stomping. Doing so may cause malfunction.
- Do not place the product directly on sand at a beach, etc. If sand or other small particles get inside the mouthpiece (microphone), receiver, or speaker, etc., it may cause the volume to drop or malfunction.

Touch Panel

- The touch panel is designed to be lightly touched by fingers. Avoid pressing forcefully or using sharp objects (fingernail, ballpoint pen, pin, etc.). The touch panel might not respond to the following types of operation. These may also result in malfunction.
 - with fingernails
 - with another object placed on the operation area
 - with the display covered with a sticker or sheet (commercially available protective film or privacy protector)
 - Any soiling on the display surface may cause false operation. Wipe the display with a soft, dry cloth.
 - Putting stickers or sheets (e.g. commercially available protective film or privacy protector) on the display might cause incorrect operation of the touch panel.

- 33 -

Notes on Water, Dust, Seawater, Shock Resistance, and Washing the Product

This product is protection-rated (JIS C 0920) at IPX5/8-¹ water resistance and seawater capability² as well as IP6X-equivalent³ dust resistance when the back cover and USB cover are completely attached. In addition, this product can be washed with a specified method using hand soap/body soap⁴ for home use. (By Company test methods).

The product also meets 26 ruggedization test requirements, based on 21 categories of the US Department of Defense’s MIL-STD-810H standards and including 5 categories from proprietary tests (by Company test methods). For details on test items, refer to “取扱説明書（詳細版）（Full Instruction Manual）（Japanese）. Product capabilities are confirmed in a test environment, and does not guarantee capabilities under all conditions of actual use. No guarantees are made with regard to non-brakage or non-fault.
¹ IPX5 equivalent means that the product will maintain its operability as a phone even if it is sprayed with water from a 6.3 mm diameter nozzle at a distance of about 3 meters for more than 3 minutes at a rate of about 12.5 liters per minute from any direction. IPX8 equivalent indicates no water seepage and phone capability is maintained even when gently submersed and left at the bottom of a tank for about 30 minutes filled with still, normal-temperature tap water at a depth of 1.5 m.
² Indicates no water seepage and phone capability is maintained even when submersed in normal-temperature, 20kPa (maximum depth of 2.0 m seawater) for about 60 minutes.
³ Seawater: Evaluation made with Company original standards using artificial seawater simulate the seawater composition of the Japanese coast. Regarding use at pools, production has been assessed according to Japanese domestic disinfection standards.

- 40 -

- Subjecting this product to magnetic or electrical noise might increase noise and prevent it from performing communications. (This product is particularly susceptible to noise when used near a microwave oven.)
- Using this product near a TV, radio or similar appliance might cause reception interference and disrupt TV images.
- Searching might not be successful if there are multiple wireless LAN (Wi-Fi®) access points near the product or the same channel is being used.
- Since using the product on airplanes is restricted, follow the instructions given by the respective airlines.
- The communication speed and connectable range vary depending on the distance between communication devices, obstacles and the devices used.

Cautions on Using 2.4 GHz Band

The frequencies used by the Bluetooth® and/or wireless LAN (Wi-Fi®) functions of the product are in the 2.4 GHz band. In this frequency band, other similar wireless stations, in-plant wireless stations for mobile unit identification that require a license to use, such as factory production lines, specific small power wireless stations that do not require licenses, amateur wireless stations (collectively called “other wireless stations” from here on), are operated in addition to home electrical appliances such as microwave ovens, devices for industrial, scientific and medical devices.

- Before using the product, make sure that “other wireless stations” are not in operation nearby.
- In the event that instances of radio wave interference have occurred between the product and “other wireless stations”, immediately either relocate the product or stop operation of the device (stop the emission of radio waves).

- 47 -

When a medical institution has laid down designated areas where use of the product is prohibited or is not allowed to be brought in, abide by the instructions of that medical institution.

