TORQUE 606

Quick Start Guide

- In this manual, "TORQUE GO6" is usually referred to as "the product" or "main unit".
- · In this manual, "Quick Start Guide" (this manual) and "取扱説明書 (詳 細版) (Full Instruction Manual)" (Japanese) are collectively referred
- to as "instruction Manual".

 In this manual, "microSD™ memory card (commercially available)" "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are
- abbreviated as "microSD memory card" or "microSD".

 Company names and product names referred to in this manual are
- trademarks or registered trademarks of the respective companies. TM or ® may be omitted in this manual.
- October 2023, 1st Edition

Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY Manufactured by: KYOCERA Corporation

4 Turn the Lock knob clockwise using a

Turn the Lock knob in the similar way as tightening a screw The Lock knob has been tightened when it does not go more.

Tightening the Lock knob forcibly may cause damage.

* The structure of the Lock knob is changed from that of TORQUE G03/G04/5G so that the back cover can be fixed



Safety Precautions (Observe Strictly)

- Before using the product, thoroughly read this "Safety Precautions" for proper use. Please keep this manual carefully after reading it.
- These precautions describe instructions that should be observed to prevent injury to the customer and others, or damage to property using the product. - 7 -

Do not leave the product on unstable or sloping surfaces. Be careful especially when the product is set to vibrate. The product may fall and cause injuries.

Do not use or store the product in humid or dusty places, or places that get hot. Doing so may cause fire, burns, or electric shock

For details on water/dust resistance, refer to the ▶P.43 "Notes on Water, Dust, Seawater, Shock

Resistance, and Washing the Product" When children use the product, do not let them use

incorrectly without instruction by an adult for proper Doing so may cause accidental swallow, injuries, or

Keep the equipment out of the reach of babies or infants, and store it where pets cannot touch it. Not doing so may cause accidental swallow, injuries, or

 
electric shock Be careful when using the product continuously for a long time or charging as it gets hot. Be careful of contacting with the product continuously by putting the product in a pocket of clothes or falling asleep etc. The product, battery pack, or specified charger (sold separately) may become hot when using applications calling, doing data communication, watching videos

continuously, or while charging. Depending on your physical predisposition and physical condition, contacting with a high temperature part continuously may cause skin redness, itching, rash, or low-

Do not touch the battery pack with wet hands.
Doing so may cause burns or electric shock.

Stop using the product immediately and move the battery pack away from fire if you notice unusual odor or leakage of fluids inside the battery pack. The battery fluid is flammable and could ignite, causing a fire, explosion, etc.

Prevent a pet from biting the battery pack. Not doing so may cause fire, burns, or injuries due to battery pack ignition, rupture, overheat, or leak.



↑ CAUTION

If fluid, etc. leaks out from the battery pack, do not let the fluid contact with the skin on your face or hands or clothes. Doing so may cause eye or skin problems.

If the internal matter comes into contact with your eves

mouth, skin or clothes, immediately rinse the contacted area with clean water. Also, if it comes into contact with your eyes or mouth,

seek medical treatment immediately after rinsing the

Do not discard the old product together with regular trash.

Doing so may cause fire, burns, or injuries, May damage the environment. After insulating the battery pack no longer needed with tapes, etc. on the connection terminal of the battery pack, and bring the battery pack to a sales outlet such as au Style/au shop. Alternatively if your local municipality has a battery recycling program dispose of it as provided for.

- 21 -

Using the Online Manual (Japanese) For detailed descriptions of various functions, refer to the "Online

The "Online Manual" (Japanese) is also available on

When Using the Product

Precautions" in this manual to ensure correct use

Before you start using the product, be sure to read "Safety

ttps://www.au.com/online-manual/kyg03/ (Japanese)

places where the signal does not reach (e.g. tunnels and

into poor reception areas during communications.

ecure confidential communication features).

emergency call receiving agencies within Japan. The product is compatible with au World Service, Each network

within the specified guidelines.

service content.

/ DANGER

/ WARNING

⚠ CAUTION

■ Main Unit

· Since this product uses radio waves, the possibility of

Only Vol TE (LTE network) is used when connecting with

https://www.au.com/support/service/mobile/guide/manual/

· Communication is not possible even inside the service area in

basements). Also, communication may not be possible in poor

communication intercepts by third parties cannot be eliminated

(though the 5G/LTE/WiMAX 2+/GSM/UMTS system has highly

service described in this manual varies depending on the area and

-] -

■ The signs below differentiate between the levels of

danger that can occur if the product is not used

mproper use".

1 Serious injury: This refers to loss of sight, injury, burns (high- and

*2 Minor injury: This refers to injuries, burns (high- and low-

low-temperature), electric shock, broken bones,

iniuries with residual aftereffects from poisoning

etc., and injuries requiring hospital admission for

temperature), electric shock, etc. that do not require

hospital admission for treatment or long-term

nospital attendance as an outpatient.

furniture, livestock or pets.

↑ DANGER

Do not throw the main unit into fire or apply heat.

Do not apply excessive force such as sticking a

with a hard tool (hammer, etc.), or stepping on it.

sharp-edged tool (nail, etc.) into the product, hitting it

If the substance inside the main unit comes into contact

condition due to the influence of the substance, etc. inside

Do not lighten or flash the lighting part of the shooting

light/light close to person's eye. Be especially careful to keep a sufficient distance from small children.

cause an accident such as injuries due to dizziness or

Do not lighten or flash the shooting light/light to point

Doing so may interfere with driving and cause an

at the eyes of someone driving a car, etc.

- 15

Doing so may cause fire, burns, or injuries,

! WARNING

available) is damaged.

hear thunder.

charging terminal.

excessive force.

Do not use if the cord of the specified charger (sold

Doing so may cause fire, burns, or electric shock

Doing so may cause electric shock.

separately) or wireless charger product (commercially

Do not touch the specified charger (sold separately) or

Do not short the charging terminal while it is connected

your hands or fingers to come into contact with the

Doing so may cause fire, burns, or electric shock.

to an outlet. Do not allow any part of your body such as

Do not place heavy objects on the cord of the specified

charger (sold separately) or wireless charger product

(commercially available), or do not pull the cord with

Doing so may cause fire, burns, or electric shock.

When you plug/unplug the specified charger (sold

straps or other metal objects with the jack.
Doing so may cause fire, burns, or electric shock

- 22 -

separately) into/from the outlet, do not contact metal

wireless charger product (commercially available) if you

Do not use or charge the product when the battery

with your eyes or mouth, immediately rinse the area

with clean water, and then see a doctor right away.

Not doing so may cause loss of sight or poor physical

! WARNING

Doing so may cause fire, burns, or injuries.

Doing so may cause fire, burns, or injuries

the main unit.

■ Charger

*3 Property damage: This refers to extended damage to buildings.

treatment or long-term hospital attendance as an

his sign denotes that "death or serious

njury*1 may directly result from improper

This sign denotes that "death or serious njury^{*1} may result from improper use".

nis sign denotes that "minor injury^{*2} o

amage to property*3 may result from

eception areas. Communication may be interrupted if you move

See also "Online Manual" (Japanese) or "取扱説明書 (詳細版) (Full

nstruction Manual)" (Japanese) available on the au homepage.

https://www.au.com/online-manual/kyg03/

with the Radio Law. Manual" (Japanese) following the procedure below The IMEI information of your cell phone is automatically sent to Swipe up the Home screen → [取扱説明書 (Online Manual)] KDDI CORPORATION for maintenance and monitoring operational

status of your cell phone. · If you are using the product overseas, check the relevant laws and

Since the product is a radio station under the Badio Law you may be

asked to temporarily submit the product for inspection in accordance

regulations of the country/region you visit beforehand. The Company is not liable for any damages or lost income arising

from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional or mistaken operation by the customer, o use under other unusual conditions outside the responsibility of The Company is not liable for any incidental damages (change)

disappearance of saved content, loss of business incom disruption of business, etc.) arising from use of or inability to use the product. The Company is not liable for any damages or lost income arising

from failure to observe the described content of this manual.

• You cannot use information obtained from the measuring sensor or GPS equipped with the product for the purpose which requires high reliability, as the obtained information is just used for a guide. Note that the Company is not liable for any damage or lost income arising from the difference caused by measurement.

 The Company is not liable for any damages or lost income arising, for example, from malfunction caused by combination with connected devices or software not related to the Company · Captured image data or downloaded data may sometimes be

altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data. It is recommended you keep a copy of important data on your PC's

hard disk, etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.

- 2 -

■ Explanation of Graphic Symbols Used in This Manual

Indicates that handling with wet hands is not allowed licates an action that not allowed. dicates that assembly is not llowed. ndicates that use in a lace where the product s likely to get wet or

Indicates that the power lug must be sconnected from the owing the product to power outlet. get wet is not allowed.

Indicates that handling

ndicates an action

hat must be done.

■ Precautions Common to the Main Unit, Battery Pack, Charger, SIM Card, Peripheral Devices

Do not use, store or leave the product in hot places (e.g. by the fire, near a heater, under a kotatsu or futon, in direct sunlight, in a car in the hot sun). Doing so may cause fire, burns, injuries, or electric

Do not put the product into or near a heating cooking device such as a microwave oven or IH cooker, or high-pressure container such as a pressure cooker. Doing so may cause fire, burns, injuries, or electric

- 9 -

Do not watch a repeatedly flickering screen for a long time.

consciousness, etc. Do not allow water or other liquids (drinking water, perspiration, seawater, urine of pet animals, etc.), metal pieces, flammable material or foreign object into the SIM card/microSD card slot on the product. Do not mistake the place and direction of the SIM card or the microSD memory card.

Doing so may cause fire, burns, injuries, or electric shock. Do not expose the camera lens to direct sunlight for an extended period. Doing so may cause fire, burns, or injuries by the

light-collecting mechanism of the lens. When sounding the buzzer, do not sound it close to your ear. Doing so may cause hearing impairment or other difficulty.

Turn off the product or set it to Airplane mode before going aboard an airplane. Since using the product on airplanes is restricted, follow the instructions given by the respective airlines If any functions that power on the product automatically

are activated, deactivate them. The product's signals may adversely affect on-board If you commit a prohibited act while using the product on

an airplane, you might be punished by law. Follow the instructions given by the respective medical

institution regarding the use of the product in a hospital. Turn off the product in areas where the use of the The product's signals may affect electronic equipment

Do not connect the voltage converter (such as a travel converter for overseas travel) to the specified charger (sold separately).

Doing so may cause ignition, overheating, or electric

Do not apply excessive force on the connection part with the specified charger (sold separately) connected to the product.

Doing so may cause fire, burns, injuries, or electric shock. Do not charge anything that has gotten wet with water or other liquid (drinking water, perspiration, seawater,

urine of pet animals, etc.) with a wireless charger product (commercially available). Do not use it near water, such as in a bathroom or near a humidifier.

Doing so may cause fire, burns, injuries, or electric

Do not touch the cord, charging terminal or power plug of the specified charger (sold separately) or wireless charger product (commercially available) with wet Doing so may cause fire, burns, or electric shock.

Use the product at the specified power supply voltage. When charging the product overseas, use the specified charger (sold separately) for global use. ncorrect power supply voltage may cause fire, burns, or

electric shock. AC adapter: 100 VAC (Connect to an AC outlet for internal household use) AC adapter for global use: 100 VAC to 240 VAC (Connect to an AC outlet for internal household use)

- 23 -

terminal. Short-circuiting of the charging terminal may cause fire, burns, injuries, or electric shock.

shock.

Before calibrating the Compass, check for safety

or in the standby mode, be sure to keep the product off Also, when playing games, video, or music with an Do not swing the product around by holding a strap earphone microphone connected to the product, adjust Doing so may cause an accident.

memo

whole is prohibited

without notice.

feel free to contact us.

using a coin

Reproduction of the content of "Instruction Manual" in part or in.

Due to the specification changes of the operating system or

Every effort has been made in the preparation of "Instruction

Removing/Attaching the back cover

nual". Should you notice any unclear points, omissions, etc.,

Do not attempt to disassemble or modify the product.

Do not let the product get wet with water (drinking

▶P 43 "Notes on Water, Dust, Seawater, Shock

Do not put water (drinking water, perspiration,

erminal or the external connection terminal.

▶P.43 "Notes on Water, Dust, Seawater, Shock

lesistance, and Washing the Product"

Resistance, and Washing the Product"

Use the optional products specified by au.

WARNING

strong force or vibration to it.

dust to get inside.

Doing so may cause fire, burns, injuries, or electric shock

water, perspiration, seawater, urine of pet animals, etc.). Doing so may cause fire, burns, injuries, or electric shock. For details on water resistance, refer to the following.

seawater, urine of pet animals, etc.) into the charging

Doing so may cause fire, burns, injuries, or electric shock

For details on water resistance, refer to the following.

Not doing so or using those with unclear manufacturer,

distributor, or specifications may cause fire, burns,

Do not drop, trample, or throw the product or give a

Doing so may cause fire, burns, injuries, or electric shock.

Do not allow conductive materials (metal pieces, pencil

or the external connection terminal, and do not allow

- 11 -

↑ CAUTION

product more than necessary.

face or hands or clothes.

area with clean water.

Doing so may cause an acciden

lead, etc.) to come in contact with the charging terminal

Doing so may cause fire, burns, injuries, or electric shock

around you, hold the product firmly, and do not wave the

If the display breaks and the fluid, etc. leaks out from

Doing so may cause eye or skin problems.

Do not forcibly remove the back cover.

caught when attaching the back cover

Do not use the product without the back cover

Loosen the Lock knob before removing the back cover.

- 18 -

Doing so may cause injuries.

inside, do not let the fluid contact with the skin on your

If the internal matter comes into contact with your eves

also, if it comes into contact with your eyes or mouth,

seek medical treatment immediately after rinsing the

Be careful not to get your finger or a part of your body

Doing so may cause burns, injuries, or electric shock.

mouth, skin or clothes, immediately rinse the contacted

The content of "Instruction Manual" is subject to change

termination of the services, some features become

Removing the back cover

Turn the Lock knob until it becomes loose

Turn the Lock knob counterclockwise

the volume to the proper level. When using the handsfree call, note that the speaker may emit loud sound. Ringtone or alarm sound can be heard even in the

standby mode. Furning the sound on with the volume set too loud or using the product continuously for a long time may dversely affect your ears.

Doing so may prevent surrounding sound from being neard, causing an accident.

If you have a weak heart, be careful when setting the ringtone vibration and incoming volume. Sudden ringtone vibration and ringtone surprise you, and it may cause harmful effect on heart.

· Data saved in the product, such as contacts, images and videos

mishandling. Be sure to keep a copy of important contents. Note

that the Company assumes no responsibility for any damages or

lost income resulting from altered or lost contents.

Note that content data (both charged or free of charge) saved on

the product cannot be returned to the customer when the product

Although an afterimage may occur when a same screen has beer

precision technology, some pixels (dots) might be lit or out at all

It is recommended that you store separate copies of data such as

still pictures/videos and music saved on the product on your PC

or cloud services, etc. Note, however, that you may not be able to

• Do not discard the old product together with regular trash. Please

cooperate in the collection of the product (including optional parts) when it is no longer needed to protect the environment and

effectively use resources. Old products are collected at an $\operatorname{\mathsf{au}}$

"The Company" as appears in this manual refers to the following

- 3 -

which sand or others adhere.

animals, etc.).

* Examples to avoid:

trousers or skirt

of the ears.

a humidifier.

shock.

Do not put sand, dirt, or mud on the product or put it on

them directly. Do not touch the product with hands to

Doing so may cause fire, burns, injuries, or electric

For details on water/dust resistance, refer to the

▶P.43 "Notes on Water, Dust, Seawater, Shock

Do not charge when the product is wet with water

(drinking water, perspiration, seawater, urine of pet

Doing so may cause fire, burns, injuries, or electric

▶P.43 "Notes on Water, Dust, Seawater, Shock

Resistance, and Washing the Product"

catching it in a door or a door of car

sofa, bed, or bedding, or on a floor

Do not use it near water, such as in a bathroom or near

For details on water resistance, refer to the following.

Do not subject the product to strong pressure or break

putting in a pocket of clothes, do not let the product hit

against surroundings or being put between the objects.

Doing so may cause fire, burns, or injury due to battery

the product. Especially when bringing the product

Sitting or squatting with the product put in a pocket of

• Putting the product in a pocket of outer wear and

• Stepping on the product on a soft object such as a

When using the handsfree call, ringtone is ringing loudly,

· Putting the product into a seat of train or bus

- 10 -

Resistance, and Washing the Product"

Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE

displayed for a long time, it is not a malfunction. You are

recommended to set the sleep time to a short one to avoid

occurrence of afterimage and save the battery consumption

· Although the display used on the product is made using high-

make copies of some copyrighted data even by the above-

might be altered or lost by an accident, fault, repair or

is replaced for repair of a fault, for example.

times. This is not a malfunction.

Style/au shop and other places.

Manufactured by: KYOCERA Corporation

To use electronic medical equipment, check with electronic medical equipment manufacturer or vendor to determine now devices are affected by radio waves before using.

Radio waves may affect the performance of electronic medical equipment. When the display or camera lens is accidentally broken. be careful of broken parts or exposed internal parts of

the product. Not doing so may cause burns, injuries, or electric shock with damaged parts or exposed parts.

Prevent a pet from biting the product.

Not doing so may cause fire, burns, or injuries due to battery ignition, rupture, overheat, or leak.

If wearing an implanted cardiac pacemaker, implanted

defibrillator, or other medical electric devices, consult

carefully with a doctor before using a wireless charger

Radio waves may affect the performance of electronic

When plugging/unplugging the specified charger (sold separately) into/from the product, do not pull the cord

with excessive force. Instead, plug/unplug it straightly

Not doing so may cause fire, burns, injuries, or electric

deformation of the charging terminal. Also, stop using

the charger after recovering the original form of the

Stop using the charger immediately if you notice

product (commercially available).

toward the jack to connect.

- 17 -

When the charger is not to be used for a long time. Wipe off dust on the power plug. disconnect the power plug from the outlet. Not doing so may cause fire, burns, or electric shock. Leaving it plugged in may cause fires, burns, or electric

Fully plug the specified charger (sold separately) into Immediately remove the power plug from the outlet if water or other fluids (drinking water, perspiration, Not doing so may cause fire, burns, or electric shock. seawater, urine of pet animals, etc.) get on the adapter When you disconnect the power plug from an outlet, do Short-circuiting due to the fluid may cause fire, burns, or not pull the cord of the specified charger (sold

separately) with excessive force. Instead, grasp the electric shock. adapter to disconnect. Always remove the power plug from an outlet when Pulling the cord of the specified charger (sold cleaning the equipment. separately) may damage the cord and cause fires, burns, Not doing so may cause fire, burns, or electric shock.

⚠ CAUTION

Do not keep touching continuously the specified charger (sold separately) when it is connected to an Doing so may cause burns.

■ SIM Card


CAUTION

Be careful of the cut surface when handling the SIM card as it may damage a part of your body such as fingers, etc.

The cut surface may cause injuries with adhered meta pieces.

2 Remove the back cover on the back side of the product


Lift the back cover by the notch of the cover using fingertips

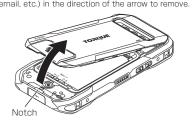

Attaching the back cover

■ Slide the battery lock to the △ (閉: close) direction if it is not locked

The battery lock is locked and the battery pack is fixed.

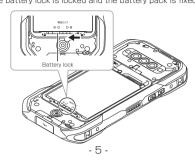

Do not cover or wrap the product with bedding, etc. while using or charging the product. Doing so may cause fire or burns

Do not adhere anything metal (stickers, etc. containing metal) between a wireless charger product (commercially available) and the back of the product or the back cover. Doing so may cause fire, burns, or injuries. Do not place anything metal (straps, clips, etc.

containing metal) between a wireless charger product

(commercially available) and the back of the product. Before charging with a wireless charger product (commercially available), first remove any commercially available cover, etc. attached to the product.

The material and thickness of the cover or any foreign matter such as dirt caught between the product and the ver may prevent normal charging and cause fire, burns, or injuries. Turn the product off near precision control and

faint-signal electronic devices. Radio waves may cause malfunctioning or otherwise affect the electronic devices. Examples of electronic equipment to avoid: a hearing aid, an implanted pacemaker, an implanted cardioverter-defibrillator, other electronic medical equipment, or other automatic control devices, etc. To ise an implanted pacemaker, an implanted cardioverter-defibrillator, or other electronic medical equipment, check with electronic medical equipment manufacturer or vendor to determine how devices are affected by radio waves before using.

- 12 -

To use the product in a car, check with automobile manufacturer or dealer to determine how vehicle devices are affected by radio waves before using. In rare cases, using the phone in some vehicle mo can cause the vehicles electronic equipment to malfunction. In that case, stop using the product

If you develop skin problems, stop using the product immediately, and see a doctor. ching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition.

For material of each part ▶P.27 "Material List" Make sure that there are no adhered metal pieces (cutter blade, staples, etc.) as the speaker or camera part of this product generates magnetism.

Not doing so may cause injuries with adhered metal Use the product in a well-lighted area and put some

distance between you and the display when watching the display. Using the product in dark places or near eyes may affect

■ Battery Pack

Do not allow metal fragments (necklace, hairpin) or conductive materials to come into contact with the battery pack. Do not bring or store the battery pack either with these materials Doing so may cause fire, burns, or injuries

■ Use near Medical Instruments and Inside **Medical Facilities**

⚠ WARNING

Wearers of medical equipment such as implanted pacemakers or defibrillators must carry and use the product at least 15 cm away from the implanted device. Radio waves may affect the performance of electronic medical equipment. When using electronic medical devices as home medica

implanted cardioverter-defibrillator outside medical facilities, check individually with the manufacturer of the electronic medical equipment regarding the influence of radio waves. Radio waves may affect the performance of electronic

treatment other than an implanted pacemaker and an


medical equipment. Make sure that the product will not emit any signals (turn off power, put it in Airplane mode, etc.) if within 15

cm of those around you, such as where crowded and you cannot move freely. There may be people with an implanted pacemaker or an implanted cardioverter-defibrillator nearby. Radio waves


observe the regulations of the facility. Radio waves may affect the performance of electronic medical equipment.

2 Attach the back cover

Insert the two claws on the back cover into the notches (11). and then bush the back cover to fit it (2).

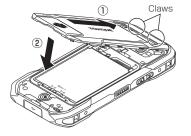

arrows making sure the cover is pressed down completely around

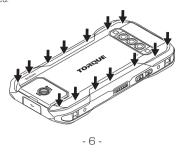

time, stop charging.

Overcharging may cause fire, burns, or injuries.

before you get close to places where a flammable gas or dust can be generated. Using the product in places where a flammable gas can

Follow the instructions given by the respective institution regarding the use of the product in a gas station. Do not charge the product in a gas station

Perform the following operations carefully while using, charging, or keeping the product if there are odors noise, smoke, overheating, discoloring, deformation, or

Not doing so may cause fires, burns, bodily injury, or

Turn the product off.
Remove the battery pack from the product.

Do not use the damaged product. Doing so may cause fire, burns, or injuries

electric shock, etc.

- 13 -

Do not forcibly install the battery pack when attaching the battery pack. Do not forcibly remove the battery pack when removing the battery pack.

to "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) Do not throw the main unit into fire or apply heat.

Do not apply excessive force such as sticking a sharp-edged tool (nail, etc.) into the product, hitting it

Check the orientation of the battery pack when installing the battery pack into the product. $% \left(1\right) =\left(1\right) \left(1\right)$ Not doing so may cause fire, burns, or injuries due to battery pack ignition, rupture, overheat, or leak. For details on installing the battery pack, refer to "取扱説

If the substance inside the battery pack comes into contact with your eyes or mouth, immediately rinse the area with clean water, and then see a doctor right away.

discoloring, deformation, or other abnormalities. loing so may cause fire, burns, or injuries.

ase screws

SIM card/microSD memory

_ock knob

card tray

Part

ating ack cover (peripheral part over, Body camera buttor lume up/down butto Direct button ower button ooxy resin V-cured acrylic Exterior case (top/bottor oump protectors) rengthene Vide-angle camera lens emically ntifouling amera lens MMA resir Exterior panel (mobile light) Camera button

POM resir

- 27 -

When using the product in medical facilities, be sure to

3 Press the back cover where shown by the

The back cover can be closed only when the battery lock is



If charging is not completed after the specified charging Make sure to turn off or stop charging the product

be generated may cause an explosion or fire.

Be careful not to drop the product in a place like a gas station, especially when you put gas into a vehicle. Using the product in places where a flammable gas can be generated may cause an explosion or fire.

other abnormalities. · Remove the power plug from the wall outlet

⚠ CAUTION

Doing so may cause fire, burns, or injuries. For details on installing/removing the battery pack, refer

Doing so may cause fire, burns, or injuries

with a hard tool (hammer, etc.), or stepping on it. Doing so may cause fire, burns, or injuries

> 明書 (詳細版) (Full Instruction Manual)" (Japanese) condition due to the influence of the substance, etc.

> > **!** WARNING

Do not use the product if there are odors, overheating,

- 20 -

-cured acrylic

Material List

■ TORQUE G06 Main Unit Material Surface Treatment

inside the battery pack.

rterior case (display side)

side panel), back cover of Lock knob, side part), USE

may affect the performance of electronic medical equipment.

- 24 -- 25 -- 26 -

	Part	Material	Surface Treatme	
	Exterior	PC resin	_	
	Seal	PET	-	
	Terminal	Copper	Gold-plated (Ni-plated undercoating)	

Front Screen

Part	Material	Surface Treatment
Exterior	Acrylic resin	Antifouling
	(silicon resin	
	(adherend))	

- 28 -

- Do not remove the wireless charging antenna on the back side of the back cover. Removing the wireless
- charging antenna will prevent wireless charging. Do not cover the light sensor with your finger or put a sticker on it. May hinder the sensor from detecting the ambient light level and functioning correctly.
- Do not put a sticker, etc. on the proximity sensor. May cause the sensor to malfunction and make the display always turned off while receiving a call or during a call.
- Any soiling on the proximity sensor may cause misoperation. Wipe the sensor with a soft, dry cloth.
- Do not use the product without the back cover. Do not leave or store the product in this condition. Doing so may allow dust or other foreign matter to enter product and cause malfunction.
- Keep the USB cover, etc. closed when using the product. Using the product with the covers opened can allow dust, water, etc. to enter and cause malfunction.
- Do not allow liquids, metal objects, or other foreign objects to get inside of the SIM card or microSD memory card slot. Doing so may cause malfunction
- Do not give strong impact on the product such as dropping, throwing, stomping. Doing so may cause malfunction. • Do not place the product directly on sand at a beach,
- etc. If sand or other small particles get inside the mouthpiece (microphone), receiver, or speaker, etc., it may cause the volume to drop or malfunction.

■ Copyrights and Rights of Portrait

- If the data you shot or recorded using the product or the data you downloaded from the Internet, etc. is in part or in whole protected by the third party's copyright, you are not allowed to copy, distribute, publicly send, modify the data without consent of the copyright holder, except for personal use, under the copyright law. In addition, do not use or modify portraits or names of
- other individuals without their consent, as it may infringe on rights of portrait. Note that shooting and recording might be restricted at some live performances, shows and exhibitions even for
- Be careful about the copyright and portrait right when
- posting images you shot, etc. on Internet/homepages. ■ Backup Content on the Product

Please back up important content registered to the

product or downloaded to the product from an outside source. Content recorded to memory on the product sometimes disappears or is altered by unexpected factors, such as static electricity or a fault, repair. mishandling, etc.

■ FCC Certification Information

- This product is certified by the Federal Communications Commission (ECC) The product's FCC ID is JOYEB1157.
- You can view this certification in the following way. How to confirm: Swipe up the Home screen→[Settings]→[About
- phone]→[Compliance information]

Precautions on Charging Accessories and optional accessories are not water/dust resistant

Note the following before and after charging.

Never charge the battery if the product is wet. Doing so may cause fire hums injuries or electric shock

- Make sure the product is not wet. If charging after the product has gotten wet, first drain water well and wipe with a dry, clean cloth, etc., before opening the USB cover, etc. • If the USB cover was opened to charge, close the cover firmly after charging.
- Do not touch the specified charger (sold separately) with wet.
- hands. Doing so may cause electric shock. Do not expose the specified charger (sold separately) to water.
- Do not use it near water, such as in a bathroom, shower room, kitchen, or washroom. Doing so may cause fire, burns, electric shock, or malfunction. Do not bring it into a bathroom, etc. eve when you are not charging with it. Doing so may cause fire, burns,

Handling Precautions

These precautions are provided to prevent product faults and to ensure that performance can be fully demonstrated. Thoroughly read these precautions to ensure correct use.

■ Precautions Common to the Main Unit, Battery Pack, Charger, SIM Card, Peripheral Devices

- Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heavy object on the product in a bag. Sitting on the product in your pocket might damage the display or internal circuit board resulting in a damage or malfunction. Keeping an external connection device connected to the external connection terminal might damage the connector resulting in a malfunction. Such damage and malfunction are not covered by the warranty, even if there is no external
- To ensure the waterproof property (equivalent to IPX5 and IPX8) or the dustproof property (IP6X) of the product, use the product with the back cover or USB cover attached.
- Note that the waterproof property is not guaranteed in every usage condition. Do not allow water to get inside the product, or splash water on a specified charger (sold separately) or optional accessories. Do not attach/ remove the back cover, or open/close the USB cover in the rain or with any water on the surface of the product. Doing so may cause water intrusion resulting in internal corrosion. Malfunctions determined to be caused by such water

intrusion are not covered by the warranty.

- 29 -

Touch Panel

- The touch panel is designed to be lightly touched by fingers. Avoid pressing forcefully or using sharp objects (fingernail, ballpoint pen, pin, etc.). The touch panel might not respond to the following
- types of operation. These may also result in malfunction. with fingernails with another object placed on the operation area
- with the display covered with a sticker or sheet (commercially available protective film or privacy
- Any soiling on the display surface may cause false operation. Wipe the display with a soft, dry cloth.
- Putting stickers or sheets (e.g. commercially available protective film or privacy protector) on the display might cause incorrect operation of the touch panel. Take care not to put the touch panel close to metals or
- other conductive materials, as it might cause false operation of the touch panel. Touching operation with gloved hands is available, but
- touching the panel may not work properly depending on the thickness and material of gloves. • Wipe off any water droplets on gloves if you cannot operate the product with water drops attached to gloves.
- If you cannot operate with gloves which does not fit your finger, try pressing the display with the flat part of your finger. Priority is given to operation with a bare hand if operating
- with a gloved hand and bare hand at the same time.

- 36

Notes on Water, Dust, Seawater, Shock Resistance, and Washing the Product

This product is protection-rated (JIS C0920) at IPX5/8-1 water resistance and seawater capability*2 as well as IP6X-equivalent* dust resistance when the back cover and USB cover are completely attached. In addition, this product can be washed with a specified ethod using hand soap/body soap*4 for home use (by Company The product also meets 29 ruggedization test requirements, based

on 21 categories of the US Department of Defense's MIL-STD-810H standards and including 8 categories from proprietary tests (by Company test methods). For details on test items, refer to "取扱 説明書 (詳細版) (Full Instruction Manual)" (Japanese). Product capabilities are confirmed in a test environment, and does not guarantee capabilities under all conditions of actual use. No guarantees are made with regard to non-breakage or non-fault. Before using the product, thoroughly read "Important Items to emember before Use" to ensure correct use. Failure to follow the contents described in these sections may cause the intrusion of water, sand or other foreign material, resulting in overheating, gnition, electric shock, injury or a fault.

- *1 IPX5 equivalent means that the product will maintain its operability as a phone even if it is sprayed with water from a 6.3 n diameter nozzle at a distance of about 3 meters for more than 3 minutes at a rate of about 12.5 liters per minute from any direction. IPX8 equivalent indicates no water seepage and phone capability is maintained even when gently submersed and left at the bottom of a tank for about 30 minutes filled with still, normal-temperature tap water at a depth of 1.5 m.
- *2 Indicates no water seepage and phone capability is maintained even when submersed in normal-temperature, 20-kPa (maximum depth of 2.0 m) seawater* for about 60 minutes.

Notes on Using Bluetooth®/ Wireless LAN (Wi-Fi®) Function

- The connections between this product and all other Bluetooth and wireless LAN (Wi-Fi®) devices have not been confi Therefore, connections with all Bluetooth® and wireless LAN /i-Fi[®]) devices are not guaranteed.
- This product supports security features for wireless communications that are compliant with the $\mathsf{Bluetooth}^{\scriptscriptstyle{(\!0\!)}}$ and wireless LAN (Wi-Fi®) standard specifications, but the security nay not be sufficient depending on the usage environment and configuration. Be careful when making data communication using Bluetooth® or wireless LAN (Wi-Fi®) function.

 • Wireless LAN (Wi-Fi®) has the advantage that it can be freely
- connected anywhere within the radio wave range, as it uses radio waves for exchanging information. At the same time, there is a risk that a malicious third party may obtain unauthorized access if security settings have not been configured. You are recommended to configure security settings before use at your ecision and responsibility.
- The Company assumes no responsibility for leakage of data or information that may occur during Bluetooth®/wireless LAN (Wi-Fi®) communication. Since Bluetooth[®] and wireless LAN (Wi-Fi[®]) functions use the same frequency band, using the both functions at the same
- time may cause radio wave interference resulting in decreased communication speed or disconnection from the network. If connection fails, stop using either of the Bluetooth® and Wireless LAN (Wi-Fi®) functions.

- 50 -

- Do not use the following products in extremely hot, cold or humid places. (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 90%. Temporary use at -21°C to 50°C is allowed.) · Main unit
- Battery pack, SIM card (attached to the main unit) Do not use the following products in extremely hot, cold or humid places.
- (Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%.)
- Charger
- Related accessories Do not use in places subject to lots of dust or vibration. Doing so may cause malfunction.
- Clean the external connection terminal, wireless charging antenna connection, and charging connection area with dry cotton swabs, etc. every now and then. Soiling may result in a poor connection. Do not exert a strong force to clean the respective connection terminals to prevent deformation.
- Clean the product with a soft dry cloth (such as the type used for eveglasses). Rubbing with a dry cloth forcefully may scratch the display. The display may be stained if splash or smear is left attached to the surface. Wiping the product using thinner, benzine, detergent, glass cleaner, etc. might erase the printing on the outer cover or cause malfunction. You can use isopropyl alcohol, ethanol, or sodium
- hypochlorite to wipe the product with a soft cloth. * For details on cleaning the product, refer to "取扱説明書 (詳 細版) (Full Instruction Manual)" (Japanese). - 30 -

OLED Display

- OLED display may have partially dark part or the colors may be changed if a same image has been displayed for a long time, or the brightness of backlight is set to too much brighter than that of the surrounding environment. or it has been used for an extremely long time. That is due to property of OLED display and not a malfunction.
- OLED display is made with extremely advanced technology and it may have slightly missing pixels or pixels which are always lit. Also, it may have unevenness of color streak or brightness, or color change depending on direction you are looking. That is due to structure of OLED display and not a malfunction. Please be forewarned. Subjecting an OLED display to direct sunlight for a long
- time may cause a malfunction. Take care when placing at the window or outdoor.

■ Battery Pack



(The battery pack of the product is a lithiumion battery.) The battery pack is not fully charged at the time of

Li-ion 00 purchase. Charge the battery before using the product. Also charge the battery after long periods of disuse before using the product.

 Use in very hot or cold environments, for example, when left in an automobile with the windows closed in summer, will cause the battery capacity to drop and shorten the available battery usage time. This will also shorten the battery pack's service life. Try to use the battery as much as possible at room temperature.

- 37 -

- * Seawater: Evaluation made with Company original standards using artificial seawater simulate the seawater composition of the Japanese coast. Regarding use at pools, product has been assessed according to Japanese domestic disinfection standards.
- *3 IP6X-equivalent indicates ability to resist dust intrusion even when placed in a test device containing test dust particles (diameter 75 μ m or less) for 8 hours.
- An endurance test (cycle testing by washing/rinsing the product using foaming hand soap/body soap) in KYOCERA's individual method is done. Use foaming hand soap or body soap manufactured by a domestic manufacturer. Do not use hand soap for kitchen, business use, or free of additives, or do not use body soap for business use, free of additives or alkaline
- · Rinse the product with mild flow and remove foam thoroughly After washing the product, tap it lightly with a soft dry cloth and drain water thoroughly.
- When using, attach the cover, etc. securely. Do not mix hand soap/body soap with different one. Product capabilities are confirmed in a test environment, and does not guarantee all kinds of foaming hand soap/body soap can be used for this product. No guarantees are made with regard to non-fault

Operation of the product in every possible condition during actual use is not guaranteed. Malfunctions determined to be caused by nishandling by the customer are not covered by the warrantv.

Important Items to Remember before Use

- Close firmly the USB cover of the product, and make sure the back cover is completely attached. Water resistance is effective vhen completely sealed
- Never open/close the back cover or USB cover when the product or your hands are wet.

Notes on Data Communication

- Since constant Internet connection is possible with the product. data communication may be performed automatically by some applications, resulting in high data communication charges. herefore, subscription to a data flat-rate service/data communication charge discount service is recommended.
- Connection for browsing homepages, downloading applications communication using applications, sending/receiving e-mails and configuring various settings is by the Internet, and data communication charge applies.

Notes on Call Charges

When you end a call, make sure to disconnect the call, If you forget to disconnect, the call charges may be higher

After-Sales Service When Asking for Repair

For repair, contact Repair and Delivery Support Center

During the Repairs will be done based on the terms of services of the free-of-charge repair warranty.

utside the	We shall repair the product for a charge as			
arranty period	requested by the customer if repair renders it usa			
The warranty period is one year from the day when you purchable product				

- 51 -

- The Company retains performance parts for repair of the product main unit and its peripherals for 4 years after discontinuation of production. Performance parts for repair refers to parts required for maintaining the functions of the product.

- 52 -

Performance Parts for Repair

 Use as far away as possible from fixed-line phones, TVs The product may become warm while charging.

and radios. Use nearby might affect them.

depending on the situation, but this is not abnormal.

Remove the battery pack after turning off the product.

Do not place near corrosive chemicals or in places.

malfunction.

malfunction.

cause malfunction.

charger (sold separately).

away from hot and humid places.

Never charge a wet battery pack.

cause malfunction.

with urine of pet animals, either.

wipe the product with a soft cloth.

oath shower water (43°C or less).

designed to be heat resistant.

The product does not float on water.

sometimes used for repair.

from being accepted for repairs.

warranty, as it is a consumable item.

a warm bathroom

//memo

or lost.

speaker that may be affecting audibility.

(Full Instruction Manual)" (Japanese).

Data stored in the product may sometimes be altered or

lost by removing the battery pack before turning off the

where corrosive gas is generated. Doing so may cause

• Do not use outside when you can hear thunder. Doing

• Do not put the product in a cooking apparatus such as

microwave oven or a pressure vessel. Doing so may

The customer is not allowed to disassemble, modify or

repair the product. Doing so may cause malfunction.

To prevent short-circuiting of the connection terminal,

in contact with or enter these areas. Doing so may

• In the event that the product gets wet while charging,

Modification of the product is in violation of the Radio

do not allow your fingers or any other part of your body

or conductive materials (metal, pencil lead, etc.) to come

immediately disconnect the power plug of the specified

- 31 -

When the battery pack is not to be used for a long time,

Battery packs sometimes swell up as they approach the

condition. This is due to the properties of lithium-ion

• The battery pack is a consumable item. If the performance

battery is at the end of its lifetime. Stop use and buy a

service life varies depending on the usage condition, etc.

• Do not use a battery pack that has been damaged or that

is leaking battery fluid. Doing so may cause malfunction.

product into water by mistake, immediately turn off the

Do not wet the battery pack with water, etc. A wet

battery pack may cause malfunction. If you drop the

power, remove the battery pack, and contact an au

Style/au shop or Repair and Delivery Support Center.

• Do not wrap power cords of the specified charger (sold

specified charger's (sold separately) plug or the

separately) around the charger. Do not forcibly bend the

connection between the connector and power cord. Do

charger (sold separately) or USB connection cable, or do

not place heavy objects on the cord of the specified

not pull the cord with excessive force. Doing so may

- 38 -

liquids (alcohol, hot water of hot spring, water containing soap,

detergent, bath powder, alcohol drink, soft drink, seasoning, etc.)

other than tap water. Do not use it in a place where it gets wet

If the product gets splashed, immediately rinse it off with tan

You can use isopropyl alcohol, ethanol, or sodium hypochlorite to

Do not place the product directly on sand at a beach, etc. If

sand or other small particles get inside the mouthpiece

Do not use or leave the product in a humid place such as a

bathroom or kitchen for an extended period of time.

* For details on cleaning the product, refer to "取扱説明書 (詳細版)

(microphone), receiver, or speaker, etc., it may cause overheating

The product is tested to ensure its proper operability when the

product is exposed to hot water of the temperature as hot as

Moisture may still remain after draining. While this will not affect

use, you should not leave the product next to items you do not

want to get wet. The product may wet clothing, inside of carry

The product is not designed to resist water pressure. Avoid exposing

to high water pressure or submersing in water for a long period.

Do not wash the product in a washing machine or ultrasonic bath.

• Do not immerse the product into a bathtub. The product is not

ne rapid changes of temperature may cause condensation

temperature before you bring the product from a cold place into

resulting in malfunction. Wait until the product reaches room

- 45 -

Before handing the product for repair, make a backup of the

Note that the Company shall not be liable for any damages

Portable terminals collected by Replacement cell phone

contents of memory since they may disappear during repair.

and loss of income should the contents of memory be altered

Recycled parts that meet the Company's quality standards are

delivery service which you used before are recycled to portable

terminals for replacement after repairs. Also, parts replaced by

after-sales service are collected and recycled by the Company

analyzed (including software modification or analysis (including

rerse-assembled) or has been repaired at a location other

than an authorized repair location designated by the Company

may not be covered by warranty or may prevent the product

The battery pack is not covered by the free-of-charge repair

The accessories and samples such as the front screen other

than the product are not covered by the free-of-charge repair

Instances where the product has been changed, modified, or

rooting, etc.) reverse-engineered, reverse-compiled, or

Drain any water in the mouthpiece (microphone), receiver, or

Do not let the product submerged into or get wet with the

new one of the specified type. Note that the length of

of a battery pack does not recover and it is deteriorated

batteries, and is not a problem in terms of safety.

(e.g. the usable time after each charge has become

extremely short or the battery pack is swollen) the

end of their service life depending on the usage

remove the battery pack from the main unit, and store if

so might risk lightning strikes and electric shock.

Be sure to use only the specified peripheral devices.

Use of other peripheral devices might cause

Law and Telecommunications Business Law.

- Do not use the product while driving a car or riding a motorbike or bicycle or while walking. Use of a mobile device while driving a car or motorbike is prohibited by law. Use of a cell phone while riding a bicycle may be punishable by some regulations.
- Using or charging the product in a bag or while it is covered with bedding might cause malfunction
- When using a specified charger (sold separately) or external device, insert/remove the connector straight to/
- from the terminal. Improper connection may cause a fault. • Do not expose the camera lens to direct sunlight for an
- extended period. Doing so may cause malfunction. Do not use, store, or leave the product in places subject
- to direct sunlight (e.g. in a car), places that get hot, places that get extremely cold, and in humid or dusty places. Doing so may cause malfunction.
- Do not leave the product on unstable or sloping surfaces. Be careful especially when the product is charging or set to vibrate. The product may fall and cause malfunction.
- For charging the product, do not exceed the rating of an outlet or wiring device by overloading an electrical circuit, etc.
- Main Unit
- Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so may cause scratching or damage. • The display surface of this product is protected by the
- hybrid shield. Do not use the hybrid shield without the sheet on its surface (front screen) because it may affect the functionality of the product. - 32 -

 When unplugging the power plug of the specified charger (sold separately) from the power outlet, hold and pull the power plug. If you pull the cable, it might be damaged.

■ Wireless Charging

- Do not adhere anything metal (stickers, etc. containing metal) on Wireless Charging Pad (commercially available) or the back of the product. Doing so may cause malfunction The indicator LEDs on the Wireless Charging Pad
- completes, but this is not abnormal. Charging may stop just before phone is completely

(commercially available) remain on after charging

- If charging stops just before phone is completely charged, charging may not immediately resume.
- Some Qi-specification products may experience. repeated starting/stopping of charging.
- Above a certain temperature, the charging function may stop or charging may take a long time, but this is not
- abnormal. Wait for the temperature to cool. Place the Wireless Charging Pad (commercially available) on a flat, stable surface before charging.
- Turn the phone's vibration function off before wireless charging. Vibrating of the phone may cause it to move, preventing charging from completing or causing it to

- 39 -

- Back cover/USB cover · Close firmly the USB cover of the product, and make sure the back cover is completely attached. Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter
- now small, can cause seepage. · Do not wear gloves while opening/closing the USB cover or attaching/removing the back cover. Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage. Before closing the cover, wipe any water, soiling, etc. with a dry, clean cloth, no
- · Any deterioration or damage with the back cover or USB cover will
- If any liquid other than water gets on the product · If anything other than water (seawater, washing detergent, soft drink, alcohol drink, etc.) gets on the product, immediately rinse
- with water. · You can use isopropyl alcohol, ethanol, or sodium hypochlorite to wipe the product with a soft cloth.
- * For details on cleaning the product, refer to "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese). You can wash the product under a mild flow (up to 6 liters per minute) of tap water at room temperature (5°C to 35°C) at a distance of about 10 cm from the faucet or showerhead
- If soiled, wash by hand without using a brush, etc., holding the product so that the back cover and USB cover do not open After the product gets wet
- Wipe off moisture on the surface or drain the product with the back cover attached. For details on draining the product, refer to "取扱説明書 (詳細版)
- (Full Instruction Manual)" (Japanese). n cold regions, any water on the product may freeze. Using the product with frozen water may cause malfunction. Do not leave

- Terms of Free-of-Charge Repair When you apply for repair, inform us of your serial number (IMEI
- number). You can check the main unit or the sticker attached on the packaging box for the serial number (IMEI number). Repairs will be done based on the terms of services of the free-of-charge repair warranty when the product is used correctly based on the instruction manual and the product is

3. Repairs will be charged in the following cases even during the

- warranty period. (Also, the product cannot be repaired in some • When the product is not used correctly based on the
- instruction manual. When the product is malfunctioning or damaged due to inappropriate modification and repair
- 3When the product is repaired by repair offices other than the company specified. When the product is malfunctioning or damaged due to a handling fault or accident. Or when there are some traces that the product is damaged by falling, water or humidity.
- (5) When the product is malfunctioning or damaged due to earthquakes, storms, floods or other natural disasters, as well as fires, salt, abnormal voltage, etc. 4. Repairs may be refused depending on the damage condition of
- 5. Note that the company shall not be liable for any damages or lost income arising from the product malfunction. 6. The Company assumes no responsibility for any accidents when the product is connected with an unspecified device.
- On-site renair is not available This warranty is valid only in Japar

malfunctioning.

The warranty guarantees that free-of-charge repairs will be done based on the terms of period and conditions indicated above. Therefore, the warranty does not limit your legal rights against persons in charge of the warranty and other operators

- Do not forcefully press your fingernails, sharp objects, or hard objects against buttons or display surface. Doing so may cause scratching or damage.
- Never use the modified product. Use of a modified device violates the Radio Law and Telecommunications
 - Business Law. The product has acquired such certification as conformity with technical regulations for a specified radio station based on the Radio Law and conformity with technical regulations for a terminal device based on the Telecommunications Business Law, and the "Technical Conformity Mark 🕏" can be confirmed internally in the product.

Swipe up the Home screen→[Settings]→[About phone]→[Compliance information] If modifications are made to the internal components. the certifications of conformity with technical regulations will become invalid. Never use the product without these certifications valid. Doing so violates the Radio Law and Telecommunications Business Law.

- Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product as it might cause malfunction. Putting strong magnetism close to the product might cause false operation.
- Do not bring magnetized cards such as cash cards, credit cards and prepaid cards closer to the product. Doing so may result in loss of recorded information.

- 33 -

- Before charging, remove any case, cover, stickers or sheets (commercially available protective film or privacy protector) attached to the product. Make sure that the Wireless Charging Pad (commercially
- available) and the main unit are not wet. • Do not wirelessly charge while a separately-sold AC adapter or USB Type-C™ cable is connected to the main
- Keep any other wireless chargeable device other than the product you are charging away from the product. The product you are charging may not be detected and prevent charging.
- If a TV, radio, etc. experience noise, charge as far away from the TV, radio, etc. as possible. Depending on the Qi-specification product, calls may not be received during charging.
- Some Qi-specification products may experience interference with the Osaifu-Keitai function, preventing charging from starting.
- Activating of apps, etc. during wireless charging may prevent charging from completing. • The main unit may become warm while on Wireless Charging Pad (commercially available), but this is not
- abnormal. Reception (quality of data communication, etc.) may be affected while charging on Wireless Charging Pad (commercially available)
- Do not move the Wireless Charging Pad (commercially available) or the main unit while charging.

- 40 -

The rubber seal around the USB cover and back cover is important

in maintaining water resistance. Do not scratch or remove it.

Be careful not to pinch the rubber seal when closing the USB

pinched can scratch the seal and affect water resistance. Any

· Any liquid other than water on the product can affect product

Do not insert pointed objects in the USB cover or back cover

Doing so may damage/deform the product or scratch the rubber

Parts used for maintaining water resistance should be replaced

• Do not submerge the product in hot water or get it wet with hot

water. Do not use the product in saunas or expose it to hot air

• The product shock resistance assumes usage in daily situations;

causing/letting the product fall forcefully may break the product

subjecting the product to excessive shock such as by throwing or

* Close the USB cover and back cover securely. Water resistance

surfaces (a single hair, etc.), no matter how small, can cause

- 47 -

Any minute particles becoming lodged between contact

* Make sure the Lock knob on the back cover is tightened.

from hair dryer, etc. The product is not designed to be heat

every 2 years regardless of their appearance. Contact your

minute particles becoming lodged between contact surfaces (a

cover and back cover. Trying to close the cover with a seal

single hair, etc.), no matter how small, can cause seepage

Rubber seal

durability.

Heat resistance

In seawater/Underwater

resistant.

Cloud

· For UQ mobile users

Shock

eal, allowing water seepage.

nearest au Style/au shop for replacement.

· Check the following before using in seawater

s effective when completely sealed.

- Battery may deplete if the main unit is left unused for a long period even after completing charging.
- 41 -
- * Never open/close the USB cover or back cover when the product or your hands are wet. * When opening the back cover, open gently so as not to allow water to enter inside. If water contacts the inner surface of the

• Check the following during and after use in seawater.

• When you put the product in your pocket or bag, take

care so that the display does not come in contact with

metal objects or other hard objects. Not doing so may

cause scratching or damage. Be aware that any metal

or other hard cell phone strap that comes into contact

place, or when in a humid location, or when used where

condensation) sometimes are formed inside the product.

Note that when used under conditions such as these,

Camera lens or inside of the display may mist over (dew

temperature or humidity. This is not malfunctioning or

change or high humidity, camera lens or inside of the

Bringing the product from a high temperature land into

• Bringing the product from a cold place into a warm

• Opening/Closing the USB cover of the product in a

While writing/reading data to/from a microSD memory

card, do not subject the product to vibration or impact,

- 34 -

between the product and the Wireless Charging Pad

so may prevent charging, or heat during charging

(commercially available) when charging wirelessly. Doing

resulting in the product or card malfunctioning or being

• Do not forcibly remove or insert the SIM card. Be careful

not to exert excessive force when inserting the card

You are responsible for any damage caused by inserting

Do not insert your SIM card with a conversion adapter

Do not damage the SIM card (use in a hot place, throw

When photographing important occasions, take a trial

shot and check the shot image to make sure it is

Do not shoot in areas where shooting is prohibited.

into fire, contact the metal part with foreign object, give

an impact, bend, apply a load, moisten, etc.). Doing so

Do not put stickers, etc. on the SIM card.

may cause data loss or malfunction.

attached. Doing so may cause malfunction.

your SIM card into some other IC card reader/writer, etc.

• Do not let a credit card, contactless IC card, etc.

remove the battery pack, or turn off the power. Doing so

display mist over (dew formation) because of usage

formation) because of usage environment such as

• In the following cases, such as large temperature

When suddenly brought into a warm place from a cold

discharge port of an air conditioner), water drops (i.e.

temperature suddenly changes (e.g. near the air

with the display may scratch or damage it.

humidity might cause corrosion or a fault.

abnormal.

environment.

damaged.

■ SIM Card

Camera

correctly shot.

into your product

a low temperature water

place such as an indoor

high humidity environment

may cause data loss or malfunction

- back cover, always wipe away before using the product. Do not use the product in the water at approximately 20-kPa
- (maximum depth of 2.0 m) or deeper. Do not use in the water continuously for more than 60 minutes. · The product sinks; use a strap, etc. and be careful not to drop in
- · Close the USB cover and back cover securely before using
- · After using in seawater, open the USB cover, and wash the product using fresh water. At this time, never open the back
- Never open the back cover while it is wet. • Do not subject the product to shock in the water. Do not dive in water while holding the product, and do not subject to harsh water pressure of rapids, a waterfall, etc. Do not use the product in a way
- that subjects it directly to high-pressure water.

 For details on cleaning the product or draining water when it gets wet, refer to "取扱説明書 (詳細版) (Full Instruction Manual)
- (Japanese). Always wash the product after using or immersing in seawate and completely dry before charging. Sunscreen or sun oil splashing on the product may discolor the surface of the product or cause a fault. If on the product,
- Touch panel cannot be operated underwater.

Repair and Delivery Support with

An after-sales service membership program on a monthly basis called "Repair and Delivery Support with Cloud" is available for using your au/UQ mobile portable terminal for a long time without worries This service expands coverage for many troubles including malfunction, theft and loss. For the monthly fee and details of this service, check on the au/UQ

mobile homepage. https://www.au.com/mobile/service/kosho-funshitsu-cloud/ (Japanese)

https://www.uqwimax.jp/mobile/plan/option/repair-cloud/ (Japanese) Service contents are subject to change without notice

The au IC card is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When malfunction is $\frac{1}{2} \int_{-\infty}^{\infty} \frac{1}{2} \left(\frac{1}{2} \int_{-\infty}^{\infty} \frac{1}{2}$ suspected, or in case of theft or loss, contact an au Style/au shop

Specific Absorption Rate (SAR) of Cell Phones

This model KYGO3 mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio

Japanese) available on the au homepage https://www.au.com/online-manual/kvg03/ (Japanese) nttps://www.au.com/support/service/mobile/guide/manual/

detailed information regarding SAR. https://www.au.com/mobile/product/sar-list/ (Japanese)

- 55 -

au IC Card (SIM Card)

Specific Absorption Rate (SAR) of the product, see "Online Manual" (Japanese) or "取扱説明書 (詳細版) (Full Instruction Manual)"

Please refer to the au homepage if you would like to know more

- 53 -- 54 -

- 49 -

Export Administration

Regulations

This product and its accessories may be subject to the Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Law' and its related laws). In addition, U.S. Re-export Regulations (Export Administration Regulations and the related laws and regulations) may apply to this product and its accessories. To export and re-export this product and its accessories take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry, the U.S. Department of

Intellectual Property Rights

Trademarks

Company names and product names referred to in this manual are trademarks or registered trademarks of the respective companies









Google, Android, Google Play, YouTube, and other marks are trademarks

QR code is a registered trademark of DENSO WAVE INCORPORATED.

microSD, microSDHC and microSDXC logos are trademarks of SD-3C, LLC.

Bluetooth[®] and logo are registered trademarks owned by the Bluetooth SIG, Inc., and KYOCERA Corporation is licensed to use those trademarks.

WiMAX is a trademark of WiMAX Forum.

Wi-Fi CERTIFIED™ is a trademark of Wi-Fi Alliance.

Wi-Fi®, WPA™, WPA2™, WPA3™, Wi-Fi CERTIFIED logo, Wi-Fi Direct®, and Miracast® are registered trademarks of Wi-Fi Alliance.

"Qi (chi)" and the qi symbol are trademarks of the Wireless Power

- 57 -

FeliCa is a contactless IC card technology developed by Sony FeliCa is a registered trademark of Sony Corporation.

> is a registered trademark of FeliCa Networks, Inc. THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO, NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM.

> THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (I) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS BRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA. LLC. SEE HTTP://WWW.MPEGLA.COM.

(1) ACCESS, the ACCESS logo, and NetFront are registered trademarks or trademarks of ACCESS CO., LTD. in the United States, Japan and/or other countries.

Service for members of Repair and Delivery

Repair and Delivery Support Center

(2) This software is based in part on the work of the Independent JPEG Group.

- 58 -

port/Repair and Delivery Support with Cloud

<For au Users> au Support





■ My au app You can check your fee, points, and contract details and do various procedures. For povo users, check above with povo 2.0/povo 1.0 app.

- 56 -







■ au Support (web) Provides various support information useful for solving your problem. URL http://kddi-l.jp/Gf9 (Japanese)



 
Consult us anytime/anywhere simply by chat!

AI answers you soon all day and our advisor guides you in detail. URL http://kddi-l.jp/Bz6 (Japanese)




<For UQ mobile Users> **UQ mobile Support**





 You can check your remaining data, billing, and subscription of services.





■ UQ mobile Support (web) Provides various support information useful for solving your problem. URL http://kddi-l.jp/jQX (Japanese)





Consult us anytime/anywhere simply by chat! AI answers you soon all day and our advisor quides you in detail. URL http://kddi-l.jp/j9z (Japanese)





cell phone delivery service

(Business hours: 9:00 to 20:00)

telephones, batteries and battery chargers at stores bearing the @ logo regardless of brand and manufacturer to protect







(7 days a week/toll free)

From au mobile phones/UQ mobile phones/

0120-925-919

License

"デイリーステップ", "TORQUE", "HYBRID SHIELD", "HYBRID SHIELD (logo)", "ウェットタッチ", "グローブタッチ", "ACTION OVERLAY", and "み

"Morpho Rapid Effect", the image effect technology, is a product of

Morpho, Inc. "Morpho Rapid Effect" is a trademark of Morpho, Inc.

All other company names and product names in this manual are

trademarks or registered trademarks of respective companies.

んスピ" are registered trademarks of KYOCERA Corporation.

USB Type- \mathbf{C}^{TM} is a trademark of USB Implementers Forum.

■ OpenSSL License

[OpenSSL License]

Copyright © 1998-2011 The OpenSSL Project. All rights reserved. This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/)

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS

IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT. INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. [Original SSLeay License] Copyright © 1995-1998 Eric Young (eay@cryptsoft.com) All rights

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)

PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT

WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Users of the product are authorized to use software installed into the product described in this instruction manual. Pay attention to the following points when using the software.

(a) The software installed on this product or part of it may not be altered, delivered, modified, analyzed, reverse-engineered,

derived, and any such actions are prohibited. (b) Illegally importing the software or a part of it is prohibited. (c) This Software is provided without implied warranties of merchantability, fitness for a particular purpose and

noninfringement of third party rights.

Note that the existing license agreement takes priority for usage of GNU General Public License (GPL), GNU Library/Lesser General Public License (LGPL) included in software, software based on other open source software license and software that KYOCERA Corporation is licensed. For information on the Open source software, refer to "Open source

software" as follows;

NOT LIMITED TO. THE IMPLIED WARRANTIES OF GNU General Public License (GPL), GNU Library/Lesser General MERCHANTABILITY AND FITNESS FOR A PARTICULAR Public License (LGPL) included in software, software based on other open source software license and software that KYOCERA Corporation is licensed. The exact terms of GPL, LGPL and some

other licenses are reproduced in "About phone" in this product. For details, refer to KYOCERA homepage. This product includes software copyrighted by KYOCERA Corporation and licensed software.

Note that the existing license agreement takes priority for usage of

■ Open Source Software

or permitted by Copyright Law.

Copyright of the software designed and developed complying with the open source software standard belongs to KYOCERA Corporation or the third parties, distribution, reproduction, transformation and transmission over public lines without consen

of KYOCERA Corporation are prohibited, unless you are authorized

■ Recording Diagnosis and Usage **Condition Data**

KYOCERA Corporation asks for users' cooperation in order to improve the quality of products and services. KYOCERA Corporation records and saves data of failure diagnosis and the usage conditions (application usage by users, log elated to error, detail information of application usage by users (specified functions, usage frequency, memory/battery status)) in the product in order to track and cope with diagnosis events such as unexpected shutdown or system error for the purpose of improvement of quality and services. Those information may be collected upon repair request by user after obtaining the user agreement.

- 59 -- 60 --61-- 62 -