

Galaxy A54 5G

SCG21

 
Quick Start Guide

"オンラインマニュアル (Online Manual)" (Japanese)

For detailed descriptions on various functions, scan the QR code on the right or use the "オンラインマニュアル (Online Manual)" (Japanese) on your product with the following operations.



On the home screen, flick up → [Samsung] → [取扱説明書 (Online Manual)]



やめましょう、
歩きスマホ。



あぶない！
電池への衝撃



モバイルリサイクルネットワーク
環境にやさしいリサイクル製品です。

Phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♻️ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

June 2023, 1st Edition

Imported by: SAMSUNG ELECTRONICS JAPAN Co., Ltd.

Manufactured by: Samsung Electronics Co., Ltd.

 
List of Packaged Items

- Main unit
- SIM card removal tool (sample)
- クイックスタートガイド (Quick Start Guide)(Japanese)
- ご利用にあたっての注意事項 (Notes on Usage)(Japanese)
- データ移行ガイド(Data Transfer Guide) (Japanese)


memo


- Please use specified charging equipment (sold separately).
- The battery is built into the product.
- Illustrations used in this manual are just images for explanations. They may be different from the actual ones.

Attaching the SIM card

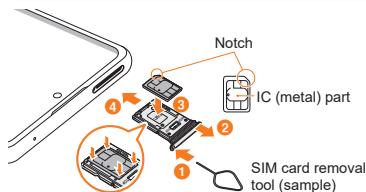

Turning the Power On

  
- 1 Press and hold  (Side key) for over 2 seconds

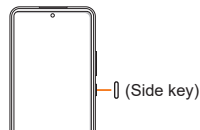


- 2 Swipe the screen up and down, left and right to unlock the screen



 memo

- When the product is turned on for the first time, the initial setting screen appears.
- If you have set a screen unlock method, unlock the screen using the method you have set.
- Press and hold  (Side key) and lower side of Volume key simultaneously for over 7 seconds, when the power cannot be turned off in the usual way or the screen freezes.

 Names of Parts

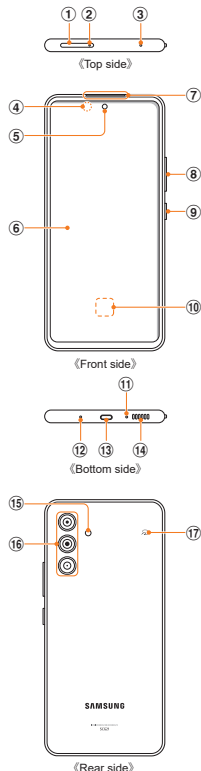

① SIM card/microSD memory card tray

② Tray eject hole

③ Mouthpiece/Microphone (upper)^{*1}

④ Light sensor^{*2}

⑤ Front camera

⑥ Display (touch panel)

⑦ Receiver/Speaker^{*1*3}

⑧ Volume key

⑨  (Side key)

⑩ Fingerprint recognition sensor^{*2}

⑪ Vent hole^{*1}

⑫ Mouthpiece/Microphone (lower)^{*1}

⑬ USB Type-C™ connection terminal
(external connection terminal)

⑭ Speaker^{*1}

⑮ Flash/Light

⑯ Rear camera

⑰  mark

^{*1} Be careful not to block this area with your fingers or other objects. Related functions may not work properly. Do not accidentally insert the SIM card removal (sample), etc., as this may cause damage.

^{*2} Do not cover this with stickers or other materials. Functions may not work correctly.

^{*3} The product uses this for both a receiver and a speaker.



◎ The antenna is built into the main unit. For the antenna position, please refer to the "取扱説明書 詳細版 (Full Instruction Manual)" (Japanese) on the website of the contracted carrier.

- For the latest information, please refer to the "取扱説明書 詳細版 (Full Instruction Manual)" (Japanese) on the website of the contracted carrier.
- For the latest information on the product, refer to the following website.
<https://www.samsung.com/jp/> (Japanese)
- When using a protective film, make sure that it is a product compatible with the fingerprint recognition sensor. If you attach a commercially available protective film on the display, fingerprint recognition may fail.
- The software of the product may differ from the information in this guide depending on version upgrades, service changes, or termination. The contents of this manual are subject to change without notice in the future.
- Reproduction of the content of this manual in part or in whole is prohibited.
- Every effort has been made in the preparation of this manual. In the unlikely event that you notice anything suspicious or omissions, please contact us.