

# Galaxy A21

SCV49

## Quick Start Guide

### List of Packaged Items

 
- Main unit
- SIM card removal tool (sample)
- Clear case (sample)
- クイックスタートガイド (Quick Start Guide) (Japanese)
- ご利用にあたっての注意事項 (Notes on Usage) (Japanese)



- Please use a specified charging equipment (sold separately).
- The battery is built into the product.
- Illustrations used in this manual are just images for explanations. They may be different from actual ones.

### Attaching SIM Card



For this product, the software settings are determined by the SIM card when first attached. When using this product for the first time, attach the SIM card of the mobile phone operator from which you purchased this product.\*1

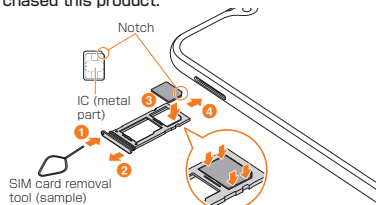


- \*1 If the SIM card attached for the first time is not from au, UQ mobile, or J.COM, the data may be initialized when attach the SIM card again.

### Turning the Power On

  - 1 Press and hold
- 2 Unlock the screen



 - Press and hold (Side key) and lower side of Volume key simultaneously for over 7 seconds to restart the product forcefully, when the power cannot be turned off in the usual way or the screen freezes.



Cell phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.


EPR/リサイクルマーク

December 2020, 1st Edition

Imported by: SAMSUNG ELECTRONICS JAPAN Co., Ltd.

Manufactured by: Samsung Electronics Co., Ltd.

## Names of Parts

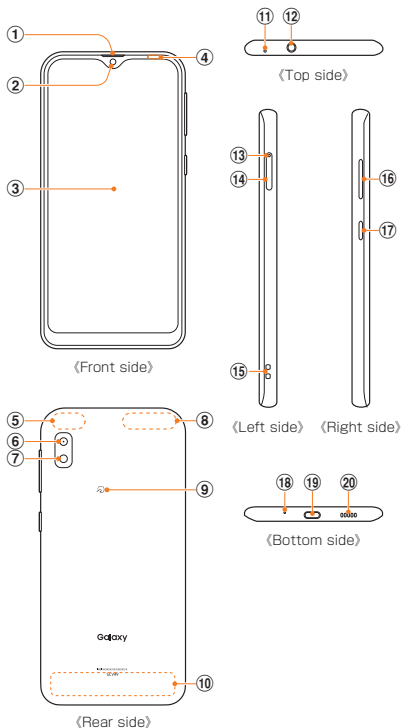 

- 1 Receiver
- 2 Front camera
- 3 Display (Touch panel)
- 4 Proximity sensor<sup>\*1</sup>
- 5 GPS antenna part<sup>\*2</sup>
- 6 Rear camera
- 7 Flash/Light
- 8 Wi-Fi®/Bluetooth® antenna part<sup>\*2</sup>
- 9 mark
- 10 LTE antenna part<sup>\*2</sup>
- 11 Mouthpiece/Microphone (upper)<sup>\*3</sup>
- 12 Headset connection terminal
- 13 Tray eject hole
- 14 SIM card/microSD memory card tray
- 15 Strap hole
- 16 Volume key
- 17 (Side key)
- 18 Mouthpiece/Microphone (lower)<sup>\*3</sup>
- 19 USB Type-C™ connection terminal (external connection terminal)
- 20 Speaker

\*1 Do not cover with the sticker, etc. Functions may not work correctly.

\*2 The antenna is built into the product. Covering around the antenna by hand may affect calling quality / communication quality.

\*3 Be careful not to cover over with your fingers, etc., while relevant functions are being used. In addition, do not insert the SIM card removal tool (sample) into the product since this might cause damage.

• For the latest information of the product, refer to the following website.

<https://www.galaxymobile.jp/> (Japanese)

• The contents described in this manual may be different due to the version upgrade of the software of this product or the change / end of service. The content of this manual is subject to change without notice.