

XPERIA 5II SOG02

Basic Manual

Online Manual (Japanese)
Check "Online Manual" (Japanese) which describes detail explanations on various functions on the product from this procedure.

In the Home screen, slide the screen up → [お客様サポート (Customer support)] → [取扱説明書 (Online Manual)] (Japanese)

Also, you can check "Online Manual" (Japanese) on the au homepage.
<https://www.au.com/online-manual/sog02/> (Japanese)



Descriptions in this manual are based on Android™ 10. For the latest edition, refer to the "Online Manual" (Japanese) or "取扱説明書(詳細版)"(Full instruction manual)" (Japanese) available on au homepage. <https://www.au.com/support/service/mobile/guide/manual/> (Japanese)


*3 The antenna is built into the main unit. Covering around the antenna by your hand may affect the quality of call/communication.
*4 For details on handling au IC card (SIM card), refer to the "Online Manual" (Japanese) or "取扱説明書(詳細版)" (Full instruction manual)" (Japanese) available on au homepage.
*5 The back cover is not removable. Removing forcibly might cause damage or a malfunction. Also, battery is built into the main unit and not removable by customers.

FCC ID

To view the regulatory compliance mark
In the Home screen, slide the screen up → [Settings] → [About phone] → [Certificates]
Regulatory compliance mark such as FCC ID is displayed on the screen.

 
au IC card (SIM card)

Your phone number etc. is recorded in au IC card (SIM card). The product is compatible with au Nano IC Card O4.



Front Back

3 Keep the product horizontal and then push the tray in straight
Pay attention to the direction the tray is being pushed in.
Firmly press where circled O, and check that there is no gap between the main unit and the microSD memory card/au IC card (SIM card) slot cover.

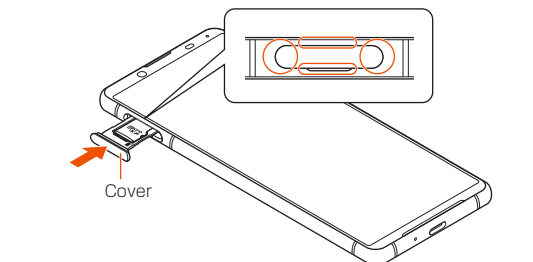

Preface

Thank you for buying "Xperia 5 II" (simply called "the product" or "main unit" from here on). Before using the product, read "Basic Manual" (this manual) and "Cautions on using the product" for proper handling.

About Operating Instructions

"Basic Manual" (this manual)
Handles only basic operations for main features.

"Online Manual" (Japanese)
Check "Online Manual" (Japanese) which describes detail explanations on various functions on the product from this procedure. For details on checking, see "Checking the Online Manual" in this manual.

"取扱説明書 (Full Instruction Manual)" (Japanese)
For detailed descriptions on various functions, you can refer to the "取扱説明書(詳細版)" (Full Instruction Manual)" (Japanese) available on the au homepage. <https://www.au.com/support/service/mobile/guide/manual/> (Japanese)



Notification LED

The Notification LED prompts charging, or informs battery level while charging, missed calls, new mails, etc. by turning on or flashing.

LED Status	Description
Red	The battery is charging when the remaining battery level is 14% or lower.
Orange	The battery is charging when the remaining battery level is 15% - 89%.
Green	The battery is charging when the remaining battery level is 90% or higher.
Flashing red	The remaining battery level is 14% or lower.
Flashing white ¹	Indicates a missed call, new au-mail, new message, etc.

*1 Flashes in sleep mode.

Removing a microSD memory card

1 Remove the tray from the main unit
Put your fingertip (nail) into the groove of the microSD memory card/au IC card (SIM card) slot and draw the cover straight out.

2 Remove the microSD memory card from the tray

3 Keep the product horizontal and then push the tray in straight
Pay attention to the direction the tray is being pushed in.
Firmly press where circled O, and check that there is no gap between the main unit and the microSD memory card/au IC card (SIM card) slot cover (▶P.14).

For Those Requiring an English Instruction Manual
Download URL:
<https://www.au.com/english/support/manual/>

Regarding notations used in this document

 
- In this manual, operations of tapping menu items/ icons/buttons on the screen, etc. are indicated as [(name of the item, etc.)].
- In this manual, screens and operations for the product with au Nano IC Card O4 attached are described.
- Screen illustrations shown in this manual may look different from the actual screens. In some cases, minor details or a part of a screen may be omitted.
- In this manual, "クイックスタートガイド (Quick Start Guide)" (Japanese), "Basic Manual" (this manual), "Cautions on using the product" and "取扱説明書(詳細版)" (Full instruction manual)" (Japanese) are collectively referred to as "Instruction Manual".
- In this manual, explanations for the wallpaper "Black" are provided.
- In this manual, operations in portrait view are described as a standard. In horizontal view, menu items, icons, buttons on the screen, etc. may differ.
- In this manual, "au Nano IC Card O4" is abbreviated as "au IC card (SIM card)".

Attaching/removing au IC card (SIM card)

Before attaching/removing au IC card (SIM card), make sure to turn off the product.

Attaching au IC card (SIM card)

1 Remove the tray from the main unit
Put your fingertip (nail) into the groove of the microSD memory card/au IC card (SIM card) slot and draw the cover straight out.

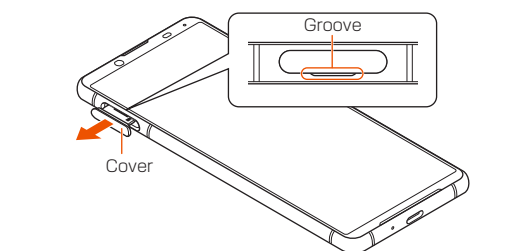

Charging

When you purchase your product, the internal battery is not fully charged. Charge the battery before use.

Information
When charging starts, the Notification LED of the product lights according to the battery level. To check the battery level, see the status bar in the top of the screen, or in the Home screen, slide the screen up → [Settings] → [Battery].

- If you start charging with the product turned off, a screen launches indicating the charging status but operations are not available. Thus, do not charge the product in a place where the use is prohibited.
- The charging time may take longer when charging with a PC or while using the camera function.

Charging with the AC Adapter
Charging with connecting TypeC Common AC Adapter O2 (sold separately) is explained.

1 Insert the power plug of TypeC Common AC Adapter O2 (sold separately) into an outlet



 
- In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card".
- All of the indicated amounts exclude tax unless otherwise specified.
- Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM and ® marks may be omitted in this manual.
- "The Company" as appears in the manual refers to these companies:
Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: Sony Mobile Communications Inc.

These items are not included in the package.
• microSD memory card • Earphones
• AC adapter • USB Type-C™ cable

Information
• Purchase a specified charger (sold separately).
• The battery is built into the product.
• Illustrations used in this manual are just images for explanations. They may be different from actual ones.


2 Set au IC card (SIM card) into the tray with the IC (metal) part facing down

Pay attention to the location of the notch. Surely set au IC card (SIM card) into the tray not to come off.

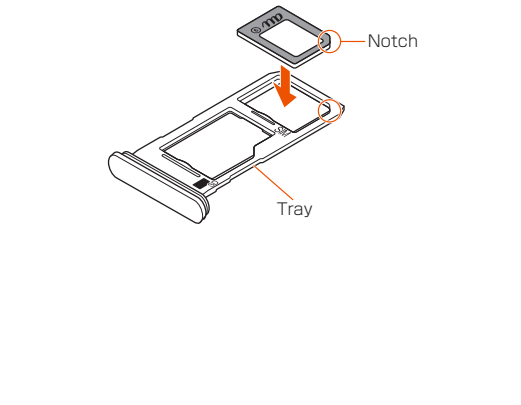

2 Insert the USB Type-C plug of TypeC Common AC Adapter O2 (sold separately) into the USB Type-C connection terminal of the product straight

 When charging is started with the product powered on, the start sound for charging sounds and the Notification LED of the product lights.

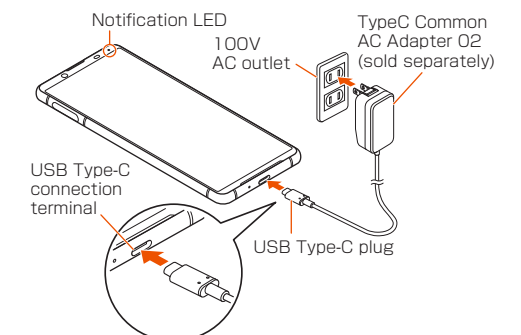

3 When charging is complete, remove the USB Type-C plug of TypeC Common AC Adapter O2 (sold separately) from the product

 
4 Remove the power plug of TypeC Common AC Adapter O2 (sold separately) from the outlet



Packaged items

Before you start using the product, make sure that you have all these packaged items with the product.

- Xperia 5 II
- クイックスタートガイド(Quick Start Guide)(Japanese)
- ご利用にあたっての注意事項 (Cautions on using the product)(Japanese)

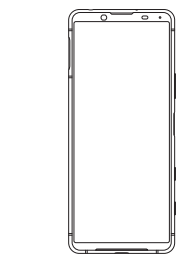


These items are not included in the package.
• microSD memory card • Earphones
• AC adapter • USB Type-C™ cable

Information
• Purchase a specified charger (sold separately).
• The battery is built into the product.
• Illustrations used in this manual are just images for explanations. They may be different from actual ones.

3 Keep the product horizontal and then push the tray in straight

 Pay attention to the direction the tray is being pushed in. Firmly press where circled O, and check that there is no gap between the main unit and the microSD memory card/au IC card (SIM card) slot cover.

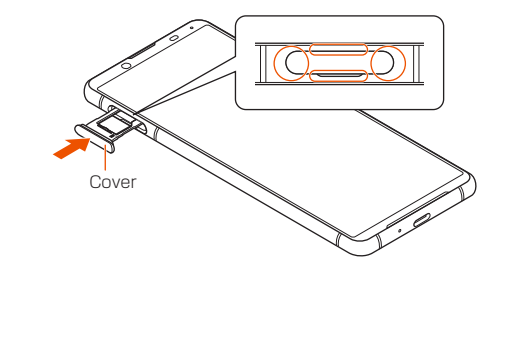

Turning the power on/off

Turning the power on

1 Press and hold Power key until the product vibrates once
The lock screen appears.
When "ようこそ (Welcome)" appears after the product is powered on, follow the onscreen instructions to set the initial settings.
For details on the initial settings, see "Initial settings" in this manual.
Swiping (flicking) the screen up displays the Home screen.

Turning the power off

1 Press and hold Power key (over one sec.)
2 [Power off]

Information
• To restart the product in safe mode (start with almost default state), press and hold Power key (over one sec.) → Long-touch "Power off" → [OK].

Forcedly turning the power off

 
1 Press and hold Power key and the upper part of the volume key at the same time for approximately nine seconds, and release your fingers after the product vibrates three times consecutively



Getting Ready

Names and functions of parts

- Headset connection terminal
- Second microphone^{*1,2}: Reduces noise so that the other party can easily hear your voice.
- microSD memory card/ au IC card (SIM card) slot
- Front camera
- Earpiece/Speaker²
- Proximity/Light sensor²: Switches the touch panel on and off to prevent from erroneous operation during a call/Auto-control for display brightness.
- Notification LED (▶P.8)
- Display (Touch panel)
- Speaker²
- Mouthpiece/ Microphone^{*1,2}
- USB Type-C connection terminal

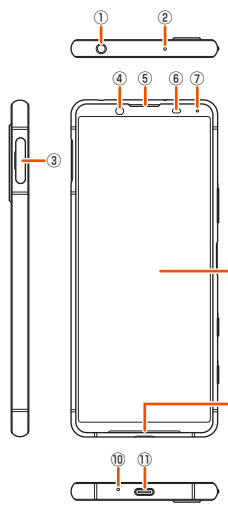

- Volume key/Zoom key
- Power key/Fingerprint sensor²
- Google Assistant key: Launches Google Assistant.
- Camera key
- Flash/Photo light
- RGB-IR sensor²: Detects element of lighting source of lighting environment to adjust white balance automatically when shooting.
- Wi-Fi™ antenna³
- 5G/4G antenna/Wi-Fi® antenna³
- 5G/4G antenna³
- Main camera
- 5G/4G antenna/ Wi-Fi®/GPS/Bluetooth® antenna³
- au IC card (SIM card)⁴
- mark
- Back cover⁵

*1 Do not jab with a sharp object such as a needle. Doing so may cause a malfunction.
*2 Note that covering these parts with stickers or fingers, etc. may hinder product performance.

 
Attaching/Removing a microSD memory card

Before attaching/removing microSD memory card, make sure to turn off the product.

Attaching a microSD memory card

1 Remove the tray from the main unit
Put your fingertip (nail) into the groove of the microSD memory card/au IC card (SIM card) slot and draw the cover straight out.

2 Set a microSD memory card into the tray with the terminal side facing down
Surely set a microSD memory card into the tray not to come off.

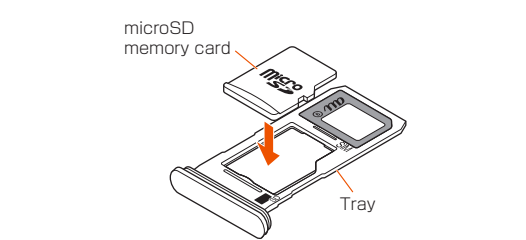

Connecting headphones or earphones

To hear sound from commercially available headphones or earphones, connect the headphones or earphones to the Headset connection terminal.

1 Insert the plug on the commercially available headphones or earphones to the Headset connection terminal of the product

Locking the screen/Unlocking screen lock

Locking the screen

Turn off the screen to set sleep mode to prevent the touch panel or key from operating mistakenly or lock the screen.

1 While the screen is displayed, press Power key

Unlocking screen lock

The lock screen appears when turning the power on or sleep mode is canceled by pressing Power key.

1 On the lock screen, swipe (flick) the screen up

Information

- In the lock screen, swipe (flick) or to use Google Assistant or Camera.



Initial settings

When "ようこそ (Welcome)" appears after the product is powered on, follow the onscreen instructions to set functions and services.

- [GET STARTED]**
- Confirm important information**
- Set a network connection method**
- Set copying apps and data**
- Set up a Google account**
- Set Google services**
- Set screen lock or the unlock method of using fingerprint**
- Set up Google assistant**
- Set up Google Pay**
- [Continue] on the continue setup confirmation screen**
- Set up additional apps**
- Set up more things**
- [FINISH] on the setup finishing screen**
- Perform au initial settings**
Tapping "Finish" on the au initial setup finishing screen displays the Home screen.

21

Appendix

Peripheral devices

- TypeC Common AC Adapter 01 (0601PQA) (sold separately)
 - TypeC Common AC Adapter 02 (0602PQA) (sold separately)
 - Common AC Adapter 05 (0501PWA) (sold separately)^{*1}
 - Common DC Adapter 03 (0301PEA) (sold separately)^{*1}
 - au Carrying Case G Black (0106FCA) (sold separately)
 - MicroB-TypeC Conversion Adapter (0601PHA) (sold separately)
- ^{*1} For use, MicroB-TypeC Conversion Adapter (sold separately) is needed.

❖Information

- Accessories can be purchased from the au Online Shop.
<https://onlineshop.au.com/> (Japanese)

28

au-mail setting

- To use au-mail, subscription to 5G NET is required. If you did not subscribe it when you purchased the product, contact an au shop or Customer Center.
- Perform the initial settings in a place with good signal condition in Japan. If you perform in a place with bad signal condition or while moving, the settings may fail. The initial setting cannot be made via Wi-Fi[®] communication.
- Depending on time zone, the initial settings may take from 30 seconds to 3 minutes. Wait for a while with "Eメールアドレスの設定中です。しばらくお待ちください。(Setting email address. Wait for a while.)" displayed on the screen.

22

Main specifications

■ Main unit

Display	Approx. 6.1 inches Organic EL Cinema Wide™ display, Approx. 16.77 million colors 2,520 x 1,080 dots
Weight	Approx. 163 g
Dimension (W x H x T)	Approx. 68 mm x 158 mm x 8,0 mm (9.1 mm where thickest)
Internal memory	ROM: Approx. 128 GB RAM: Approx. 8 GB
External memory	micro SD: Compatible up to 2 GB micro SDHC: Compatible up to 32 GB micro SDXC: Compatible up to 1 TB (As of September, 2020)
Camera pixels	Main camera: Effective pixels Approx. 12.2 million pixels/12.2 million pixels Front camera: Effective pixels Approx. 8 million pixels

29

Making the initial settings

- In the Home screen, slide the screen up → [au-mail]
- Follow the onscreen instructions

Checking your au-mail address

- In the Home screen, slide the screen up → [au-mail] → [☰] → [E-mail information]

Checking the operations of au-mail app

You can check the operations of au-mail app from "Operation guide".

- In the Home screen, slide the screen up → [au-mail] → [☰] → [Operation guide]
- Tap the item to check
You can check instructions by "au動画ガイド" (au movie guide).

Changing your au-mail address

- In the Home screen, slide the screen up → [au-mail] → [☰] → [Change Address/Setting Filter] → [OK]
- Follow the onscreen instructions

23

Continuous call time	In Japan	Approx. 1,870 min.
	Overseas (GSM)	Approx. 770 min.
Continuous stand-by time	In Japan	Approx. 530 hours
	Overseas (GSM)	Approx. 490 hours
Charging time	Using TypeC Common AC Adapter 01 (sold separately): Approx. 180 min. Using TypeC Common AC Adapter 02 (sold separately): Approx. 130 min. Using Common DC Adapter 03 (sold separately) ^{*1} : Approx. 520 min.	
Wi-Fi[®] tethering maximum connection number	10	
Network environment	Wireless LAN (Wi-Fi [®]) function: Compliant with IEEE 802.11a/b/g/n/ac/ax (Radio frequency band for IEEE 802.11n: 2.4 GHz/5 GHz)	

30

Phone

Making a call

■ Direct input calling

- From the Home screen, [☎] → [🌐]
- Enter a phone number → [📞]
To make a call to a land-line phone, enter from the city code even when you stay in the same city.
- Call → [📞]
To adjust the in-coming volume (volume of the other party's voice), press the upper part or lower part of the volume key while calling.

■ Calling from history

- From the Home screen, [☎] → [Recents]
- [📞] of call history

■ Calling from contacts

- In the Home screen, slide the screen up → [Contacts]
- Tap a contact to call
- Tap [Call]/phone number

24

Bluetooth [®] function	Communication type	Compliant with Bluetooth [®] standard Ver.5.1
	Output	Compliant with Bluetooth [®] standard Power Class 1
	Communication coverage distance²	Within 10 m with good visibility
	Supported Bluetooth[®] profile³	HSP, HFP, PBAP ^{*4} , A2DP, apt-X, AVRCP, SPP, OPP, HID, HOGP, MAP, GATT, PANNAP, PANU
Radio frequency band	2.4 GHz band (2,400 MHz - 2,483.5 MHz)	

^{*1} A MicroB-TypeC Conversion Adapter (sold separately) is required for use.

^{*2} Varies by obstruction between communication devices or radio wave reception status.

^{*3} It is a specification according to purpose of use of Bluetooth[®] device and is defined by Bluetooth[®] standard.

^{*4} Some contacts data may not be displayed correctly on the other party's device.

31

Receiving a call

■ Answering an incoming call

- Incoming call screen → Swipe (flick) "📞" up**
To answer an incoming call when the screen is ON (except on the lock screen), tap "ANSWER".
- Call → [📞]

25

Setting wireless LAN (Wi-Fi[®])

You can use a home wireless LAN (Wi-Fi[®]) or public wireless LAN to access the Internet services.

Turning on wireless LAN (Wi-Fi[®])

- In the Home screen, slide the screen up → [Settings] → [Network & internet]
- Tap "🔌" on "Wi-Fi" to change to "🔵"
Wi-Fi[®] turns on.
It may take several seconds for Wi-Fi[®] to turn on.

26

Setting the lighting time of screen

The screen turns off automatically when the set time has elapsed while no operation is made. When you cannot operate readily because the screen turns off soon, change the lighting time.

- In the Home screen, slide the screen up → [Settings] → [Display] → [Screen timeout]
- Select the lighting time

27

For inquiries, call: Customer Center

For general information (toll free)

Business hours 9:00—20:00 (7 days a week)

From au mobile phones

From non-au mobile phones/general subscriber phones

157 without area code

☎ 0077-7-111

In case above numbers are not available (toll free).

☎ 0120-977-033 (except Okinawa)

☎ 0120-977-699 (Okinawa)

For theft, loss, or malfunction (toll free)

Business hours : 24 hours live support (7 days a week)

From au mobile phones

From non-au mobile phones/general subscriber phones

113 without area code

☎ 0077-7-113

In case above numbers are not available (toll free).

☎ 0120-925-314

Repair and Delivery Support Center

For theft, loss, or malfunction (toll free)

Business hours 9:00—20:00 (7 days a week)

 
From au mobile phones/non-au mobile phones/general subscriber phones

☎ 0120-925-919



モバイルリサイクル・ネットワーク
携帯電話・PHSの回収にご協力。

Mobile phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♻️ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.



やめましょう、歩きスマホ。



SONY[®]

Sold by: KDDI CORPORATION,
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: Sony Mobile Communications Inc.

November 2020, 1st Edition
F-200-100-11 (1)

32

33