

XPERIA 10 III

SOG04

Quick Start Guide

In this manual, "Xperia 10 III" is usually referred to as "the product" or "main unit".

For disclaimers, refer to "Cautions on using the product".

Descriptions in this manual are based on Android™ 11. For the latest edition, refer to "取扱説明書 (Instruction manual)" (Japanese) available on your carrier's homepage.



Mobile phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♻️ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

モバイル・リサイクル・ネットワーク
携帯電話、PHSのラジカルにご協力。



やめましょう、
歩きスマホ。



キケン!
水ぬれ充電



あぶない!
電池への衝撃


SONY®

Manufactured by: Sony Corporation


June 2021, 1st Edition
F-546-100-11 (1)

Names and functions of parts

- ① Headset connection terminal
- ② Second microphone*1*2
- ③ microSD memory card/SIM card slot
- ④ Front camera
- ⑤ Earpiece*1*2
- ⑥ Proximity/Light sensor*2: Switches the touch panel on and off to prevent from erroneous operation during a call/ Auto-control for display brightness.
- ⑦ Notification LED
- ⑧ Display (Touch panel)
- ⑨ Speaker*1*2
- ⑩ Mouthpiece/Microphone*1*2
- ⑪ USB Type-C™ connection terminal

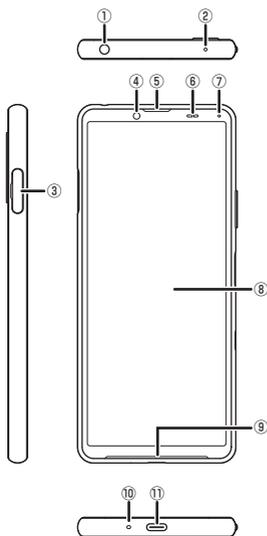

- ⑫ Volume key/Zoom key
- ⑬ Power key/Fingerprint sensor*2
- ⑭ Google Assistant key
- ⑮ Flash/Photo light
- ⑯ 5G/4G antenna*3
- ⑰ 5G antenna/Wi-Fi®/Bluetooth®/GPS antenna*3
- ⑱ mark
- ⑲ Main camera
- ⑳ 5G antenna*3
- ㉑ SIM card*4
- ㉒ 5G antenna/Wi-Fi® antenna*3
- ㉓ Back cover*5

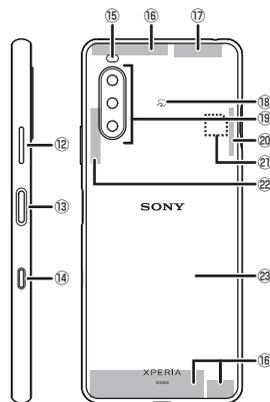

- *1 Do not jab with a sharp object such as a needle. Doing so may cause a malfunction.
- *2 Note that covering these parts with stickers or fingers, etc. may hinder product performance.
- *3 The antenna is built into the main unit. Covering around the antenna by your hand may affect the quality of call/communication.
- *4 For details on handling SIM card, refer to "取扱説明書 詳細版 (Full instruction manual)" (Japanese).
- *5 The back cover is not removable. Removing forcibly might cause damage or a malfunction. Also, battery is built into the main unit and not removable by customers.

FCC ID

To view the regulatory compliance mark


- In the Home screen, slide the screen up → [Settings] → [About phone] → [Certificates]
Regulatory compliance mark such as FCC ID is displayed on the screen.

Attaching SIM card

Before attaching SIM card, make sure to turn off the product.

1 Remove the tray from the main unit


Put your fingertip (nail) into the groove of the microSD memory card/SIM card slot and draw the cover straight out.

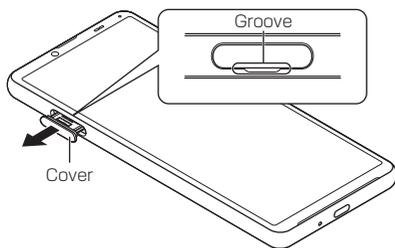

3


2 Set SIM card into the tray with the IC (metal) part facing up

Pay attention to the location of the notch.
Surely set SIM card into the tray not to come off.

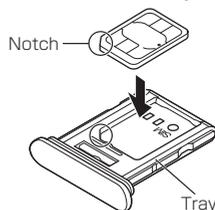

3 Keep the product horizontal and then push the tray in straight

Pay attention to the direction the tray is being pushed in. Firmly press where circled O, and check that there is no gap between the main unit and the microSD memory card/SIM card slot cover.

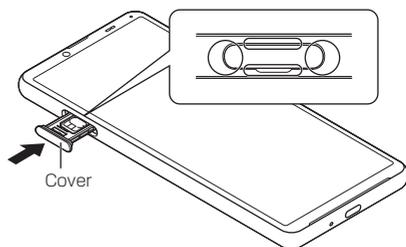

4

Turning the power on/off

■ Turning the power on

1 Press and hold Power key until the product vibrates

The lock screen appears.

When "ようこそ (Welcome)" appears after the product is powered on, follow the onscreen instructions to set the initial settings.

Swiping (flicking) the screen up displays the Home screen.

■ Turning the power off

1 Press and hold Power key (over one sec.)

2 [Power off]

❖ Information

- To restart the product in safe mode (start with almost default state), press and hold Power key (over one sec.) → Long-touch "Power off" → [OK].

■ Forcedly turning the power off

- 1 Press and hold Power key and the upper part of the volume key at the same time for approximately eight seconds, and release your fingers after the product vibrates three times consecutively

5

Packaged items

Before you start using the product, make sure that you have all these packaged items with the product.

- Xperia 10 III
- クイックスタートガイド (Quick Start Guide) (Japanese)
- ご利用にあたっての注意事項 (Cautions on using the product) (Japanese)



These items are not included in the package.

- microSD memory card
- Earphones
- AC adapter
- USB Type-C cable

❖ Information

- Purchase a specified charger (sold separately).
- The battery is built into the product.
- Illustrations used in this manual are just images for explanations. They may be different from actual ones.

6