

XPERIA 1 IV

SOG06

Quick Start Guide

In this manual, "Xperia 1 IV" is usually referred to as "the product" or "main unit".

For disclaimers, refer to "Cautions on using the product".

Descriptions in this manual are based on Android™ 12. For the latest edition, refer to "取扱説明書 (Instruction manual)" (Japanese) available on your carrier's homepage.



モバイルリサイクル・ネットワーク
携帯電話の回収のサイクルに参加。

Mobile phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♻️ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.



やめましょう、
歩きスマホ。



キケン!
水ぬれ充電




あぶない!
電池への衝撃

Manufactured by: Sony Corporation


June 2022, 1st Edition
G-684-100-11 (1)

Names and functions of parts

- ① Headset jack
- ② Second microphone^{*1*2}
- ③ Front camera
- ④ Earpiece/Speaker^{*1*2}
- ⑤ Proximity/Light sensor^{*2}:
Switches the touch panel on and off to prevent from erroneous operation during a call/
Auto-control for display brightness.
- ⑥ Notification LED
- ⑦ Display (Touch panel)
- ⑧ Speaker^{*1*2}
- ⑨ microSD memory card/SIM card slot
- ⑩ Mouthpiece/
Microphone^{*1*2}
- ⑪ USB Type-C® port
- ⑫ Volume key/Zoom key
- ⑬ Power key/Fingerprint sensor
- ⑭ Shutter key

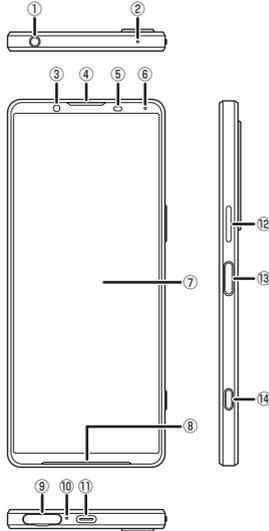


- ⑮ Main camera
- ⑯ Flash/Photo light
- ⑰ RGB-IR sensor^{*2}:
Detects lighting source of shooting environment when shooting.
- ⑱ 5G/4G antenna^{*3}
- ⑲ 5G antenna^{*3}
- ⑳ mark
- ㉑ 4G antenna/Wi-Fi®/
Bluetooth®/GPS antenna^{*3}
- ㉒ 3D iToF sensor^{*2}:
Detects the distance to the subject and focuses on it automatically.
- ㉓ Back cover^{*4}
- ㉔ 4G antenna^{*3}
- ㉕ Wireless charging position
- ㉖ Wi-Fi®/Bluetooth® antenna^{*3}
- ㉗ SIM card^{*5}

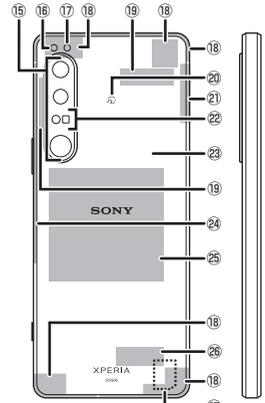

- *1 Do not jab with a sharp object such as a needle. Doing so may cause a malfunction.
- *2 Note that covering these parts with stickers or fingers, etc. may hinder product performance.
- *3 The antenna is built into the main unit. Covering around the antenna by your hand may affect the quality of call/communication.
- *4 The back cover is not removable. Removing forcibly might cause damage or a malfunction. Also, battery is built into the main unit and not removable by customers.
- *5 For details on handling SIM card, refer to "取扱説明書 詳細版 (Full instruction manual)" (Japanese).

SIM card

Your phone number etc. is recorded in SIM card.

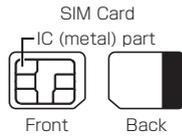


Attaching SIM card

Before attaching SIM card, make sure to turn off the product.

1 Remove the tray from the main unit


Put your fingertip (nail) into the groove of the microSD memory card/SIM card slot and draw the cover straight out.

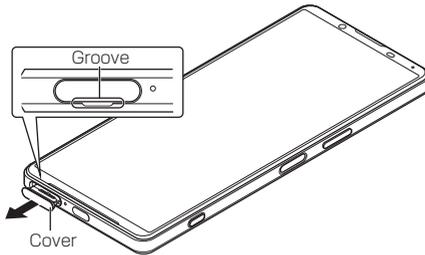

3


2 Set SIM card into the tray with the IC (metal) part facing up

Pay attention to the location of the notch. Surely set SIM card into the tray not to come off.

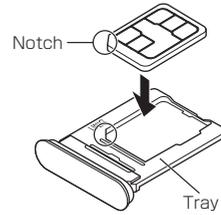

3 Keep the product horizontal and then push the tray in straight

Pay attention to the direction the tray is being pushed in. Firmly press where circled O, and check that there is no gap between the main unit and the microSD memory card/SIM card slot cover.

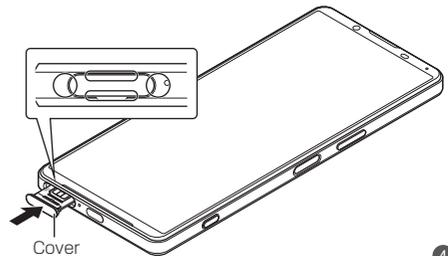

4

Turning the power on/off

Turning the power on

1 Press and hold Power key until the product vibrates

The lock screen appears. When "ようこそ (Welcome)" appears after the product is powered on, follow the onscreen instructions to set the initial settings. Swiping (flicking) the screen up displays the Home screen.

Turning the power off

1 Press Power key and the upper part of the volume key at the same time

2 [Power off]

❖ Information

- To restart the product in safe mode (start with almost default state), press Power key and the upper part of the volume key at the same time → Long-touch "Power off" → [OK].

Forcedly turning the power off

1 Press and hold Power key and the upper part of the volume key at the same time for 10 seconds or more, and release your fingers after the product vibrates three times consecutively

5

FCC ID

To view the regulatory compliance mark

- In the Home screen, slide the screen up → [Settings] → [About phone] → [Certificates] Regulatory compliance mark such as FCC ID is displayed on the screen.

Packaged items

Before you start using the product, make sure that you have all these packaged items with the product.

Main unit



- クイックスタートガイド (Quick Start Guide) (Japanese)
- ご利用にあたっての注意事項 (Cautions on using the product) (Japanese)

These items are not included in the package.

- microSD memory card
- AC adapter
- Earphones
- USB Type-C cable

❖ Information

- Purchase a specified charger (sold separately).
- The battery is built into the product.
- Illustrations used in this manual are just images for explanations. They may be different from actual ones.

6