

Mi 10 Lite 5G


XIG01

Quick Start Guide

Descriptions in this manual are based on Android™ 10.

For the latest version of this manual, please refer to the " 取扱説明書 詳細版 (Full instruction manual)"(Japanese) available on au homepage. https://www.au.com/support/service/mobile/guide/manual/(Japanese)

Parts

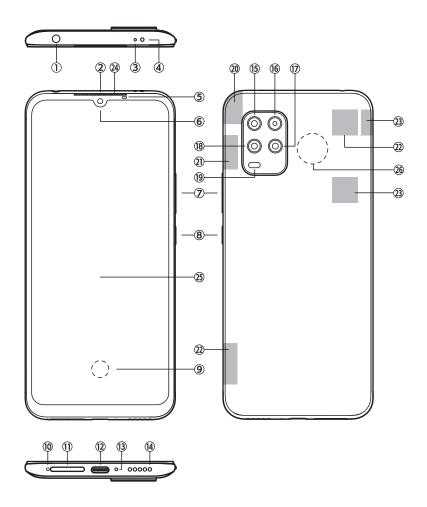


- ① Audio jack connector
- 2 Earpiece(speaker)
- 3 Second microphone *1:
 Reduce the noise and have a higher quality of connection.
- 4 Infrared sensor
- ⑤ Proximity/Light sensor
- 6 Front camera
- 7 Volume key
- 8 Power key
- 9 Fingerprint recognition sensor
- 10 Tray ejection hole
- 1 au IC card(SIM card) tray
- ② USB Type-C[™] connection terminal

- Mouthpiece/Microphone ^{※1}
- (4) Speaker
- (5) Main camera
- (6) Macro camera
- Depth camera
- 18 Super-wide angle camera
- Flash/Light
- 20 Wi-Fi [®]/GPS antenna ^{* 2}
- 2) Wi-Fi [®]/Bluetooth [®] antenna [®] ²
- 22 5G/4G antenna *2
- 23 5G antenna ** 2
- **4** Indicator
- ② Display(Touch Panel) (Screen protector(Sample) pasted)
- **26** NFC Location
- * 1 Do not puncture with a sharp object(needle etc.), or it might cause a malfunction.
- ※ 2 Antenna is built-in. Do not cover the antenna by hand or the reception quality may decrease.

Attach the au IC card(SIM card)

Your phone number, etc. is recorded on au IC card(SIM card). The product is compliant with au Nano Card 04.

 au Nano IC Card 04







 Insert the SIM card removal tool(sample) directly into the tray removal hole



② The au IC card(SIM card) tray is drawn out.

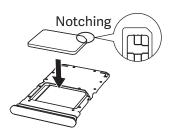

 With the IC(metal) part down, embed the au IC card(SIM card) into the au IC card(SIM card) tray.
 Please pay attention to the direction of notching.

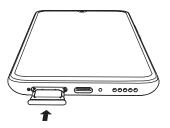


④ Insert the au IC card(SIM card) tray into the SIM card slot.



O not insert au IC card(SIM card) with conversion adapter attached. Doing so might cause a malfunction.

Turn on the power

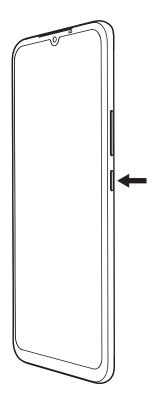

- \bigcirc Press the Power key for more than 4 seconds.
- ② The power is turned on and the guide screen appears.

// memo

If you can not turn off the power with the regular methods, please press the Power key for more than 10 seconds to restart.

Bundled Item List

Please confirm that the following bundled items are in place.

Main unit(Screen protector(sample) pasted)



 
AC adapter(sample)



• USB Type-C cable(sample)



• SIM card removal tool(sample)



• Soft case(sample)



- クイックスタートガイド (Quick Start Guide)(Japanese)
- ご利用にあたっての注意事項 (Notes on Usage)(Japanese)

 


- © Earphone is not included in the package.
- Use only charging equipment specified by au for the product
- The battery is built into the product.

Notation method of this manual

About the button display

In this manual, the button image is simplified as below.



The operation on the home screen

About the home screen display

In the initial state, tap the home screen to start the frequent used application immediately. You can also switch the home screen.

- (1) Status bar
- ② Clock/Weather(Widget)
- ③ Quick search box(Widget) You can search the application or the internet information within this product by text or voice.
- Application/folder Tap the icon to start the application. If there are multiple applications in a folder, when tapping the folder, the applications in the folder are listed.
- ⑤ Indicator
- © Dock bar You can use to login the frequently used application. It will still be displayed even if the home screen is switched.
- Navigation bar(key)
 - Return Return to the previous screen.
 - Home
 The home screen is displayed. Long touch the screen and the google assistant starts.
 - ☐ Task

 The running applications are listed. It also includes the functions such as screen separation mode, memory clear, security, application management.



Long touch the running application, you can drag the application and drop it into the screen separation area by tapping the screen separation mode. Long touch the running application, you can also separate the screen by tapping the screen separation icon at the right side of the application.

Flick down in the blank area on the home screen, the applications, contacts, internet information as well as the recommended application search bar are displayed.

Switch the home screen

The home screen consists of multiple screens and you can slide left or right to switch the screen.



The indicator at the bottom of the screen is displayed at the current display position.



Display of the settings menu

- On the home screen, tap the "Settings" icon.
 The "Settings" menu is displayed.
- 2. Items listed on the Settings menu

| Settings items | Settings description |
|--|---|
| Settings items | Settings description |
| About phone | The item to confirm and set the information of the product, such as Device name, Android version, telephone number, signal strength, etc. |
| System apps updater | The item to display the system apps updating information and history. |
| Security status | The item to display the information about the security status, such as Find device, Security update, etc. |
| SIM card & mobile networks | The item to configure the mobile networks settings. |
| Wi-Fi | The item to set the Wi-Fi function. |
| Bluetooth | The item to set the Bluetooth function. |
| Connection & Sharing | The item to set the Connection & Sharing mode |
| Always-on display & Lock screen | The item to set the Always-on display & Lock screen. |
| Display | The item to configure the Display setting of the product, such as screen, text size, etc. |
| Sound & Vibration | The item to configure the Sound & Vibration setting, such as sound, silent/DND silent mode, etc. |
| Notifications | The item to set the notification to this product, such as notification from Applications. |
| Home screen | The item to set the mode and the layout of the home screen. |
| Wallpaper | The item to set the personalized background. |
| Themes | The item to set the favorite themes. |
| Passwords & Security | The item to configure the Passwords & Security settings, such as Fingerprint unlock, face unlock, screen lock, etc. |
| Battery & Performance | The item to check the battery usage stats and configure the battery saver setting. |
| Apps | The item to configure the assess permissions and system app settings. |
| Additional settings | The additional settings for this product, such as Languages, Region, Button shortcuts, etc. |
| Digital Wellbeing & Parental controls | The item to control according to the application using time. |
| Special features | The item to set the special features, such as Quick replies, Second space, etc. |
| Mi Account | The item to display and manage the Mi Account information. |
| Google | The item to display the information about Google account and service and change the settings. |
| Account & sync | The item to manage the Auto-sync data on Mi Account and Xiaomi Cloud. |
| Privacy | The item to configure the Privacy settings. Such as permission manager, Autofill service from Google, etc. |
| Location | The item to configure the Location settings. For example, the setting to turn ON/FF location access, and the setting of App permission. |
| Services & feedback | The item to report bugs every time the user encounters problems. |

Disclaimer

The "Quick Start Guide(this manual)" is released by Xiaomi and the related companies from various of countries. The revision against the typographical errors or the incorrect information, and the contents for improvement of the program or the product are subject to change without notice. The images included in this manual is for reference only, and it may differ from the actual product.

In this product, Corning® Gorilla® Glass 5 is adopted.

CORNING Gorilla Glass

For inquiries, call:

Customer Center

For general information(toll free)

Business hours 9:00 - 20:00(7 days a week)

From au mobile phones:

157 without area code

From non-au mobile phones / general subscriber

In case above numbers are not available, call toll-free:



0120-977-033(except Okinawa)



0120-977-699 (Okinawa)

In case of theft, loss, or malfunction(toll free)

Business hours 24 hours (7 days a week)

From au mobile phones:

From non-au mobile phones / general subscriber



0077-7-113

113 without area code

In case above numbers are not available, call toll-free:



0120-925-314

Repair and Delivery Support Center

For theft, loss, malfunction(toll free)

From non-au mobile phones/ non-au mobile phones/ general subscriber phones:

Business hours 9:00 - 20:00(7 days a week)



 
0120-925-919



Cell phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.



Dangerous! Impacts on battery



No distracted walking



September 2020, 1st Edition

Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY Manufactured by: Xiaomi Communications Co., Ltd.

> #019, 9th Floor, Building 6, 33 Xi'erqi Middle Road, Haidian District, Beijing, China, 100085

Brand name: MI Model Name: XIG01 © Xiaomi Inc. All rights reserved.





QR code for version control