Be sure to read this manual before use

TORQUE® G07

Quick Start Guide

- In this manual, "TORQUE G07" is usually referred to as "the product" or "main unit".
- In this manual, "Quick Start Guide" (this manual) and "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) are collectively referred to as "Instruction Manual".
- In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card" or "microSD".
- Company names and product names referred to in this manual are trademarks or registered trademarks of the respective companies. TM or ® may be omitted in this manual.

Using the Online Manual (Japanese)

For detailed descriptions of various functions, refer to the "Online Manual" (Japanese) following the procedure below:
Swipe up the Home screen → [取扱説明書 (Online Manual)]

The "Online Manual" (Japanese) is also available on the au homepage:
https://www.au.com/online-manual/torque_g07/ (Japanese)

Using Touch Plus

Just scan the Touch Plus tag to change settings instantly or start an application or function.
Swipe up the Home screen → [Settings] → [Touch Plus]

Scan the QR code on the right for details on Touch Plus.
https://s.kyocera.co.jp/kyg06/touchplus.html (Japanese)

When Using the Product

- Before you start using the product, be sure to read "Safety Precautions" in this manual to ensure correct use.
- Before you assume that the product is malfunctioning, refer to "Trouble check" on the au homepage.
https://www.au.com/trouble-check/ (Japanese)
See also "Online Manual" (Japanese) or "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese) available on the au homepage.
https://www.au.com/online-manual/torque_g07/ (Japanese)
https://www.au.com/support/service/mobile/guide/manual/ (Japanese)
- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication may not be possible in poor reception areas. Communication may be interrupted if you move into poor reception areas during communications.
- Since this product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated (though the 5G/LTE/WiMAX 2+/GSM/UMTS system has highly secure confidential communication features).
- Only VoLTE (LTE network) is used when connecting with emergency call receiving agencies within Japan.
- The product is compatible with au World Service. Each network service described in this manual varies depending on the area and service content.
- Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.

- The IMEI information of your product is automatically sent to your carrier for maintenance and monitoring operational status of the product.
- If you are using the product overseas, check the relevant laws and regulations of the country/region you visit beforehand.
- The Company is not liable for any damages or lost income arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional or mistaken operation by the customer, or use under other unusual conditions outside the responsibility of the Company.
- The Company is not liable for any incidental damages (change/disappearance of saved content, loss of business income, disruption of business, etc.) arising from use of or inability to use the product.
- The Company is not liable for any damages or lost income arising from failure to observe the described content of this manual.
- You cannot use information obtained from the measuring sensor or GPS equipped with the product for the purpose which requires high reliability, as the obtained information is just used for a guide. Note that the Company is not liable for any damage or lost income arising from the difference caused by measurement.
- The Company is not liable for any damages or lost income arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.

- It is recommended you keep a copy of important data on your PC's hard disk, etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.
- Data saved in the product, such as contacts, images and videos might be altered or lost by an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that the Company assumes no responsibility for any damages or lost income resulting from altered or lost contents.
- Note that content data (both charged or free of charge) saved on the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.
- An OLED display may experience afterimages, partial dimming, or color shifts if the same image has been displayed for a long time, the display brightness is set too high, or it has been used for an extremely long time. That is due to property of OLED display and not a malfunction. You are recommended to set a shorter sleep time to avoid occurrence of afterimage and save battery consumption.
- Although an OLED display is made using high-precision technology, some pixels (dots) might be lit or out at all times. Also, it may have unevenness of color streak or brightness, or color change depending on direction you are looking. That is due to structure of OLED display and not a malfunction. Please be forewarned.
- Subjecting an OLED display to direct sunlight for a prolonged time may cause a malfunction. Take care when placing at the window or outdoor.

- It is recommended that you store separate copies of data such as still pictures/videos and music saved on the product on your PC or cloud services, etc. Note, however, that you may not be able to make copies of some copyrighted data even by the above-mentioned means.
- Do not discard the old product together with regular trash. Doing so is extremely dangerous, as it may cause a fire in garbage trucks or a waste disposal facility. Old products (including optional accessories) are collected at an au Style/au shop and other places.

* "The Company" as appears in this manual refers to your carrier and the following company:
Manufactured by: KYOCERA Corporation

memo

- Reproduction of the content of "Instruction Manual" in part or in whole is prohibited.
- The content of "Instruction Manual" is subject to change without notice.
- Due to the specification changes of the operating system or termination of the services, some features become unavailable.
- Every effort has been made in the preparation of "Instruction Manual". Should you notice any unclear points, omissions, etc., feel free to contact us.

Removing/Attaching the Back Cover

Removing the Back Cover

❶ Move the slide locks (3 locations) in the directions of the arrows to unlock, and then turn the lock knob counterclockwise using a coin

- The slide lock remains locked if black is visible.
- Turn the lock knob until it becomes loose.

* You cannot remove the back cover if the lock knob and slide locks are not unlocked. Removing the back cover forcibly without unlocking these locks may cause damage. Be sure to remove the back cover after unlocking all the locks.

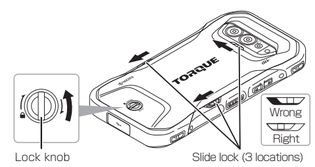

❷ Remove the back cover on the back side of the product

- Lift the back cover by the notch of the product using fingertips (fingernail, etc.) in the direction of the arrow to remove.

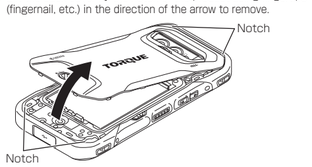

Attaching the Back Cover

❶ Slide the battery lock in the direction of the arrow (◀LOCK) if it is not locked

- The battery lock is locked and the battery pack is fixed.

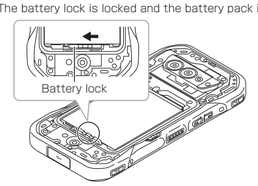

❷ Attach the back cover

- Attach the back cover straight.

* To attach the back cover, make sure the battery lock is at the LOCK position and each slide lock is unlocked (white is visible). If the battery lock is at the UNLOCK position and each slide lock is locked (black is visible), attaching the back cover forcibly may cause damage.

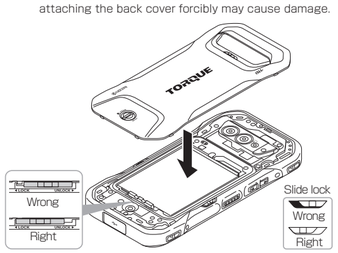

❸ Press the back cover where shown by the solid circles making sure the cover is pressed down completely around

- The back cover can be closed only when the battery lock is locked.

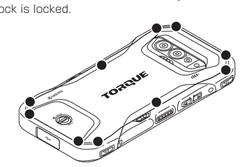

❹ Move the slide locks (3 locations) in the directions of the arrows to lock, and then turn the lock knob clockwise using a coin

- The slide lock remains unlocked if white is visible.
- Turn the lock knob like tightening a screw.
- The lock knob has been tightened when it does not go more. Tightening the lock knob forcibly may cause damage.

* The structure of the lock knob is changed from that of TORQUE G03/G04/5G so that the back cover can be fixed more tightly.

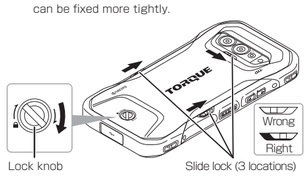

Safety Precautions (Observe Strictly)

■ **Before using the product, thoroughly read this "Safety Precautions" for proper use. Please keep this manual carefully after reading it.**
■ **These precautions describe instructions that should be observed to prevent injury to the customer and others, or damage to property using the product.**
■ **The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.**

⚠ DANGER	This sign denotes that "death or serious injury"[1] may directly result from improper use".
⚠ WARNING	This sign denotes that "death or serious injury"[1] may result from improper use".
⚠ CAUTION	This sign denotes that "minor injury"[2] or damage to property"[3] may result from improper use".

*1 Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long-term hospital attendance as an outpatient.
*2 Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.
*3 Property damage: This refers to extended damage to buildings, furniture, livestock or pets.

■ Explanation of Graphic Symbols Used in This Manual

	Indicates an action that is not allowed.		Indicates that handling with wet hands is not allowed.
	Indicates that disassembly is not allowed.		Indicates an action based on instructions that must be done.
	Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.		Indicates that the power plug must be disconnected from the power outlet.

Precautions Common to the Main Unit, Battery Pack, Charger, SIM Card, Peripheral Devices

⚠ DANGER

Do not use, store or leave the product in hot places (e.g. by the fire, near a heater, under a kotatsu or futon, in direct sunlight, in a car in the hot sun).
Doing so may cause fire, burns, injuries, or electric shock.

Do not put the product into or near a heating cooking device such as a microwave oven or IH cooker, or high-pressure container such as a pressure cooker.
Doing so may cause fire, burns, injuries, or electric shock.

Do not put water (drinking water, perspiration, seawater, urine of pet animals, etc.) into the power plug, the charging terminal, or the external connection terminal, or do not get it wet.
Also, do not charge the equipment when it is wet or in a place where it will come in contact with water such as in a bathroom or near a humidifier.
Doing so may cause fire, burns, injuries, or electric shock.
For details on water resistance, refer to the following.
→P.47 "Notes on Water, Dust, Seawater, Shock Resistance, and Washing the Product"

Do not subject the product to strong pressure or break the product. Especially when bringing the product putting in a pocket of clothes, do not let the product hit against surroundings or being put between the objects.
Doing so may cause fire, burns, or injury due to battery damage.
* Examples to avoid:
- Sitting or squatting with the product put in a pocket of trousers or skirt
- Putting the product in a pocket of outer wear and catching it in a door or a door of car
- Stepping on the product on a soft object such as a sofa, bed, or bedding, or on a floor
- Putting the product into a seat of train or bus

Do not attempt to disassemble or modify the product.
Doing so may cause fire, burns, injuries, or electric shock.

Use the optional products specified by au.
Not doing so or using those with unclear manufacturer, distributor, or specifications may cause fire, burns, injuries, or electric shock.

⚠ WARNING

Do not drop, trample, or throw the product or give a strong force or vibration to it.
Doing so may cause fire, burns, injuries, or electric shock.

Do not allow conductive materials (metal pieces, pencil lead, etc.) to come in contact with the power plug, the charging terminal, or the external connection terminal, or do not allow dust or sand to get inside.
Doing so may cause fire, burns, injuries, or electric shock.

When cleaning the product, be careful not to allow disinfectant or moisture to come into the gaps of the product, external connection terminal, microphone, or speaker.
The product is damaged and may cause injuries or electric shock, etc.

Do not affix or place anything metal (stickers containing metal, straps, clips, etc.) between a wireless charger (commercially available) and the back of the product or the back cover.
Doing so may cause fire, burns, or injuries.

Before charging with a wireless charger (commercially available), first remove any commercially available cover, etc. attached to the product.
The material and thickness of the cover or any foreign matter such as dirt caught between the product and the cover may prevent normal charging and cause fire, burns, or injuries.

Turn the product off near precision control and faint-signal electronic devices.
Radio waves may cause malfunctioning or otherwise affect the electronic devices.
* Examples of electronic equipment to avoid:
a hearing aid, an implanted pacemaker, an implanted cardioverter-defibrillator, other electronic medical equipment, or other automatic control devices, etc.
To use an implanted pacemaker, an implanted cardioverter-defibrillator, or other electronic medical equipment, check with electronic medical equipment manufacturer or vendor to determine how devices are affected by radio waves before using.

If charging is not completed after the specified charging time, stop charging.
Overcharging may cause fire, burns, or injuries.

Make sure to turn off or stop charging the product before you get close to places where a flammable gas or dust can be generated.
Using the product in places where a flammable gas can be generated may cause an explosion or fire.

Follow the instructions given by the respective institution regarding the use of the product in a gas station.
Do not charge the product in a gas station.
Be careful not to drop the product in a place like a gas station, especially when you put gas into a vehicle.
Using the product in places where a flammable gas can be generated may cause an explosion or fire.

Perform the following operations carefully while using, charging, or keeping the product if there are odors, noise, smoke, overheating, discoloring, deformation, or other abnormalities.
- Remove the power plug from the wall outlet.
- Turn the product off.
- Remove the battery pack from the product.

Not doing so may cause fires, burns, bodily injury, or electric shock, etc.

⚠ CAUTION

Do not use the damaged product.
Doing so may cause fire, burns, or injuries.

Do not leave the product on unstable or sloping surfaces. Be careful especially when the product is set to vibrate.
The product may fall and cause injuries.

Do not use or store the product in humid or dusty places, or places that get hot.
Doing so may cause fire, burns, or electric shock.
For details on water/dust resistance, refer to the following.
→P.47 "Notes on Water, Dust, Seawater, Shock Resistance, and Washing the Product"

When children use the product, do not let them use incorrectly without instruction by an adult for proper use.
Doing so may cause accidental swallow, injuries, or electric shock.

Keep the equipment out of the reach of babies or infants, and store it where pets cannot touch it.
Not doing so may cause accidental swallow, injuries, or electric shock.

Be careful when using the product continuously for a long time or charging as it gets hot. Be careful of contacting with the product unintentionally and continuously by putting the product in a pocket of clothes or falling asleep etc.
The product, battery pack, or charger (sold separately) may become hot when using applications, calling, doing data communication, watching videos continuously, or while charging. Depending on your physical predisposition and physical condition, contacting with a high temperature part continuously may cause skin redness, itching, rash, or low-temperature burns.

Main Unit

⚠ DANGER

Do not throw the main unit into fire or apply heat.
Doing so may cause fire, burns, or injuries.

Do not apply excessive force such as sticking a sharp-edged tool (nail, etc.) into the product, hitting it with a hard tool (hammer, etc.), or stepping on it.
Doing so may cause fire, burns, or injuries.

If the substance inside the main unit comes into contact with your eyes or mouth, immediately rinse the area with clean water, and then see a doctor right away.
Not doing so may cause loss of sight or poor physical condition due to the influence of the substance, etc. inside the main unit.

⚠ WARNING

Do not lighten or flash the lighting part of the shooting light/light close to person's eye. Be especially careful to keep a sufficient distance from small children.
Not doing so may cause vision disturbance. Also, it may cause an accident such as injuries due to dizziness or shocks.

Do not watch a repeatedly flickering screen for a long time.
Doing so may cause muscle spasms or loss of consciousness, etc.

Do not allow water or other liquids (drinking water, perspiration, seawater, urine of pet animals, etc.), metal pieces (cutter blade, staple, etc.), flammable material or foreign object into the SIM card/microSD card slot on the product.
Do not mistake the place and direction of the SIM card or the microSD memory card.
Doing so may cause fire, burns, injuries, or electric shock.

Do not expose the camera lens to direct sunlight for an extended period.
Doing so may cause fire, burns, or injuries by the light-collecting mechanism of the lens.

When sounding the buzzer, do not sound it close to your ear.
Doing so may cause hearing impairment or other difficulty.

Turn off the product or set it to Airplane mode before going aboard an airplane.
Since using the product on airplanes is restricted, follow the instructions given by the respective airlines.
If any functions that power on the product automatically are activated, deactivate them.
The product's signals may adversely affect on-board electronic equipment.
If you commit a prohibited act while using the product on an airplane, you might be punished by law.

Follow the instructions given by the respective medical institution regarding the use of the product in a hospital.
Turn off the product in areas where the use of the product is prohibited.
If any functions that power on the product automatically are activated, deactivate them.
The product's signals may affect electronic equipment and electronic medical equipment.

When using the handsfree call, ringtone is ringing loudly, or in the standby mode, be sure to keep the product off of the ears.
Also, when playing games, video, or music with an earphone microphone connected to the product, adjust the volume to the proper level.
When using the handsfree call, note that the speaker may emit loud sound.
Ringtone or alarm sound can be heard even in the standby mode.
Turning the sound on with the volume set too loud or using the product continuously for a long time may adversely affect your ears.
Doing so may prevent surrounding sound from being heard, causing an accident.

If you have a weak heart, be careful when setting the ringtone vibration and incoming volume.
Sudden ringtone vibration and ringtone surprise you, and it may cause harmful effect on heart.

To use electronic medical equipment, check with electronic medical equipment manufacturer or vendor to determine how devices are affected by radio waves before using.
Radio waves may affect the performance of electronic medical equipment.

When the display or camera lens is accidentally broken, be careful of broken parts or exposed internal parts of the product.
Not doing so may cause burns, injuries, or electric shock with damaged parts or exposed parts.

Prevent a pet from biting the product.
Not doing so may cause fire, burns, or injuries due to battery ignition, rupture, overheat, or leak.

⚠ CAUTION

Do not swing the product around by holding a strap, etc.
Doing so may cause an accident.

Before calibrating the Compass, check for safety around you, hold the product firmly, and do not wave the product more than necessary.
Doing so may cause an accident.

If the display breaks and the fluid, etc. leaks out from inside, do not let the fluid contact with the skin on your face or hands or clothes.
Doing so may cause eye or skin problems.
If the internal matter comes into contact with your eyes, mouth, skin or clothes, immediately rinse the contacted area with clean water.
Also, if it comes into contact with your eyes or mouth, seek medical treatment immediately after rinsing the contacted area.

Do not forcibly remove the back cover.
This can damage the back cover and may cause injuries.

Be careful not to get your finger or a part of your body caught when attaching the back cover.
Doing so may cause injuries.

Do not use the product without the back cover.
Doing so may cause burns, injuries, or electric shock.

Before removing the back cover, loosen the lock knob and unlock the slide locks.

To use the product in a car, check with automobile manufacturer or dealer to determine how vehicle devices are affected by radio waves before using.
In rare cases, using the phone in some vehicle models can cause the vehicles electronic equipment to malfunction. In that case, stop using the product immediately.

If you develop skin problems, stop using the product immediately, and see a doctor.
Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition.
For material of each part→ P.32 "Material List"

Make sure that there are no adhered metal pieces (cutter blade, staples, etc.) as the speaker or camera part of this product generates magnetism.
Not doing so may cause injuries with adhered metal pieces.

Use the product in a well-lighted area and put some distance between you and the display when watching the display.
Using the product in dark places or near eyes may affect your vision.

Battery Pack

⚠ DANGER

Do not allow metal fragments (necklace, hairpin) or conductive materials to come into contact with the connection terminal. Do not bring or store the battery pack either with these materials.
Doing so may cause fire, burns, or injuries.

Do not forcibly install the battery pack when attaching the battery pack. Do not forcibly remove the battery pack when removing the battery pack.
Doing so may cause fire, burns, or injuries.
For details on installing/removing the battery pack, refer to "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese).

Do not throw the battery pack into fire or apply heat.
Doing so may cause fire, burns, or injuries.

Do not apply excessive force such as sticking a sharp-edged tool (nail, etc.) into the battery pack, hitting it with a hard tool (hammer, etc.), or stepping on it.
Doing so may cause fire, burns, or injuries.

Check the orientation of the battery pack when installing the battery pack into the product.
Not doing so may cause fire, burns, or injuries due to battery pack ignition, rupture, overheat, or leak.
For details on installing the battery pack, refer to "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese).

If the substance inside the battery pack comes into contact with your eyes or mouth, immediately rinse the area with clean water, and then see a doctor right away.
Not doing so may cause loss of sight or poor physical condition due to the influence of the substance, etc. inside the battery pack.

⚠ WARNING

Do not use the battery pack if there are odors, overheating, discoloring, deformation, or other abnormalities.
Doing so may cause fire, burns, or injuries.

Stop using the product immediately and move the battery pack away from fire if you notice unusual odor or leakage of fluids inside the battery pack.
The battery fluid is flammable and could ignite, causing a fire, explosion, etc.

Prevent a pet from biting the battery pack.
Not doing so may cause fire, burns, or injuries due to battery pack ignition, rupture, overheat, or leak.

⚠ CAUTION

If fluid, etc. leaks out from the battery pack, do not let the fluid contact with the skin on your face or hands or clothes.
Doing so may cause eye or skin problems.
If the internal matter comes into contact with your eyes, mouth, skin or clothes, immediately rinse the contacted area with clean water.
Also, if it comes into contact with your eyes or mouth, seek medical treatment immediately after rinsing the contacted area.

Do not discard the old battery pack together with regular trash.
Doing so may cause fire, burns, or injuries. May damage the environment. After insulating the battery pack no longer needed with tapes, etc. on the connection terminal of the battery pack, and bring the battery pack to a sales outlet such as au Style/au shop. Alternatively, if your local municipality has a battery recycling program, dispose of it as provided for.

Do not use or charge the product when the battery pack is wet.
Doing so may cause fire, burns, or injuries.

Charger

⚠ WARNING

Do not use if the cord of the charger (sold separately) or wireless charger (commercially available) is damaged.
Doing so may cause fire, burns, or electric shock.

Do not touch the charger (sold separately) or wireless charger (commercially available) if you hear thunder.
Doing so may cause electric shock.

Do not short the charging terminal while it is connected to an outlet. Do not allow any part of your body such as your hands or fingers to come into contact with the charging terminal.
Doing so may cause fire, burns, or electric shock.

Do not place heavy objects on the cord of the charger (sold separately) or wireless charger (commercially available), or do not pull the cord with excessive force.
Doing so may cause fire, burns, or electric shock.

When you plug/unplug the charger (sold separately) into/from the outlet, do not contact metal straps or other metal objects with the jack.
Doing so may cause fire, burns, or electric shock.

Do not connect the voltage converter (such as a travel converter for overseas travel) to the charger (sold separately).
Doing so may cause ignition, overheating, or electric shock.

Do not apply excessive force on the connection part with the charger (sold separately) connected to the product.
Doing so may cause fire, burns, injuries, or electric shock.

Do not charge anything that has gotten wet with water or other liquid (drinking water, perspiration, seawater, urine of pet animals, etc.) with a wireless charger (commercially available).
Do not use it near water, such as in a bathroom or near a humidifier.
Doing so may cause fire, burns, injuries, or electric shock.

Do not touch the cord, charging terminal or power plug of the charger (sold separately) or wireless charger (commercially available) with wet hands.
Doing so may cause fire, burns, or electric shock.

Use the product at the specified power supply voltage.
When charging the product overseas, use the charger (sold separately) for global use.
Incorrect power supply voltage may cause fire, burns, or electric shock.
AC adapter: 100 VAC (Connect to an AC outlet for internal household use)
AC adapter for global use: 100 VAC to 240 VAC (Connect to an AC outlet for internal household use)

Wipe off dust on the power plug.
Not doing so may cause fire, burns, or electric shock.

Fully plug the charger (sold separately) into the outlet.
Not doing so may cause fire, burns, or electric shock.

When you disconnect the power plug from an outlet, do not pull the cord of the charger (sold separately) with excessive force. Instead, grasp the adapter to disconnect.
Pulling the cord of the charger (sold separately) may damage the cord and cause fires, burns, electric shock, etc.

If wearing an implanted cardiac pacemaker, implanted defibrillator, or other medical electric devices, consult carefully with a doctor before using a wireless charger (commercially available).
Radio waves may affect the performance of electronic medical equipment.

When plugging/unplugging the charger (sold separately) into/from the product, do not pull the cord with excessive force. Instead, plug/unplug it straightly toward the jack to connect.
Not doing so may cause fire, burns, injuries, or electric shock.

Stop using the charger immediately if you notice deformation of the charging terminal. Also, stop using the charger after recovering the original form of the terminal.
Short-circuiting of the charging terminal may cause fire, burns, injuries, or electric shock.

When the charger is not to be used for a long time, disconnect the power plug from the outlet.
Leaving it plugged in may cause fires, burns, or electric shock, etc.

Immediately remove the power plug from the outlet if water or other fluids (drinking water, perspiration, seawater, urine of pet animals, etc.) get on the adapter.
Short-circuiting due to the fluid may cause fire, burns, or electric shock.

Always remove the power plug from an outlet when cleaning the equipment.
Not doing so may cause fire, burns, or electric shock.

⚠ CAUTION

Do not keep touching continuously the charger (sold separately) when it is connected to an outlet.
Doing so may cause burns.

SIM Card

⚠ CAUTION

Be careful of the cut surface when handling the SIM card as it may damage a part of your body such as fingers, etc.
The cut surface may cause injuries with adhered metal pieces.

Use near Medical Instruments and Inside Medical Facilities

⚠ WARNING

If you have an electric medical device such as an implanted pacemaker or implanted cardioverter defibrillator, or if there may be someone with such a device around you, keep the product at least 15 cm away from the device.
Radio waves may affect the performance of electronic medical equipment. Make sure that the product will not emit any signals (turn off power, put it in Airplane mode, etc.) if within 15 cm of those around you, such as where crowded and you cannot move freely.

When using electronic medical devices as home medical treatment other than an implanted pacemaker and an implanted cardioverter-defibrillator outside medical facilities, check individually with the manufacturer of the electronic medical equipment regarding the influence of radio waves.
Radio waves may affect the performance of electronic medical equipment.

When using the product in medical facilities, be sure to observe the regulations of the facility.
Radio waves may affect the performance of electronic medical equipment.

Material List

■ TORQUE G07 Main Unit

Part	Material	Surface Treatment
Exterior case (display side)	PA resin	UV-cured acrylic coating
Exterior case (side panel), Back cover, Front cover	PC resin	UV-cured acrylic coating
Back cover (peripheral part of camera), USB cover	PC resin	–
Volume up/down button, Direct button	PC resin/TPU	–
Power button	Epoxy resin	UV-cured acrylic coating
Exterior case (top/bottom bump protectors)	TPU	–
Display	Chemically strengthened glass	–
Wide-angle camera lens, out-camera lens, macro-camera lens	Chemically strengthened glass	Antifouling
Exterior panel (mobile light)	PMMA resin	–
Camera button	PC resin	–
Case screws	SWCH	Baking finish
Lock knob	Brass	Ni-plated coating
SIM card/microSD memory card tray, Slide lock	POM resin	–

■ Battery Pack

Part	Material	Surface Treatment
Exterior	PC resin	–
Seal	PET	–
Terminal	Copper	Gold-plated (Ni-plated undercoating)

■ Front Screen

Part	Material	Surface Treatment
Exterior	Acrylic resin (silicon resin (adherend))	Antifouling

Handling Precautions

These precautions are provided to prevent product faults and to ensure that performance can be fully demonstrated. Thoroughly read these precautions to ensure correct use.

■ Precautions Common to the Main Unit, Battery Pack, Charger, SIM Card, Peripheral Devices

- Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heavy object on the product in a bag. Sitting on the product in your pocket might damage the display or internal circuit board resulting in a damage or malfunction.
  Keeping an external connection device connected to the external connection terminal might damage the connector resulting in a malfunction. Such damage and malfunction are not covered by the warranty, even if there is no external damage.
- To ensure the waterproof property (equivalent to IPX5, IPX8 and IPX9) or the dustproof property (IP6X) of the product, use the product with the back cover and USB cover attached securely.
  Note that the waterproof property is not guaranteed in every usage condition. Do not allow water to get inside the product, or splash water on the charger (sold separately) or optional accessories. Do not attach/remove the back cover, or open/close the USB cover in the rain or with any water on the surface of the product. Doing so may cause water intrusion resulting in internal corrosion.
  Malfunctions determined to be caused by such water intrusion are not covered by the warranty.

- Do not use the following products in extremely hot, cold or humid places.
  (Use within an ambient temperature range of 5℃ to 35℃ and humidity range of 35% to 90%. Temporary use at -21℃ to 50℃ is allowed.)
  • Main unit
  • Battery pack, SIM card (attached to the main unit)
- Do not use the following products in extremely hot, cold or humid places.
  (Use within an ambient temperature range of 5℃ to 35℃ and humidity range of 35% to 85%.)
  • Charger • Related accessories
- Do not use in places subject to lots of dust or vibration. Doing so may cause malfunction.
- Clean the external connection terminal, wireless charging antenna connection, and charging connection area with dry cotton swabs, etc. every now and then. Soiling may result in a poor connection. Do not exert a strong force to clean the respective connection terminals to prevent deformation.
- Clean the product with a soft dry cloth (such as the type used for eyeglasses). Rubbing with a dry cloth forcefully may scratch the display. The display may be stained if splash or smear is left attached to the surface. Wiping the product using thinner, benzine, detergent, glass cleaner, etc. might erase the printing on the outer cover or cause malfunction.
- You can use isopropyl alcohol, ethanol, or sodium hypochlorite to wipe the product with a soft cloth.
  * For details on cleaning the product, refer to "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese).
- Use as far away as possible from fixed-line phones, TVs and radios. Use nearby might affect them.

- The product may become warm while charging, depending on the situation, but this is not abnormal.
- Remove the battery pack after turning off the product. Data stored in the product may sometimes be altered or lost by removing the battery pack before turning off the product.
- Do not place near corrosive chemicals or in places where corrosive gas is generated. Doing so may cause malfunction.
- Do not use outside when you hear thunder. Doing so might risk lightning strikes and electric shock.
- Be sure to use only the specified peripheral devices. Use of other peripheral devices might cause malfunction.
- Do not put the product in a cooking apparatus such as microwave oven or a pressure vessel. Doing so may cause malfunction.
- The customer is not allowed to disassemble, modify or repair the product. Doing so may cause malfunction. Also, using the product that has been disassembled, modified, or repaired by the customer is in violation of the Radio Law and Telecommunications Business Law.
- To prevent short-circuiting of the external connection terminal, do not allow your fingers or any other part of your body or conductive materials (metal, pencil lead, etc.) to come in contact with or enter these areas. Doing so may cause malfunction.
- In the event that the product gets wet while charging, immediately disconnect the power plug of the charger (sold separately).
- Do not use the product while driving a car, riding a motorbike, a bicycle, or while walking. Use of a mobile device while driving a car, riding a motorbike, or riding a bicycle is prohibited by law.

- When attaching the product to a motorbike, etc. using the specified multi holder (sold separately), read the instruction manual of the multi holder thoroughly and attach the product securely. Using a holder with unclear manufacturer, distributor, or specifications may cause the product to fall, resulting in malfunction by impact.
- Using or charging the product in a bag or while it is covered with bedding might cause malfunction.
- When using the charger (sold separately) or external device, insert/remove the connector straight to/from the terminal. Improper connection may cause a fault.
- Do not expose the camera lens to direct sunlight for an extended period. Doing so may cause malfunction.
- Do not use, store, or leave the product in places subject to direct sunlight (e.g. in a car), places that get hot, places that get extremely cold, and in humid or dusty places. Doing so may cause malfunction.
- Do not leave the product on unstable or sloping surfaces. Be careful especially when the product is charging or set to vibrate. The product may fall and cause malfunction.
- For charging the product, do not exceed the rating of an outlet or wiring device by overloading an electrical circuit, etc.

■ Main Unit

- Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so may cause scratching or damage.
- The display surface of this product is protected by the hybrid shield. Do not use the hybrid shield without the sheet on its surface (front screen) because it may affect the functionality of the product.
- Do not forcefully press your fingernails, sharp objects, or hard objects against buttons or display surface. Doing so may cause scratching or damage.
- Never use the modified product. Use of a modified device violates the Radio Law and Telecommunications Business Law. The product has observed Ordinance on Technical Standards Conformity Certification of Specified Radio Equipment based on the Radio Law and Rules on Technical Standards Conformity Approval for Terminal Equipment based on the Telecommunications Business Law, and as the proof of these, the "Technical Conformity Mark" can be confirmed internally in the product.
  Swipe up the Home screen → [Settings] → [About phone] → [Compliance information]
  If modifications are made to the internal components, the certifications and approvals of Technical Standards Conformity will become invalid. Never use the product without these certifications valid. Doing so violates the Radio Law and Telecommunications Business Law.
- Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product, as it might cause malfunction.
  Putting strong magnetism close to the product might cause false operation.

- Do not bring magnetized cards such as cash cards, credit cards and prepaid cards closer to the product. Doing so may result in loss of recorded information.
- When you put the product in your pocket or bag, take care so that the display does not come in contact with metal objects or other hard objects. Not doing so may cause scratching or damage. Be aware that any metal or other hard cell phone strap that comes into contact with the display may scratch or damage it.
- When suddenly brought into a warm place from a cold place, or when in a humid location, or when used where temperature suddenly changes (e.g. near the air discharge port of an air conditioner), water drops (i.e. condensation) sometimes are formed inside the product. Note that when used under conditions such as these, humidity might cause corrosion or a fault.
- Camera lens or inside of the display may mist over (dew formation) because of usage environment such as temperature or humidity. This is not malfunctioning or abnormal.
- In the following cases, such as large temperature change or high humidity, camera lens or inside of the display mist over (dew formation) because of usage environment.
  • Bringing the product from a high temperature land into a low temperature water
  • Bringing the product from a cold place into a warm place such as an indoor
  • Opening/Closing the USB cover of the product in a high humidity environment
- While writing/reading data to/from a microSD memory card, do not subject the product to vibration or impact, remove the battery pack, or turn off the power. Doing so may cause data loss or malfunction.

- Do not remove the wireless charging antenna on the back side of the back cover. Removing the wireless charging antenna will prevent wireless charging.
- Do not remove the Touch Plus tag on the back side of the back cover. Also, do not put a hard object on the surface of the Touch Plus tag or do not hit it. Note that doing so may cause false operation.
- Do not cover the light sensor with your finger or put a sticker on it. May hinder the sensor from detecting the ambient light level and functioning correctly.
- Do not put a sticker, etc. on the proximity sensor. Doing so may cause the sensor to malfunction, causing the display to remain off while receiving a call or during a call, making the product inoperable.
- Any soiling on the proximity sensor may cause misoperation. Wipe the sensor with a soft cloth.
- Do not use the product without the back cover or front cover. Do not leave or store the product in this condition. Doing so may allow dust or other foreign matter to enter and cause malfunction.
- Keep the USB cover, etc. closed when using the product. Using the product with the covers opened can allow dust, water, etc. to enter and cause malfunction.
- Do not allow liquids, metal objects, or other foreign objects to get inside of the SIM card or microSD memory card slot. Doing so may cause malfunction.
- Do not give strong impact on the product such as dropping, throwing, stomping. Doing so may cause malfunction.
- Do not place the product directly on sand at a beach, etc. If sand or other small particles get inside the mouthpiece (microphone)/barometer sensor, receiver, or speaker, etc., it may cause the volume to drop or malfunction.

■ Touch Panel

- The touch panel is designed to be lightly touched by fingers. Avoid pressing forcefully or using sharp objects (fingernail, ballpoint pen, pin, etc.).
  The touch panel might not respond to the following types of operation. These may also result in malfunction.
  • with fingernails
  • with another object placed on the operation area
  • with the display covered with a sticker or sheet (commercially available protective film or privacy protector)
- Any soiling on the display surface may cause false operation. Wipe the display with a soft cloth.
- Putting stickers or sheets (e.g. commercially available protective film or privacy protector) on the display might cause incorrect operation of the touch panel.
- When carrying the product in a pocket or bag, take care not to put the touch panel close to metals or other conductive materials, as it might cause false operation of the touch panel.
- Touching operation with gloved hands is available, but touching the panel may not work properly depending on the thickness and material of gloves.
  • Wipe off any water droplets on gloves if you cannot operate the product with water drops attached to gloves.
  • If you cannot operate with gloves which does not fit your finger, try pressing the display with the flat part of your finger.
- Priority is given to operation with a bare hand if operating with a gloved hand and bare hand at the same time.

■ Battery Pack

(The battery pack of the product is a lithium-ion battery.)
The battery pack is not fully charged at the time of purchase. Charge the battery before using the product. Also charge the battery after long periods of disuse before using the product.

- Use in very hot or cold environments, for example, when left in an automobile with the windows closed in summer, will cause the battery capacity to drop and shorten the available battery usage time. This will also shorten the battery pack's service life. Try to use the battery as much as possible at room temperature.
- When the battery pack is not to be used for a long time, remove the battery pack from the main unit, and store it away from hot and humid places.
- The battery pack is a consumable item. If the performance of a battery pack does not recover (e.g. the usable time after each charge has become extremely short, etc.), the battery is at the end of its lifetime. Stop using it and buy a new one of the specified type. Note that the length of service life varies depending on the usage condition, etc.
- Battery packs sometimes swell up as they approach the end of their service life depending on the usage condition. This is due to the properties of lithium-ion batteries, and is not a problem in terms of safety.
- Do not use a battery pack that has been damaged or that is leaking battery fluid. Doing so may cause malfunction.

- Do not wet the battery pack with water, etc. A wet battery pack may cause malfunction. If you drop the product into water by mistake, immediately turn off the power, remove the battery pack, and contact an au Style/au shop or Repair and Delivery Support Center. Never charge a wet battery pack.
- Stop using the battery pack if it is subject to a strong impact. Not doing so may cause the battery pack to ignite.
- Do not discard the battery pack together with regular trash. Doing so may cause a fire in a waste disposal facility, etc.

■ Charger

- Do not wrap power cords of the charger (sold separately) around it. Do not forcibly bend the charger's (sold separately) plug or the connection between the connector and power cord. Do not place heavy objects on the cord of the charger (sold separately) or USB connection cable, or do not pull the cord with excessive force. Doing so may cause malfunction.
- When unplugging the power plug of the charger (sold separately) from the power outlet, hold and pull the power plug. If you pull the cable, it might be damaged.

■ Wireless Charging

- Do not affix anything metal (stickers, etc. containing metal) on Wireless Charging Pad (commercially available) or the back of the product. Doing so may cause malfunction.
- The indicator LEDs on the Wireless Charging Pad (commercially available) remain on after charging completes, but this is not abnormal.
- Charging may stop just before phone is completely charged.
- If charging stops just before phone is completely charged, charging may not immediately resume.
- Some Qi-specification products may experience repeated starting/stopping of charging.

- Above a certain temperature, the charging function may stop or charging may take a long time, but this is not abnormal. Wait for the temperature to cool.
- Place the Wireless Charging Pad (commercially available) on a flat, stable surface before charging.
- Turn the phone's vibration function off before wireless charging. Vibrating of the phone may cause it to move, preventing charging from completing or causing it to fall.
- Before charging, remove any case, cover, stickers or sheets (commercially available protective film or privacy protector) attached to the product.
- Make sure that the Wireless Charging Pad (commercially available) and the main unit are not wet.
- Do not wirelessly charge while a separately-sold AC adapter or USB Type-C™ cable is connected to the main unit.
- Keep any other wireless chargeable device other than the product you are charging away from the product. The au product you are charging may not be detected and prevent charging.
- If a TV, radio, etc. experience noise, charge as far away from the TV, radio, etc. as possible.
- Depending on the Qi-specification product, calls may not be received while charging.
- Some Qi-specification products may experience interference with the Osaifu-Keitai function, preventing charging from starting.
- Activating of apps, etc. during wireless charging may prevent charging from completing.
- The main unit may become warm while on Wireless Charging Pad (commercially available), but this is not abnormal.
- Reception (quality of data communication, etc.) may be affected while charging on Wireless Charging Pad (commercially available).

- Do not move the Wireless Charging Pad (commercially available) or the main unit while charging.
- Battery may deplete if the main unit is left unused for a long period even after completing charging.
- Do not let a credit card, contactless IC card, etc. between the product and the Wireless Charging Pad (commercially available) when charging wirelessly. Doing so may prevent charging, or heat while charging resulting in the product or card malfunctioning or being damaged.

■ SIM Card

- Do not forcibly remove or insert the SIM card. Be careful not to exert excessive force when inserting the card into your product.
- You are responsible for any damage caused by inserting your SIM card into some other IC card reader/writer, etc.
- Do not put stickers, etc. on the SIM card.
- Do not insert your SIM card with a conversion adapter attached. Doing so may cause malfunction.
- Do not damage the SIM card (use in a hot place, throw into fire, contact the metal part with foreign object, give an impact, bend, apply a load, moisten, etc.). Doing so may cause data loss or malfunction.

■ Camera

- When photographing important occasions, take a trial shot and check the shot image to make sure it is correctly shot.
- Do not shoot in areas where shooting is prohibited.

■ Copyrights and Rights of Portrait

- If the data you shot or recorded using the product or the data you downloaded from the Internet, etc. is in part or in whole protected by the third party's copyright, you are not allowed to copy, distribute, publicly send, modify the data without consent of the copyright holder, except for personal use, under the copyright law.
  In addition, do not use or modify portraits or names of other individuals without their consent, as it may infringe on rights of portrait.
  Note that shooting and recording might be restricted at some live performances, shows and exhibitions even for personal use.
- Be careful about the copyright and portrait right when posting images you shot, etc. on Internet/homepages.

■ Backup Content on the Product

- Please back up important content registered to the product or downloaded to the product from an outside source. Content recorded to memory on the product sometimes disappears or is altered by unexpected factors, such as static electricity or a fault, repair, mishandling, etc.

■ FCC Certification Information

- This product is certified by the Federal Communications Commission (FCC).
  The product's FCC ID is JOYEB1220.
  You can view this certification in the following way.
  How to confirm:
  Swipe up the Home screen → [Settings] → [About phone] → [Compliance information]

Notes on Water, Dust, Seawater, Shock Resistance, and Washing the Product

This product is protection-rated at IPX5/8/9-*1 water resistance and seawater capability*2 as well as IP6X-equivalent*3 dust resistance when the back cover and USB cover are completely attached. In addition, this product can be washed with a specified method using hand soap/body soap*4 for home use (by Company test methods).
The product also meets 37 ruggedization test requirements, based on 21 categories of the US Department of Defense's MIL-STD-810H standards and including 16 categories from proprietary tests (by Company test methods). For details on test items, refer to "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese). Product capabilities are confirmed in a test environment, and does not guarantee capabilities under all conditions of actual use. No guarantees are made with regard to non-breakage or non-fault.
Before using the product, thoroughly read "Important Items to Remember before Use" to ensure correct use. Failure to follow the contents described in these sections may cause the intrusion of water, sand or other foreign material, resulting in overheating, ignition, electric shock, injury or a fault.

*1 IPX5 equivalent means that the product will maintain its operability as a phone even if it is sprayed with water from a 6.3 mm diameter nozzle at a distance of about 3 meters for more than 3 minutes at a rate of about 12.5 liters per minute from any direction. IPX8 equivalent means that no water seepage and phone capability is maintained even when gently submersed and left at the bottom of a tank for about 60 minutes filled with still, normal-temperature tap water at a depth of 5.0 m. IPX9 equivalent means that the product will maintain its operability as a phone even if being rotated on a horizontal plane and subject to a test in which high-temperature water at 80°C, a pressure of 80 to 100 bar, and flow rate of 14 to 16 liters per minute is sprayed onto the phone from a specified nozzle at angles of 0, 30, 60, and 90 degrees relative to the horizontal plane from a distance of 10 to 15 cm for 30 seconds each.

2 Indicates no water seepage and phone capability is maintained even when submersed in normal-temperature, 50-kPa (maximum depth of 5.0 m) seawater for about 60 minutes.
* Seawater: Evaluation made with Company original standards using artificial seawater simulate the seawater composition of the Japanese coast. Regarding use at pools, product has been assessed according to Japanese domestic disinfection standards.

*3 IP6X-equivalent indicates ability to resist dust intrusion even when placed in a test device containing test dust particles (diameter 75 μm or less) for 8 hours.

*4 An endurance test (cycle testing by washing/rinsing the product using foaming hand soap/body soap) in KYOCERA's individual method is done. Use foaming hand soap or body soap manufactured by a domestic manufacturer. Do not use hand soap for kitchen, business use, or free of additives, or do not use body soap for business use, free of additives or alkaline soap.
- Rinse the product with mild flow and remove foam thoroughly. After washing the product, tap it lightly with a soft dry cloth and drain water thoroughly.
- When using, attach the cover, etc. securely. Do not mix hand soap/body soap with different one. Product capabilities are confirmed in a test environment, and does not guarantee all kinds of foaming hand soap/body soap can be used for this product. No guarantees are made with regard to non-fault.

Operation of the product in every possible condition during actual use is not guaranteed. Malfunctions determined to be caused by mishandling by the customer are not covered by the warranty.

Important Items to Remember before Use

- The back cover is attached completely by making sure it is not loose and closed securely, locking the slide locks, and tightening the lock knob. In addition, water resistance is effective by closing the USB cover of the product firmly.
- Never open/close the back cover or USB cover when the product or your hands are wet.

- Do not let the product submerged into or get wet with the liquids (alcohol, hot water of hot spring, water containing soap, detergent, bath powder, soft drink, alcohol drink, seasoning, etc.) other than tap water. Do not use it in a place where it gets wet with urine of pet animals, either. If the product gets splashed, immediately rinse it off with tap water.
- You can use isopropyl alcohol, ethanol, or sodium hypochlorite to wipe the product with a soft cloth.
  * For details on cleaning the product, refer to "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese).
- Do not place the product directly on sand at a beach, etc. If sand or other small particles get inside the mouthpiece (microphone)/barometer sensor, receiver, or speaker, etc., it may cause overheating or a fault.
- Do not use or leave the product in a humid place such as a bathroom or kitchen for an extended period of time. The product is tested to ensure its proper operability when the product is exposed to hot water of the temperature as hot as bath shower water (43°C or less).
- Moisture may still remain after draining. You should not leave the product next to items you do not want to get wet. The product may wet clothing, inside of carry bag, etc.
- Drain any water in the mouthpiece (microphone)/barometer sensor, receiver, or speaker if audibility is temporarily affected.
- Do not wash the product in a washing machine or ultrasonic bath.
- The rapid changes of temperature may cause condensation, resulting in malfunction. Wait until the product reaches room temperature before you bring the product from a cold place into a warm bathroom.
- The product does not float on water.

- **Back cover/USB cover**
  · Attach the back cover completely. Make sure it is securely closed and not loose, lock the slide locks, and tighten the lock knob. In addition, close the USB cover of the product firmly. Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage.
  · Do not wear gloves while opening/closing the USB cover or attaching/removing the back cover. Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage. Before closing the cover, wipe any water, soiling, etc. with a dry, clean cloth, no matter how small.
  · Any deterioration or damage with the back cover or USB cover will affect water resistance.
- **If any liquid other than water gets on the product**
  · If anything other than water (seawater, washing detergent, soft drink, alcohol drink, etc.) gets on the product, immediately rinse with water.
  · You can use isopropyl alcohol, ethanol, or sodium hypochlorite to wipe the product with a soft cloth.
  * For details on cleaning the product, refer to "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese).
  · You can wash the product under a mild flow (up to 6 liters per minute) of tap water at room temperature (5℃ to 35℃) at a distance of about 10 cm from the faucet or showerhead.
  · If soiled, wash by hand without using a brush, etc., holding the product so that the back cover and USB cover do not open.

- **After the product gets wet**
  · Wipe off moisture on the surface or drain the product with the back cover attached.
  * For details on draining the product, refer to "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese).
  · In cold regions, any water on the product may freeze. Using the product with frozen water may cause malfunction. Do not leave any water drops on the product.
- **Rubber seal**
  · The rubber seal around the USB cover and back cover is important in maintaining water resistance. Do not scratch or remove it.
  · Be careful not to pinch the rubber seal when closing the USB cover and back cover. Trying to close the cover with a seal pinched can scratch the seal and affect water resistance. Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage.
  · Any liquid other than water on the product can affect product durability.
  · Do not insert pointed objects in the USB cover or back cover. Doing so may damage/deform the product or scratch the rubber seal, allowing water seepage.
  · Parts used for maintaining water resistance should be replaced every 2 years regardless of their appearance. Contact your nearest au Style/au shop for replacement.
- **Shock**
  · The product shock resistance assumes usage in daily situations; subjecting the product to excessive shock such as by throwing or causing/letting the product fall forcefully may break the product.

- **In seawater/Underwater**
  · Check the following before using in seawater.
  * The back cover is attached completely by making sure it is not loose and closed securely, locking the slide locks, and tightening the lock knob. In addition, water resistance is effective by closing the USB cover of the product firmly.
  * Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage.
  * Make sure the lock knob on the back cover is tightened and the slide locks are locked.
  · Check the following during and after use in seawater.
  * Never open/close the USB cover or back cover when the product or your hands are wet.
  * When opening the back cover, open gently so as not to allow waterdrop to enter inside. If waterdrop contacts the inner surface of the back cover, always wipe away before using the product.
  · Do not use the product in the water at approximately 50-kPa (maximum depth of 5.0 m) or deeper. Do not use in the water continuously for more than 60 minutes.
  · The product sinks; use a strap, etc. and be careful not to drop in the water.
  · Before using the product underwater, attach the back cover making sure it is not loose and is closed securely, lock the slide locks, tighten the lock knob, and close the USB cover securely.
  · After using in seawater, open the USB cover, remove the front cover, and wash the product with water. At this time, never open the back cover.
  · Never open the back cover while it is wet.

  · Do not subject the product to shock in the water. Do not dive in water while holding the product, and do not subject to harsh water pressure of rapids, a waterfall, etc. Do not use the product in a way that subjects it directly to high-pressure water.
  · For details on cleaning the product or draining water when it gets wet, refer to "取扱説明書 (詳細版) (Full Instruction Manual)" (Japanese).
  * Always wash the product after using or immersing in seawater, and completely dry before charging.
  · Sunscreen or sun oil splashing on the product may discolor the surface of the product or cause a fault. If on the product, immediately rinse.
  · Touch panel cannot be operated underwater.

Precautions on Charging

Accessories and optional accessories are not water/dust resistant. Note the following before and after charging.

- Never charge the battery if the product is wet. Doing so may cause fire, burns, injuries, or electric shock.
- Make sure the product is not wet. If charging after the product has gotten wet, first drain water well and wipe with a dry, clean cloth, etc., before opening the USB cover.
- If the USB cover was opened to charge, close the cover firmly after charging.
- Do not touch the charger (sold separately) with wet hands. Doing so may cause electric shock.
- Do not expose the charger (sold separately) to water. Do not use it near water, such as in a bathroom, shower room, kitchen, or washroom. Doing so may cause fire, burns, electric shock, or malfunction. Do not bring it into a bathroom, etc. even when you are not charging with it. Doing so may cause fire, burns, electric shock, or malfunction.

Notes on Using Bluetooth®/ Wireless LAN (Wi-Fi®) Function

- The connections between this product and all other Bluetooth® and wireless LAN (Wi-Fi®) devices have not been confirmed. Therefore, connections with all Bluetooth® and wireless LAN (Wi-Fi®) devices are not guaranteed.
- This product supports security features for wireless communications that are compliant with the Bluetooth® and wireless LAN (Wi-Fi®) standard specifications, but the security may not be sufficient depending on the usage environment and configuration. Be careful when making data communication using Bluetooth® or wireless LAN (Wi-Fi®) function.
- Wireless LAN (Wi-Fi®) has the advantage that it can be freely connected anywhere within the radio wave range, as it uses radio waves for exchanging information. At the same time, there is a risk that a malicious third party may obtain unauthorized access if security settings have not been configured. You are recommended to configure security settings before use at your decision and responsibility.
- The Company assumes no responsibility for leakage of data or information that may occur during Bluetooth®/wireless LAN (Wi-Fi®) communication.
- Since Bluetooth® and wireless LAN (Wi-Fi®) functions use the same frequency band, using the both functions at the same time may cause radio wave interference resulting in decreased communication speed or disconnection from the network. If connection fails, stop using either of the Bluetooth® and Wireless LAN (Wi-Fi®) functions.

Notes on Data Communication Charges

- Since constant Internet connection is possible with the product, data communication may be performed automatically by some applications, resulting in high data communication charges. Therefore, subscription to a data flat-rate service/data communication charge discount service is recommended.
- Connection for browsing homepages, downloading applications, communication using applications, sending/receiving e-mails and configuring various settings is by the Internet, and data communication charge applies.

Notes on Call Charges

When you end a call, make sure to disconnect the call. If you forget to disconnect, the call charges may be higher.

After-Sales Service

When Asking for Repair

For repair, contact Repair and Delivery Support Center.

During the warranty period	Repairs will be done after determining whether individual repair is free of charge or is charged, based on the terms of services of the free-of-charge repair warranty.
Outside the warranty period	We shall repair the product for a charge as requested by the customer if repair renders it usable.

* The warranty period is one year from the day when you purchase the product.

memo

- Before handing the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
- Recycled parts that meet the Company's quality standards are sometimes used for repair.
- Parts replaced by after-sales service are collected and recycled by the Company. They are not returned to customers.

- Instances where the product has been changed, modified, or analyzed (including software modification or analysis (including rooting, etc.) reverse-engineered, reverse-compiled, or reverse-assembled) or has been repaired at a location other than an authorized repair location designated by the Company may not be covered by warranty or may prevent the product from being accepted for repairs.
- The battery pack is not covered by the free-of-charge repair warranty, as it is a consumable item.
- The accessories and samples such as the front screen other than the product are not covered by the free-of-charge repair warranty.

Performance Parts for Repair

The Company retains performance parts for repair of the product main unit and its peripherals for 4 years after discontinuation of production. Performance parts for repair refers to parts required for maintaining the functions of the product.

Terms of Free-of-Charge Repair

1. When you apply for repair, inform us of your serial number (IMEI number). You can check the main unit or the sticker attached on the packaging box for the serial number (IMEI number).
2. Repairs will be done based on the terms of services of the free-of-charge repair warranty when the product is used correctly based on the instruction manual and the product is malfunctioning.

3. Repairs will be charged in the following cases even during the warranty period. (Also, the product cannot be repaired in some cases.)
   ① When the product is not used correctly based on the instruction manual.
   ② When the product is malfunctioning or damaged due to inappropriate modification and repair.
   ③ When the product is repaired by repair offices other than the company specified.
   ④ When the product is malfunctioning or damaged due to a handling fault or accident. Or when there are some traces that the product is damaged by falling, water or humidity.
   ⑤ When the product is malfunctioning or damaged due to earthquakes, storms, floods or other natural disasters, as well as fires, salt, abnormal voltage, etc.
4. Repairs may be refused depending on the damage condition of devices.
5. Note that the company shall not be liable for any damages or lost income arising from the product malfunction.
6. The Company assumes no responsibility for any accidents when the product is connected with an unspecified device.
7. On-site repair is not available.
8. This warranty is valid only in Japan.

* The warranty guarantees that free-of-charge repairs will be done based on the terms of period and conditions indicated above. Therefore, the warranty does not limit your legal rights against persons in charge of the warranty and other operators.

Repair and Delivery Support Wide with Cloud

To ensure the customer can enjoy long-term, worry-free use of the au/UQ mobile terminal, "Repair and Delivery Support Wide with Cloud" is available as an after-sales service system by membership on a monthly fee basis. This service expands coverage for many troubles including malfunction, theft and loss. For the monthly fee and details of this service, check on the au/UQ mobile homepage.

For au users:
https://www.au.com/mobile/service/kosho-funshitsu-wide-cloud/ (Japanese)
For UQ mobile users:
https://www.uqwimax.jp/mobile/plan/option/repair-wide-cloud/ (Japanese)

* Service contents are subject to change without notice.

SIM Card (au IC Card)

The SIM card is lent to you by au/UQ mobile. In case of loss or damage, the card will be replaced at your expense. When malfunction is suspected, or in case of theft or loss, contact Repair and Delivery Support Center, an au Style/au shop or Toyota store.

Export Administration Regulations

This product and its accessories may be subject to the Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Law" and its related laws). In addition, U.S. Re-export Regulations (Export Administration Regulations and the related laws and regulations) may apply to this product and its accessories. To export and re-export this product and its accessories take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry, the U.S. Department of Commerce.

Intellectual Property Rights

Trademarks

- Company names and product names referred to in this manual are trademarks or registered trademarks of the respective companies.

- Google, Android, Google Play, YouTube, and other marks are trademarks of Google LLC.
- QR code is a registered trademark of DENSO WAVE INCORPORATED.

- microSD, microSDHC and microSDXC logos are trademarks of SD-3C, LLC.
- Bluetooth® and logo are registered trademarks owned by the Bluetooth SIG, Inc., and KYOCERA Corporation is licensed to use those trademarks.
- WiMAX is a trademark of WiMAX Forum.
- Wi-Fi®, WPA™, WPA2™, WPA3™, Wi-Fi CERTIFIED logo, Wi-Fi Direct®, and Miracast® are registered trademarks of Wi-Fi Alliance®.
- Wi-Fi CERTIFIED™ is a trademark of Wi-Fi Alliance®.
- "Qi (chi)" and the qi symbol are trademarks of the Wireless Power Consortium (WPC).
- FeliCa is a contactless IC card technology developed by Sony Corporation.
- FeliCa is a registered trademark of Sony Corporation.
- is a registered trademark of FeliCa Networks, Inc.
- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM VIA LICENSING ALLIANCE LLC. SEE HTTP://WWW.VIA-LA.COM.

(1)ACCESS, the ACCESS logo, and NetFront are registered trademarks or trademarks of ACCESS CO., LTD. in the United States, Japan and/or other countries.

(2)This software is based in part on the work of the Independent JPEG Group.

- "デイリーステップ", "TORQUE", "HYBRID SHIELD", "HYBRID SHIELD (logo)", "ウェットタッチ", "グローブタッチ", "ACTION OVERLAY", and "みんスピ" are registered trademarks of KYOCERA Corporation.
- "Morpho Rapid Effect", the image effect technology, is a product of Morpho, Inc. "Morpho Rapid Effect" is a trademark of Morpho, Inc.
- USB Type-C™ is a trademark of USB Implementers Forum.
- Covered by one or more claims of the HEVC patents listed at the URL below.
  patentlist.accessadvance.com
- All other company names and product names in this manual are trademarks or registered trademarks of respective companies.

<For au Users>

au Support

App/Website

■My au app

You can check the amount of your monthly billing/data communication (giga), your contract details, points, etc. easily. You can also do various procedures or contact us smoothly.

For download

URL **https://kddi-l.jp/mFH (Japanese)**

■au Support (web)

Provides various support information useful for solving your problem.

URL **https://kddi-l.jp/JyO (Japanese)**

Chat

Consult us anytime/anywhere simply by chat! AI answers you soon all day and our communicator guides you in detail.

URL **https://kddi-l.jp/QJo (Japanese)**

<For UQ mobile Users>

UQ mobile Support

App/Website

■My UQ mobile app

You can check the amount of your monthly billing/data communication (giga), your contract details, points, etc. easily. You can also do various procedures or contact us smoothly.

For download

URL **https://kddi-l.jp/FJ7 (Japanese)**

■UQ mobile Support (web)

Provides various support information useful for solving your problem.

URL **https://kddi-l.jp/DHC (Japanese)**

Chat

Consult us anytime/anywhere simply by chat! AI answers you soon all day and our communicator guides you in detail.

URL **https://kddi-l.jp/NZJ (Japanese)**

For Problems on Your Phone:

Repair and Delivery Support Center

(7 days a week/toll free)

For repair (Business hours: 9:00 to 20:00)	**0120-925-919**

やめましょう、歩きスマホ。

キケン！水ぬれ充電

あぶない！電池への衝撃

有害サイトから子供を守る！

Unused telephones, batteries and battery chargers are collected and recycled at stores bearing the logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Manufactured by: KYOCERA Corporation
© 2026 KYOCERA Corporation
March 2026, 1st Edition