au

HUAWEI nova 2 HWV31 Setting Guide

Thank you for purchasing the HUAWEI nova 2 HWV31 (simply called the "product" from here on). This "Setting Guide" describes the basic operations and initial settings for using the product. For detailed descriptions on various functions, refer to "Basic Manual App" installed on the product or "取扱説明書 詳細版 (Full Instruction Manual)" (Japanese) available on the au homepage. Before using the product, be sure to read the "Notes on Usage" on the au homepage to ensure correct and safe use.

All other company names and product names are registered trademarks or trademarks of respective companies referred to in this manual.
The ® marks and TM marks may be omitted in this manual.

- ●Basic Operation
  Describes the names of parts and operation.
- ●Initial Settings
  Described in the steps for the following:
  ・Language Settings
  ・Wireless LAN (Wi-Fi®) Settings
  ・Google Account Settings
  ・Data Transfer and Fingerprint Authentication Settings
- ●au Initial Settings
  Sets au ID and services.
- ●au Mail Settings
  Sets up to use au mail.
- ●Making a Call
  You can also make a call using call logs or contacts.
- ●Receiving a Call
  You can also receive a call in sleep mode.
- ●Transferring Data from au Settings Menu
  You can restore/backup data from your previous au phone to this product using a microSD memory card or au servers.
- ●Setting Power Saving Mode
  You can reduce the battery consumption by setting up power saving.
- ●Display Settings
  Set the screen brightness and backlight time of the screen.
- ●Using the Basic Manual Application
  You can install "Basic Manual App".

Basic Operation

Volume key (side)
Adjust sound volume using UP/DOWN.

Power key (side)
●Power ON
Press and hold the power key.
●Power OFF
Press and hold the power key → Select [Power off] → [Touch to power off].
●Sleep mode
Press the power key in operation to switch to sleep mode.
●Cancel sleep mode
Press the power key in sleep mode to display the lock screen.

Display (Touch panel)
Directly touch an item or button displayed on the screen to operate.

□ Task button
Check running applications.

○ Home button
Use it to display the Home screen.

◁ Back button
Return to the previous screen.

■ Character Entry

This product uses the software keyboard displayed at the bottom of the screen to enter characters.
Tap the keys on the screen to enter characters.

〈10-key〉
Keyboard type switch
〈QWERTY〉
〈50-key〉

① Switches to voice typing.
② Moves the cursor to the right/left and changes the range of characters when converting characters.
③ Enters pictograms/symbols/emoticons.
④ Switches the Input Mode.
Touch and hold → Tap [Keyboard type] to switch to a QWERTY keyboard or 50-key keyboard.
⑤ Switches upper case/lower case of entering character.
⑥ Inputs the characters of each key.
⑦ Deletes the character to the left of the cursor.
⑧ Inputs a space and converts characters in Hiragana-Kanji input mode.
⑨ Start a new line/confirm the characters input.

Flick input

Flick guide

You can flick the key up, down, right, or left to enter a character. Touch and hold the key to display the candidates that can be entered by flicking (flick guide). Touch and hold the key to display the candidates that can be entered by flicking (flick guide).

■ Open the Notification Panel

When a notification icon appears on the left side of the status bar, slide the status bar down to open the notification panel to check the notification or launch the application.

1 Slide down the status bar
2 The notification panel appears.

■ Setting the App Permissions

The first time you launch an app/function that accesses the functions or information of the product, a confirmation screen for requesting access permission appears.
When the confirmation screen appears, confirm the content and tap "DENY" or "ALLOW".
- The explanation screen may be displayed depending on the application/function. Also, the confirmation screen may be displayed several times or the display may be different. Carefully check the displayed content, follow the onscreen instructions.
- If you do not permit, apps/function may not be activated or use of function may be restricted.
- In this manual, description of the confirmation screens may be omitted.

■ Basic Operations of the Touch Panel

The display of the product is touch panel and you can touch directly with your finger to operate.

Tap/Double-tap
Lightly touch a screen and then immediately release your finger. Tapping the touch area twice consecutively in the same position is called double-tap.

Long-touch
Keep touching items displayed on the screen.

Slide
While your finger is lightly touching the screen, move it in the desired direction.

Flick (Swipe)
Touch the screen and flick up/down/left/right.

Pinch
While touching the screen with two fingers, move the fingers away (pinch-out) and closer (pinch-in) to each other.

Drag
Keep touching items or icons and trace to the desired position.

Initial Settings: STEP1

■ Language Settings

This section describes the initial settings screen that appears when you turn on the power.

●Setting the language

1

[English] (and select the country) → [NEXT] → [AGREE] → [AGREE] → [AGREE TO ALL]
※ Once you select your desired language, the language for the initial settings screen also changes. From here on, follow the onscreen instructions.

Initial Settings: STEP2

■ Wireless LAN (Wi-Fi®) Settings

By using the wireless LAN (Wi-Fi®) function, you can access to the Internet using a wireless LAN environment built in your home or a public wireless LAN environment away from home. When setting the wireless LAN (Wi-Fi®) as described in this guide, you need to be in an environment where the radio waves can be received from the wireless LAN device or public wireless LAN that you want to access to.
Check the following information before setting the wireless LAN (Wi-Fi®) function.

SSID	The name set for the wireless LAN device or public wireless LAN service that you are connecting to
Password	The password for connecting to the wireless LAN device or public wireless LAN service

※ Connection to all public wireless LAN services is not guaranteed.
※ You may need a separate contract with a service provider to use some public wireless LAN services.
※ Enabling the wireless LAN (Wi-Fi®) function uses a lot of battery power. We recommend turning off the wireless LAN (Wi-Fi®) function when not using it.

1 Tap the network to connect
※ If you do not set up, tap "SKIP".

2 Enter Password → [CONNECT] → confirm the connection → [NEXT]
※ This step is not required if you select a wireless LAN (Wi-Fi®) network without security settings.

Initial Settings: STEP3

■ Google Account Settings

You can use online services provided by Google, such as Gmail and Google Play, by setting up a Google account. This section describes how to set up an account on the initial settings screen.

User name	Register your Google account (user ID) and the characters that you want to use as your mail address. You can register a desired name, but a name already registered by another user cannot be set.
Password	Register password for the Google account.

1 [Or create a new account]
※ If you have a Google account, enter the mail address or the phone number.

2 Enter your first and last names → [NEXT] → Enter the date of birth and gender → [NEXT] → Enter your user name → [NEXT]
※ User names already being used by another user cannot be used.

3 Enter the password → [NEXT]

4 Check the contents → [YES, I'M IN]

5 Check the contents → [I AGREE]

6 [NEXT]

7 Check the details of Google services → [NEXT]

8 [SET SCREEN LOCK STYLE] → Set whether to protect smartphone → Follow the on-screen instructions.

Initial Settings: STEP4

■ Data Transfer Settings

1 [Setup as new]
※ If you restore a backup or copy from a device, select [Keep your apps & data] and follow the on-screen instructions.

2 Select the device type → Follow the on-screen instructions.
※ If you do not transfer data, [SKIP] → [OK].

■ Fingerprint Authentication Settings

1 Check the contents → [NEXT]

2 Follow the on-screen instructions → [GET STARTED]

au Initial Settings

■ Setting au ID

You can setup convenient au functions and services.
This section describes how to set up au ID on the initial settings screen.
The settings can be changed with the "au Settings Menu".

au ID	Register your au phone number or a character string for au ID (user ID).
au ID password	Register password for using au ID.

● You can also setup au services on the Home screen by tapping [基本フォルダ] (Basic folder)→ [Settings] → [au Settings Menu] → [au Initial Setting].
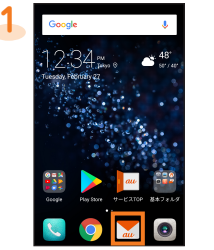
1 [GET STARTED]

2 [Sign in]

3 Enter a security code[*1] → [次へ] (Next)[*2]

4 Enter a password→ [同意して次へ] (Agree and Next)[*2]

5 [次へ] (Next)

6 [次へ] (Next) → [ALLOW][*3]

7 Place checkmarks on the application to be installed → [Next]

8 Place checkmarks on the item to be set → [Next]

9 [Finish]

※1 The security code is a 4-digit number set at subscription.
※2 The security code input screen appears when you register au ID at the first time.
※3 The confirmation screen may be displayed several times. From here on, operate it the same way.
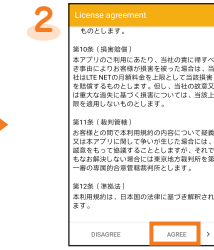
au Mail Settings

au mail is a service that enables you to exchange e-mails with other cell phones, which support e-mail, and with PCs.
Your au mail address is decided automatically after the initial settings.
The au mail address in the initial settings can be changed.
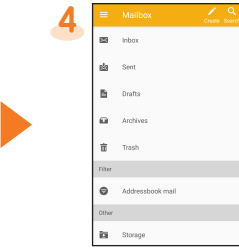
■ Initial Settings

1

On the Home screen, [▼]
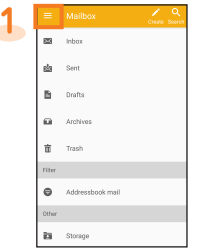
2
Confirm the contents → [AGREE]

3
Confirm E-mail address → [閉じる] (Close)
※ If the confirmation screen for au mail application appears, check the content and follow the onscreen instructions.

4
The au mail screen appears.

■ Checking au Mail Address

1
On the au mail screen, [▤] → [E-mail information]

2
Your au mail address appears in the e-mail address field.
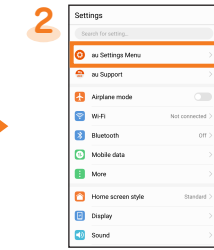
※ You cannot setup the initial settings of au mail via Wi-Fi® communication.

■ Changing au Mail Address

1
On the au mail screen, [▤] → [Change Address/Setting Filter]

2
[Eメールアドレスの変更へ] (To change e-mail address)

3
Enter the security code → [送信] (Send)

4
Confirm the contents → [承諾する] (I accept)

5
Enter the au mail address → [送信] (Send)

6
[OK]

7
[閉じる] (Close)

Transferring Data from au Settings Menu

You can return/save data from your old au phone to the product using a microSD memory card or au server.
• To return data using au server, store the data from the old au phone to au server beforehand. Setting au ID is required for using au server. (Use the au Cloud application if your old au phone has not au Settings Menu)
• If you use a microSD memory card to restore data, save the data from your previous au phone to a microSD memory card. (Use the au backup application if your old au phone has not au Settings Menu)
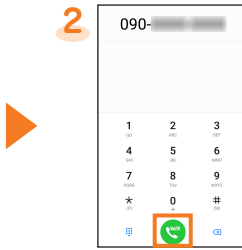
1
On the Home screen, [基本フォルダ] (Basic folder) → [Settings]

2
[au Settings Menu]

3
[Data Transfer]

4
Tap [機種変更はこちら] (For model replacement) and transfer data according to the guidance on the screen.

To use [Data Storage App] to back up photos, contacts, etc. to au server automatically, set as follows.
On the Home screen → [基本フォルダ] (Basic folder) → [Settings] → [au Settings Menu] → [Backup Setting]

Making a Call

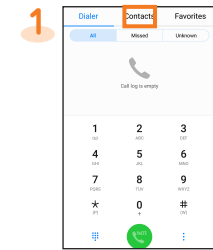### ■ Entering a Phone Number to Make a Call
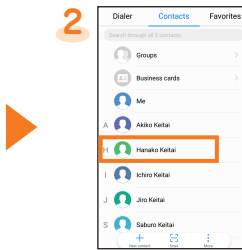
1
On the Home screen, [📞]
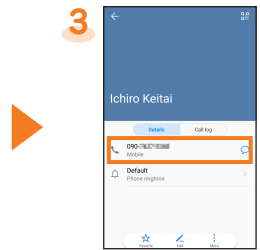
2
Enter a phone number →[📞]

■ Making a Call from Contacts

1
On the phone number entry screen, tap "Contacts" tab
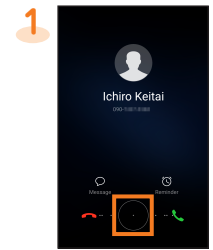
2
Tap the other party to be called

3
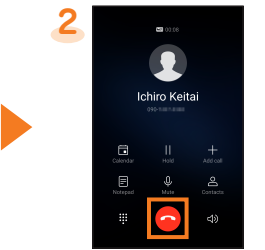Tap a phone number

■ Making a Call from Call Logs

1
On the phone number entry screen, select the other party to be called from the call log and tap it.

Setting Power Saving Mode

■ Using Power Saving Mode

Set up to switch to the battery save mode automatically when the battery is running low.

1
On the Home screen, [基本フォルダ] (Basic folder) → [Settings]

2
[Battery]

3
[ ] of "Power saving mode"
※ Confirm the status of the battery etc. in "Battery usage details".

Receiving a Call

You can receive a call in the following steps.

■ While the Screen Backlight is Turned Off

1
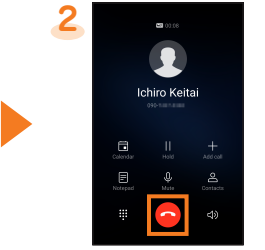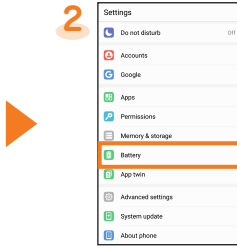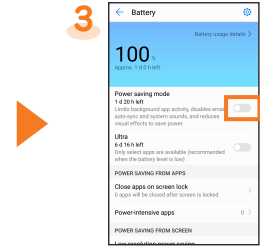Slide [■] in the direction of [📞] during an incoming call

2
To end the call, [📞]

■ While Screen Backlight is Turned On

1
Tap [📞] during an incoming call

2
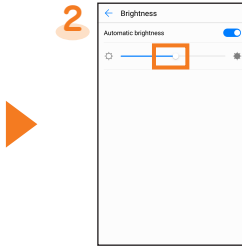To end the call, [📞]

Display Settings

Set the screen brightness and backlight time of the screen.

■ Adjusting Brightness of the Screen

1
On the Home screen, [基本フォルダ] (Basic folder) → [Settings]

2
[Display] → [Brightness] → Slide the indicator left/right
※ Slide right to make brighter or slide left to make dim.

• When you tap "Automatic brightness" to ON, the screen brightness is automatically adjusted according to your condition.

■ Setting the Backlight Time of the Screen

1
On the Home screen, [基本フォルダ] (Basic folder) → [Settings]

2
[Display] → [Sleep] → Select the backlight time

Using the Basic Manual Application

■ Installing "Basic Manual App"

1
On the Home screen→[Tools]→[Basic Manual]

On the displayed screen, [UPDATE] → [ACCEPT] and install "Basic Manual App".