

- Main unit**
 - Since the battery is built into the product, you cannot replace it yourself. For replacing the battery, contact "お問い合わせ先 (For inquiries)" on 取扱説明書 詳細版 (Full Instruction Manual) (Japanese).
 - Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so might cause scratching or damage.
 - Do not forcefully press the keys or display surface with your fingernails or hard objects. Doing so might cause scratching or damage of the keys or display.
 - Do not use a remodeled product. Use of a modified device violates the Radio Law and Telecommunications Business Act. The product is compliant with rules on the technical standard conformance of specified wireless equipment based on the Radio Law/ Telecommunications Business Act, and as a proof of it, the Technical Compliance Mark TM can be checked with the product.
- Checking procedure: In the Home screen, slide the screen up → [Settings] → [About phone] → [Certificates]**

If the certifications of the internal components of the product are made, the certification of conformity with the technical standard conformance etc. becomes invalid. Do not use the product with the certification invalid, as it is a violation of the Radio Law and Telecommunications Business Act.
- Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product, as it might cause a malfunction. Putting a strong magnetism close to the product might cause a false operation.
- Do not bring magnetized cards such as cash cards, credit cards and prepaid cards closer to the product. It might cause loss of the recorded data.
- When you put the product in your pocket or bag, take care that the display does not come in contact with metal objects or other hard objects, as it might cause a scratch or damage. Take care with using a strap whose member is a hard material such as metal because it can touch the display and may cause scratch or damage.



- Do not sink the product in liquids other than tap water (seawater, pool water, water of hot spring, water with soap, detergent or bath salt contained, alcohol, juice, seasonings, etc.) or do not splash such liquid to the product. Also, do not use in a place where urine of pet animal is splashed. If it is splashed on the product, immediately wash the product with tap water.
- Do not put the product directly on sand at a beach etc. Sand or other small particles might get inside the earpiece/speaker, mouthpiece/microphone, speaker, or second microphone causing the volume to drop. If sand gets inside of the main unit, it might cause overheating or a malfunction.
- Do not use the product underwater.
- Do not leave the product in a humid place such as a bathroom or kitchen for an extended period of time.
- Even after draining, water might remain on the product. Although you can use the product, do not place it near things that must not get wet. Also, take care not to wet your clothes, bag, etc.
- Drain water if it becomes temporarily hard to hear the sound due to water remaining in the earpiece/speaker, mouthpiece/microphone, speaker, or second microphone.
- Do not spray the product with high-pressure water or submerge it in water for extended periods of time, as the product is not designed to withstand high water pressure.
- Do not wash the product in a washing machine or ultrasound bath.
- Do not immerse the product into a bathtub. The product is not resistant to high temperatures.
- Extreme changes in temperature generates condensation causing a malfunction. Wait until the main unit reaches room temperature before you bring the product from a cold place into a warm bathroom.
- The product does not float on water.

■ Cover of microSD memory card/SIM card slot

- Make sure that the cover of microSD memory card/SIM card slot is firmly closed. Just a small gap exists between contact surfaces can cause water intrusion or dust penetration.
- Do not open or close the cover of microSD memory card/SIM card slot with gloved hands. Just a small particle (a hair etc.) between the contact surfaces can cause water intrusion or dust penetration. Wipe off any minuscule droplets of water or dirt with a clean dry cloth before closing the cover.
- If the cover of microSD memory card/SIM card slot is deteriorated or damaged, the waterproof/dustproof property becomes ineffective.
- For details on how to close the microSD memory card/SIM card slot cover, refer to 取扱説明書 詳細版 (Full instruction Manual) (Japanese).



Notes on data communication charge


- Since a constant Internet connection is possible with the product, data communication may be performed by some apps, resulting in high data communication charges. Therefore, subscription to a data communication charge discount service or flat rate plan is recommended.
- To browse homepages, download apps, communicate using apps, send/receive e-mails and configure various settings on the product, connection to the Internet is required and data communication charge applies.

Notes on Call Charges

- When you end a call, make sure to disconnect the call. If you forget to disconnect, the call charges may be higher.

Notes on applications

- Be sure to check the security of the app, then install it at your own risk. Some apps might affect operation of other apps or of the entire product. They might cause virus infection, damage various data, and send out your location information, usage history or personal information stored in your product via the Internet.
- The Company assumes no responsibility for any malfunctions that might be caused by apps you have installed. Repair costs in this case may be charged even during the warranty period.
- The Company assumes no responsibility for any disadvantage brought to you or any third party by the apps you have installed.
- Insertion of a microSD memory card is necessary to use some apps. Some apps prohibit the product from entering sleep mode while they are active, or rapidly drain the battery while running in the background.
- Operational procedures and screen appearances of the apps preinstalled in the product and those installed by you are subject to change without notice as a result of version upgrade. In addition, operation procedures described in "Instruction Manual" might differ from the actual procedures.

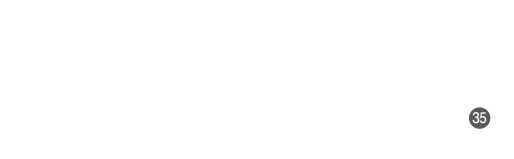

■ Radio Frequency (RF) exposure and Specific Absorption Rate (SAR)

When your phone or Bluetooth® handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. The standards include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy when using a mobile phone. The SAR value is measured in watts/kg, but determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 10 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Corporation accessory and worn on the body. Use of the phone other than as tested may impact SAR and result in non-compliance with such RF exposure limits. For devices which include "WiFi hotspot" functionality, SAR measurements for the device operating in WiFi hotspot mode were taken using a separation distance of 10 mm. Use of third-party accessories may result in different SAR levels than those reported.


For more information about SAR and radio frequency exposure go to: https://xpria.sony.jp/product/SAR (Japanese).

■ United States

THIS PHONE MODEL HAS BEEN CERTIFIED IN COMPLIANCE WITH THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

This mobile phone model SOG06 has been designed to comply with applicable safety requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed to not exceed the limits* of exposure to radio frequency (RF) energy set by governmental authorities. These limits established permitted levels of RF energy for the general

- When suddenly brought into a warm place from a cold place, or when used in a humid location or in a place where temperature suddenly changes (e.g. near the air discharge port of an air conditioner), water droplets (i.e. condensation) may be formed inside of the product. Note that when used under such conditions, the humidity might cause corrosion or a malfunction.
- While writing or reading data to or from a microSD memory card, do not subject the product to vibration or impact, or turn off the power. Doing so might cause loss of data or a malfunction.
- Do not cover the proximity/light sensor with your finger or put a sticker on it. Doing so might hinder the proximity/light sensor from detecting the ambient brightness and functioning correctly.
- Do not put a sticker, etc. on the proximity/light sensor. Doing so might cause a malfunction on the sensor and make the display always turned off while receiving a call or during a call.
- Usually use the product with the cover of microSD memory card/SIM card slot firmly closed. If the cover is open, dirt or water might get inside and cause a malfunction.
- Do not allow liquids, metal and other foreign objects to get inside the USB Type-C port, headset jack, microSD memory card/SIM card slot, earpiece/speaker, mouthpiece/microphone, speaker, second microphone, etc. Doing so might cause a malfunction.
- Do not give strong impact on the product such as dropping, throwing, stomping. Doing so might cause a malfunction.
- Do not put the product directly on sand at a beach etc. Sand or other small particles might get inside the earpiece/speaker, mouthpiece/microphone, speaker, or second microphone causing the volume to drop. If sand gets inside the product, it might cause a malfunction.
- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- This mark is displayed when the surface temperature of the product rises during use. When the mark is displayed, there is a risk of burns if you continue using the product while holding it in your hands. In this case, please refrain from holding it in your hands.

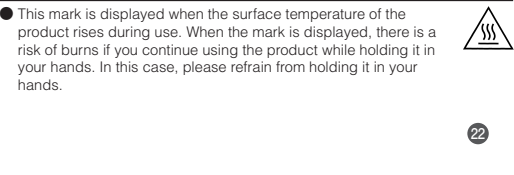

- If any liquid other than plain water is adhered to the product**
 - If any liquid other than plain water (e.g. seawater, detergent, alcohol, juices) is adhered to the product, immediately rinse it with plain water.
 - You can wash the product under a mild flow (less than 6 liters per minute) of cold clean water on the product (5°C to 35°C) at a distance of about 10 cm from the faucet or shower head.
 - If the product gets dirty, wash it with your hands holding the microSD memory card/SIM card slot cover so that they do not open. Do not use a brush.

■ After the product gets wet

- After the product gets wet, drain water, and wipe with a clean dry cloth.
- In cold climates, wait on the product might turn to frost. Using with frosted might cause a malfunction. Do not leave the product without wiping off with a clean dry cloth.
- Do not touch the specified charging equipment (sold separately) with wet hands. Doing so might cause electric shock.
- Do not splash water over the specified charging equipment (sold separately) when using them. Do not use them near water such as in a bathroom, shower room, kitchen or washroom. Doing so might cause fire, burns, electric shock, or malfunction. Do not bring them into a bathroom etc. even if you do not charge the product with them. Doing so might cause fire, burns, electric shock, or malfunction.
- Draining water when the product gets wet**

Draw the following parts: Earpiece/speaker, Mouthpiece/microphone, Speaker, USB Type-C port, Second microphone, Headset jack, Power key/Fingerprint sensor, Volume key/ Zoom key, Shutter key, the cover of microSD memory card/SIM card slot, Camera ring (peripheral part of main camera)
- If water remains, clothes or bag might get wet or sound might be barely heard. Drain in the following steps.

■ Rubber seals

- The rubber seal on the inner edges of the cover of microSD memory card/SIM card slot is important to maintain waterproof/dustproof property. Do not damage or remove the rubber seals.
- When closing the cover of microSD memory card/SIM card slot, take care not to get the rubber seal caught. Forcibly closing the cover with the finger seals caught might damage them resulting in loss of waterproof/dustproof property. Just a small particle (a hair etc.) between contact surfaces can cause water intrusion or dust penetration.
- If any liquid other than plain water (e.g. alcohol) is adhered to the rubber seals, it might cause deterioration in durability.
- Do not insert sharp objects into grooves around the cover of microSD memory card/SIM card slot. Doing so might damage or deform the product, damage the rubber seals, etc. causing water intrusion or dust penetration.

■ Replacing parts

- It is recommended to replace the parts for maintaining waterproof/dustproof property once every two years regardless of whether any abnormality is present. For information, contact "お問い合わせ先 (For inquiries)" on 取扱説明書 詳細版 (Full Instruction Manual) (Japanese).

■ Heat resistance

- Do not sink the product into boiling hot water or do not splash with boiling hot water to the product. Also, do not use the product in saunas or do not expose the product to fiery winds from hair dryer etc. the product is not resistant to high temperatures.



Setting app permission

When you activate an app/function that access the functions or information of the product for the first time, a confirmation screen for requesting access permission appears.

If the request screen appears, confirm the content and select the option you want (e.g. "ALLOW"/"DON'T ALLOW").

Example: When activating "Music" app for the first time

- In the Home screen, slide the screen up → [Music]**

The request screen appears.
- [ALLOW]/[DON'T ALLOW]**
 - Information**
 - If you do not permit, app/function may not be activated or use of function may be restricted.
 - To change the permission setting, in the Home screen, slide the screen up → [Settings] → [Apps] → [See all XX apps] → Tap an app to change it → [Permissions] → Tap an app to change it → Tap the permission setting to be changed → Select the option you want (e.g. "Allow"/"Don't allow").
 - For some apps/functions, an explanation screen for the permission may appear. Several request screens may appear or the screen content may change even during the warranty period.
 - In "Instruction Manual", description of the confirmation screen may be omitted.

Mobile Phone Etiquette

- Use of the product is not allowed in the following places!**
 - Do not listen to music or watch videos, etc. while driving a car or motorcycle, or riding a bicycle. Use of mobile phones while driving a car or motorcycle is prohibited by law (Use of mobile phones while riding a bicycle may also be punishable by law). In addition, stay alert to the traffic around you even when walking. Surrounding sounds will not be heard clearly, and gazing at the screen might distract your attention causing a traffic accident. Be especially careful at railroad crossings, station platform and pedestrian crossings.
 - Use of mobile phones on board is restricted. Follow the instructions of each airline.




■ Radio Frequency (RF) exposure and Specific Absorption Rate (SAR)

The guidelines are based on standards that were developed by international scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a safety margin designed to assure the safety of all individuals, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands. While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

The highest SAR value as reported to the authorities for this phone model when tested for use by the ear is 0.62 W/kg, when worn on the body is 0.75 W/kg* and when WiFi hotspot mode is 0.75 W/kg. For body-worn operation, the phone has been tested when positioned a minimum of 10 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate accessory and worn on the body. For devices which include "WiFi hotspot" functionality, SAR measurements for the device operating in WiFi hotspot mode were taken using a separation distance of 10 mm. When using the device as a charger, you need to put the phone on a flat surface and 20 cm separation distance from user during the charging mode. Use of third-party accessories may result in different SAR levels than those reported.

** Before a phone model is available for sale to the public in the US, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure**. The tests are conducted in various positions and locations (i.e., by the ear and worn on the body) as required by the FCC for each model. The FCC has granted an Emergency Authorization for this phone model with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. While there may be differences between the SAR levels of various phones, all mobile phones granted an FCC emergency authorization meet the government requirement for safe exposure. SAR information on this phone model is on file at the FCC and can be found under the Display Grant section of https://www.fcc.gov/electro/fccid after searching for FCC ID PYT-2411E. Additional SAR-related information can also be found on the Mobile and Wireless Forum at http://www.mwforum.org.

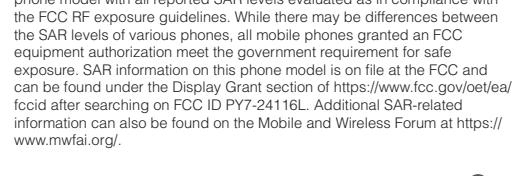

■ Display (Touch Panel)

- The touch panel is designed to be lightly touched by fingers. Do not apply strong pressure with your fingers or sharp-pointed objects (such as fingernails, ballpoint pens and pins) to the touch panel.
- In the following cases, the touch panel might not respond. Also, it may cause malfunction.
 - Operation with gloves
 - Operation with fingernails
 - Operation with foreign object on the touch panel
 - Operation with protective sheet or seal on the touch panel
 - Operates when the display is wet with water droplet or fogged
 - Operation with wet or sweaty fingers
 - Operation under water
- Putting stickers or sheets (e.g. commercially available protective films, pepper prevention sheets) on the display might hinder correct operation of the touch panel.
- When carrying the product in your pocket or bag, take care not to put the touch panel close to metals or other conductive materials, as it might cause false operation of the touch panel.

■ Organic EL display

- Organic EL display may have partially dark part or the colors may be changed if a same image has been displayed for a long time, or the brightness or backlight is set to too bright, or it has been used for a extremely long time. That is due to property of organic EL display and not a malfunction.
- Organic EL display is made with extremely advanced technology and it may have slightly missing pixels or pixels which are always lit. Also, it may have unevenness of color streak or brightness, or color change depending on direction you're looking. That is due to structure of organic EL display and not a malfunction. Please be forewarned.
- Subjecting an organic EL display to direct sunlight may cause a malfunction. Take care when placing at the window or under.



■ Shock

- The product is not resistant to shock. Do not drop the product or subject it to shock. Also, do not poke the earpiece/speaker, mouthpiece/microphone, speaker, second microphone, USB Type-C port, or headset jack, etc. with a sharp object. Doing so might damage or deform the main unit causing water intrusion or dust penetration.

Precautions on charging

The optional accessories are not waterproof. Check the following before and after charging.

- Never charge the battery if the product is wet. Doing so might cause fire, burns, injury, electric shock, etc.
- Check that the product is not wet. If you are charging the battery just after the product gets wet, drain water wet and wipe the remaining water off with a clean dry cloth.
- Do not touch the specified charging equipment (sold separately) with wet hands. Doing so might cause electric shock.
- Do not splash water over the specified charging equipment (sold separately) when using them. Do not use them near water such as in a bathroom, shower room, kitchen or washroom. Doing so might cause fire, burns, electric shock, or malfunction. Do not bring them into a bathroom etc. even if you do not charge the product with them. Doing so might cause fire, burns, electric shock, or malfunction.

■ **Draining water when the product gets wet**

Draw the following parts: Earpiece/speaker, Mouthpiece/microphone, Speaker, USB Type-C port, Second microphone, Headset jack, Power key/Fingerprint sensor, Volume key/ Zoom key, Shutter key, the cover of microSD memory card/SIM card slot, Camera ring (peripheral part of main camera)

- If water remains, clothes or bag might get wet or sound might be barely heard. Drain in the following steps.

- Wipe off water remained on the product with a dry cloth, etc.**
- Hold the product firmly and shake it approximately 20 times, then turn upside down and shake it 20 times again**
 - When shaking the product, check the safety around you and hold it firmly enough not to drop it.



■ Consider people around you

- To prevent ringtone from bothering other people, not only refrain from making a call but also power off or use Silent mode at a movie theater, theater, museum, library, etc.
- In a city area, use in a place where you do not bother people walking.
- It is extremely dangerous to walk while looking at the screen of the mobile phone. Do not make calls or operate a mobile phone while walking or by stopping suddenly.
- Move to a place where you do not disturb others while you are in shinkansen, a hotel lobby etc.
- Be careful not to be loud while talking.
- Be careful of sound leakage from earphones in trains or other places with many people around you.
- Ask permission if you take photos with your mobile phone camera.
- When using the camera, follow common rules of etiquette regarding camera use.
- There may be a person with a cardiac pacemaker nearby at a place filled with people such as in a crowded train. Set "Airplane mode" or turn the product off/standby.
- When a medical institution is laid down designated areas where use of the product is prohibited or is not allowed to be brought in, abide by the instructions of that medical institution.

Updating Software

You can update the product to the most recent software for optimal performance and to get the latest enhancements.

- You are charged for the mobile data communication according to your carrier's details when accessing the Internet from the product via data communication. A large amount of data communication is required especially for upgrading the OS.
- You are recommended to back up your data before updating software.
- For details, refer to 取扱説明書 詳細版 (Full Instruction Manual) (Japanese).

■ Downloading and updating software

The update software can be downloaded from the settings menu of the product directly via Internet using a Wi-Fi® connection or mobile data communication.

- Depending on the status of your Wi-Fi® connection, the product searches available networks automatically and the connection may be switched to mobile data communication. In this case, note that unexpected communication charges may be incurred.



■ FCC Statement for the USA

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference.
(2)This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony may void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Copyright © 2012-2021 Dolby Laboratories. All rights reserved. Google and Android are trademarks or registered trademarks of Google LLC.

SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP), which is 2 W/kg averaged over 10 (10 gram) tissue (for example European Union, Japan, Brazil and New Zealand).

For body worn operation, this phone has been tested and meets RF exposure guidelines when used with an accessory that contains no metal and that positions the handset with a minimum of 5 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

The highest SAR value for this model phone tested by Sony for use at the ear is 0.31 W/kg (10g).

In the case where the phone is worn on the body, the highest tested SAR value is 0.66 W/kg (10g).

- Internal battery**

(The internal battery of the product is a lithium-ion battery)

The internal battery is not fully charged at the time of shipment. Charge the internal battery before using the product. Charge the internal battery if you have not used the product for a long time.

- Use in very hot or cold environments, for example, when left in an automobile with the windows closed in summer, will cause the internal battery capacity to drop and shorten the available usage time. This will also shorten the intended battery service life. Try to use the product as far as possible at room temperature.
- The internal battery gradually discharges after charging even if the product is not used. The internal battery might discharge completely after long time no use. Charge before using.
- The internal battery is a consumable part. If the performance of a battery does not recover (e.g. the usable time after each charge has become extremely short), the battery is at the end of service life, so stop use. Batteries are not to be recharged. For replacement, contact "お問い合わせ先 (For inquiries)" on 取扱説明書 詳細版 (Full Instruction Manual) (Japanese). And you might not use the product during certain period of time. Please be forewarned. Note that the length of service life varies depending on the usage condition etc.
- The internal battery sometimes swells up as they approach the end of its service life due to the properties of lithium-ion batteries, and is not a problem in terms of safety.

■ Charging equipment

- Do not wrap the cable of the specified charging equipment (sold separately) around the adapter itself. Do not bend the joint of the plug or connector and the cable of the specified charging equipment (sold separately) forcibly. Do not place heavy objects on an adapter or cable, or do not apply unreasonable force such as pulling. Doing so might cause a malfunction.
- When unplugging the plug of the specified charging equipment (sold separately) from the outlet, hold and pull the power plug. If you pull the cable, the cable might be damaged.



3 If water flows out from the inside of the product, wipe it off with a dry cloth etc.

- Face the product downward and push it on a cloth to wipe off the water.
- * Turn the upside down and wipe off the water.

4 Place a dry towel or cloth under the product and leave it for a couple of hours at room-temperature to dry

- * If the product is not dried enough, you can barely hear the sound. Leave the product enough time to dry before use.

Notes on using Bluetooth®/Wireless LAN (Wi-Fi®) functions

- The Bluetooth® and wireless LAN (Wi-Fi®) functions of the product conform to Japanese domestic standards and FCC standards, and has been certified.
- Use of Bluetooth® function and Wireless LAN (Wi-Fi®) function may be restricted in some countries/regions. Before using the product overseas, check the relevant laws and regulations of the country/region you visit.
- The 2.4 GHz band used by wireless LAN (Wi-Fi®) and Bluetooth® devices is shared by various other devices. For this reason, the communication speed and connectable range may be decreased, or disconnection may occur, due to interference from other devices.
- Do not use the product in places where electromagnetic waves are generated or near electric products, AV and OA equipment, or other magnetized devices.
- Subjecting the product to magnetic or electrical noise may increase noise and reduce the radio wave range, as it uses radio waves for exchanging information. At the same time, there is a risk that a malicious third party may obtain unauthorized access if security settings have not been configured.
- The searching might not be successful if there are multiple wireless LAN (Wi-Fi®) access points near to the product or the same channel is being used.
- Use of mobile phones on board is restricted. Follow the instructions of each airline.
- The communication speed and connectable range vary depending on the distance between communication devices, obstacles and the devices used.



1 In the Home screen, slide the screen up → [Settings] → [System] → [System update]

After that, follow the onscreen instructions.

After-sales service

■ When asking for repair

For repair, make an inquiry to Repair and Delivery Support Center.

During the warranty period	Repairs will be done based on the terms of services of the free-of-charge repair warranty.
Outside the warranty period	We shall repair the product for a charge as requested by the customer if repair renders it usable.

* The warranty period is one year from the date you newly purchased the product.

- Before handing in the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
- Recycled parts that meet the Company's quality standards are sometimes used for repair.
- Your old terminal collected by replacement mobile phone delivery service is recycled for reuse and recycled as a replacement terminal. Also, parts replaced through after-sales service are collected and recycled by the Company. They cannot be returned to customers.
- The product which is processed, remodeled, analyzed (including by modifying or analyzing the software (including by rooting etc.), reverse engineering, decompiling, reverse-assembling), or repaired by an unauthorized repair office is not covered by the warranty and repair may be refused.
- The battery built-into the main unit is not covered by free-of-charge repair as, performance parts for repair

The Company retains performance parts for repair of the main unit and its peripherals for four years after discontinuation of production. Performance parts for repair* refers to parts required for maintaining the functions of the product.



■ FCC Statement for the USA

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference.
(2)This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony may void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Copyright © 2012-2021 Dolby Laboratories. All rights reserved. Google and Android are trademarks or registered trademarks of Google LLC.

Foreign Exchange and Foreign Trade Act

The products may be subject to the application of the Foreign Exchange and Foreign Trade Act and other related laws and regulations in Japan. In addition, the Export Administration Regulations (EAR) of the United States may be applicable. In the case of exporting or reexporting the products, customers are requested to follow the necessary procedures at their own responsibility and cost. Please contact the Ministry of Economy, Trade and Industry of Japan or the Department of Commerce of the United States for details about procedures.



■ Wireless charging

- Do not attach a metal object (e.g. a sticker whose material contains metal) to the Wireless Charging Pad (sold separately) or the back side of the product. Doing so might cause a malfunction.
- It is not abnormal the information lamp of the Wireless Charging Pad (sold separately) is kept lighting when charging is complete.
- Charging may stop before it is complete around in full-charge state.
- When charging is stopped before the completion, it may not be resumed soon.
- Depending on Qi compatible device, starting and stopping of charging may be repeated. Always charge with the specified au device.
- It is not abnormal if charging stops or charging takes long when it is above a certain temperature. If the charging function is stopped, it resumes when the temperature drops.
- Place the Wireless Charging Pad (sold separately) in a stable and horizontal place to charge.
- When wireless charging, turn off the vibrator of the product. The product will shift and charging may not be complete or the product may fall.
- When charging, remove the case, cover, film, sticker from the product if attached.
- Check that the Wireless Charging Pad (sold separately) or the product is not wet.
- Do not get close the product you want to charge and a device which is service life. This is due to the properties of lithium-ion batteries. Charging Pad cannot correct the defect of au product to charge and charging may fail.